


ARTICLE.

VERSION 1.0

Assembly Instructions

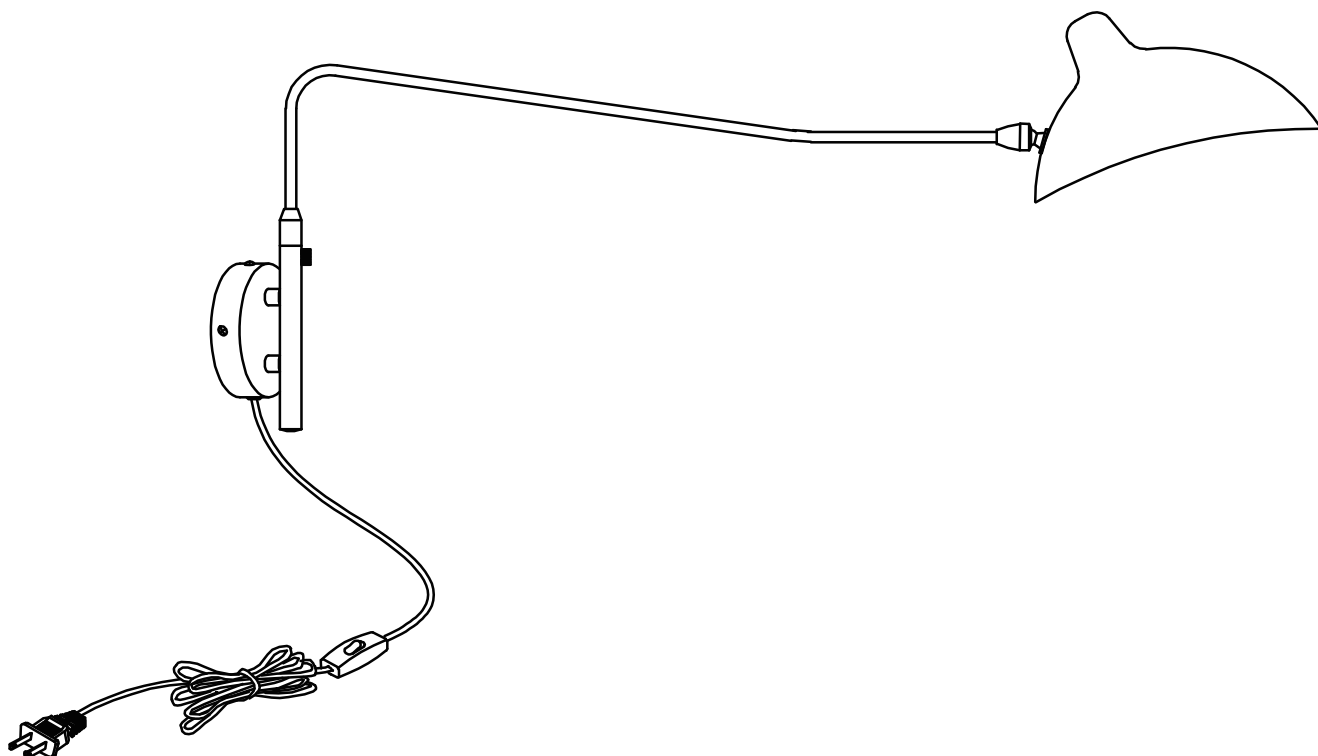

LEAP

Sconce Lamp

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME





OF PEOPLE

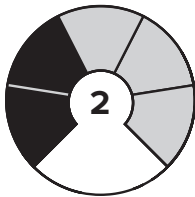

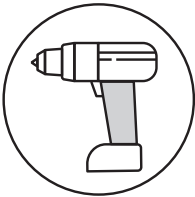



DIFFICULTY

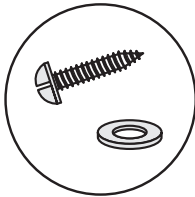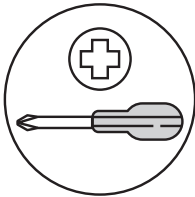


REQUIRED TOOLS



 REQUIRED
HARDWARE


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LAMP	1
B	LAMP BASE	1
C	WASHER 	1
D	COPPER SCREW 	1
E	BRACKET 	1
F	SMALL BLACK SCREW 	3
G	BULB	1

1

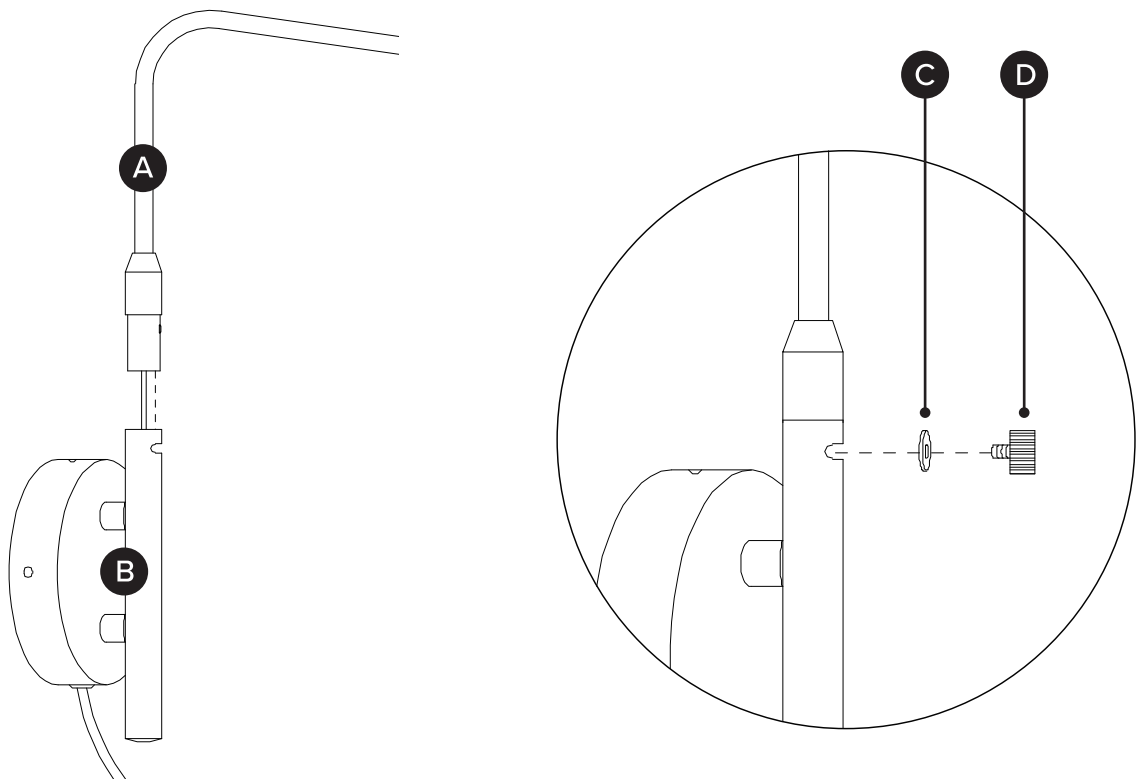


2


! Hardware to attach bracket (E) to wall is not included. Consult with your local hardware store about mounting this lamp to your wall.

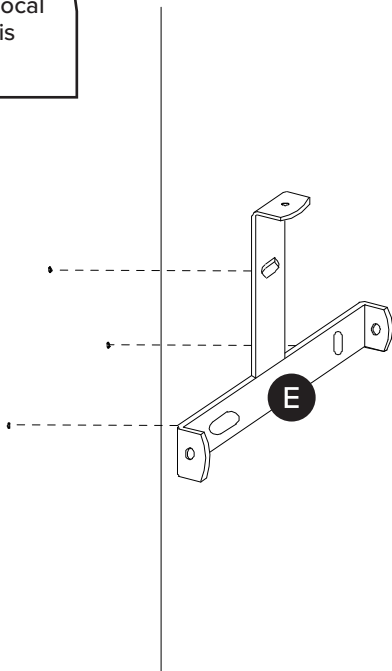

3A

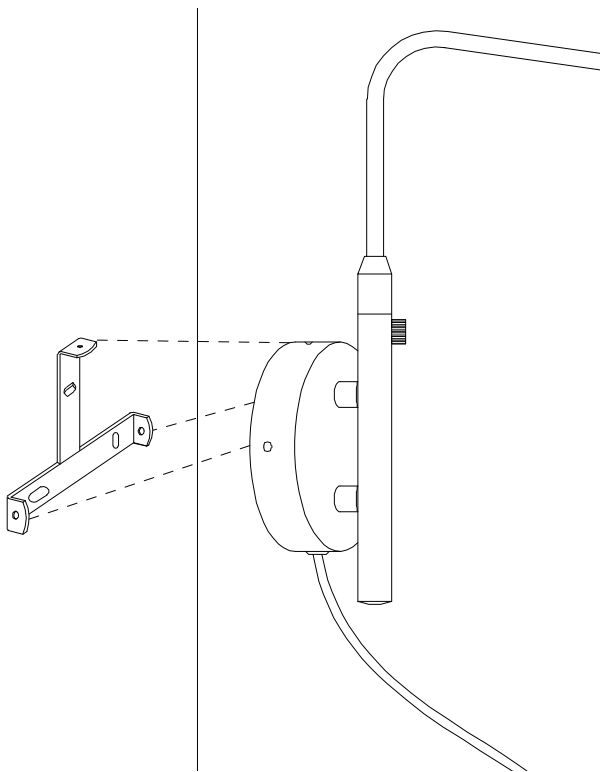

3B

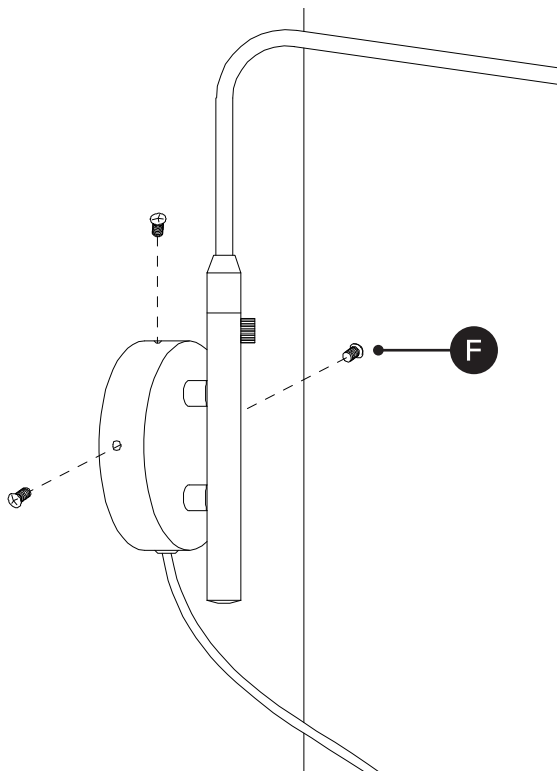

4

