 


# ARTICLE.

VERSION 1.1

## Assembly Instructions

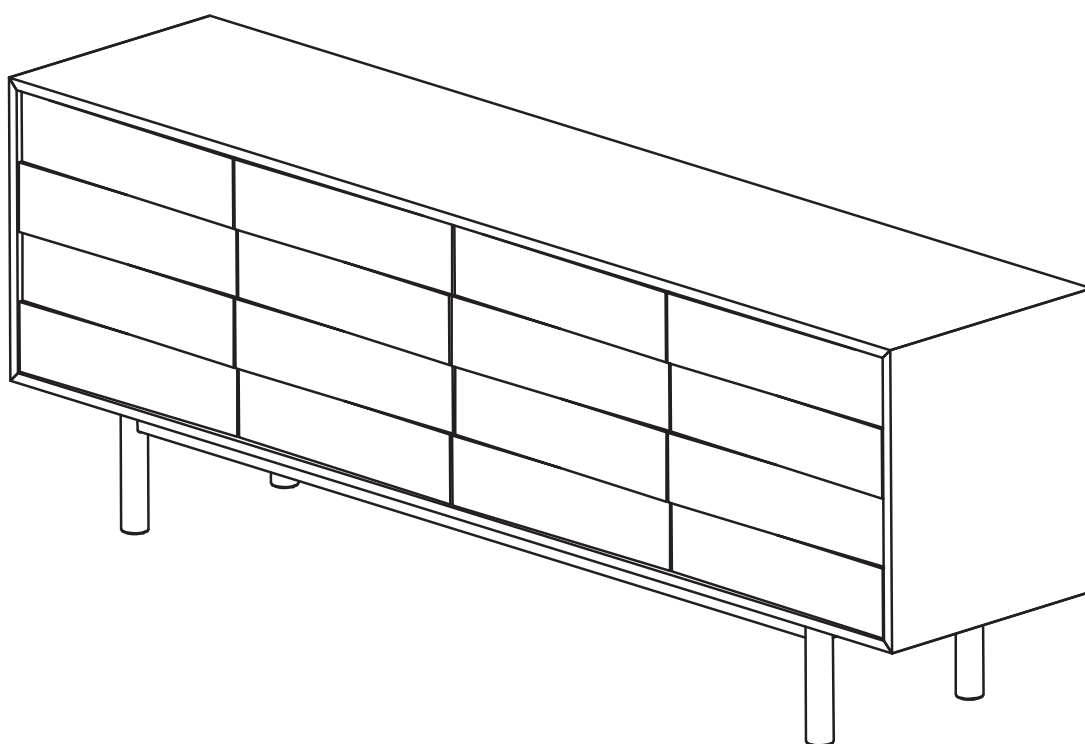

# MERTO

 
Media Unit

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

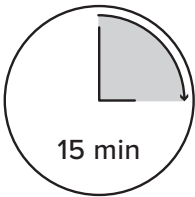

TIME



 
 


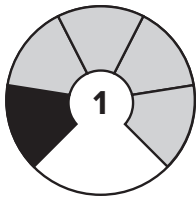
# OF PEOPLE



 
 
DIFFICULTY



ANTI-TIP  
Installation Required



PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEG	4
B	SHELF	2
C	SHELF PIN 	8
D	ALLEN KEY 	1
E	M6 × 60MM BOLT 	8
F	M6 LOCK WASHER 	8
G	M6 WASHER 	8
H	LATCH	4

1

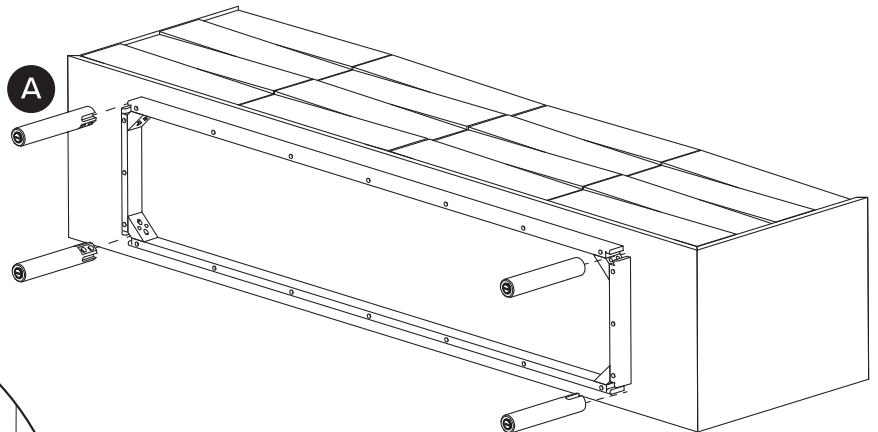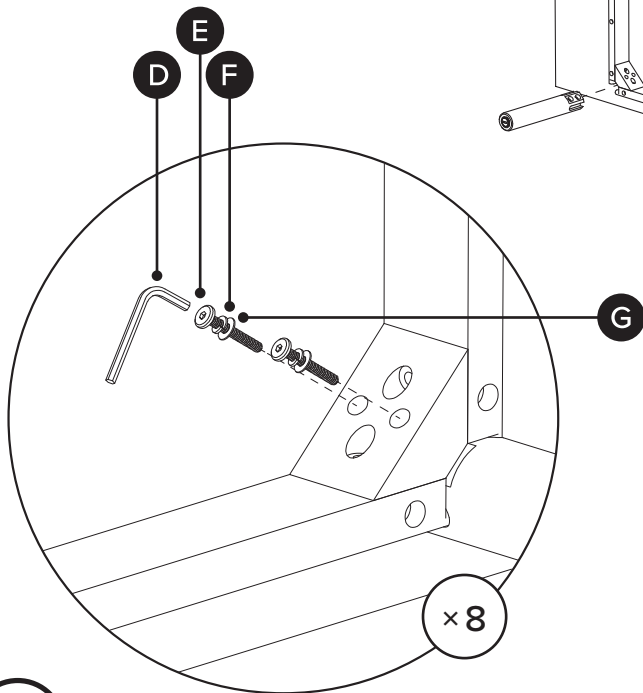**CAUTION!**


Please take care when lifting, this unit is very heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

  2

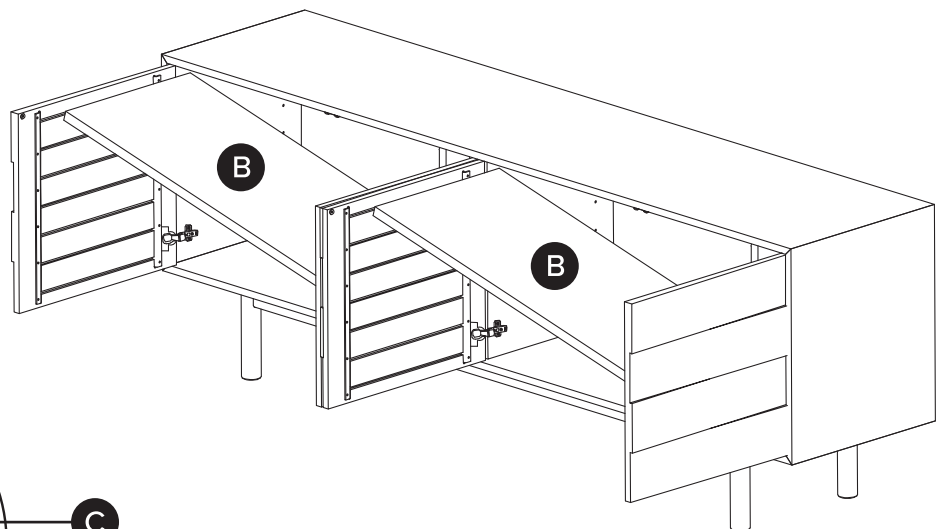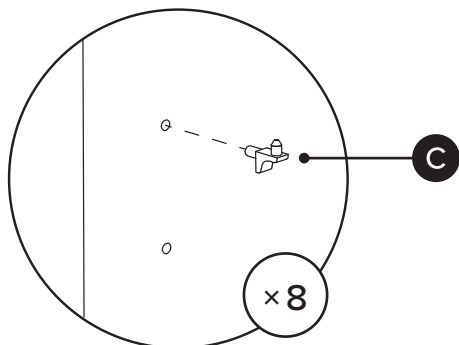


Insert shelf pins (C) at desired height, and insert shelves (B).

 3


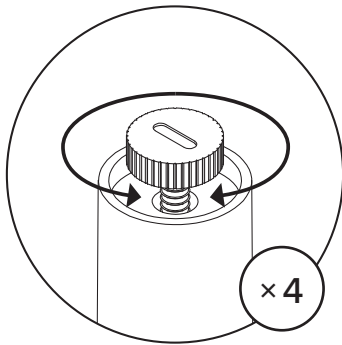


! Adjust levelers on legs as needed.

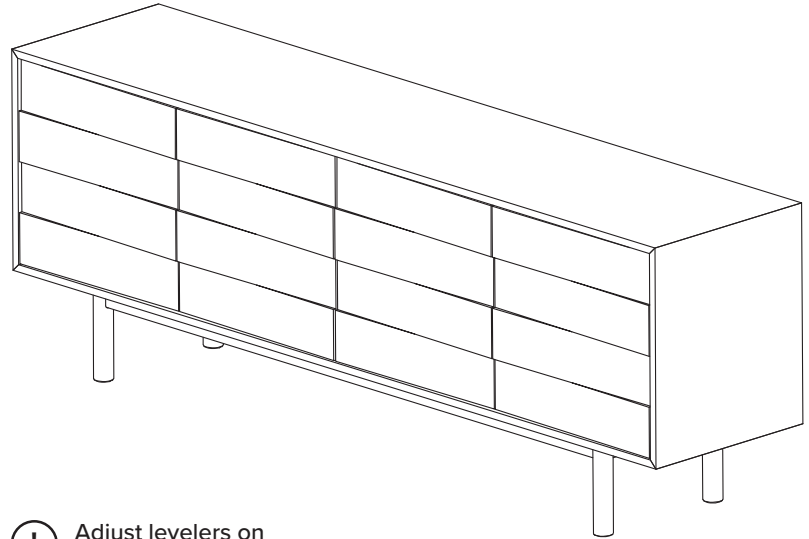 

4

  
! Once everything is assembled, insert the latches (H) from the hardware bag.

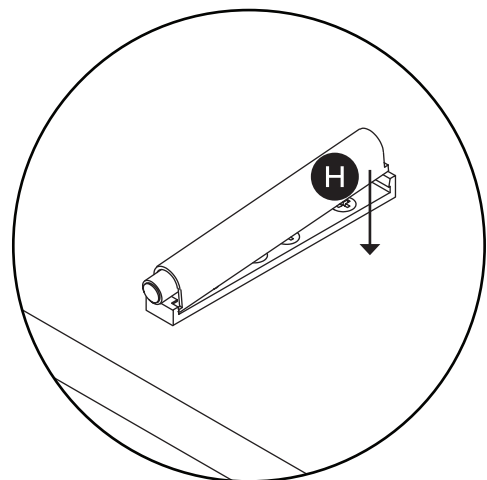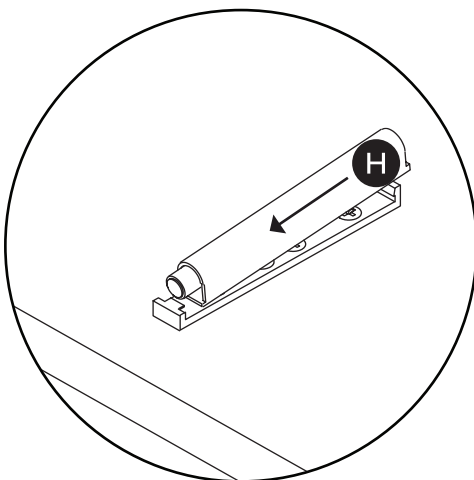

## DOOR ADJUSTMENT INSTRUCTIONS




 
During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

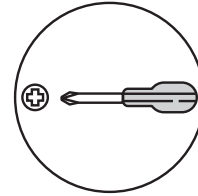

REQUIRED TOOL



5A

  If the door is crooked, adjust hinge(s) up or down:

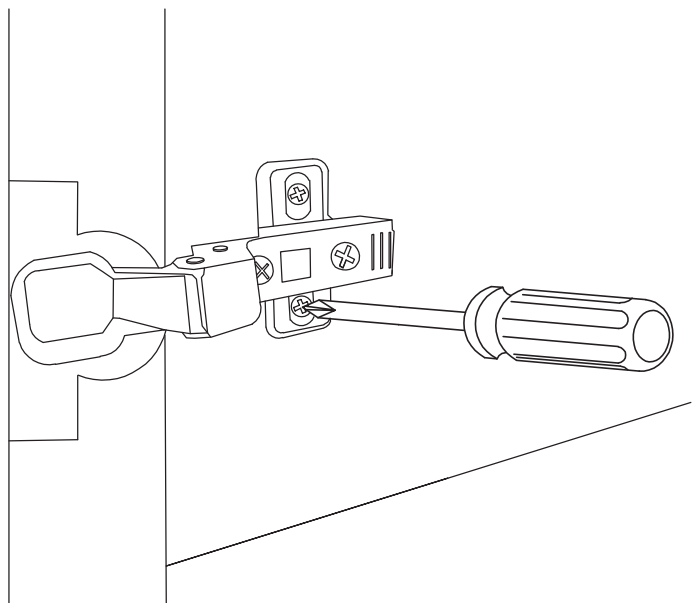
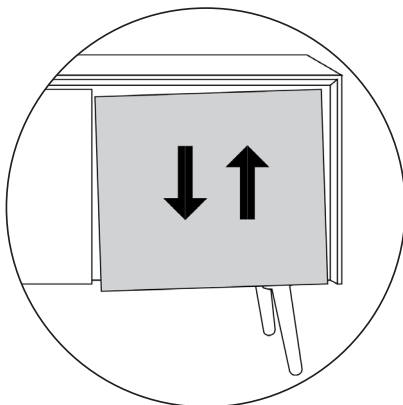


**5B**

  If the door needs adjustment side to side:

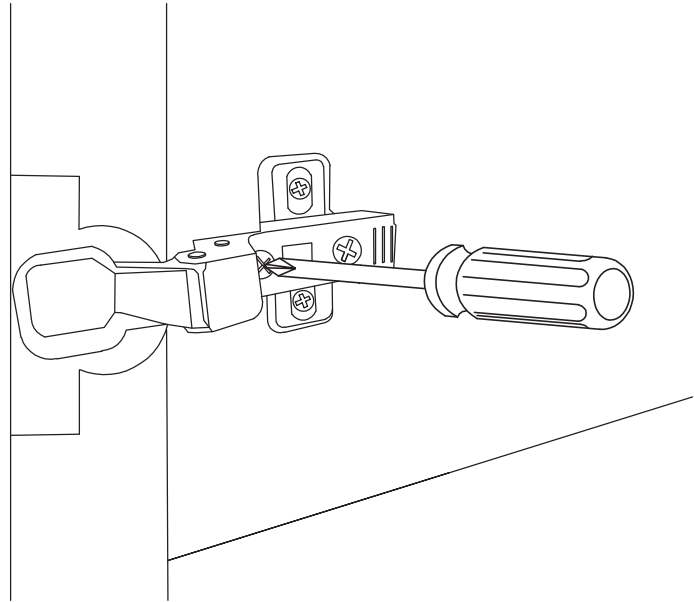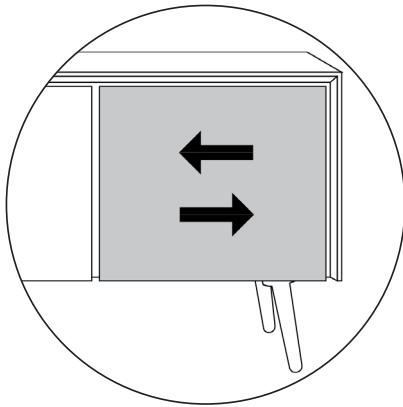**5C**

  If the door needs adjustment forward or backward:

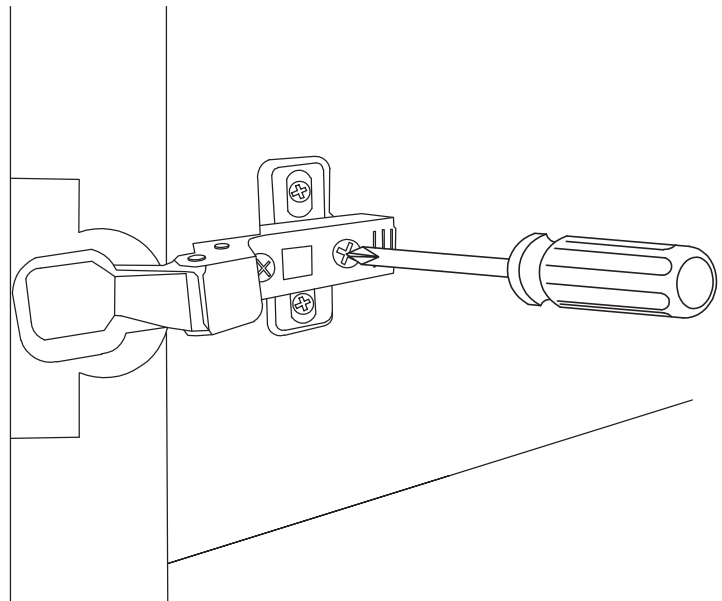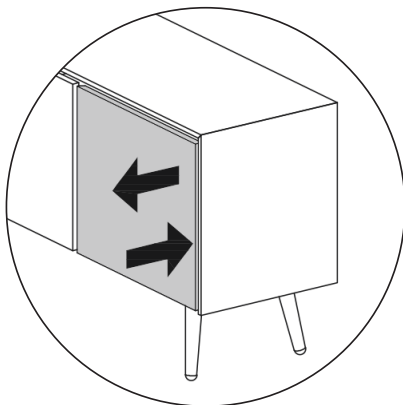




## ANTI-TIP RESTRAINT INSTALLATION

**! WARNING!**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

 
Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

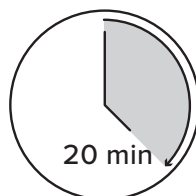



TIME








# OF PEOPLE

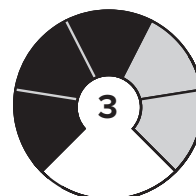 

DIFFICULTY

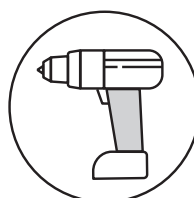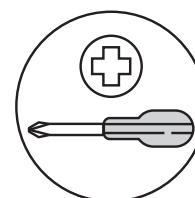  
REQUIRED TOOL  
8MM / 5/16" DRILL BIT

    REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET 		4
B	M4 × 20MM SCREW 		4
C	M8 × 51MM PLUG 		4
D	M6 × 70MM SCREW 		4
E	STRAP 		2




 Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

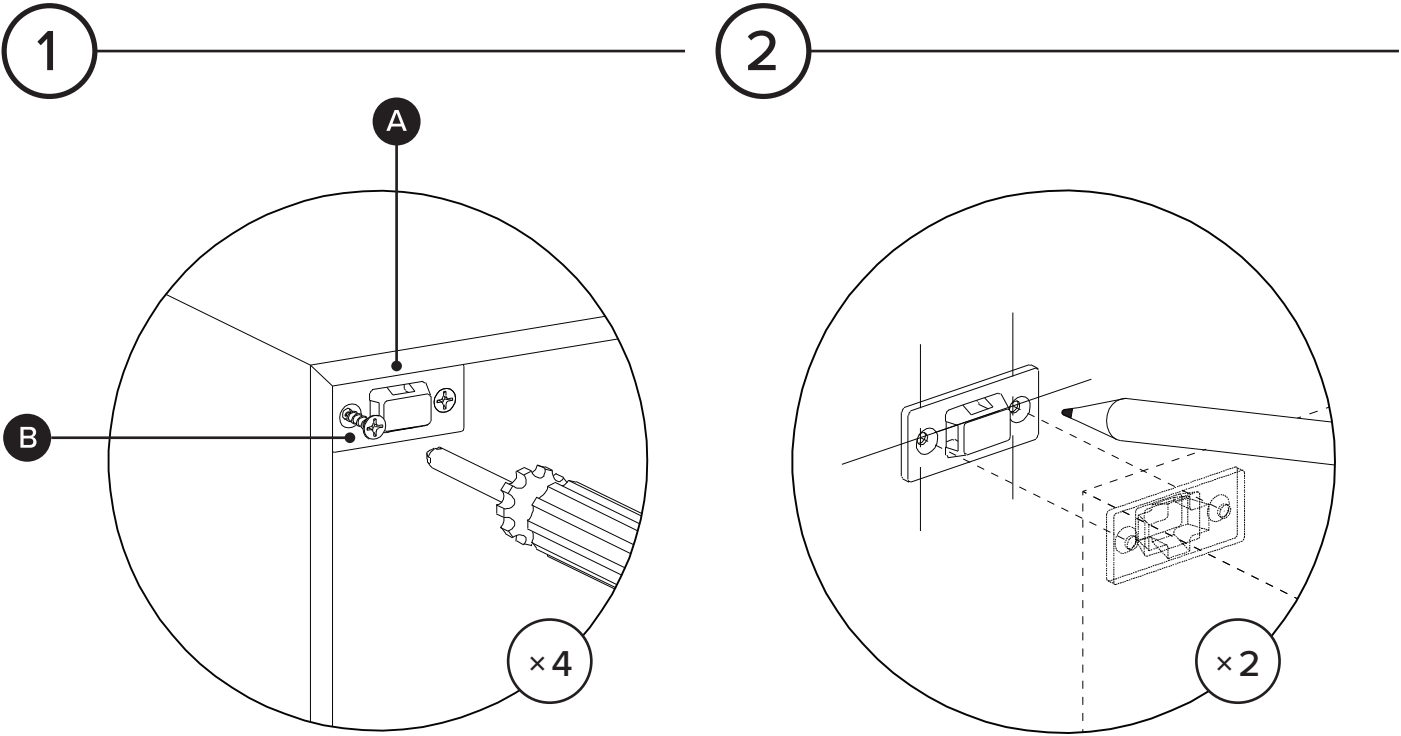

Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

 Mark on wall where second pair of brackets should be placed.

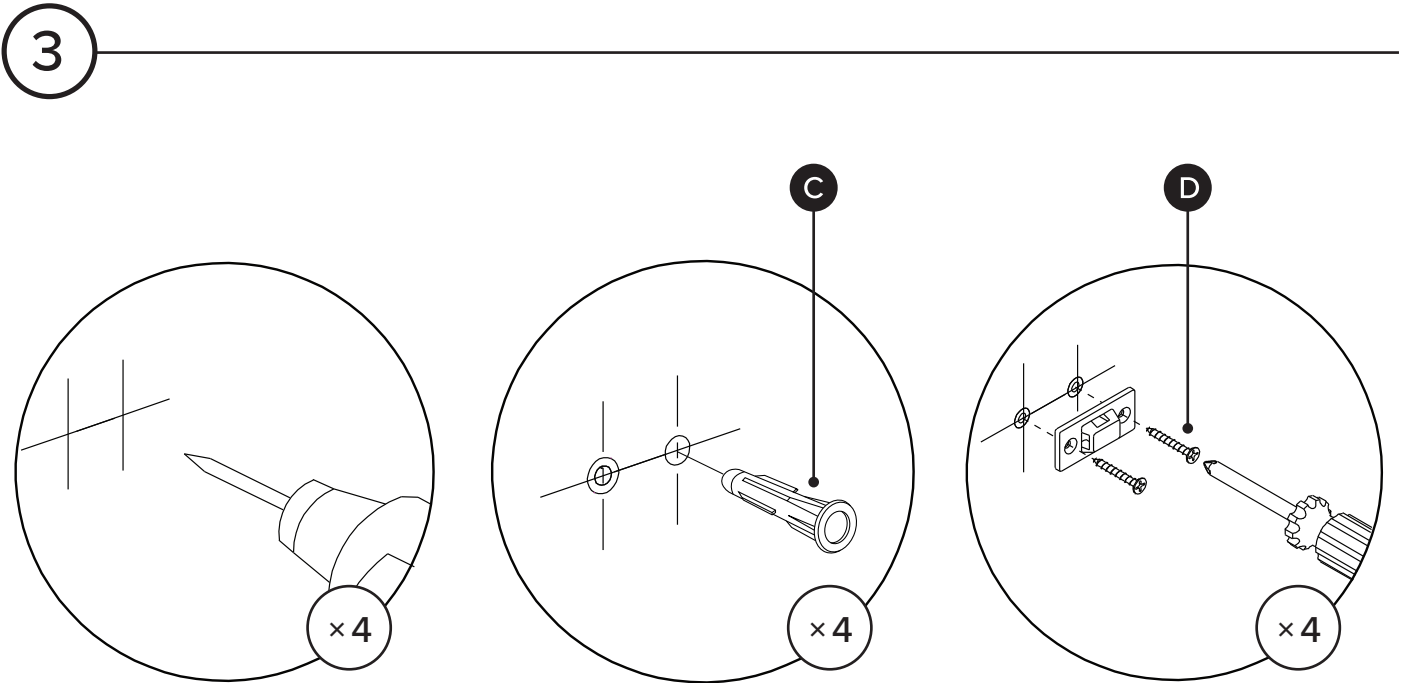


Drill holes in wall using 8mm / 5/16" drill bit.




4A

 Align brackets on unit  
with brackets on wall.

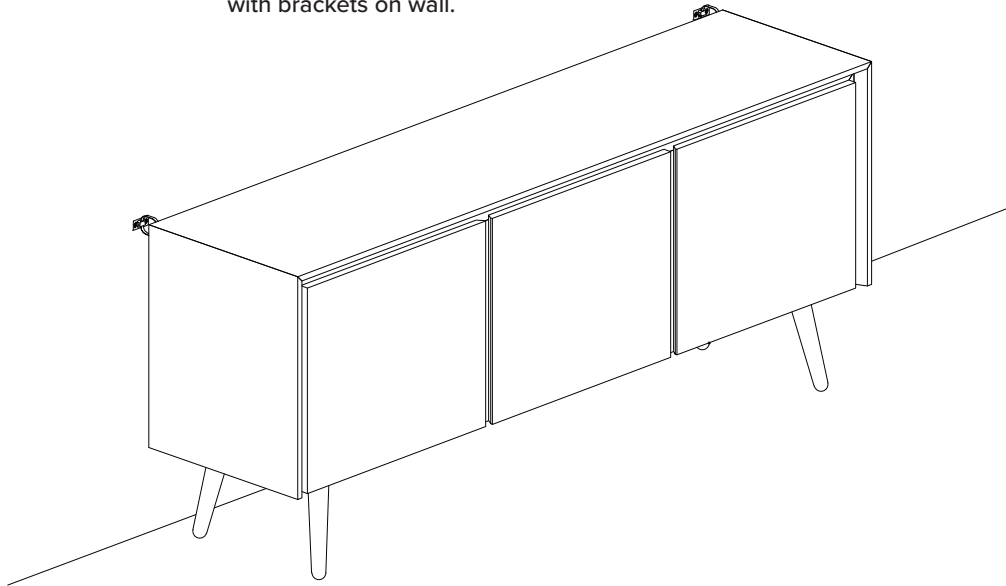

4B

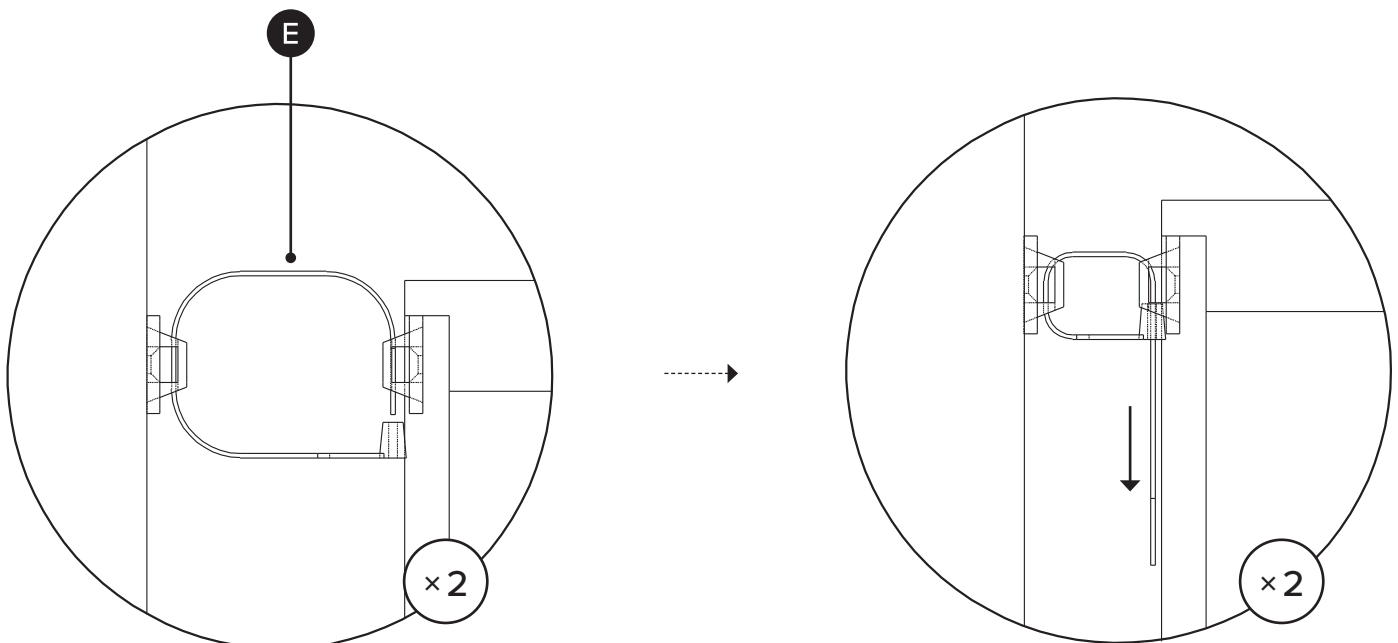 

Pull strap down until it snap-locks.