
ARTICLE.

Assembly Instructions

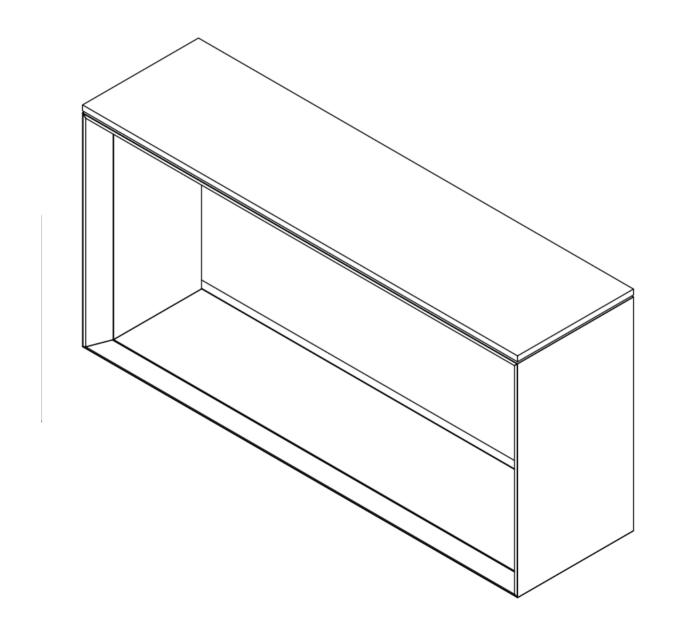


SURI

Console

ARTICLE. Suri Console Page 2 of 2



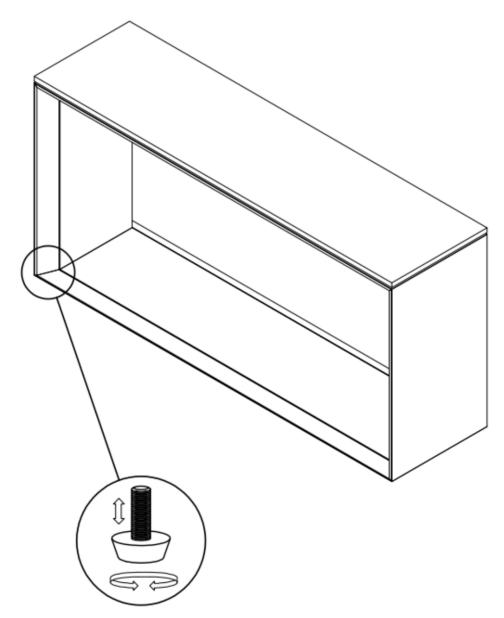

Adjust leveler as needed