

 


ANTI-TIP RESTRAINT INSTALLATION


WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

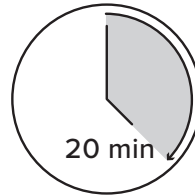


TIME

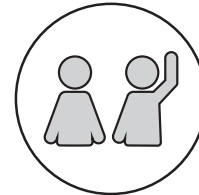 


OF PEOPLE

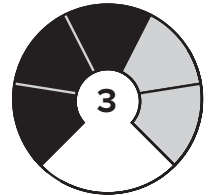 

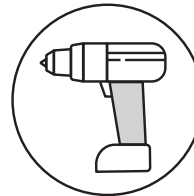 




DIFFICULTY

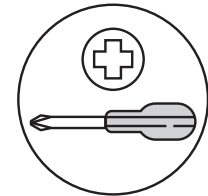 

REQUIRED TOOL
8MM / 5/16" DRILL BIT




  REQUIRED TOOL


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	BRACKET 	4
B	M4 × 20MM SCREW 	4
C	M8 × 51MM PLUG 	4
D	M6 × 70MM SCREW 	4
E	STRAP 	2



 
Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

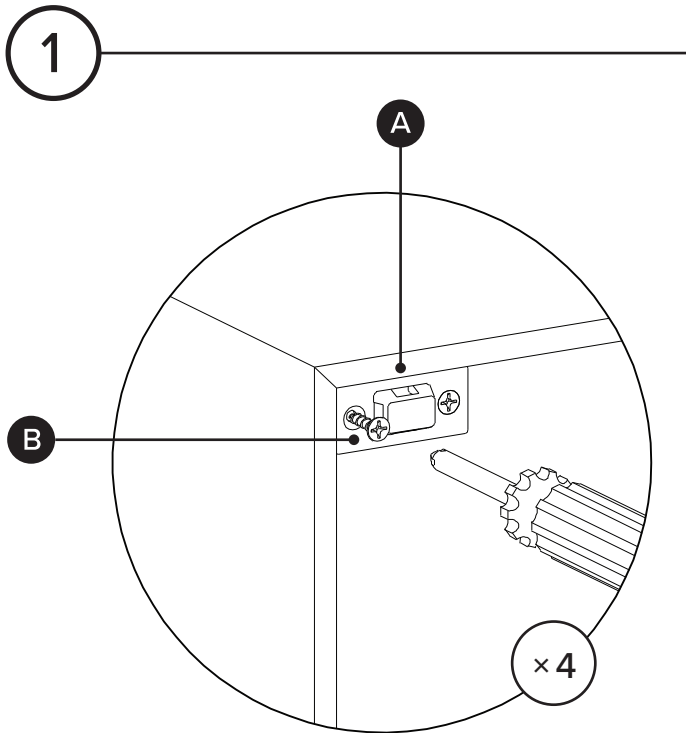

 Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

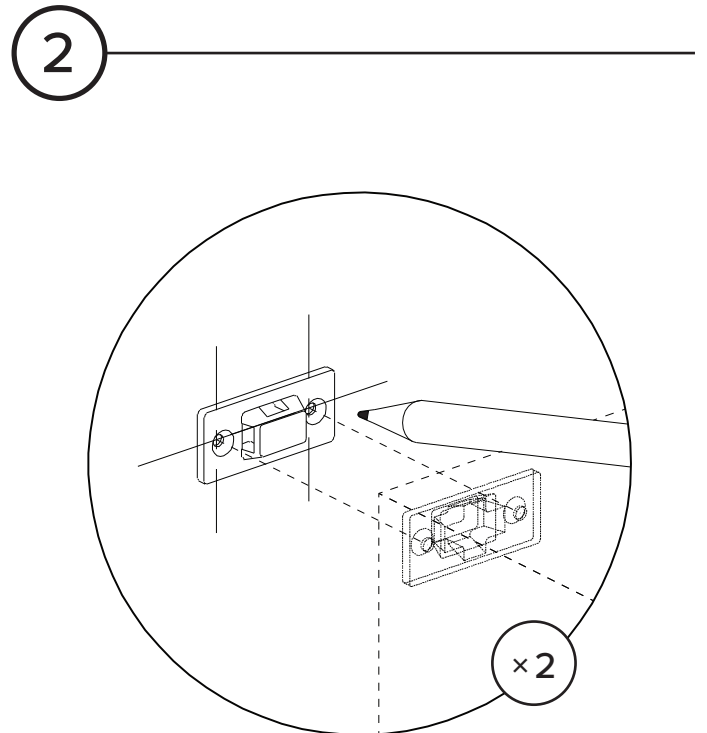


 
Mark on wall where second pair of brackets should be placed.

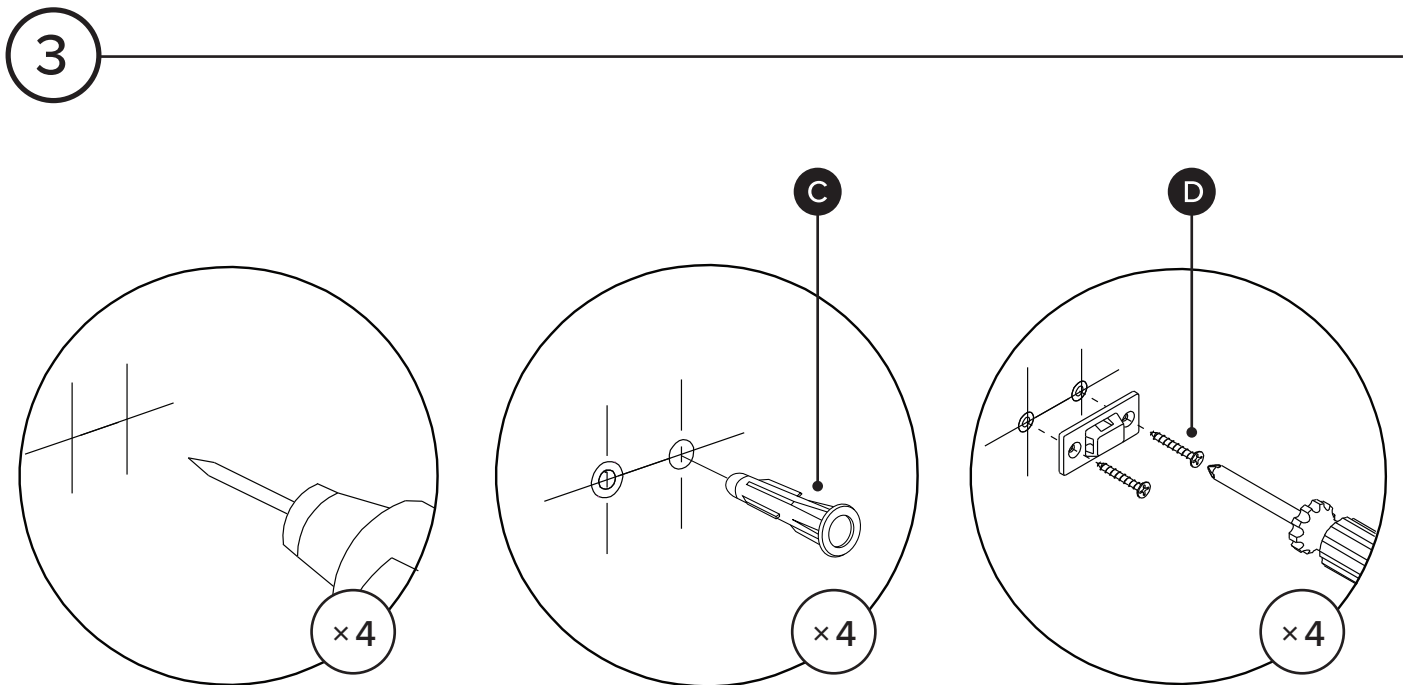

Drill holes in wall using 8mm / 5/16" drill bit.



4A

  Align brackets on unit
with brackets on wall.

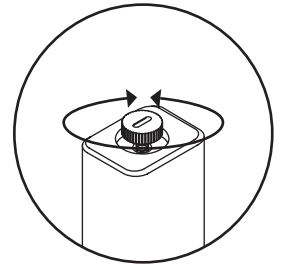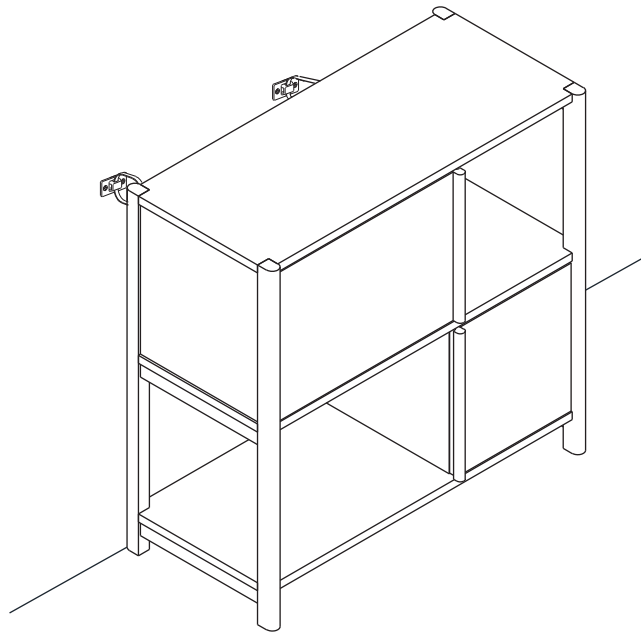

! Adjust levelers
as needed.

  4B

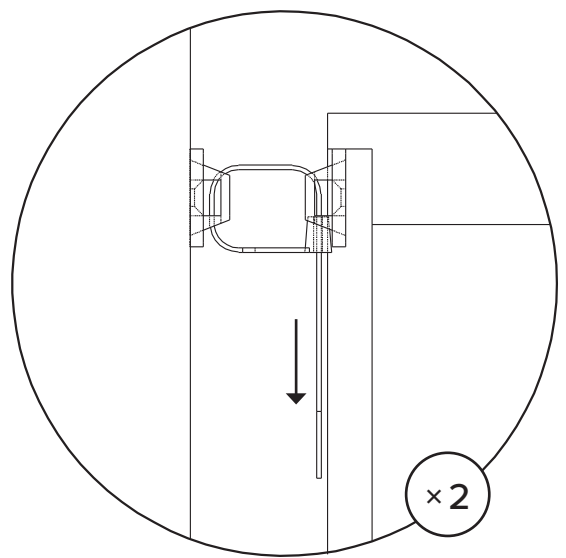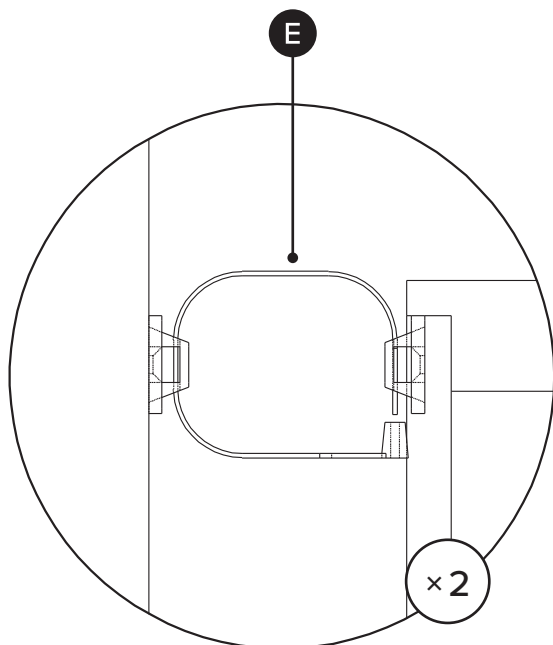


Pull strap down until it snap-locks.

DOOR ADJUSTMENT INSTRUCTIONS




 
During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

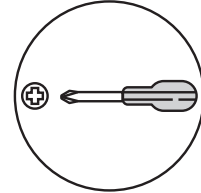

REQUIRED TOOL



1A

  If the door is crooked, adjust hinge(s) up or down:

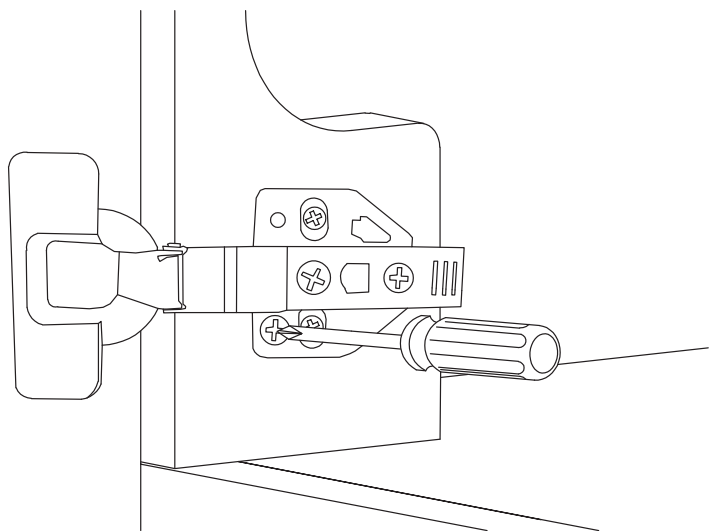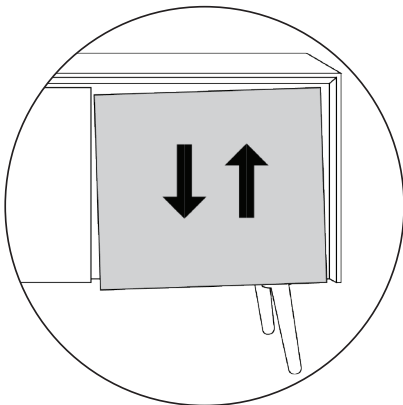

1B

  If the door needs adjustment side to side:

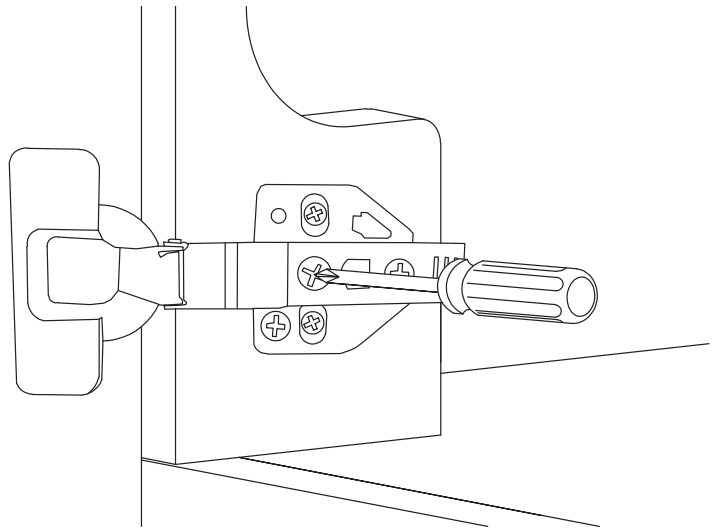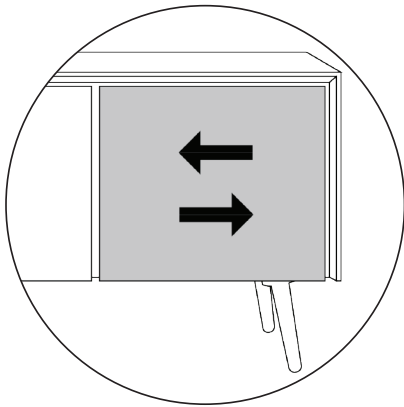

1C

If the door needs adjustment forward or backward:

