 


# ARTICLE.

VERSION 1.0

## Assembly Instructions

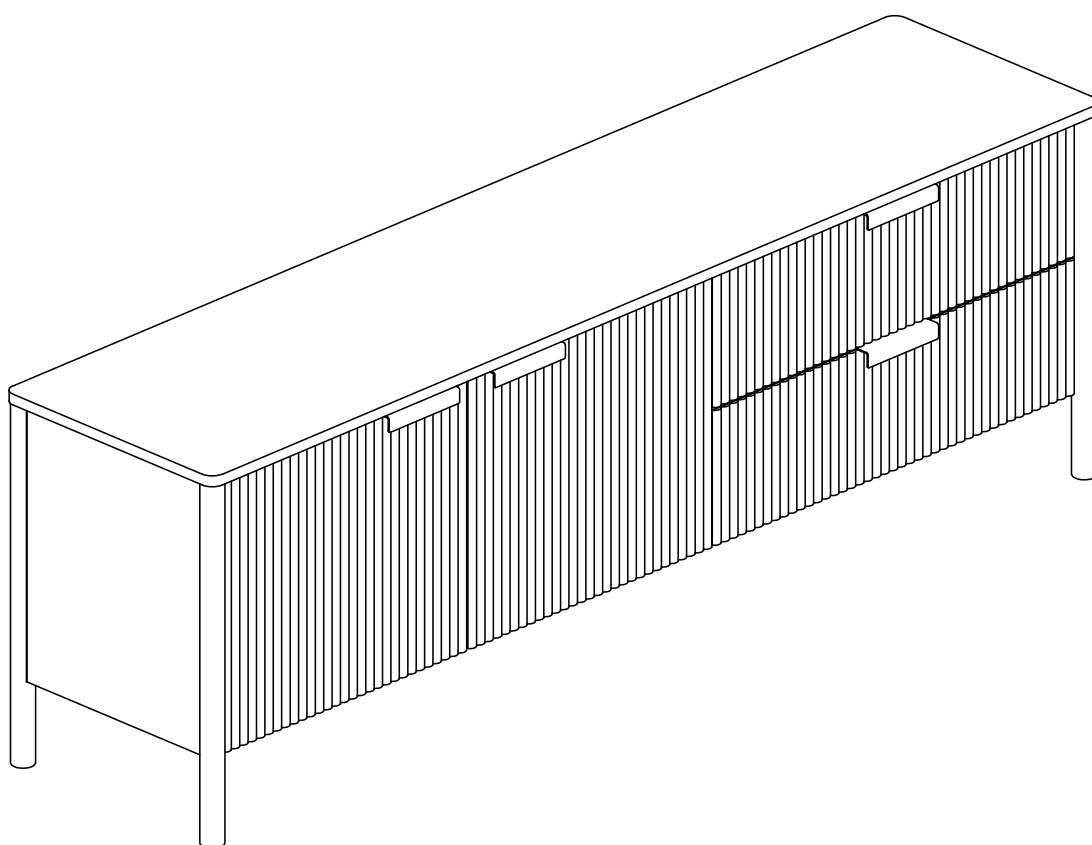

# LIV

 
74.5" Media Unit

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

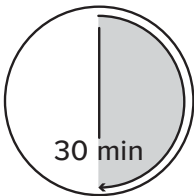

TIME


 
 
 


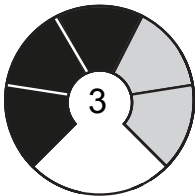


# OF PEOPLE



DIFFICULTY


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	CABINET BODY	1
B	LEFT LEG FRAME	1
C	RIGHT LEG FRAME	1
D	CENTER LEG	1
E	SHELVES	1
F	SHELVES PIN ( PRE- INSTALL)	4
G	TOP DRAWER	1
H	BOTTOM DRAWER	1

 HARDWARE LIST		
ID	DESCRIPTION	QTY
I	ALLEN KEY 	2
J	M6 x 25 BOLT 	8
K	M6 x 30 BOLT 	4
L	M6 x 45 BOLT 	4
M	M6 WASHER 	16
N	M6 FLAT WASHER 	16

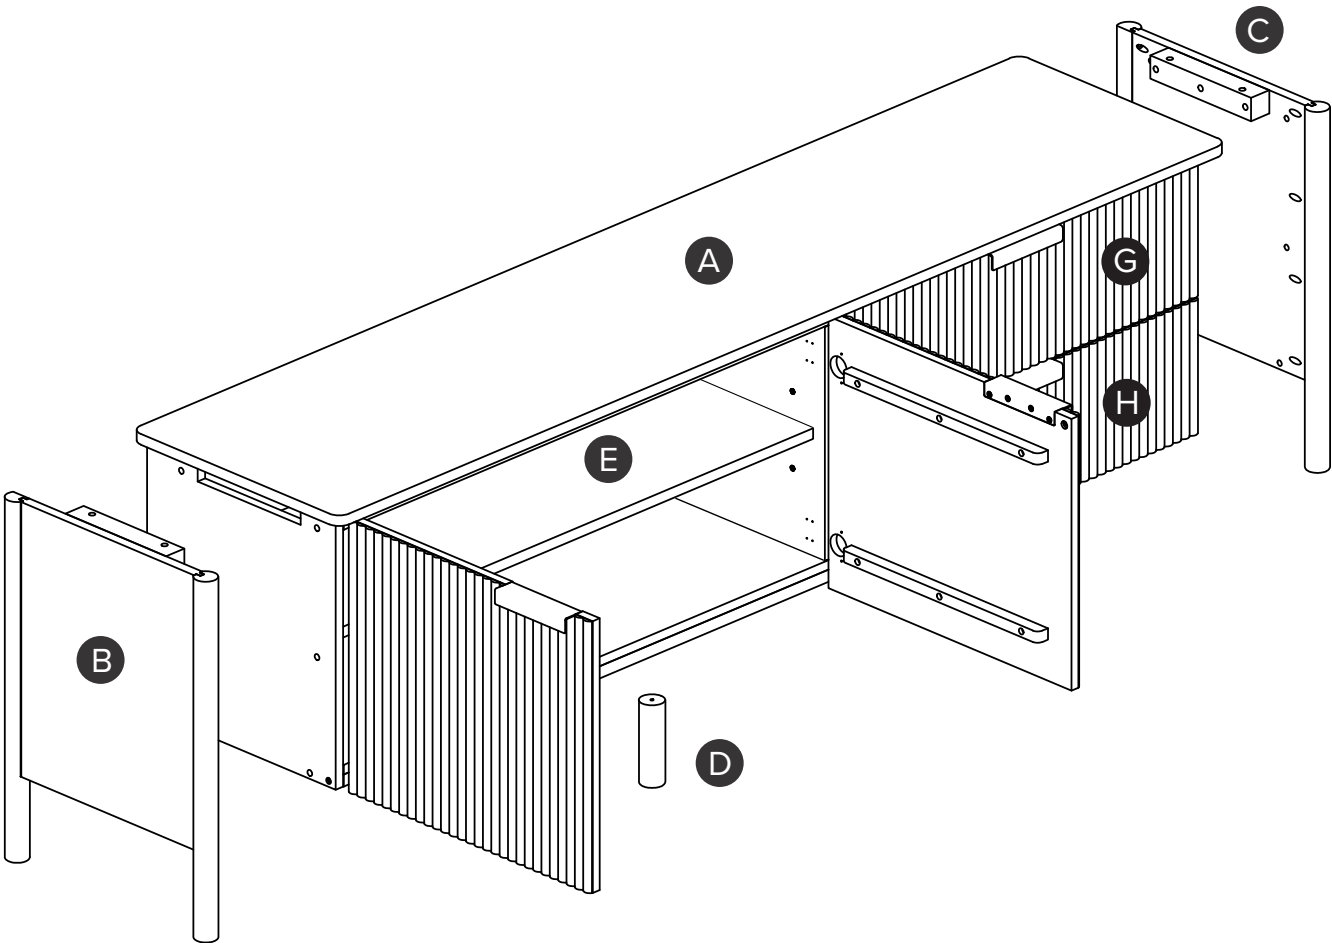


1

 
! Placing the cabinet body (A) on something to raise it at least 2" from floor will help to take out the bottom drawer (H) easier.

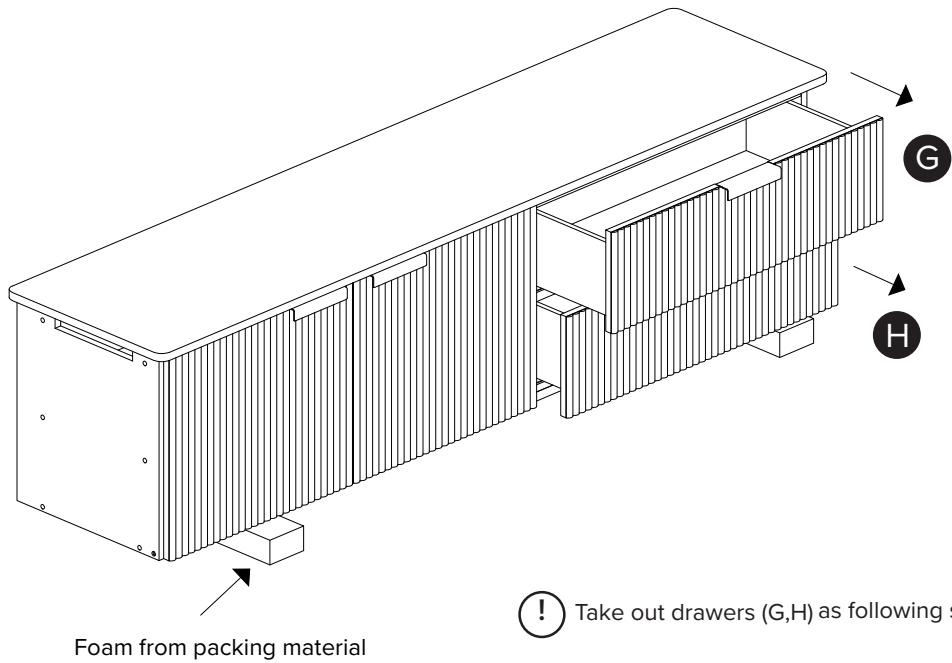

 1.1


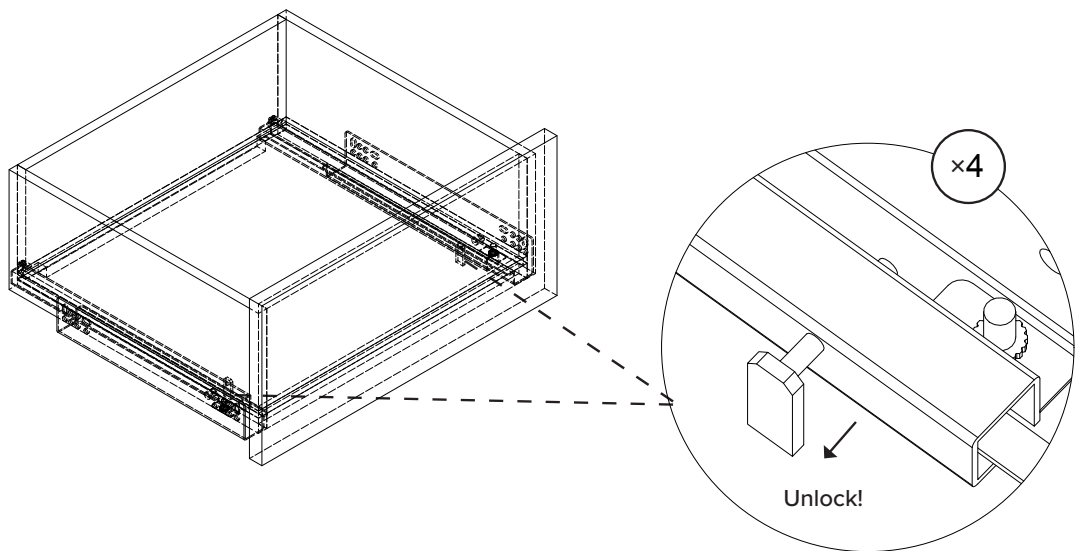


 1.2

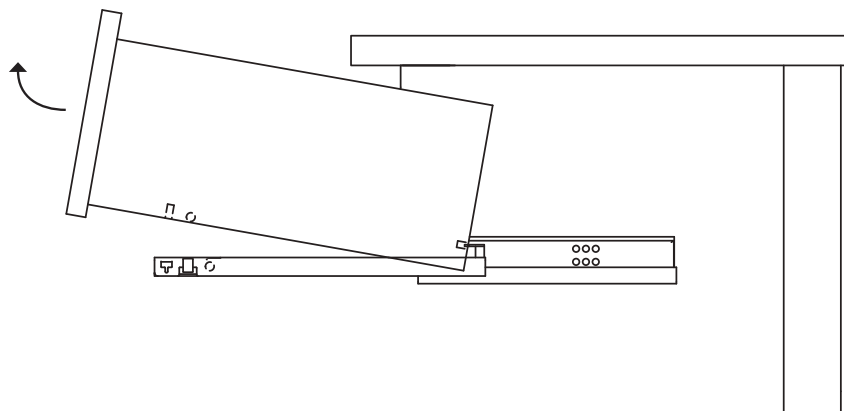

2


 
 
! Turn the cabinet body (A) carefully upside down to insert leg frames and middle legs

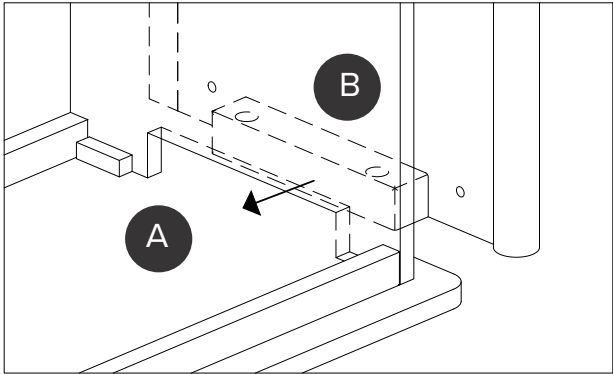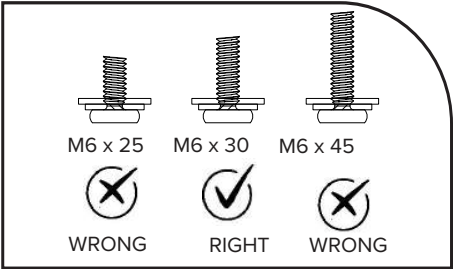

! Positioning leg frames (B) and (C) onto A





   ! Tighten the bolts 80%

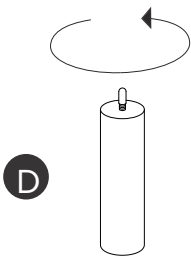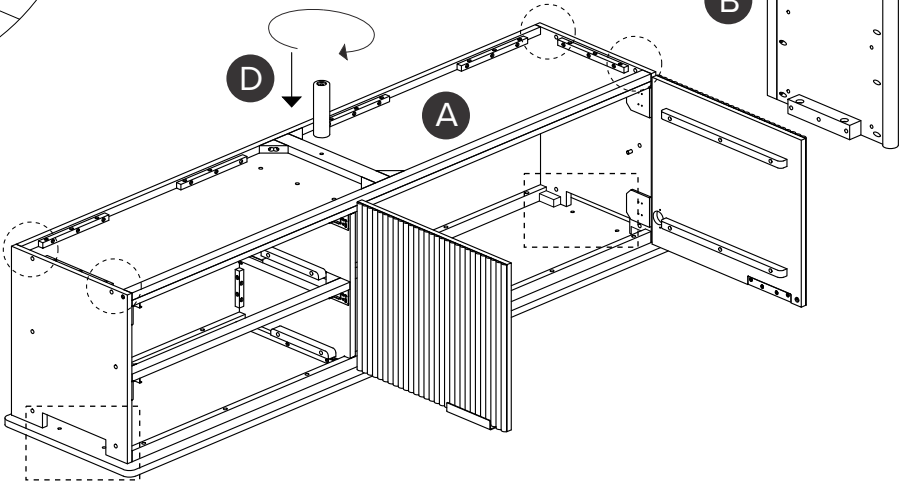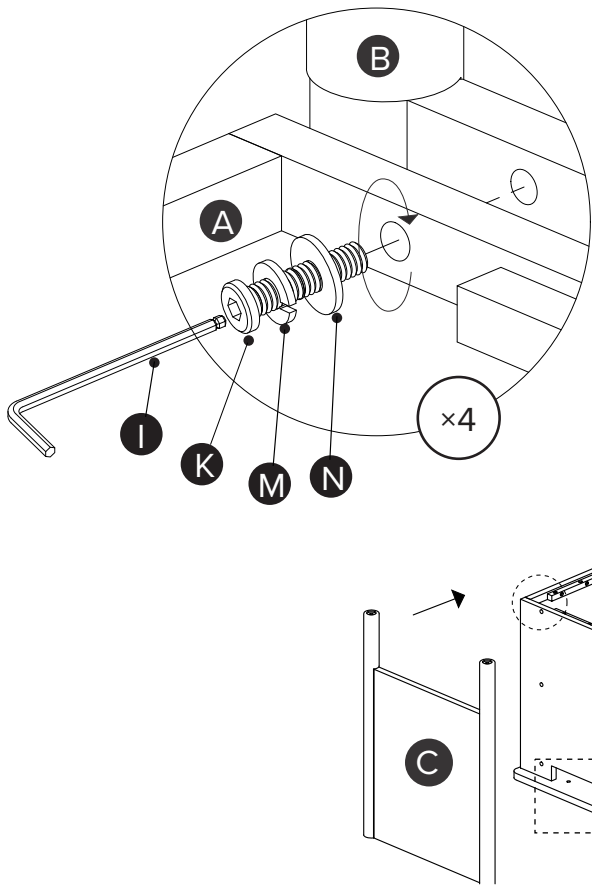


! Remove the protection on the leg bolt before assembling.



 
 
3.1

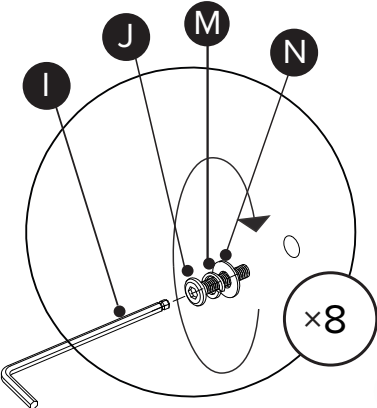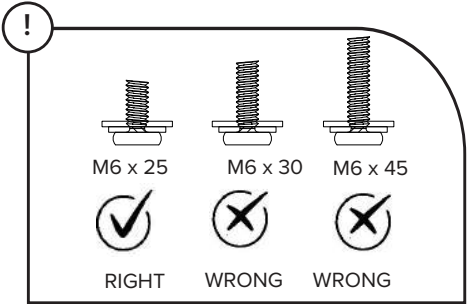

! Tighten the bolts 80%

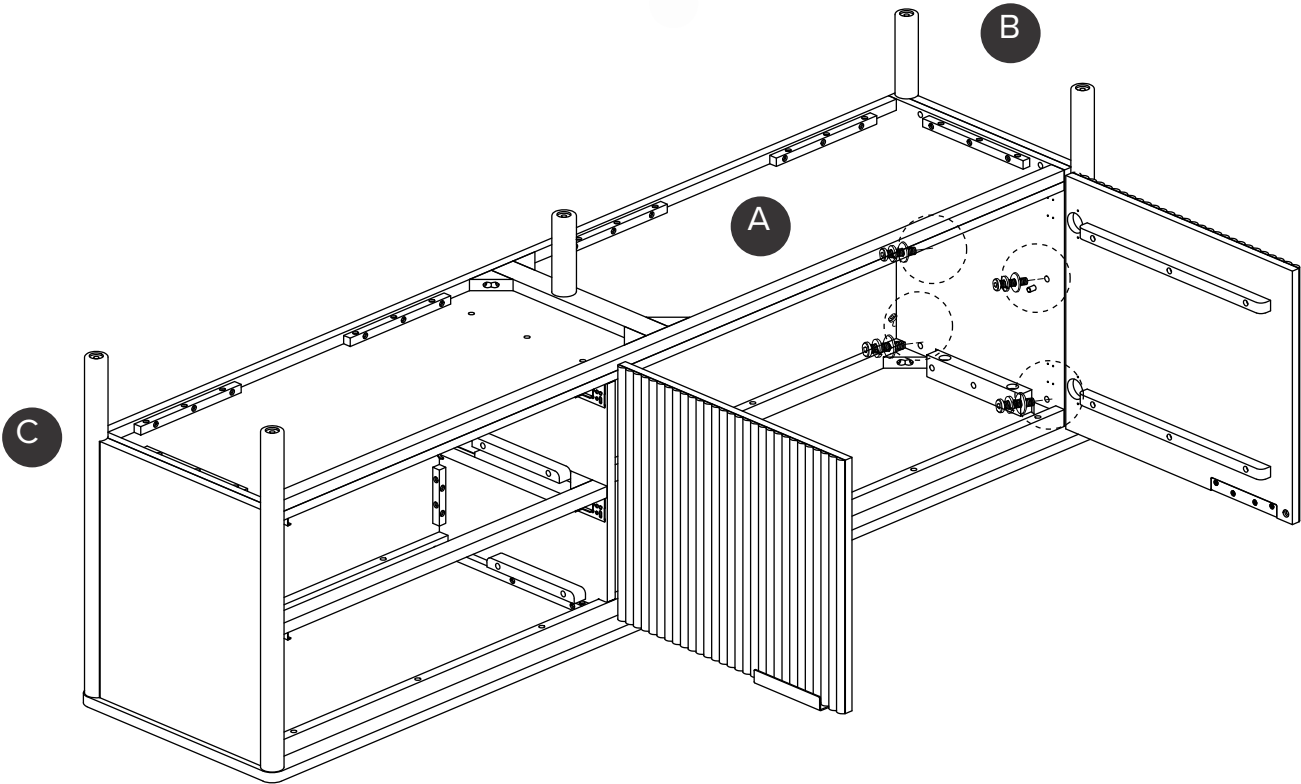 




4

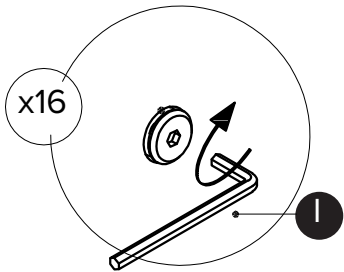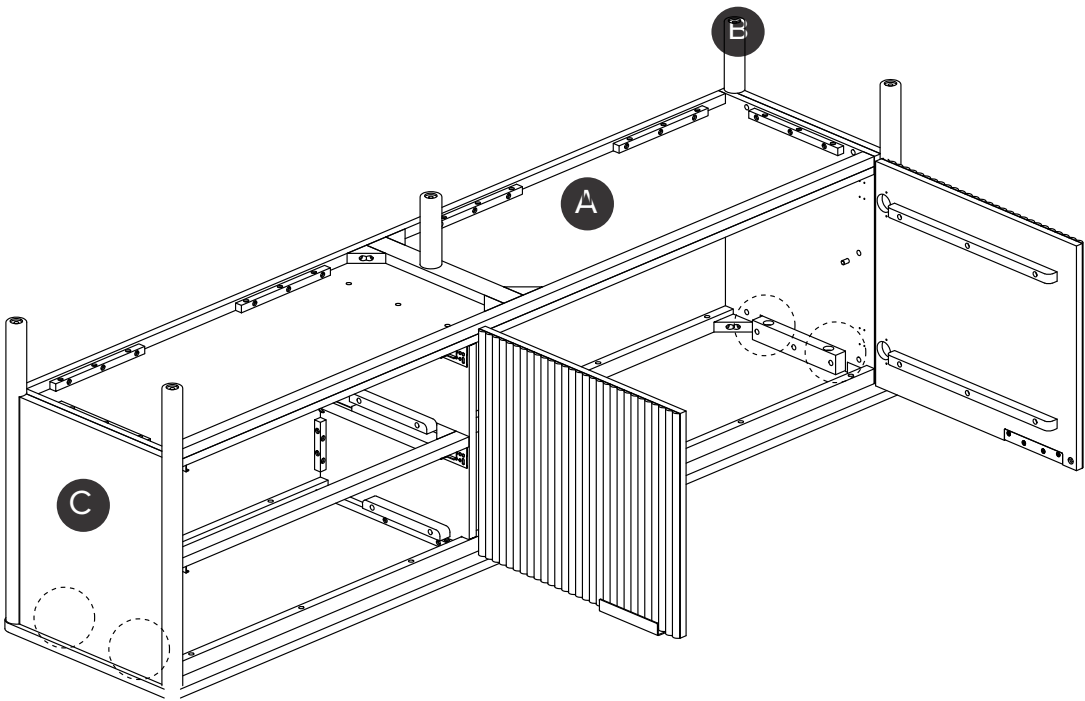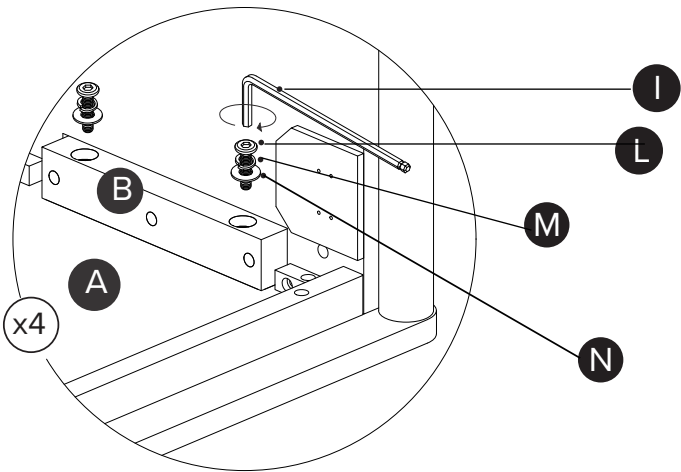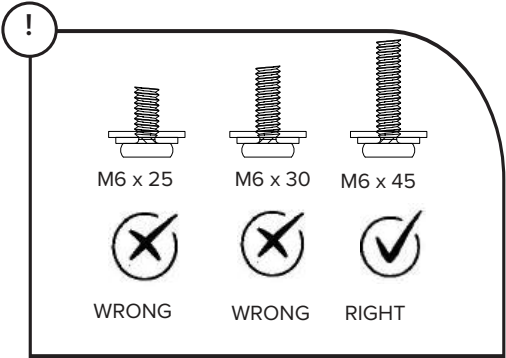    


! Tighten all the bolts (J, K, L) 100%

5

   ! Insert back drawers (G,H).

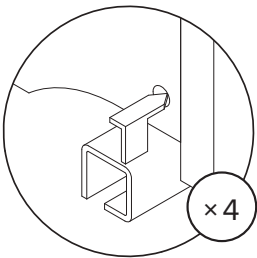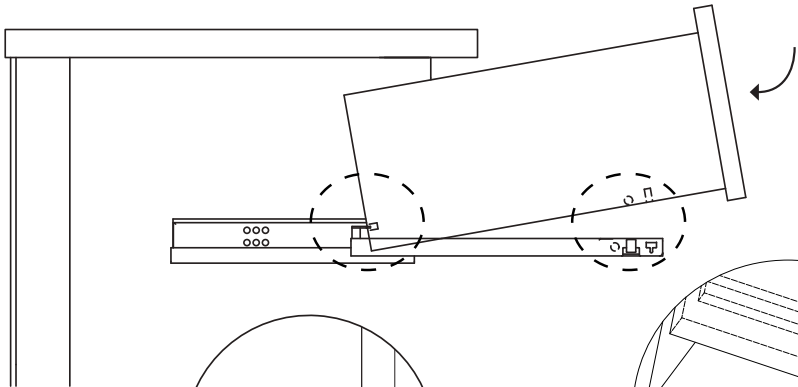
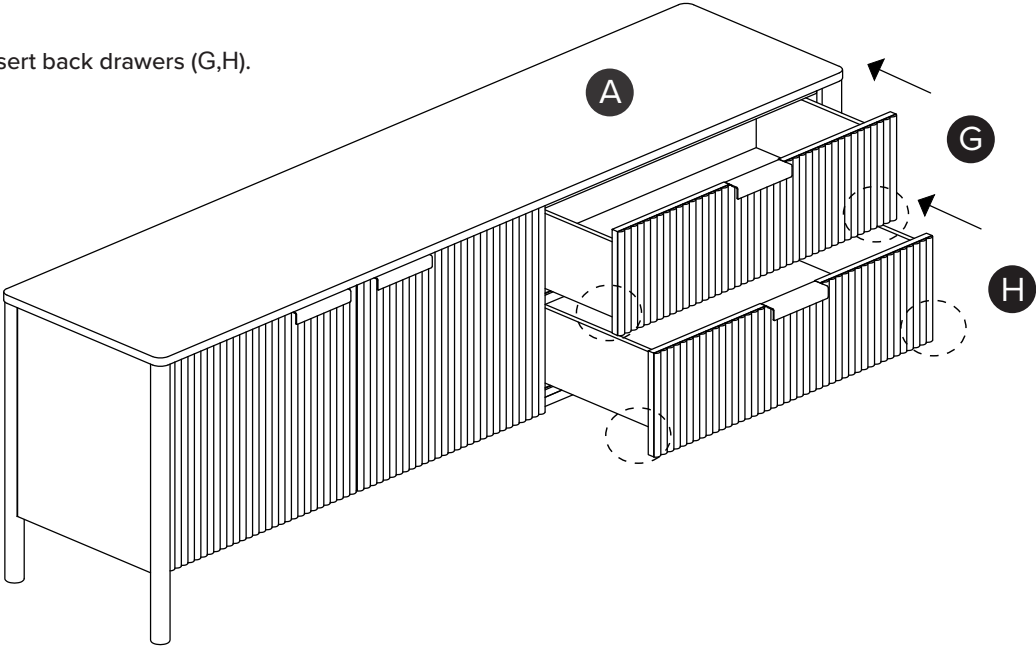


× 4

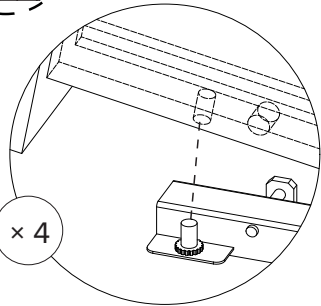 

× 4

  
! Align the glides' pins onto the holes at the bottom of drawer box .

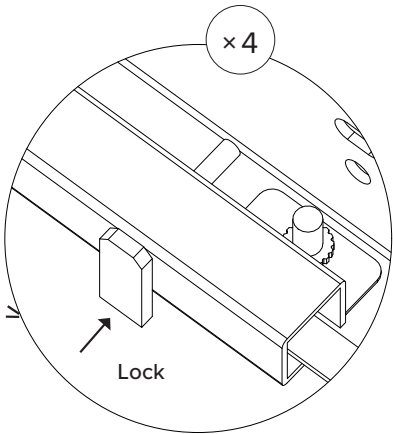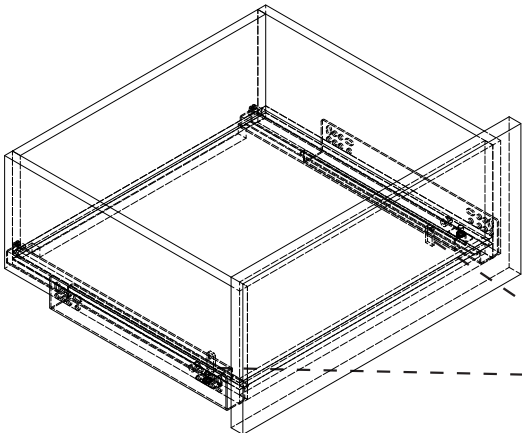

× 4


Lock

 6

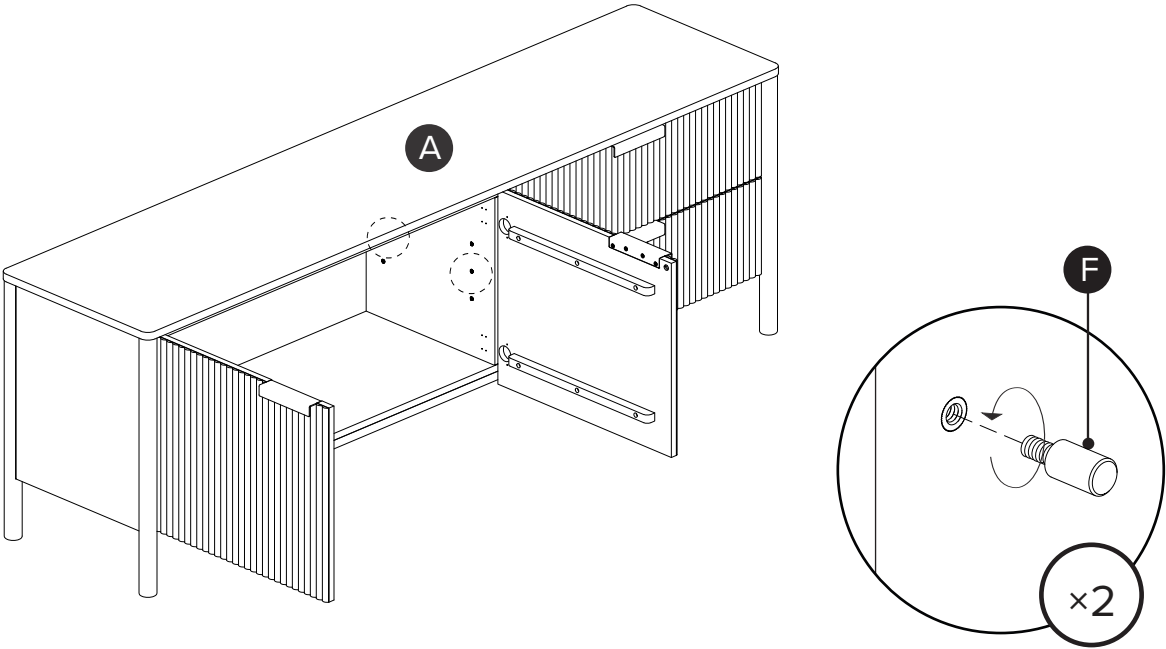



! Remove shelf pins on the right side first.

 7

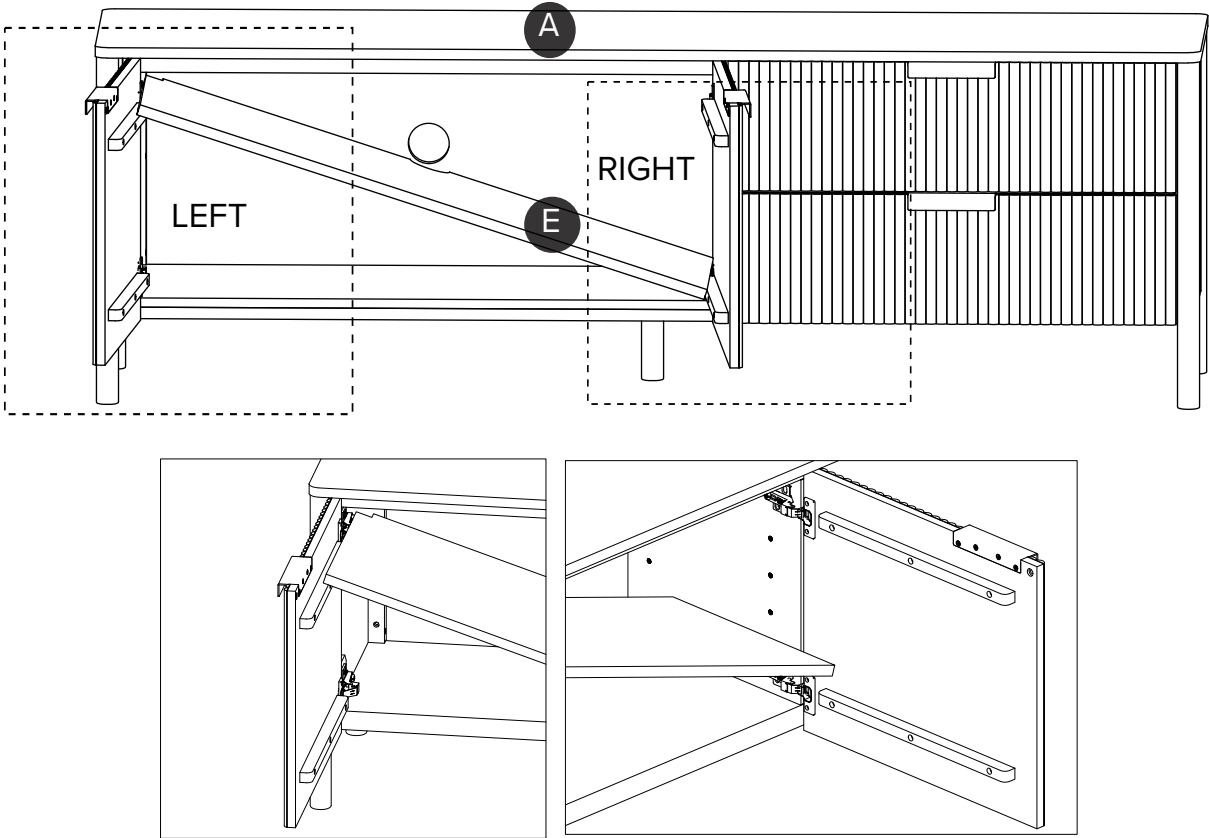


! As placing the shelf (E) onto the cabinet (A) , hold the left side above the upper hinge and the right side above the lower hinge.

  8

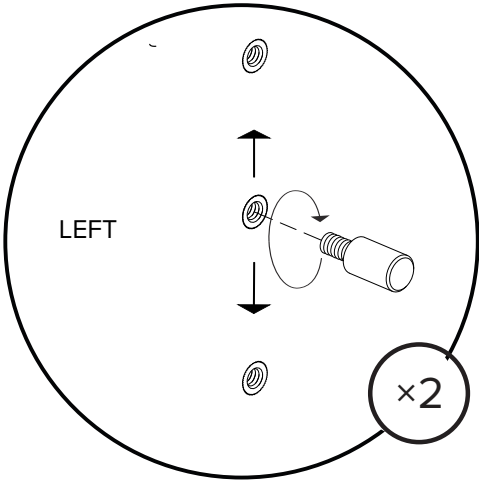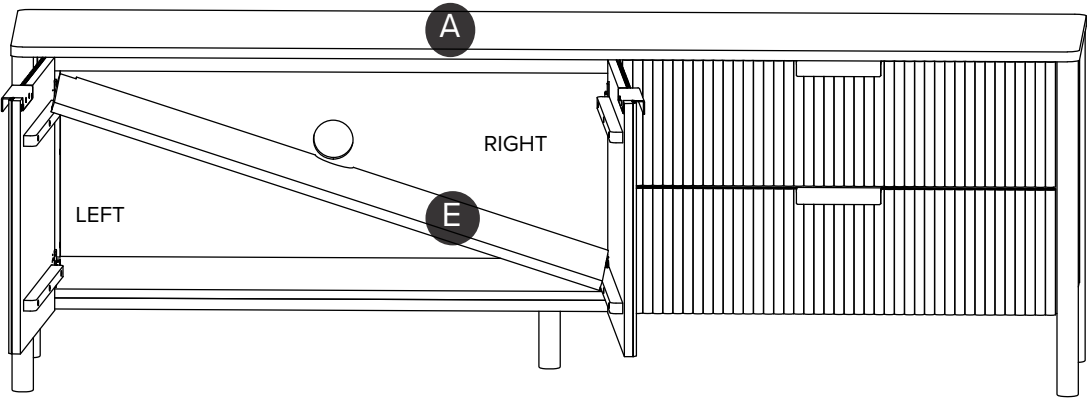

 
! Adjust shelf pins on the left side first at your desired level.

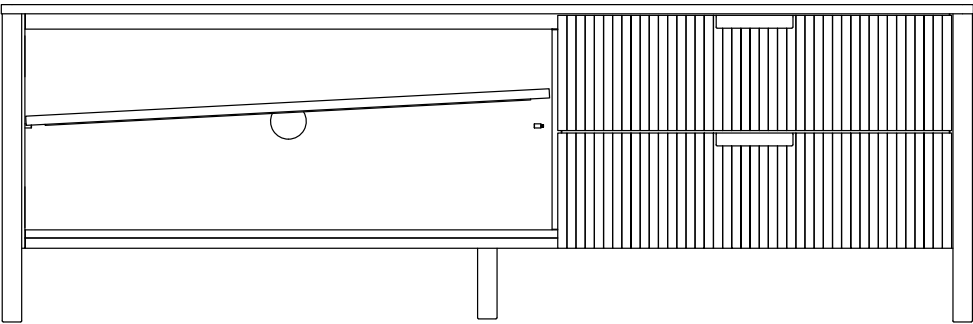

! Place the left side of the shelf on the pins and then continue to adjust shelf pins for the right side of the shelf .


## FIX A CROOKED DRAWER

 ---

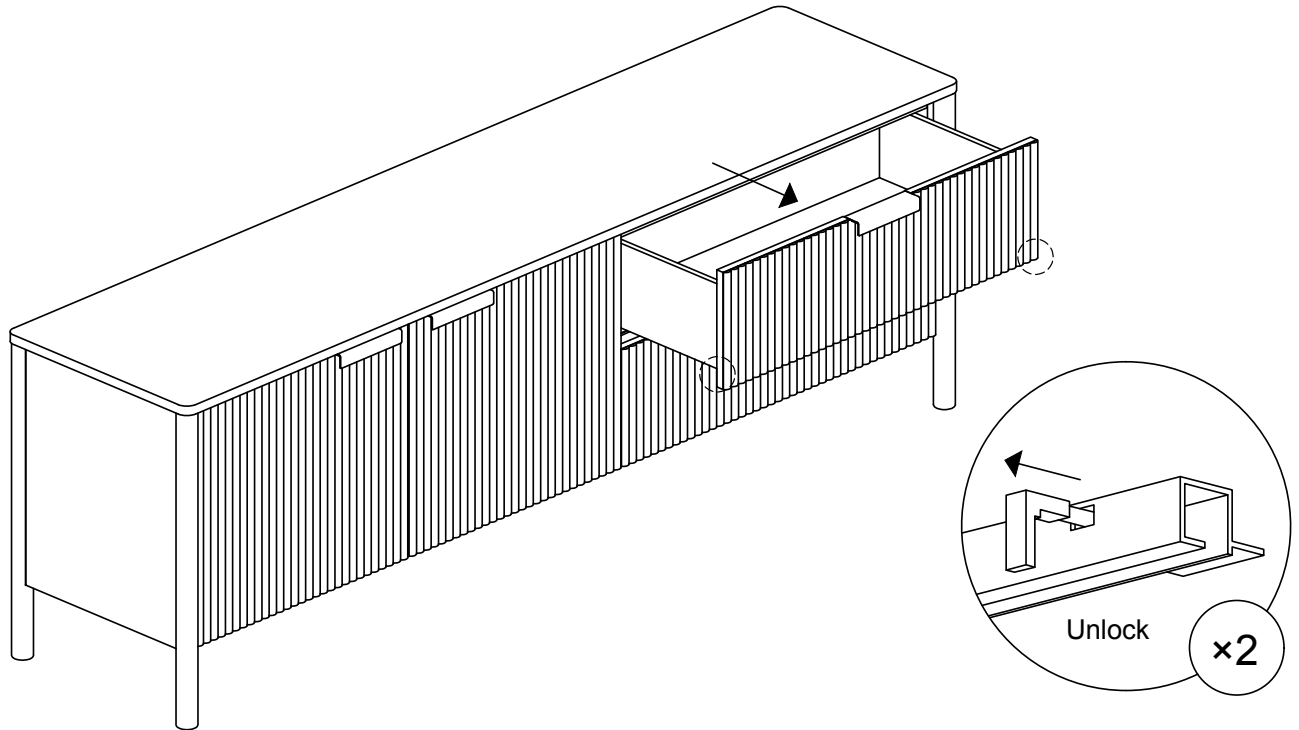

---


## ADJUST THE DRAWER FRONTS MOVING UP

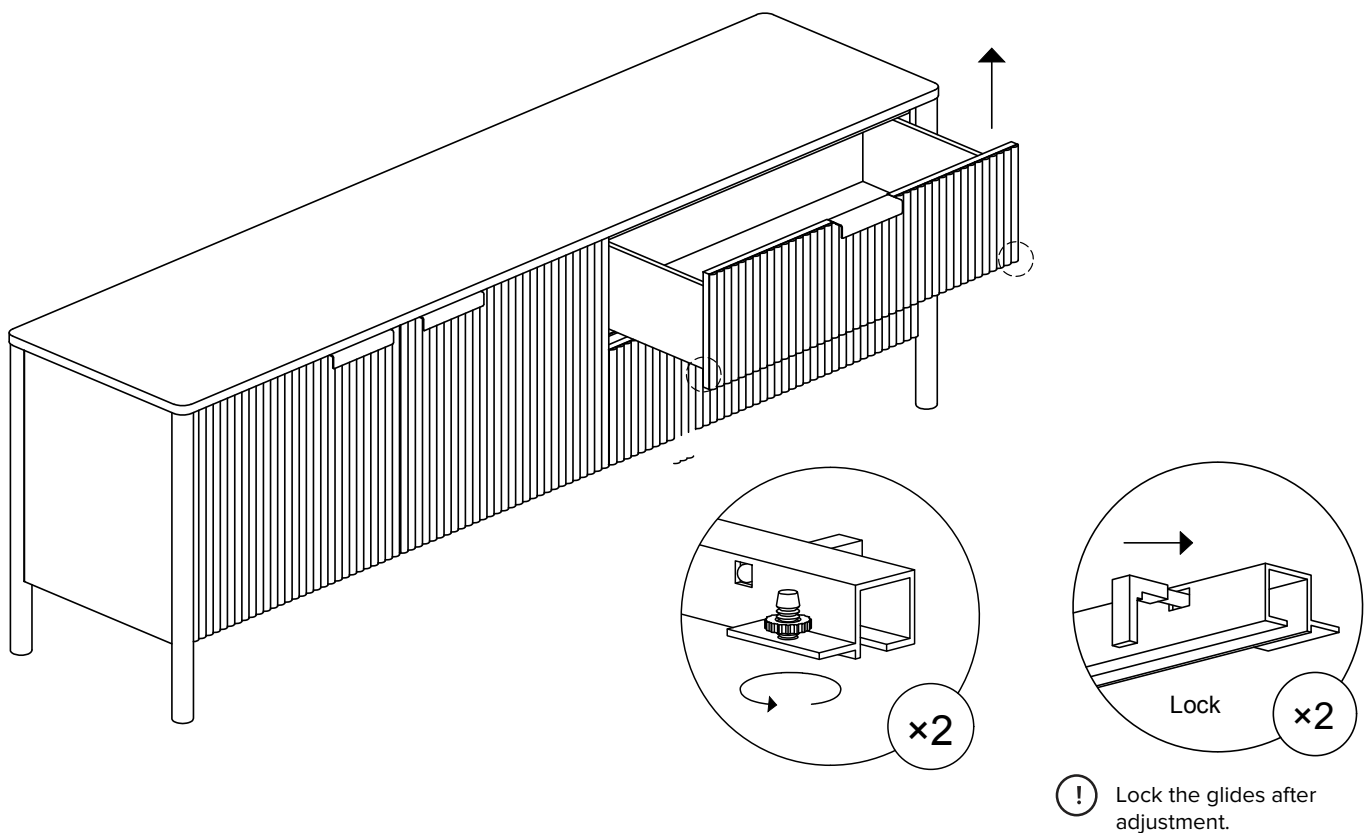 


---

ADJUST THE DRAWER FRONTS MOVING DOWN

 ---

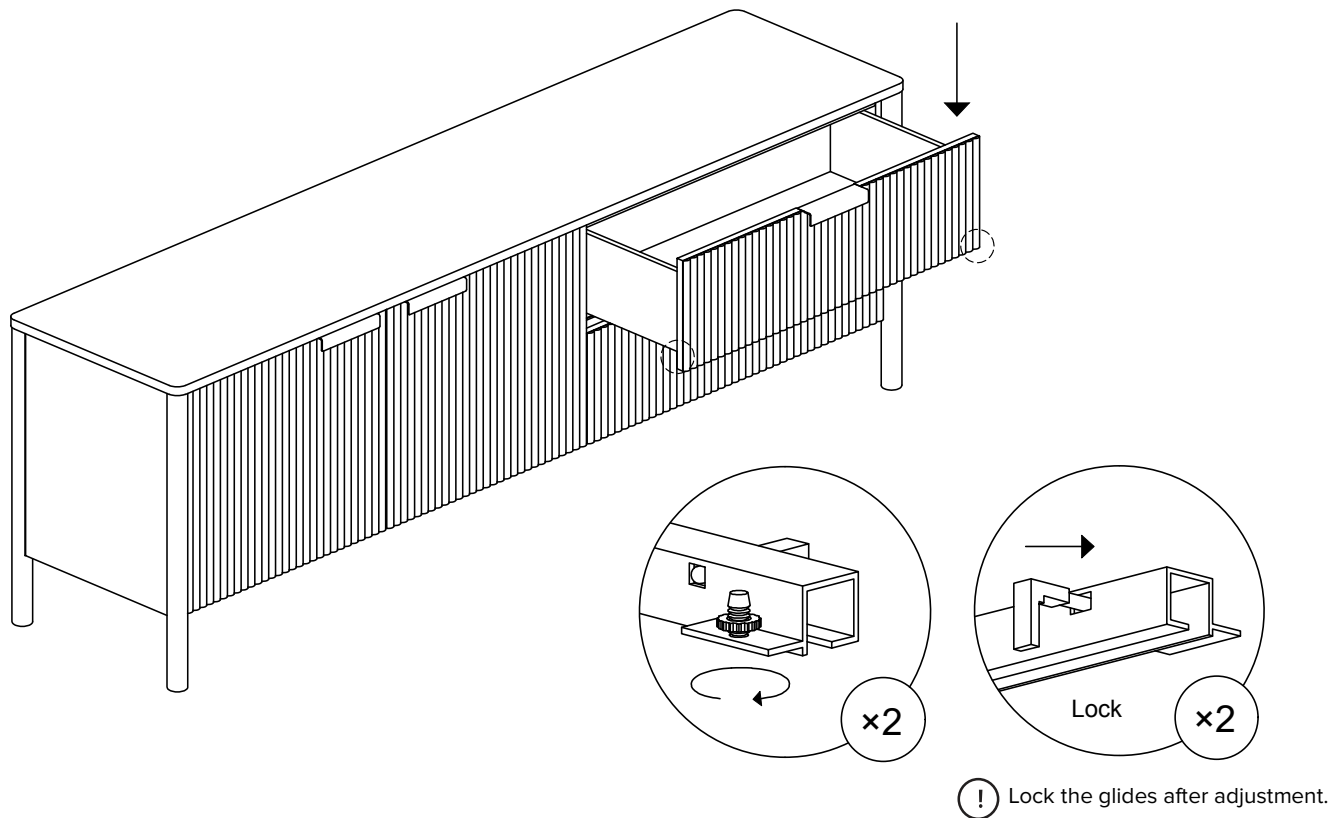**CAUTION!**

 
Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

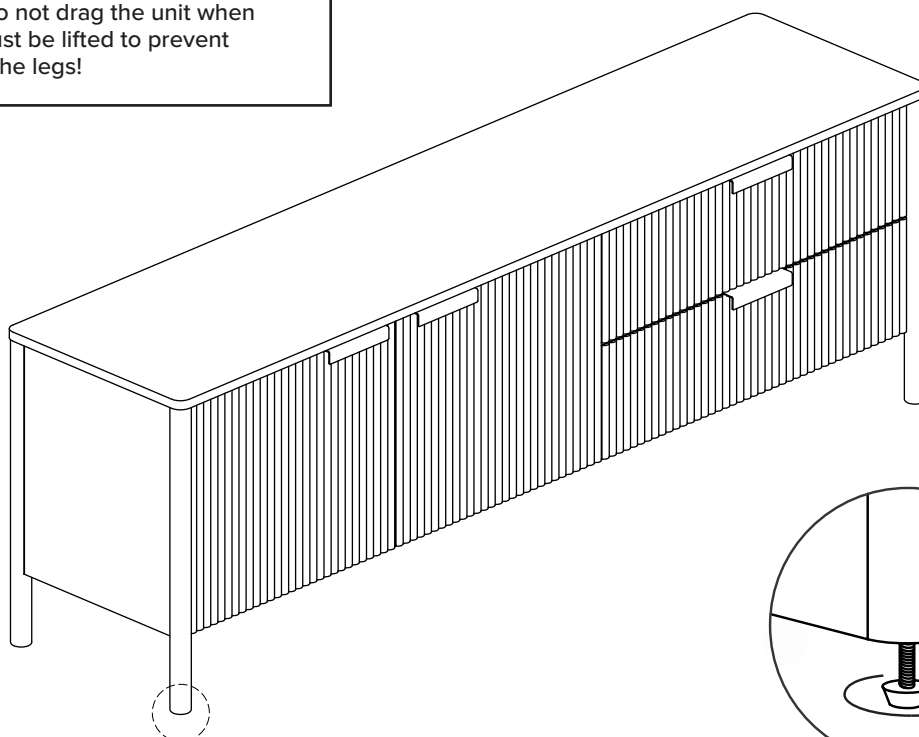

Adjust leveler as needed.



# DOOR ADJUSTMENT INSTRUCTIONS

 **!** During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

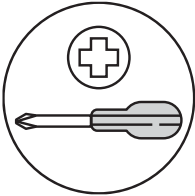



## 1A

  If the door needs adjustment side to side:

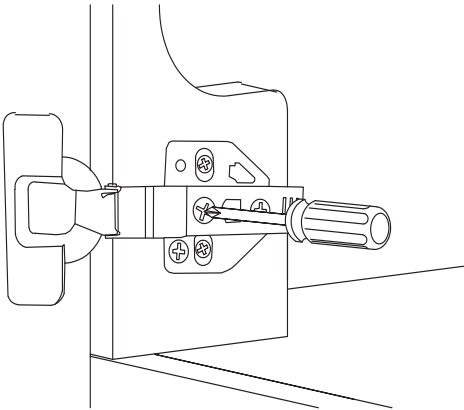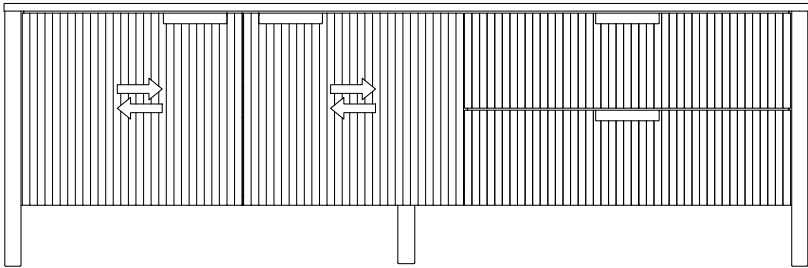

## 2A

If the door needs adjustment forward or backward:

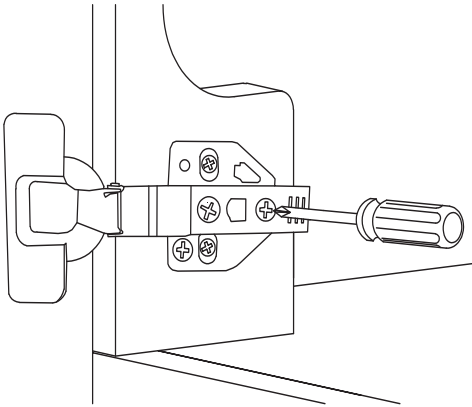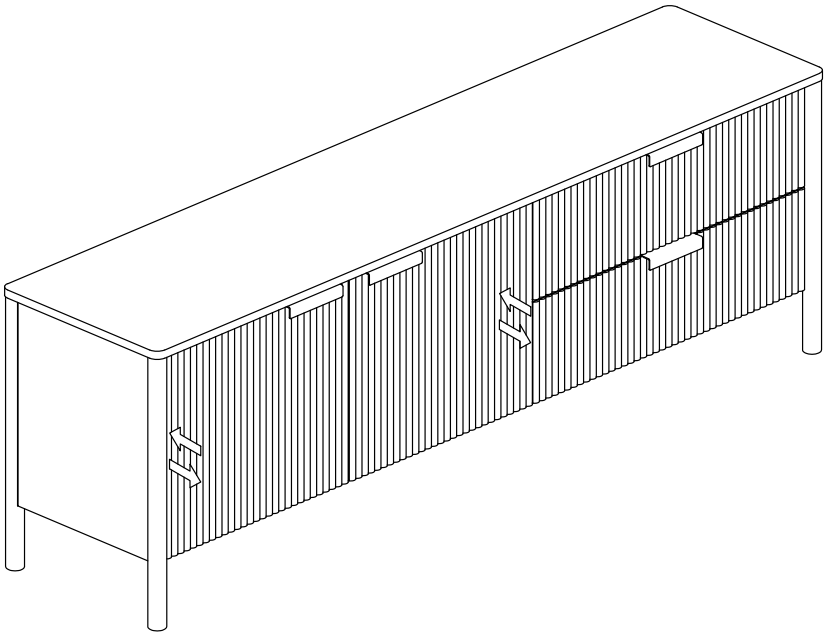

3A

If the door is crooked, adjust hinge(s) up or down:

