 


ARTICLE.

VERSION 1.0

Assembly Instructions

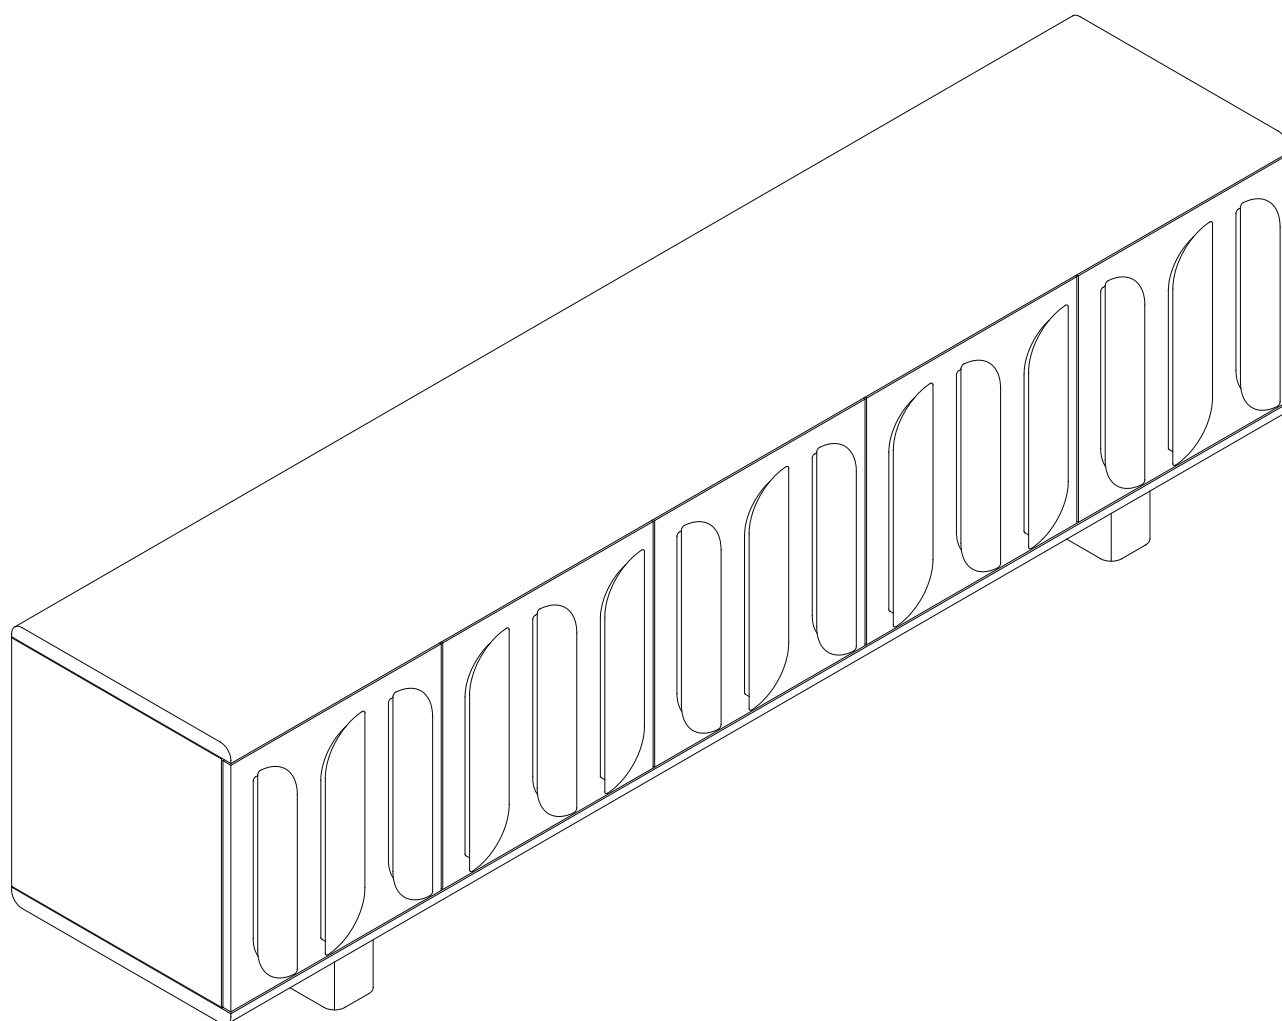

ANSEL

 
Media Unit

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

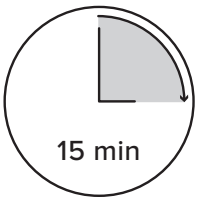


TIME



 OF PEOPLE

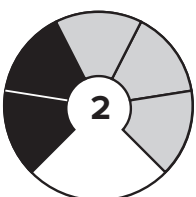

DIFFICULTY

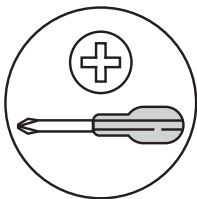 



REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
1	MEDIA UNIT		1
2	LEG		2
3	LEFT SIDE SHELF		1
4	CENTER SHELF		1
5	RIGHT SIDE SHELF		1

HARDWARE LIST			
ID	DESCRIPTION		QTY
A	SHELF PIN		12
B	ALLEN KEY		1
C	M6*20mm BOLT		16

1

 
 
Assemble the legs (2) into the Media Unit (1).

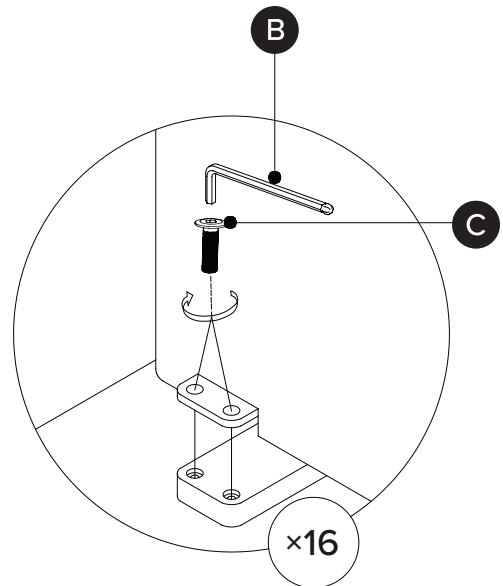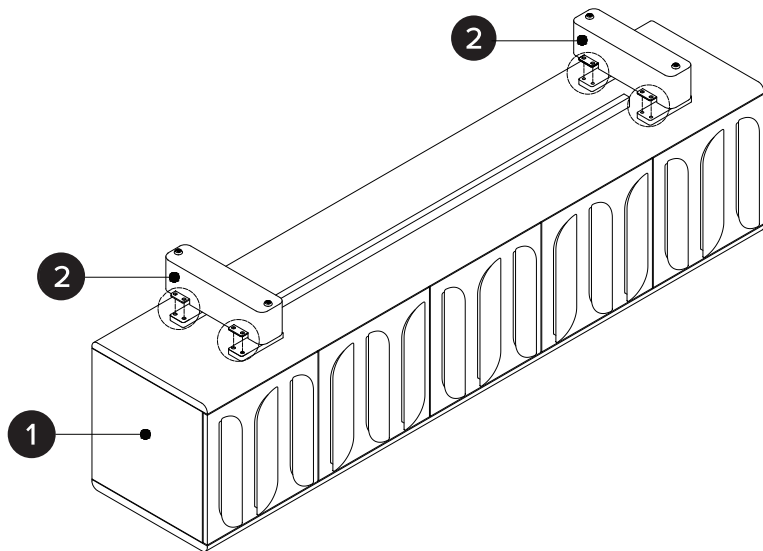**CAUTION!**



Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

2

  
! Insert shelf pins (A) at desired height, and insert shelves (3, 4 & 5).

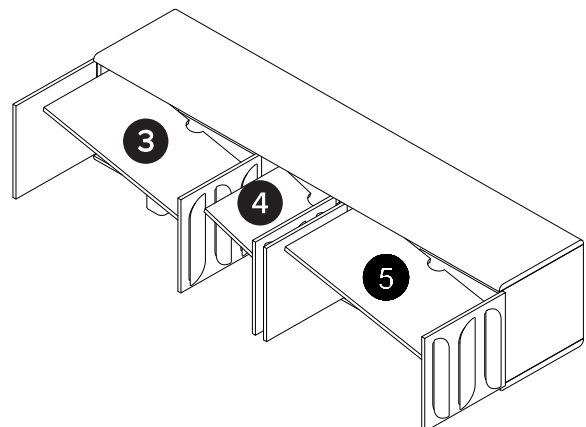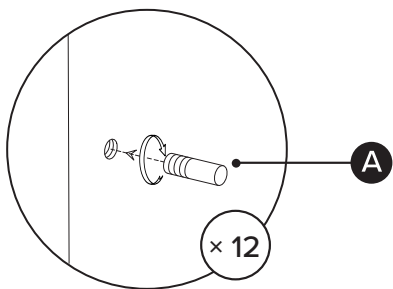

  
! Remove shelf pins and move the shelf up or down at the desired height.

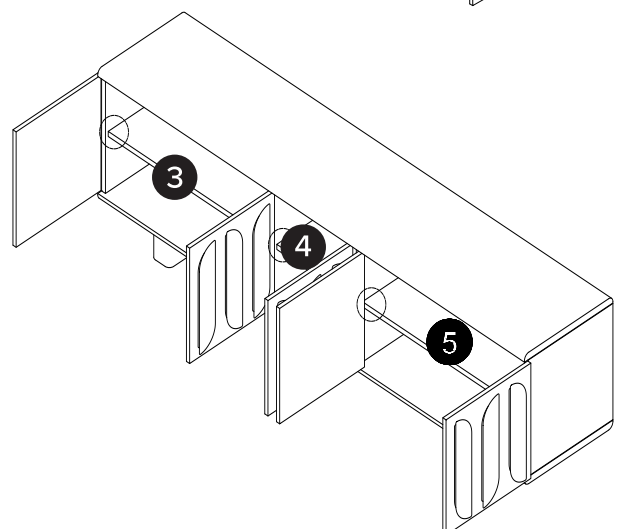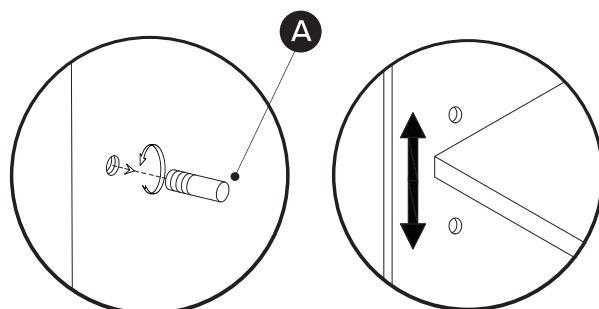

3

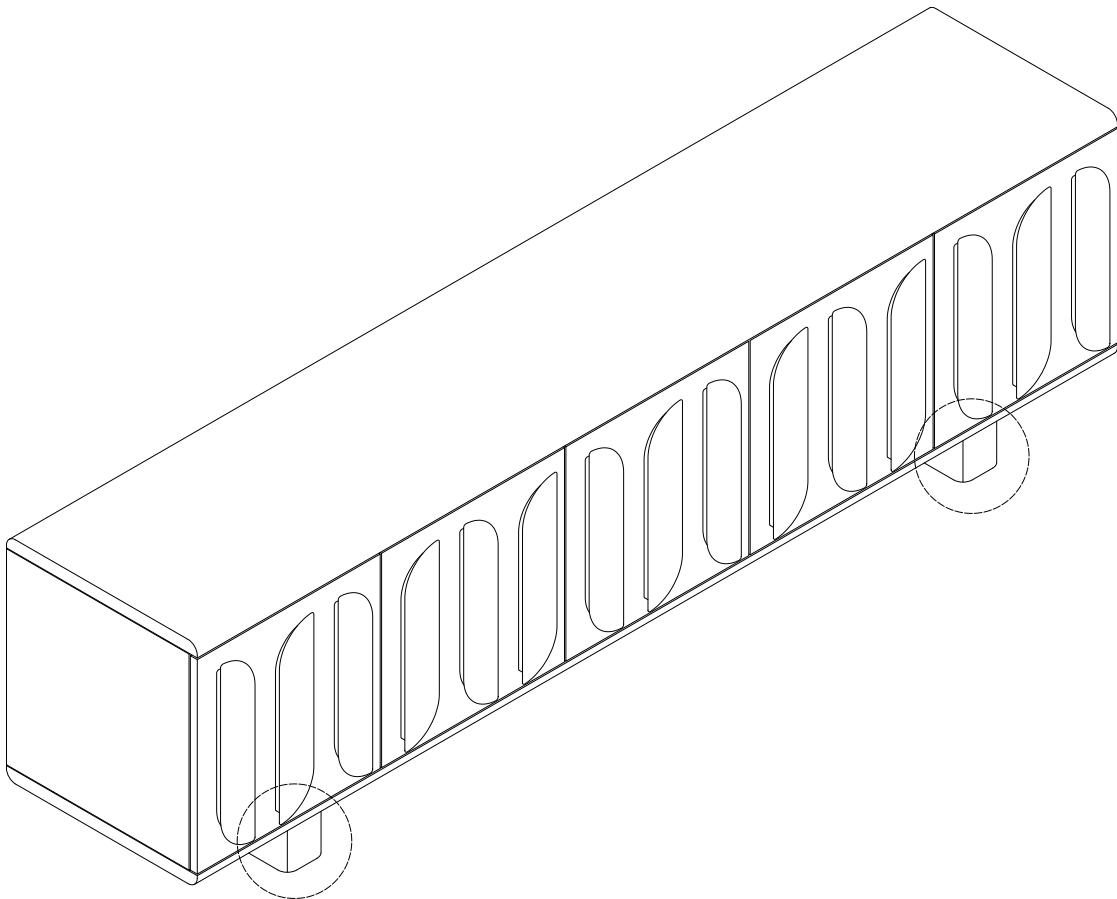 


! Adjust levelers on legs as needed.

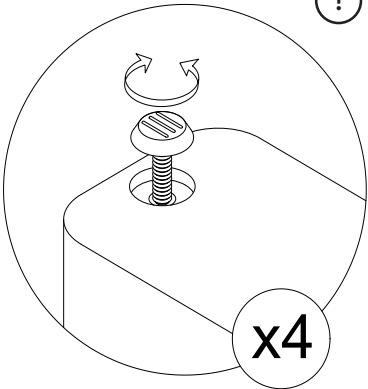 


DOOR ADJUSTMENT INSTRUCTIONS



 
During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

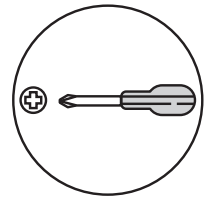

REQUIRED TOOL


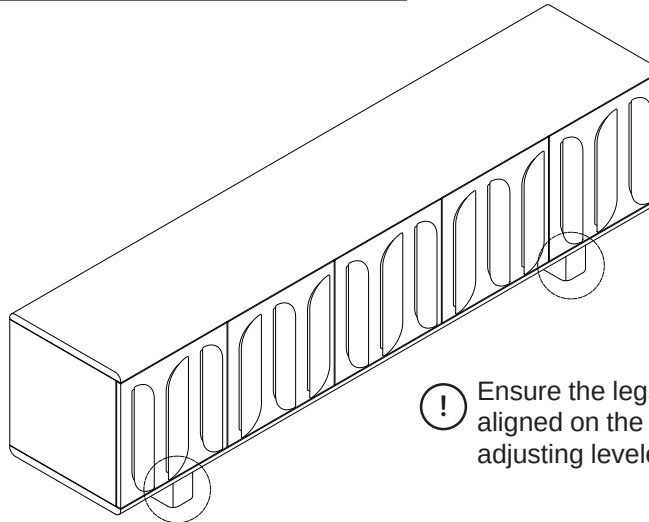 


 Ensure the legs are aligned on the floor by adjusting levelers

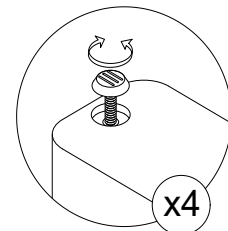

4A

  If the door needs adjustment side to side:

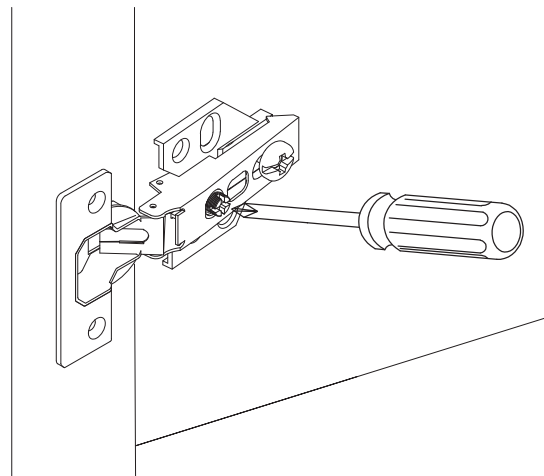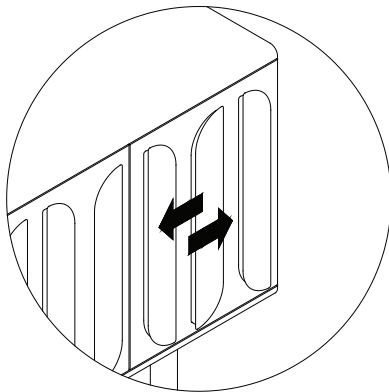

4B

If the door needs adjustment forward or backward:

