 


ARTICLE.

VERSION 1.0

Assembly Instructions

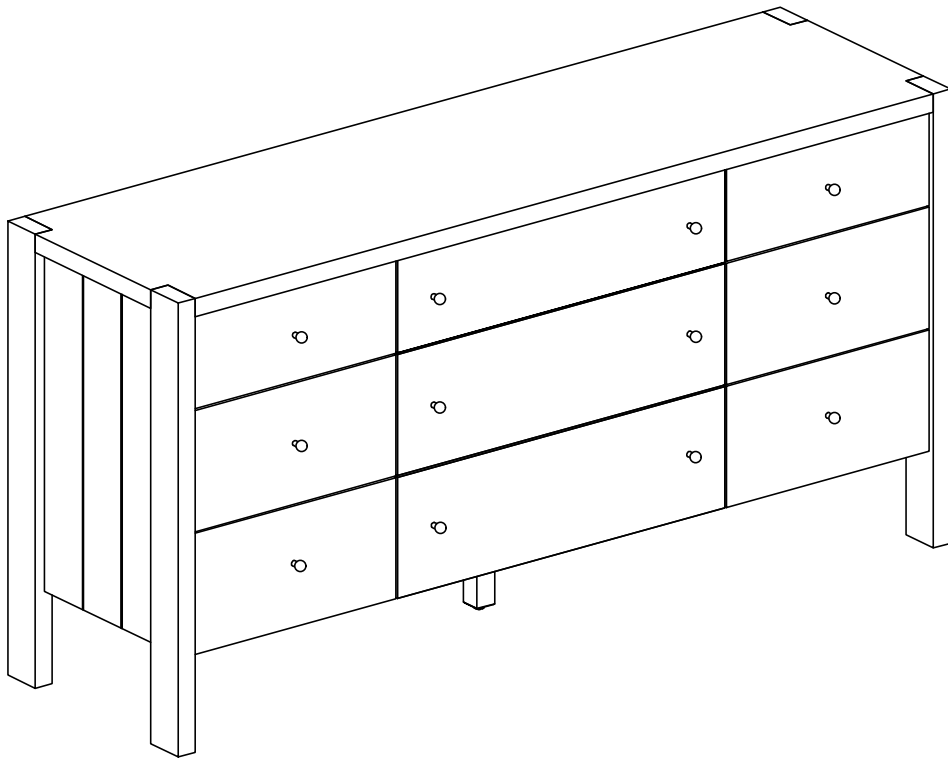

 
CASSIE
9-Drawer Triple Dresser

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

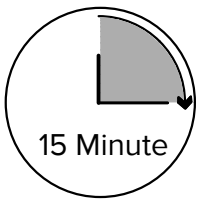

TIME

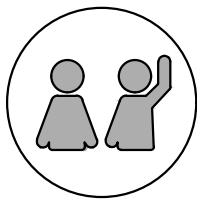 

OF PEOPLE

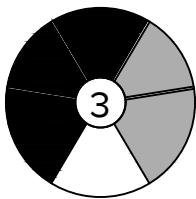 


DIFFICULTY

PARTS INVENTORY			
ID	DESCRIPTION		QTY
1	CABINET BODY		1
2	MIDDLE LEG		1


HARDWARE LIST			
ID	DESCRIPTION		QTY
A	SCREW DRIVER		1

 i

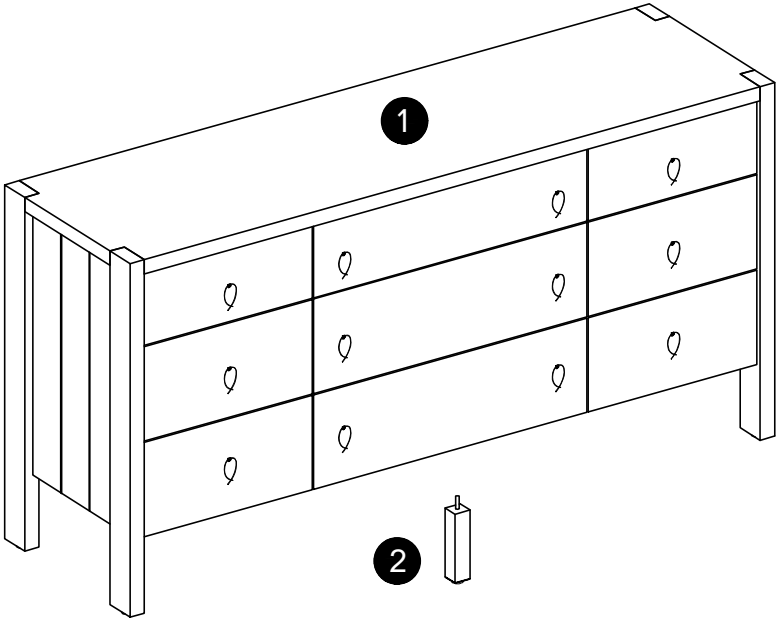


1

 
! Remove the protection on the leg bolt before assembling.

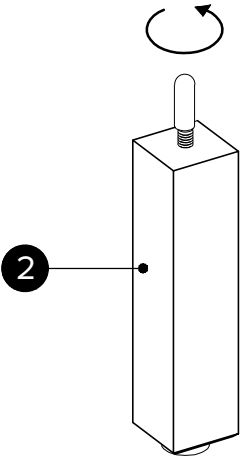

2

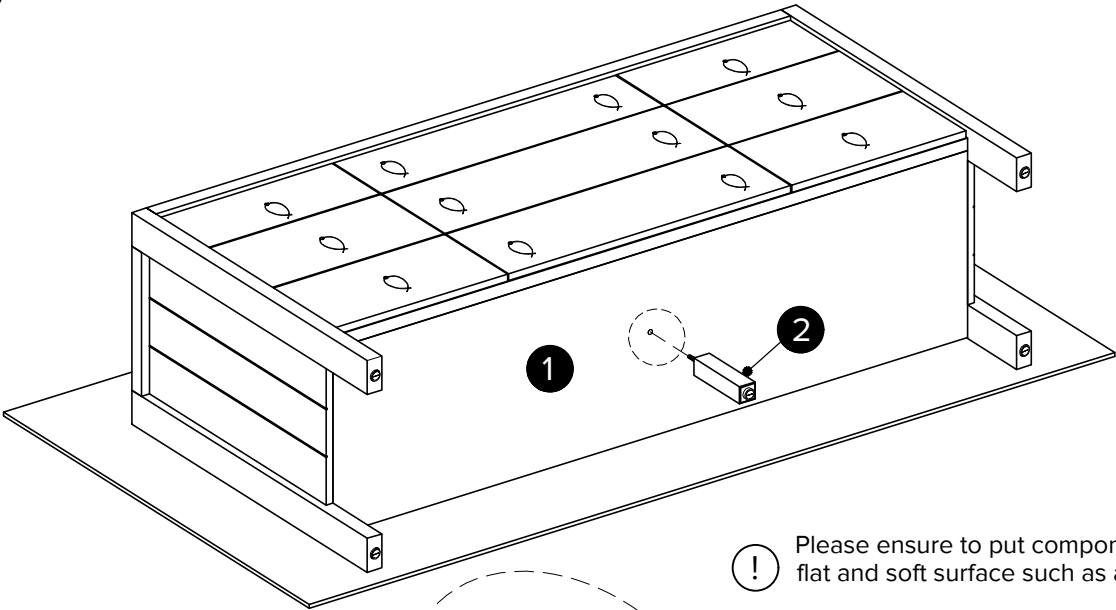 

 
! Please ensure to put components on a flat and soft surface such as a cardboard or a rug.

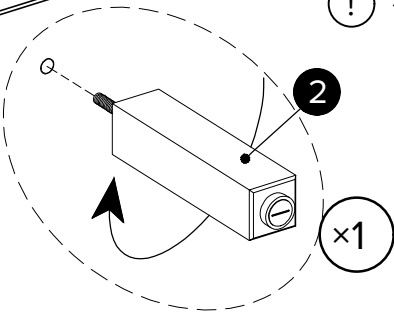


CAUTION !
Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

3

 ! Handles are assembled inside of the drawer boxes to protect them from damage during transportation, please detach them and reassemble from the front of drawers.

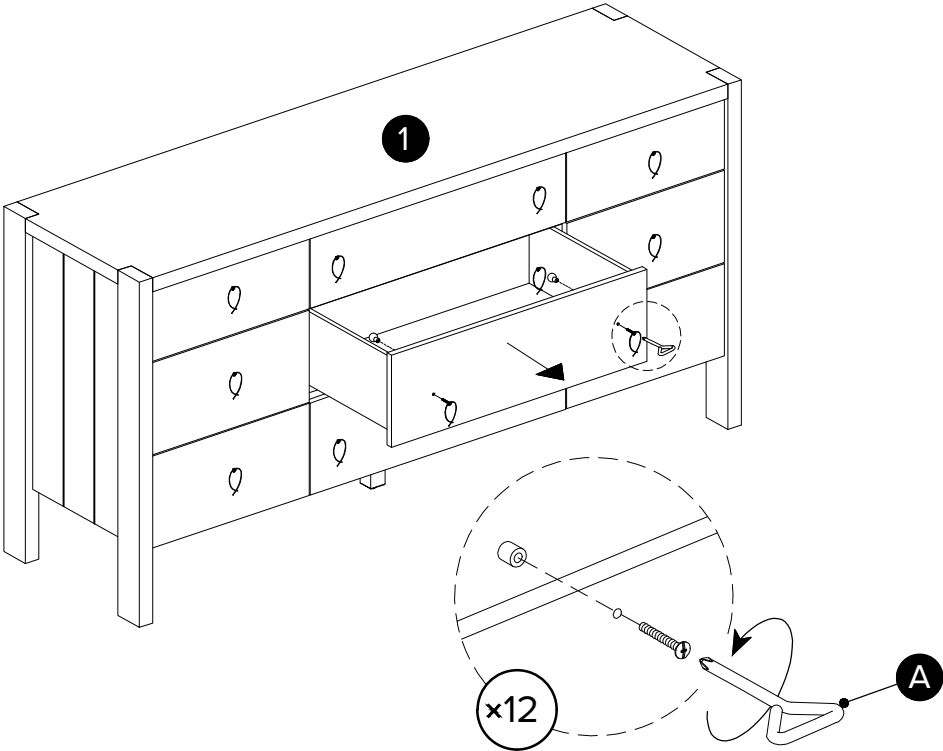


4

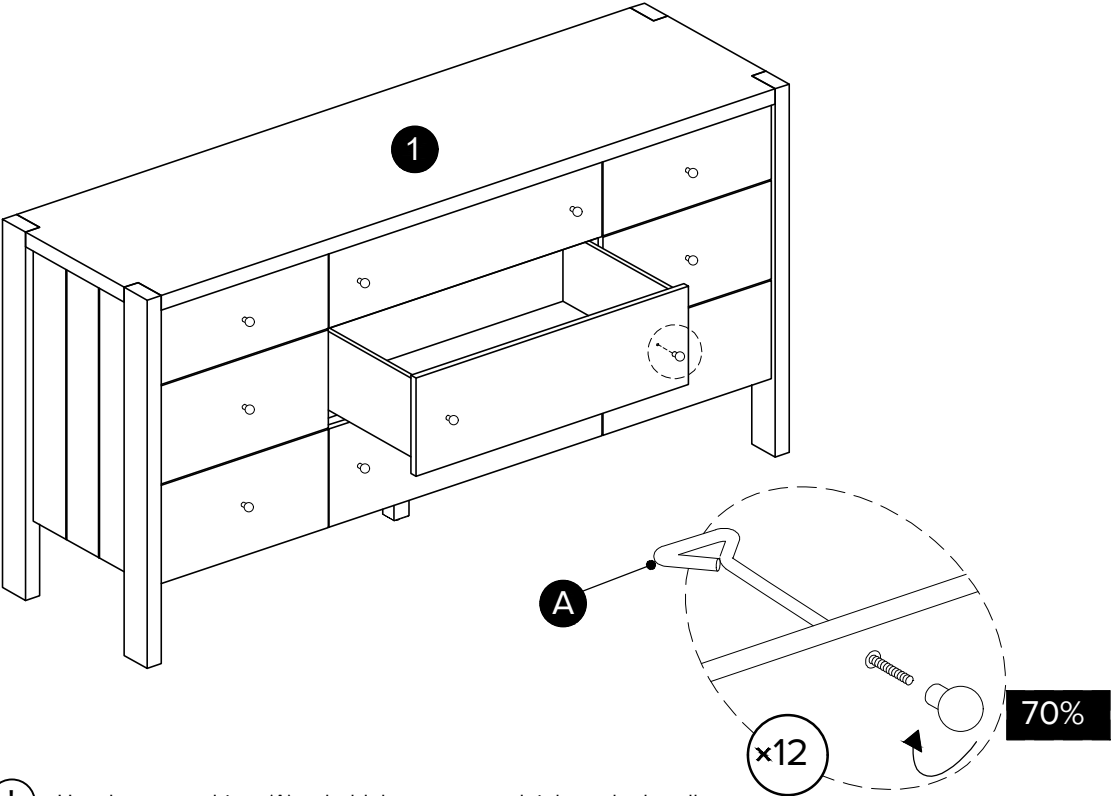 



! Use the screw driver (A) to hold the screws and tighten the handles.

 5

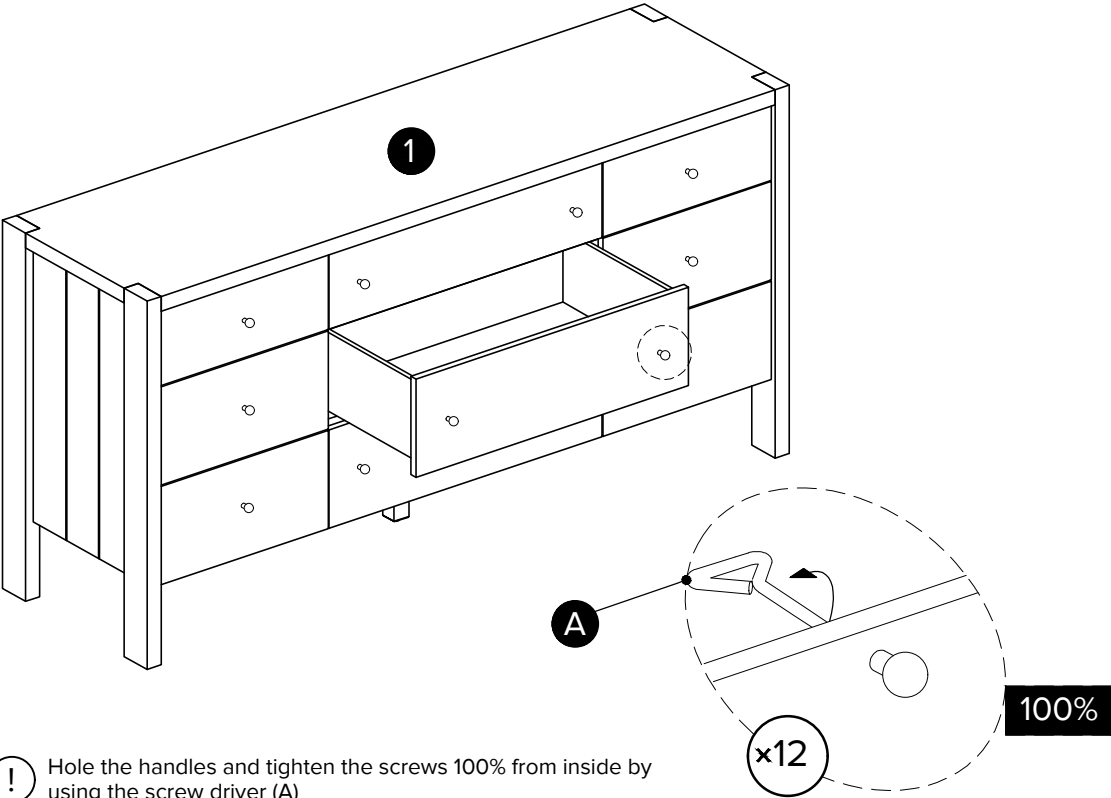

! Hole the handles and tighten the screws 100% from inside by using the screw driver (A)

  
6

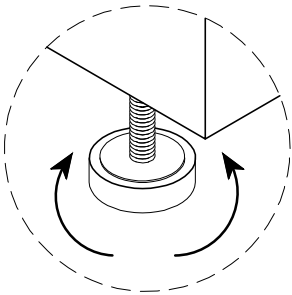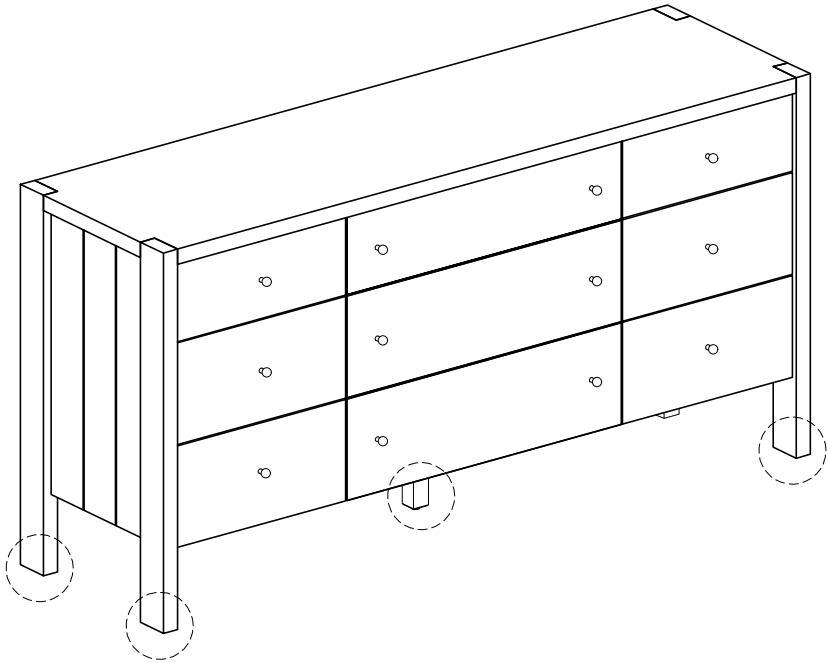

ⓘ Adjust leveler as needed

FIX A CROOKED DRAWER

 
If the drawer needs to be raised:

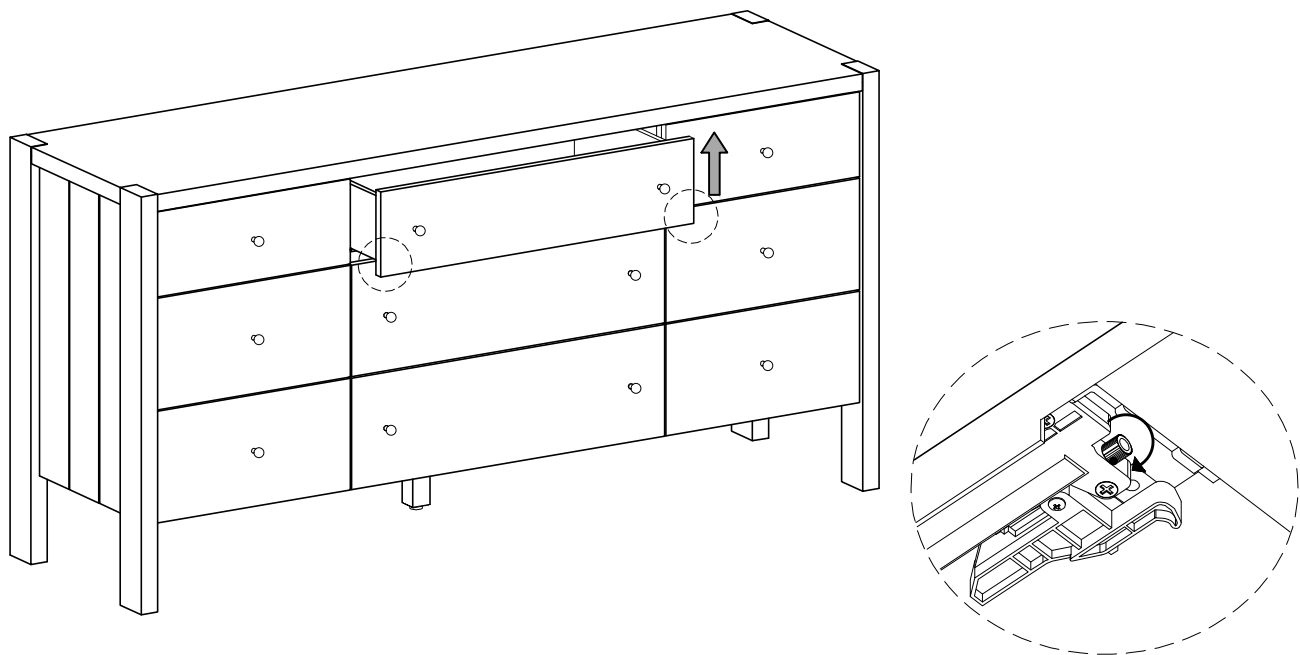

! Rotate the adjustment wheel on the drawer glides in the direction of the arrow.

7

 If the drawer needs to be lowered:

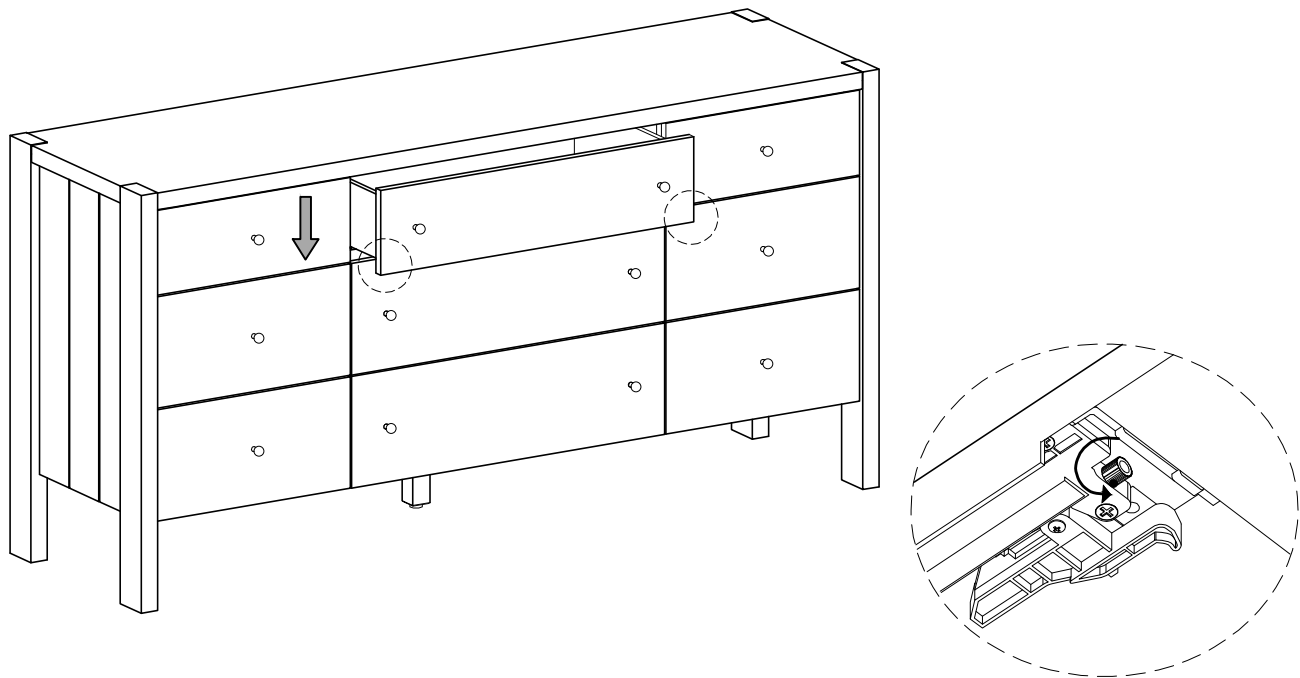

! Rotate the adjustment wheel on the drawer glides in the direction of the arrow.



 
ANTI-TIP RESTRAINT INTALLATION



WARNING!


Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- . ALWAYS install anti-tip device provided.
- . NEVER put a TV on this product.
- . NEVER allow children to stand, climb or hang on any drawers, doors, or shelves
- . NEVER open more than one drawer at a time.
- . Place heaviest items in the lowest drawers.

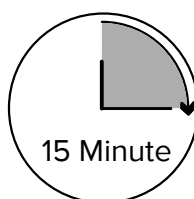


15 Minute

 
TIME

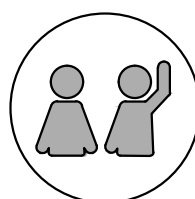


OF PEOPLE

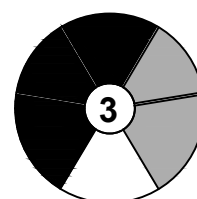 


DIFFICULTY

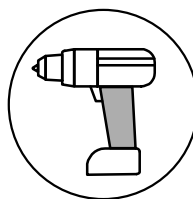 

REQUIRED TOOL
8MM / 5/16" DRILL BIT

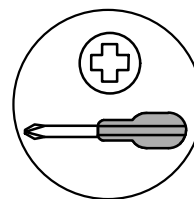 


REQUIRED TOOL

 PARTS INVENTORY			
ID	DESCRIPTION		QTY
B	BRACKET		4
C	M4 x 20MM SCREW		4
D	PLUG		4
E	M5 x 70MM SCREW		4
F	STRAP		2




Hardware (D/E) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

 1

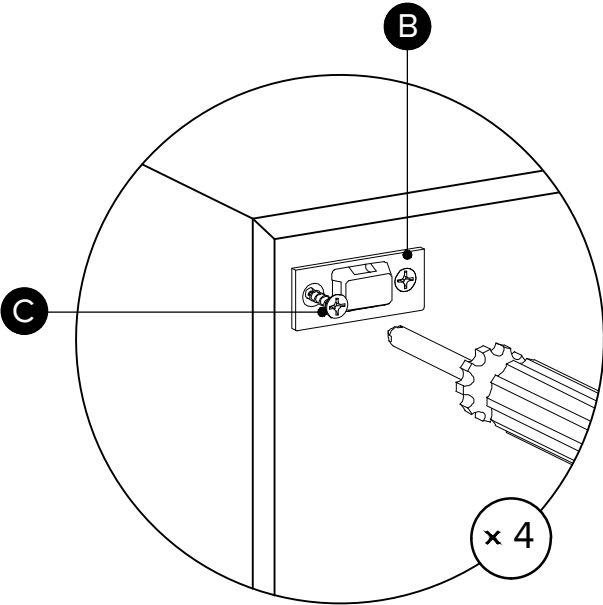


Attach pair of brackets to top corners of the back of the unit.

 2


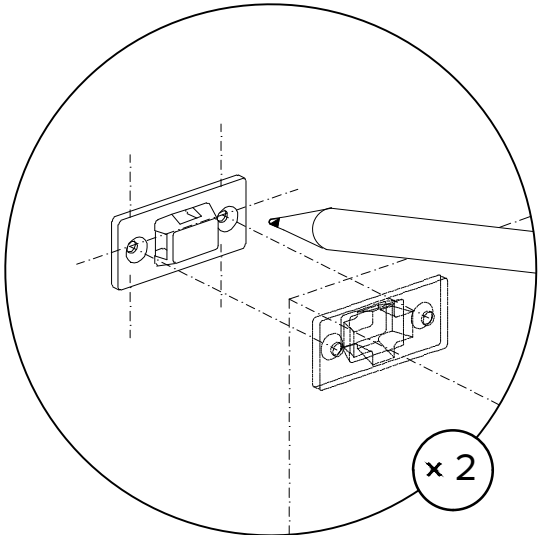


Mark on wall where second pair of brackets should be placed.

 3

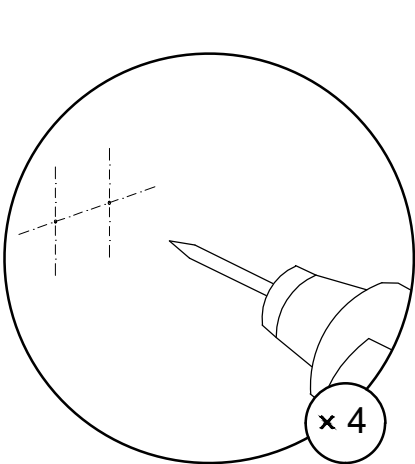


  Drill holes in wall using 8mm / 5/16" drill bit.

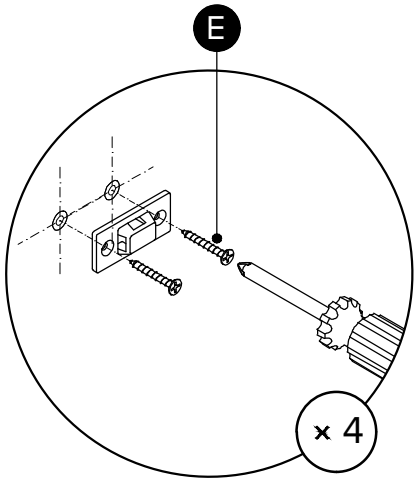
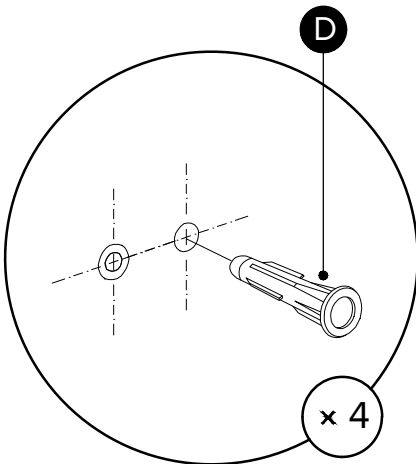


4A

 Align brackets on unit
with brackets on wall.

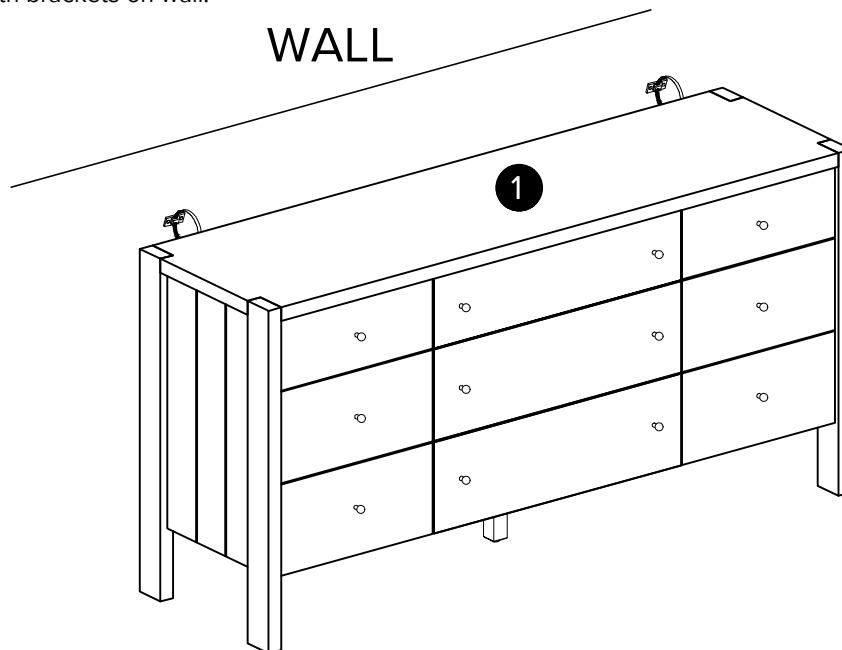

4B

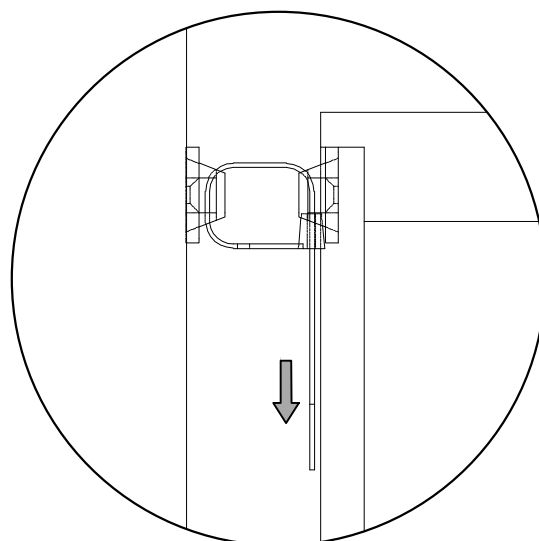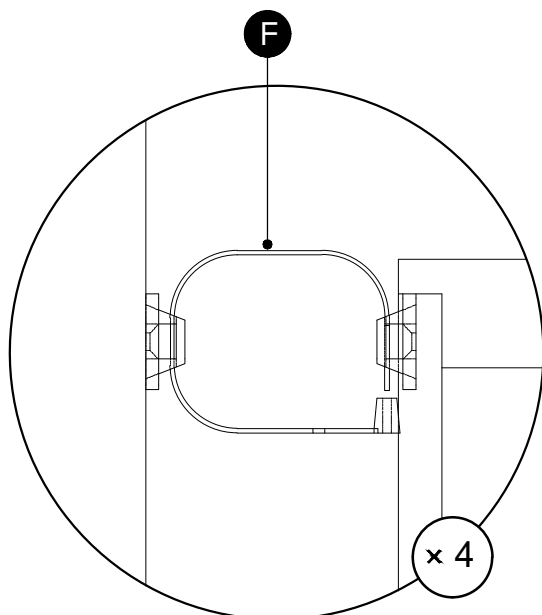  

Pull strap down until it snap-locks.