


ARTICLE.

VERSION 1.0

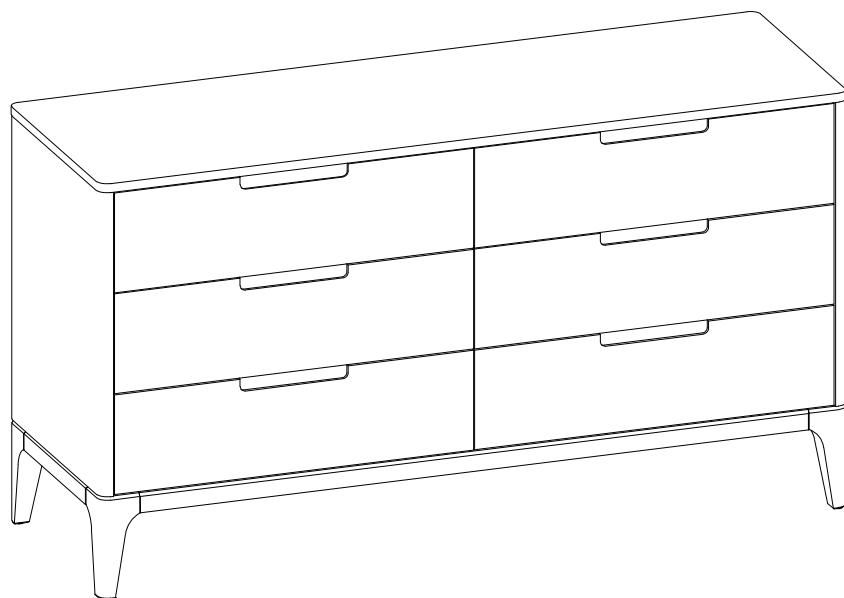

ROSIN


6-Drawer Double Dresser

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

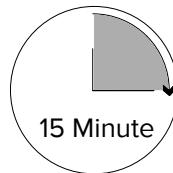

TIME



OF PEOPLE

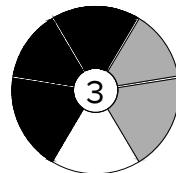


DIFFICULTY

PARTS INVENTORY			
ID	DESCRIPTION	QTY	
1	BODY	1	
2	LEFT LEG FRAME	1	
3	RIGHT LEG FRAME	1	

HARDWARE LIST			
ID	DESCRIPTION	QTY	
A	BOLT M6X60	12	
B	SPRING WASHER	12	
C	FLAT WASHER	12	
D	ALLEN KEY	1	

i

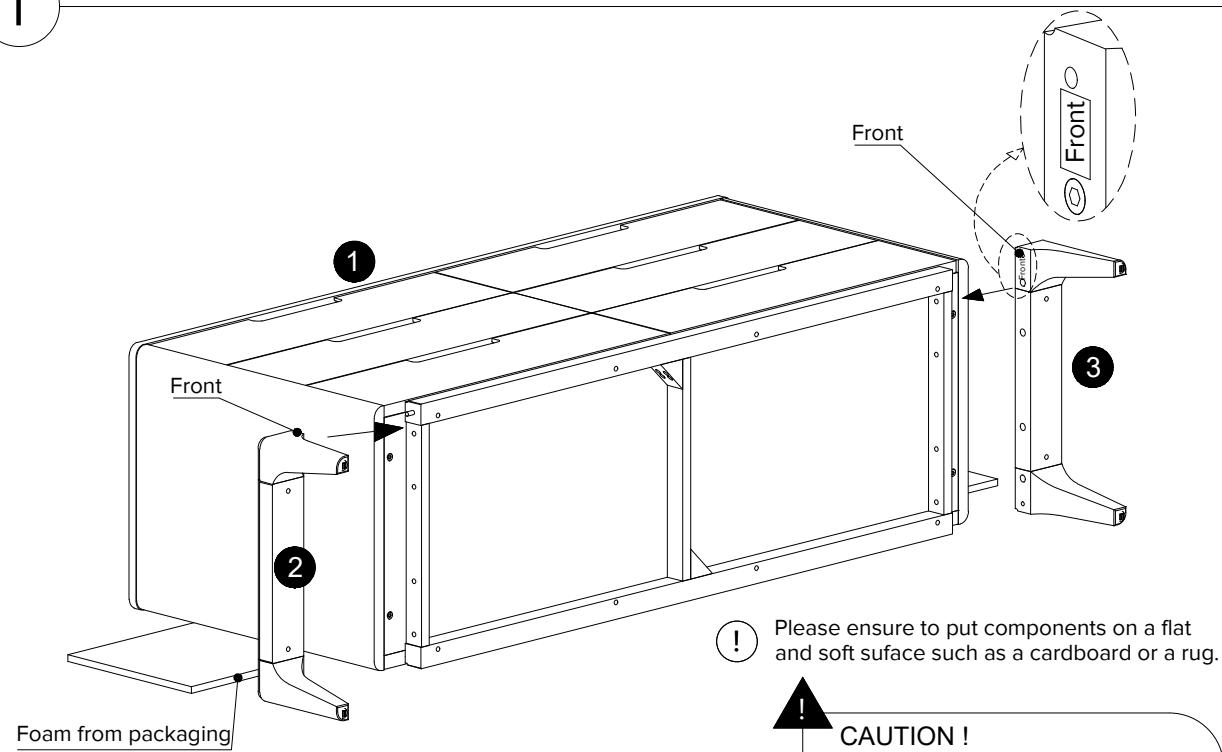


1

! Ensure that 2 front legs are flush and properly aligned with the front stretcher prior to bolt installation.


CAUTION !



Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!



Foam from packaging

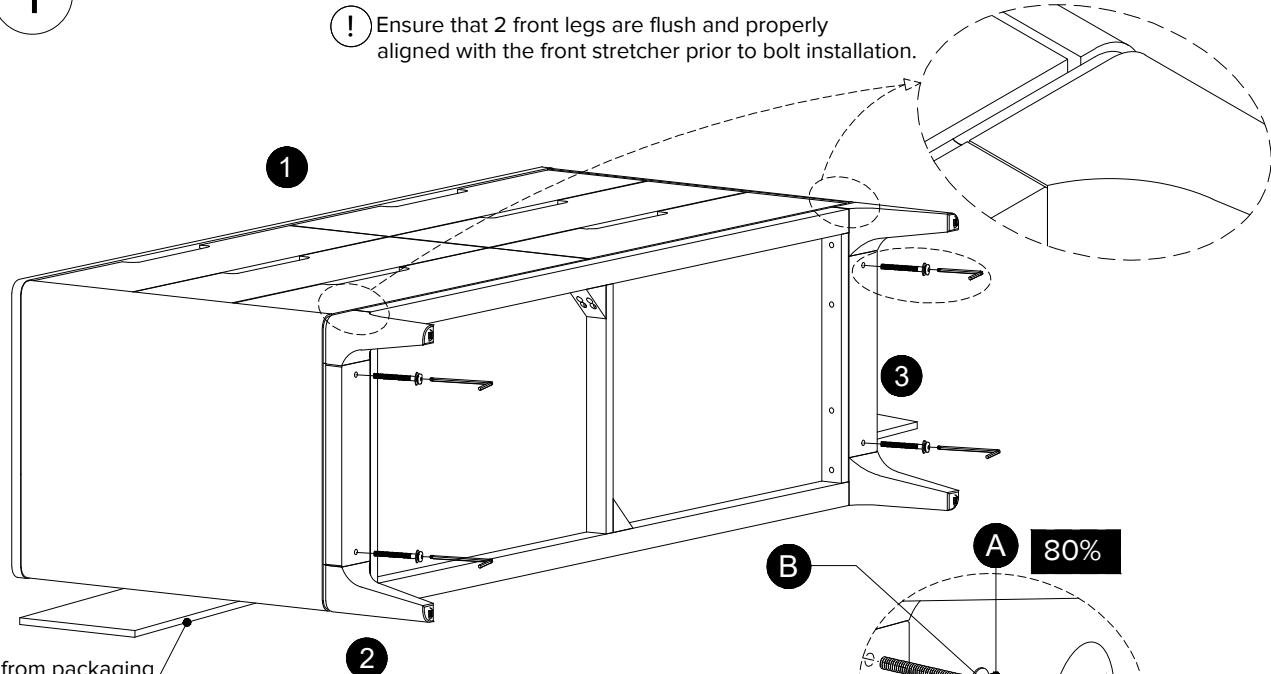

! Do not fully tighten the bolts

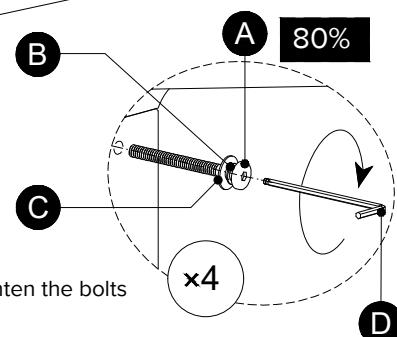

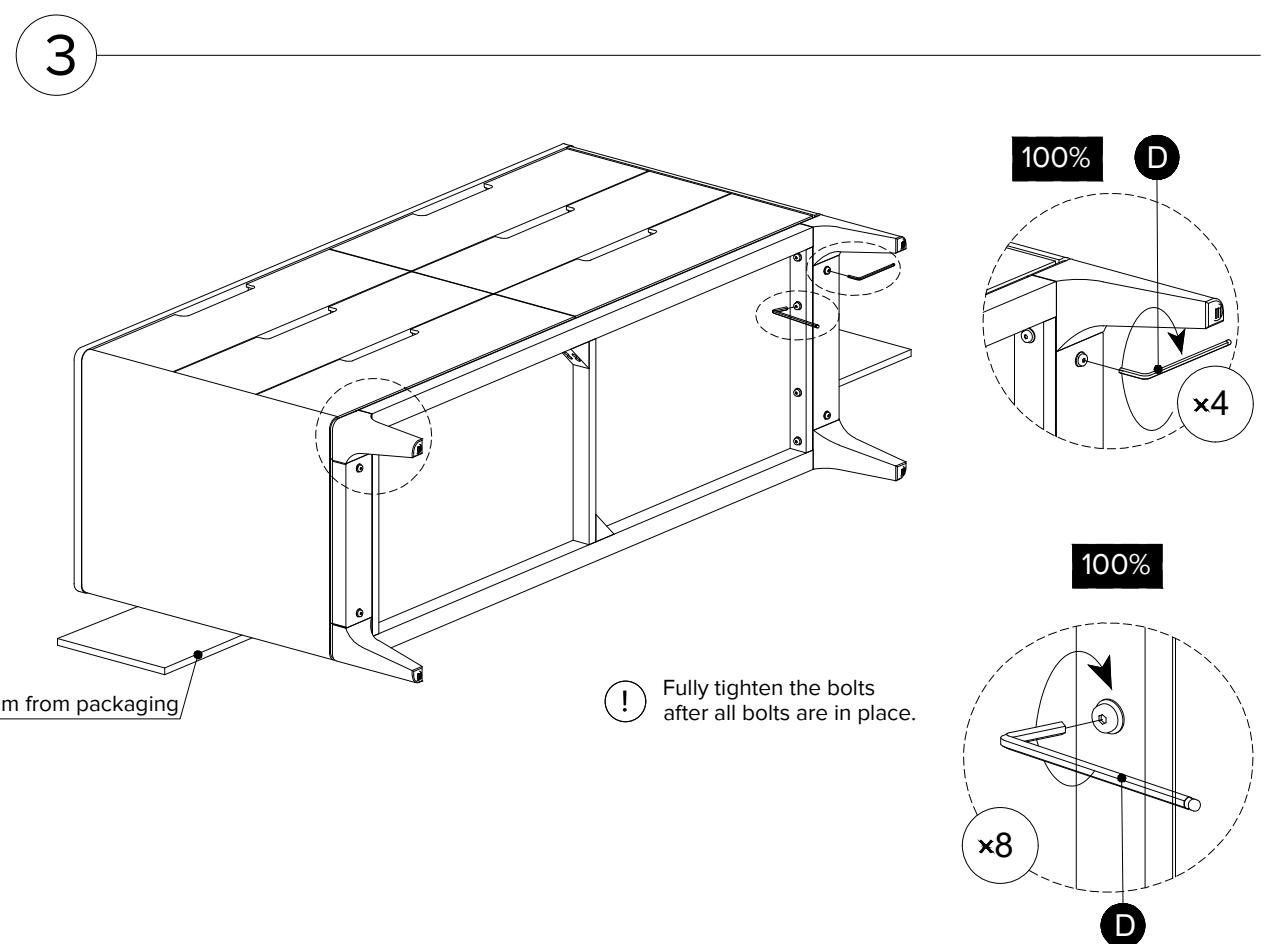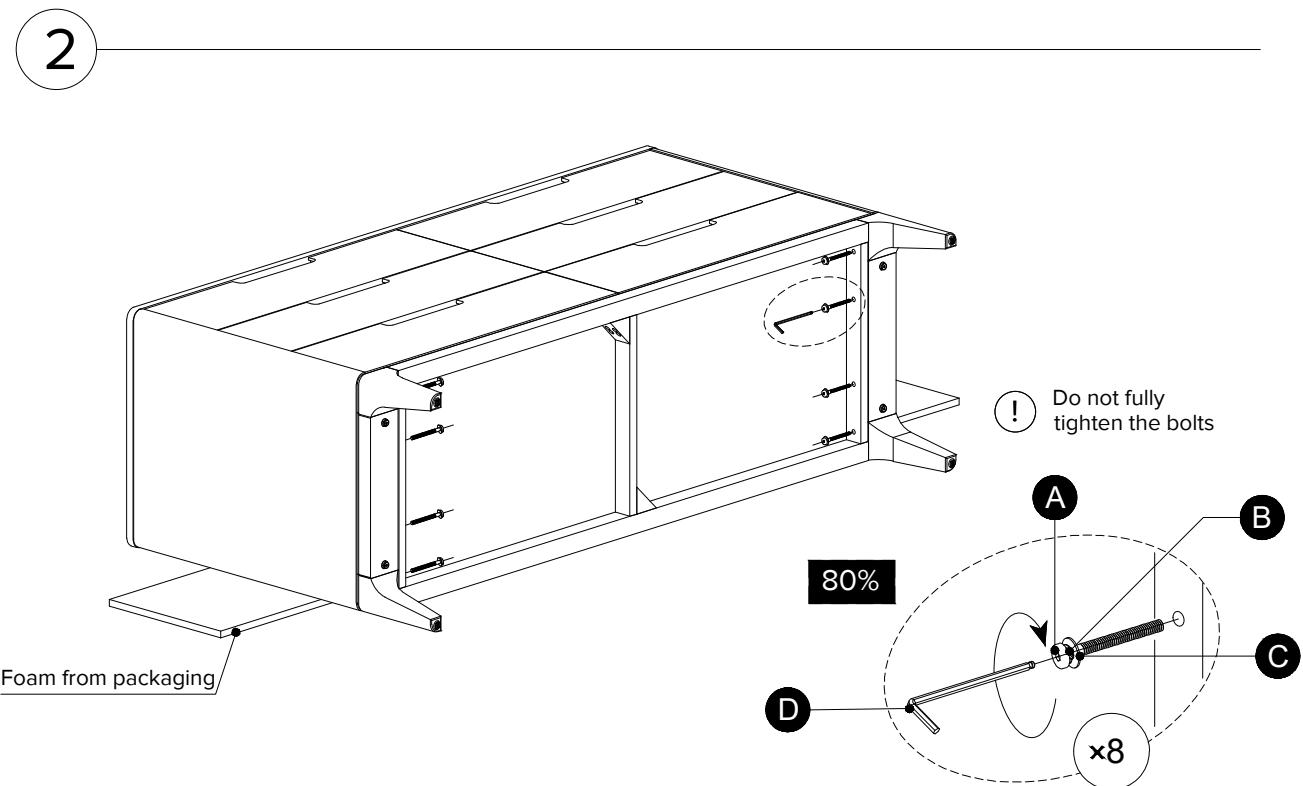

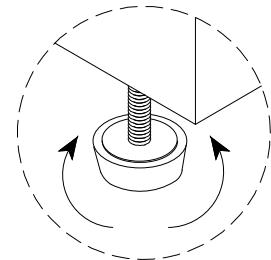
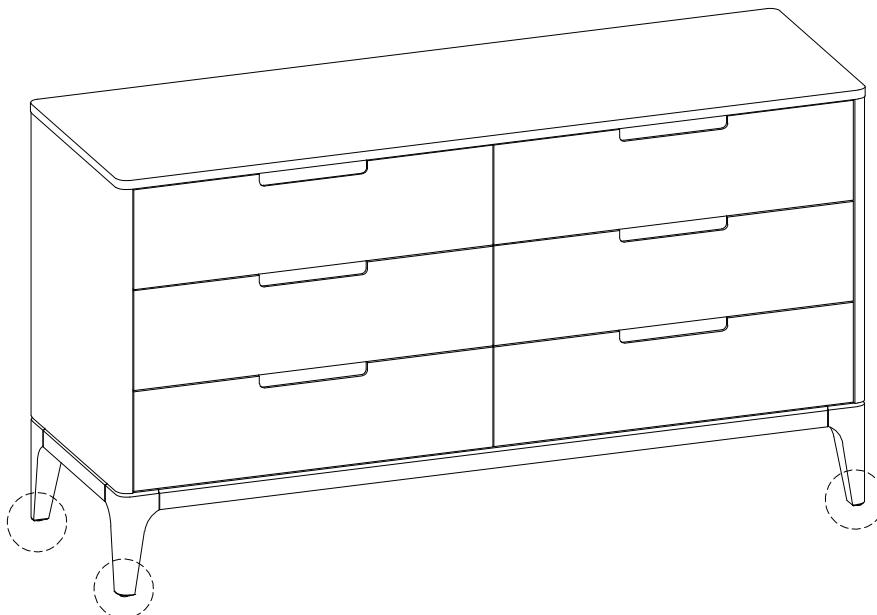
4**!** Adjust leveler as needed**CAUTION !**

Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

FIX A CROOKED DRAWER





During shipping, the drawers of your cabinet may have shifted slightly. This can easily be corrected by adjusting the drawer' glides.

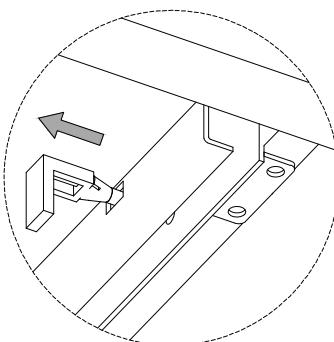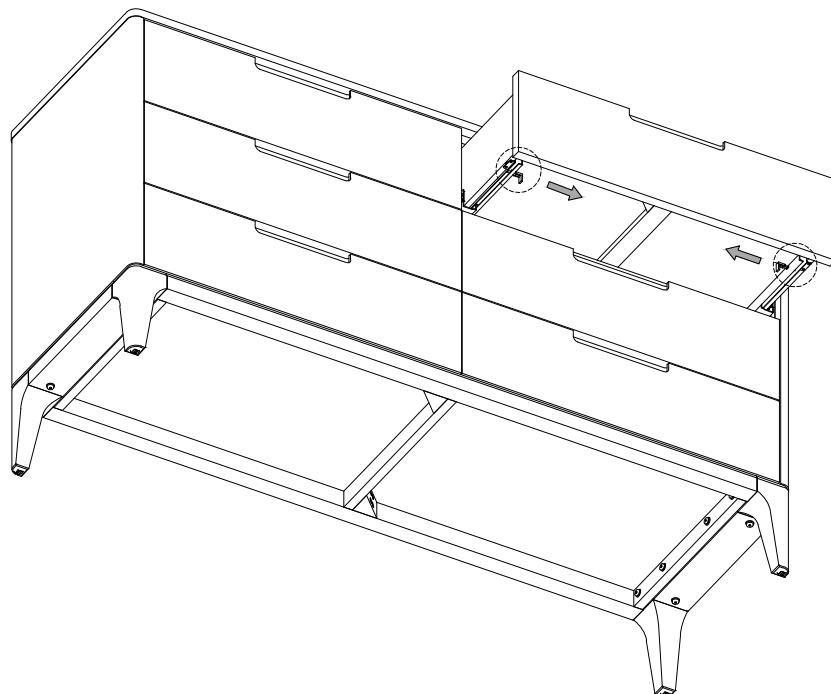


! Pull out the drawer and unlock the trigger on the side needs to be adjusted.

FIX A CROOKED DRAWER

If the drawer needs to be raised:

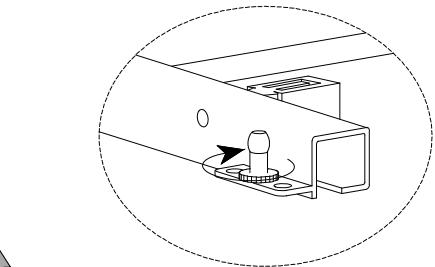
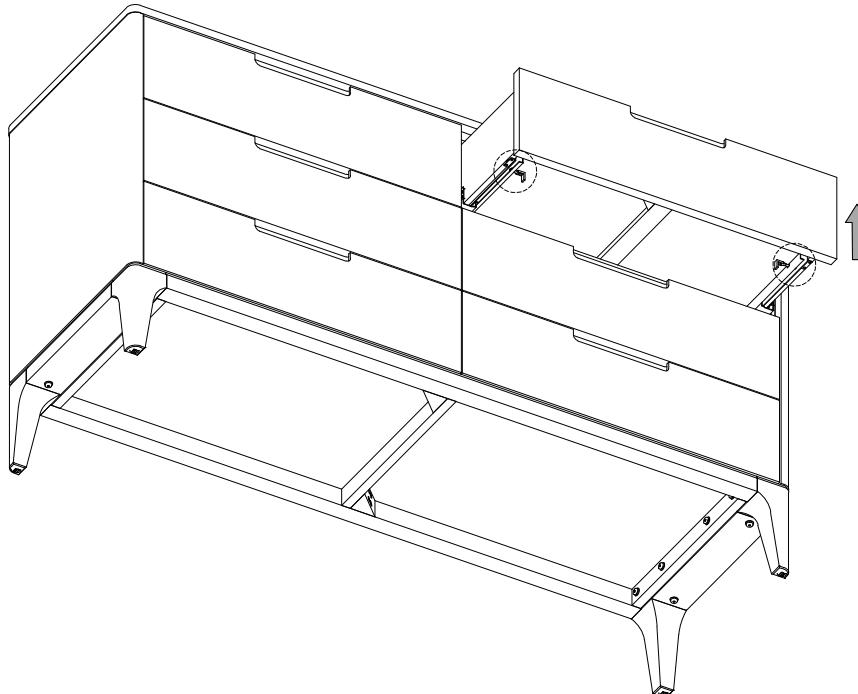


! Rotate the adjustment wheel on the drawer glides as the direction of the arrow.

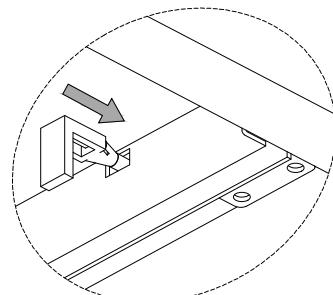


! Lock the trigger after adjustment

If the drawer needs to be lowered:

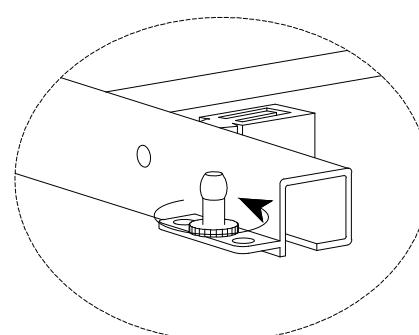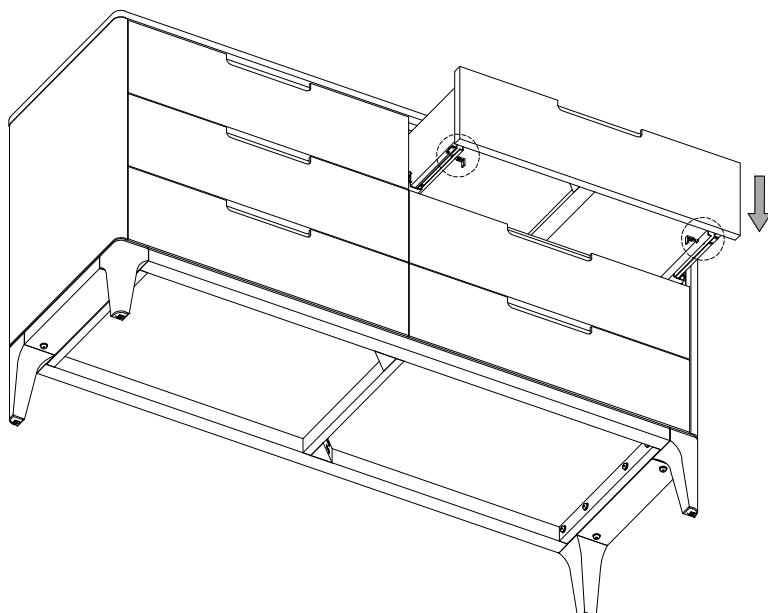

! Rotate the adjustment wheel on the drawer glides as the direction of the arrow.

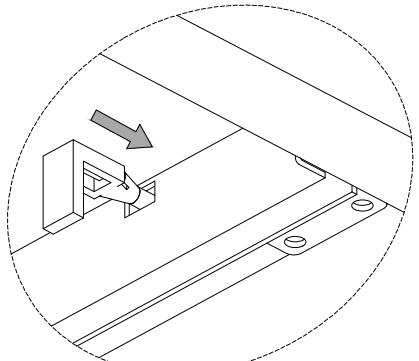

! Lock the trigger after adjustment

ARTICLE.

1010 Raymur Ave
Vancouver , BC V6A 3T2

ANTI-TIP Installation

Page 1 of 3




ANTI-TIP RESTRAINT INTALLATION




WARNING!

Children have died from furniture tipover
To reduce the risk of furniture tipover:


- . ALWAYS install anti-tip device provided.
- . NEVER put a TV on this product.
- . NEVER allow children to stand, climb or hang on any drawers, doors, or shelves
- . NEVER open more than one drawer at a time.
- . Place heaviest items in the lowest drawers.

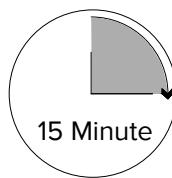


15 Minute

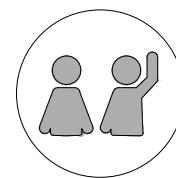


OF PEOPLE

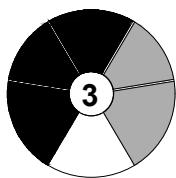

DIFFICULTY

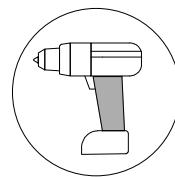

REQUIRED TOOL
8MM / 5/16" DRILL BIT

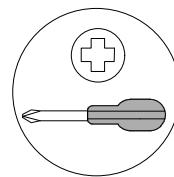

REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION	QTY	
E	BRACKET	4	
F	M4 x 20MM SCREW	4	
G	PLUG	4	
H	M5 x 70MM SCREW	4	
I	STRAP	2	




Hardware (G/H) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

ARTICLE.


ANTI-TIP Installation

Page 2 of 3

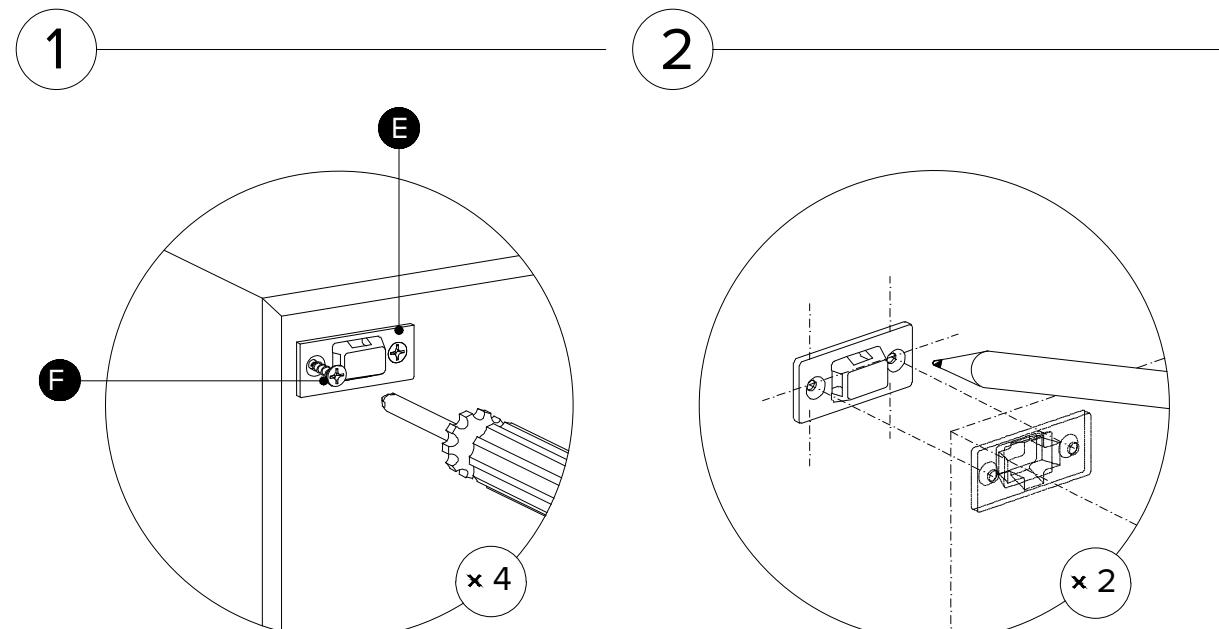

Attach pair of brackets to top corners of the back of the unit.



Mark on wall where second pair of brackets should be placed.

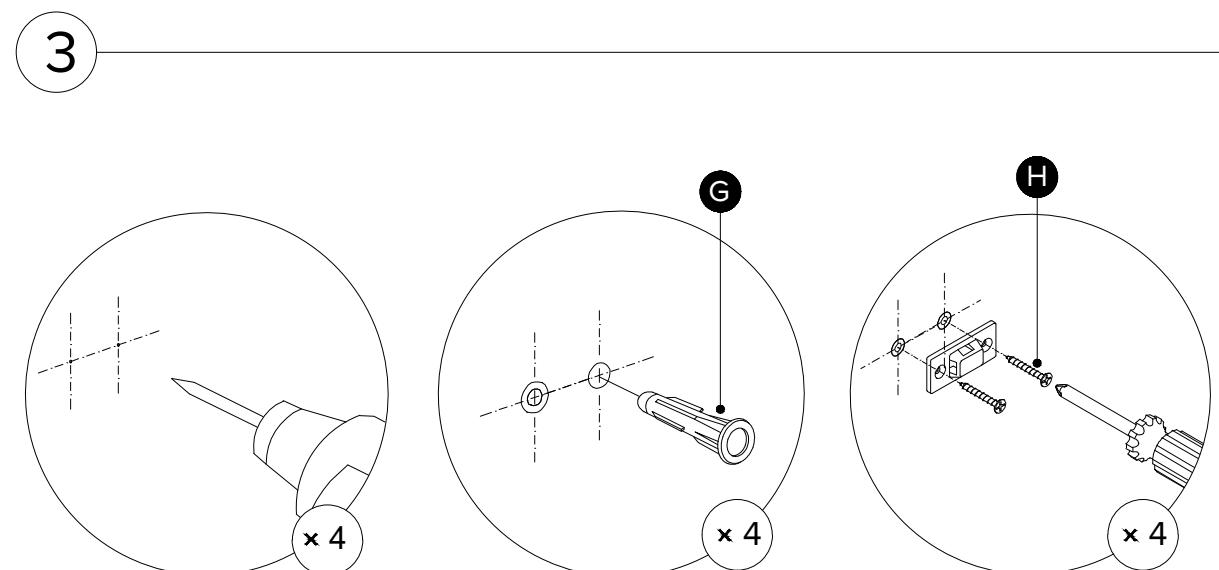

Drill holes in wall using 8mm / 5/16" drill bit.

4A

Align brackets on unit
with brackets on wall.

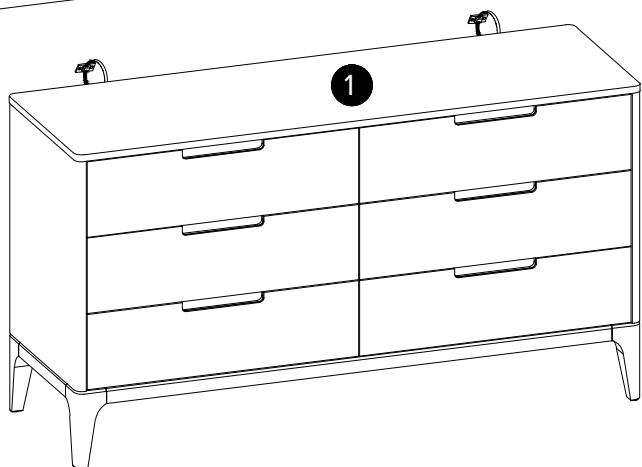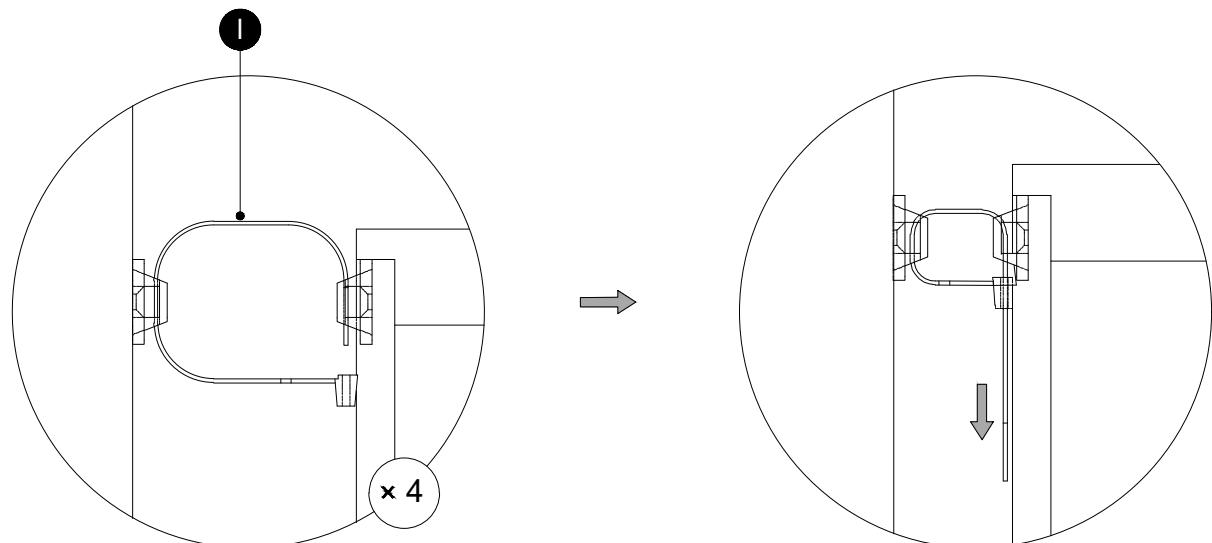WALL**4B**

Pull strap down until it snap-locks.