


ARTICLE.

VERSION 1.0

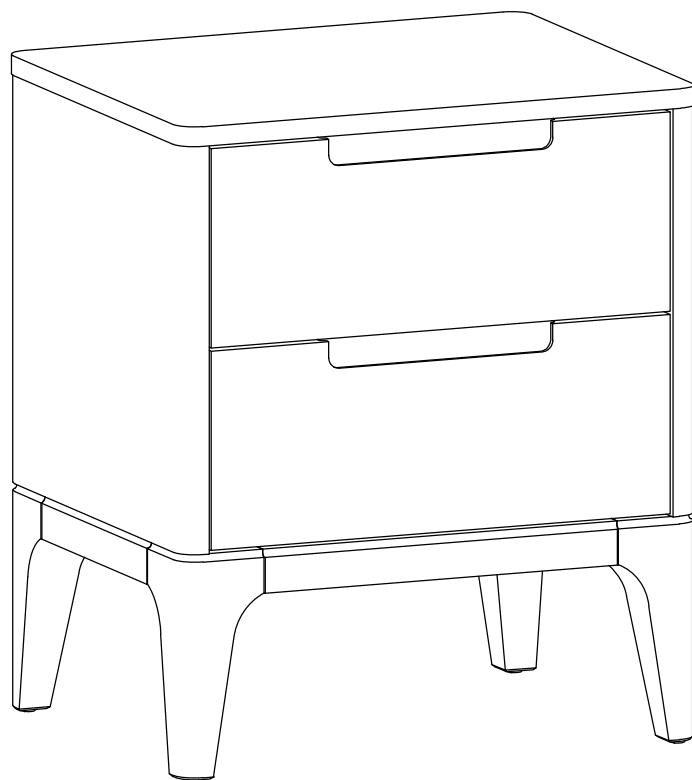

ROSIN


2-Drawer Nightstand

## ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

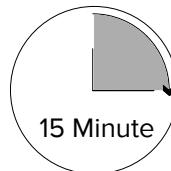

TIME

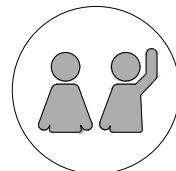


# OF PEOPLE

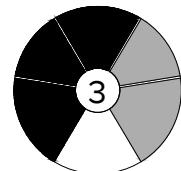


DIFFICULTY

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	BODY	
2	LEFT LEG FRAME	
3	RIGHT LEG FRAME	

HARDWARE LIST		
ID	DESCRIPTION	QTY
A	BOLT M6X60	10
B	SPRING WASHER	10
C	FLAT WASHER	10
D	ALLEN KEY	1

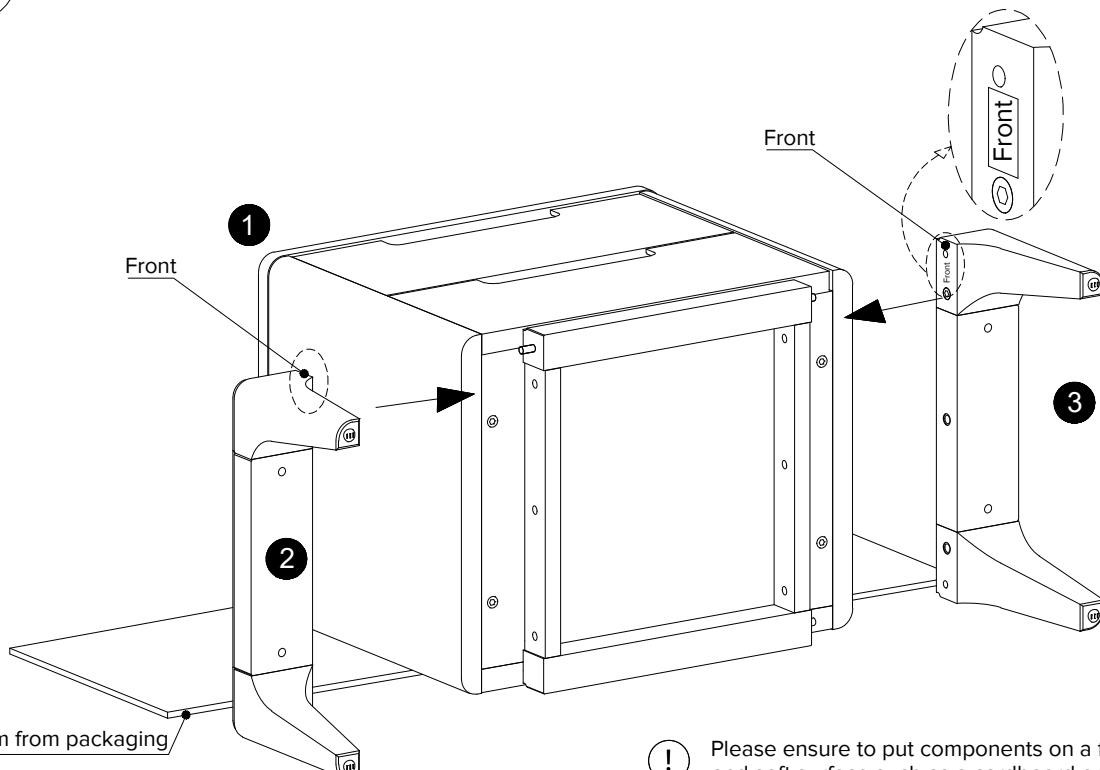

Please ensure to put components on a flat and soft surface such as a cardboard or a rug.

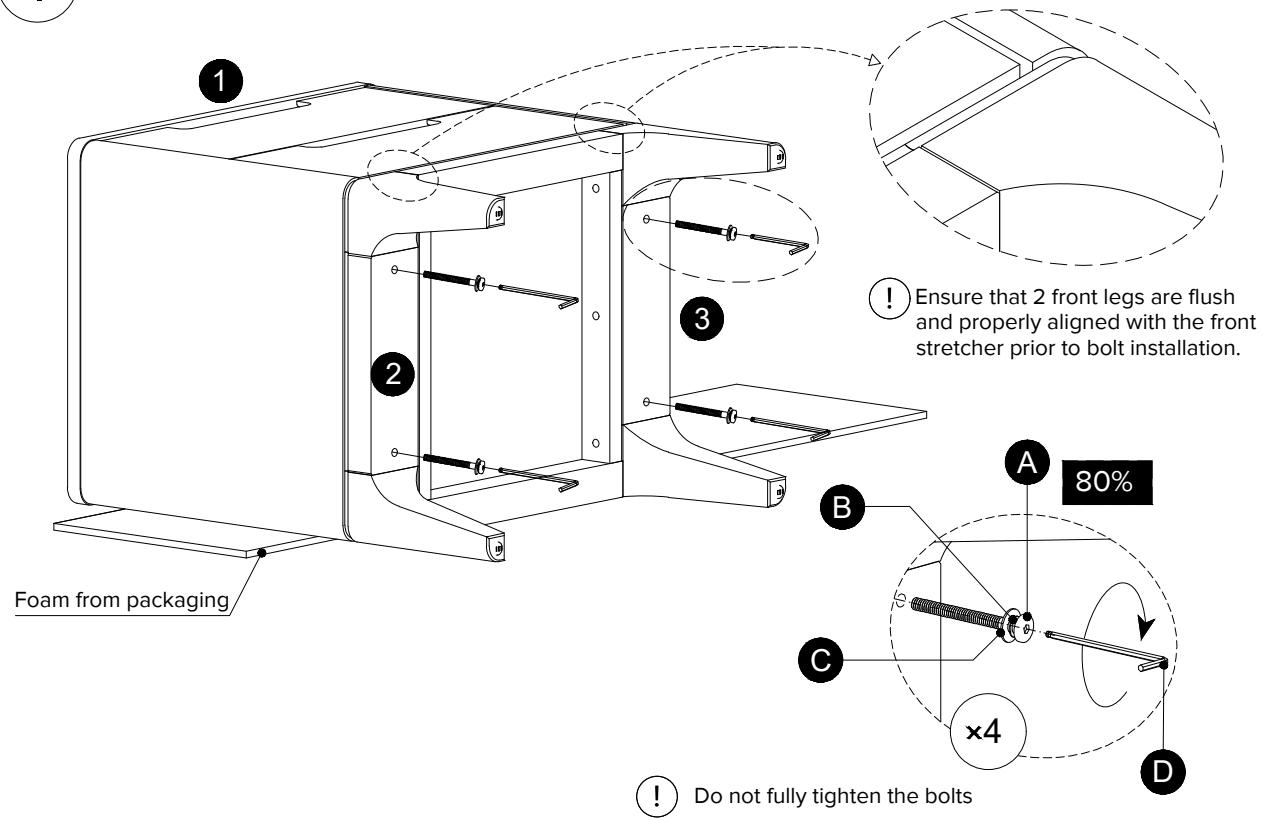

Do not fully tighten the bolts




80%






x4

2

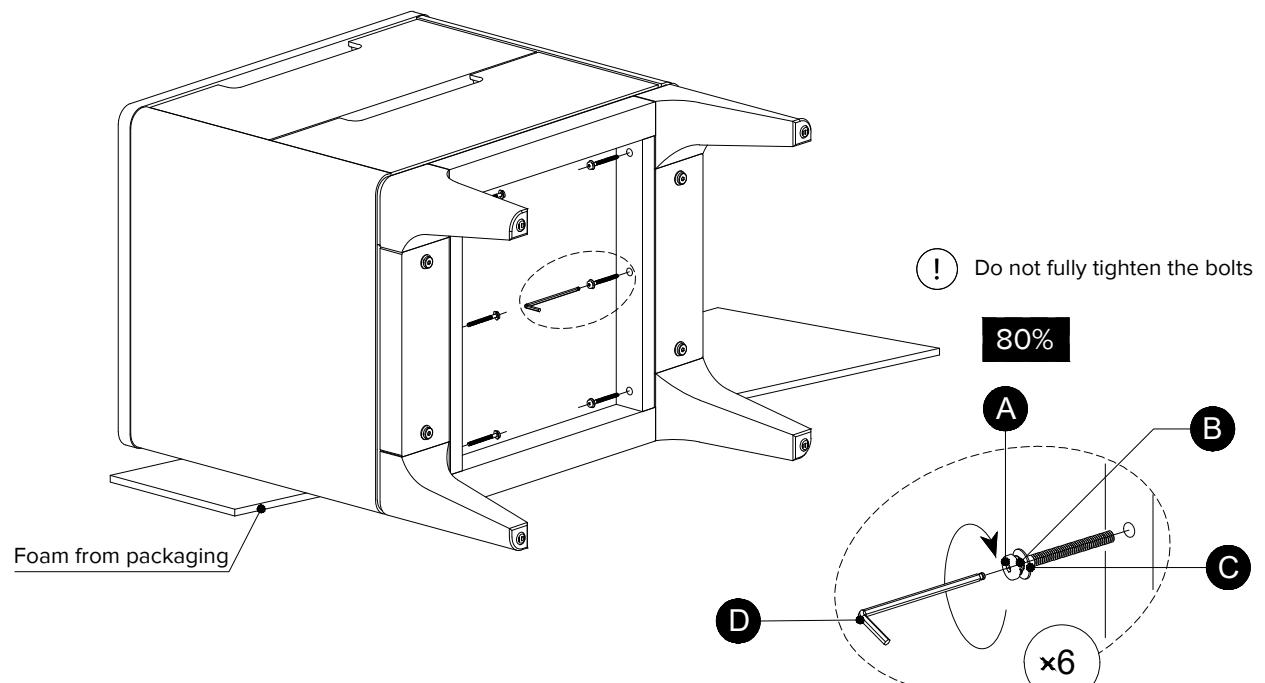

3

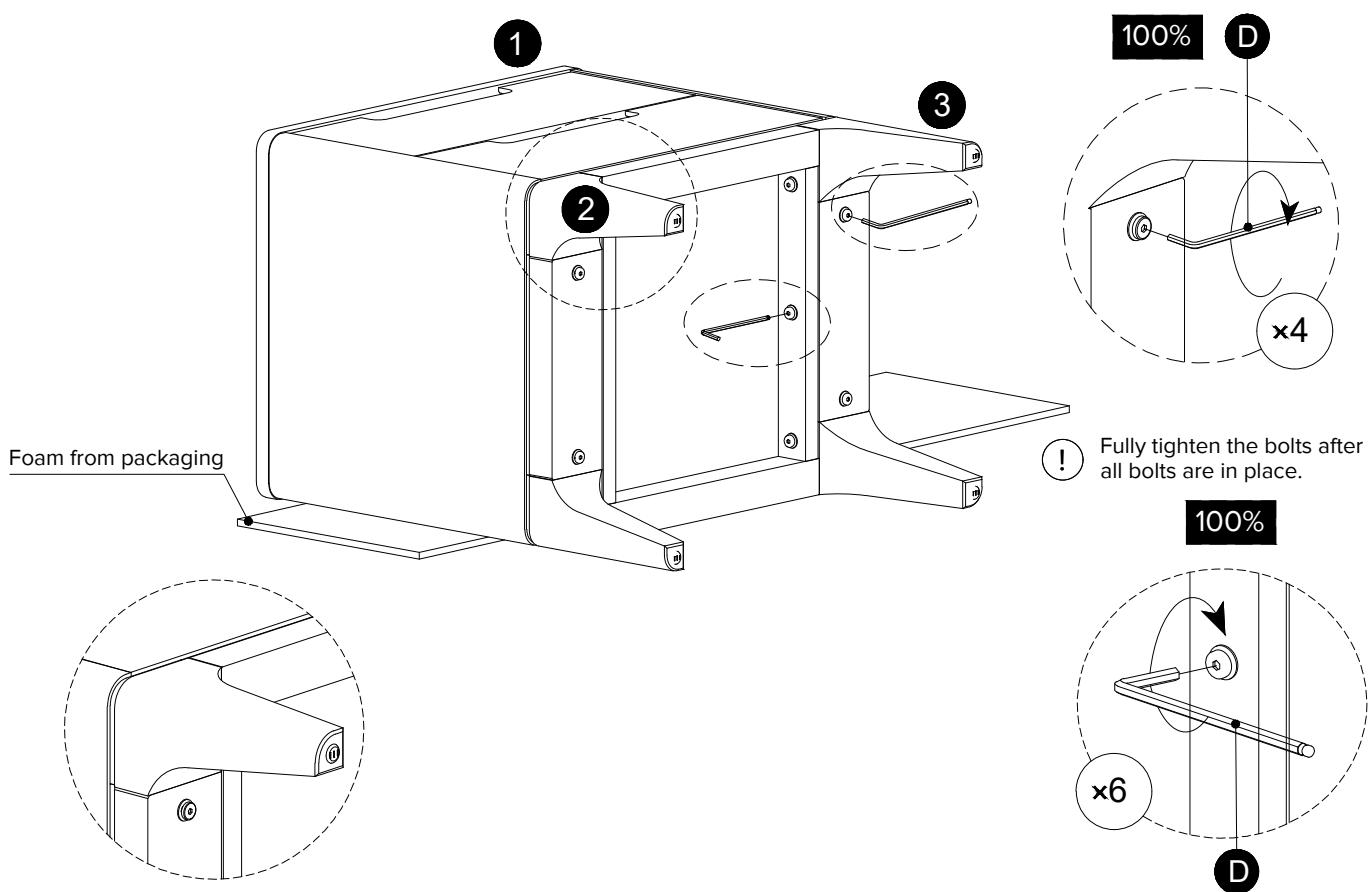


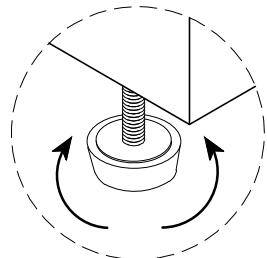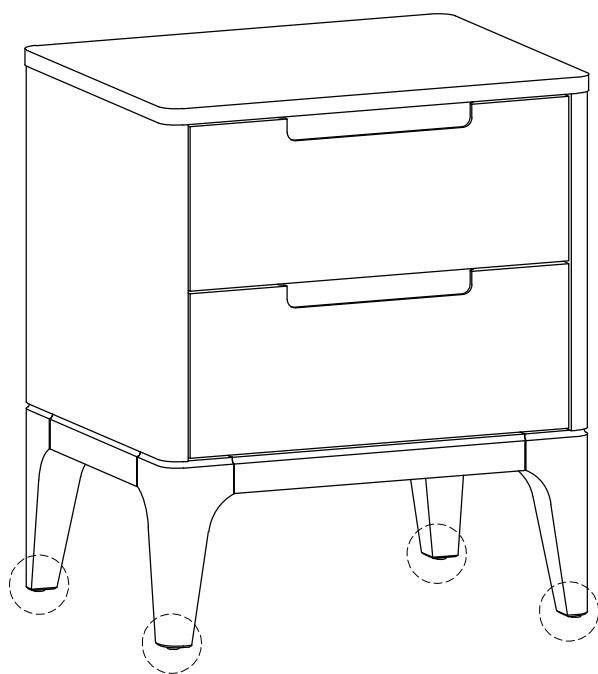**4****!** Adjust leveler as needed

## FIX A CROOKED DRAWER





During shipping, the drawers of your cabinet may have shifted slightly. This can easily be corrected by adjusting the drawer' glides.

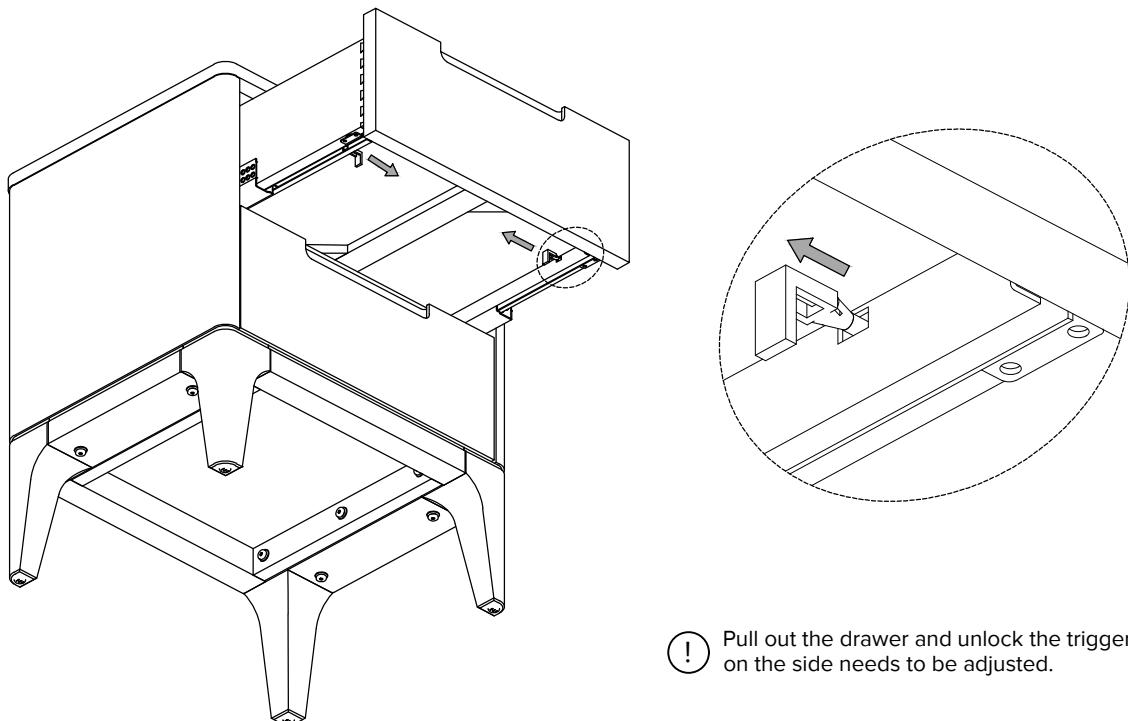


! Pull out the drawer and unlock the trigger on the side needs to be adjusted.

## FIX A CROOKED DRAWER

If the drawer needs to be raised:

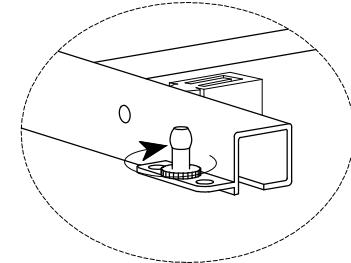
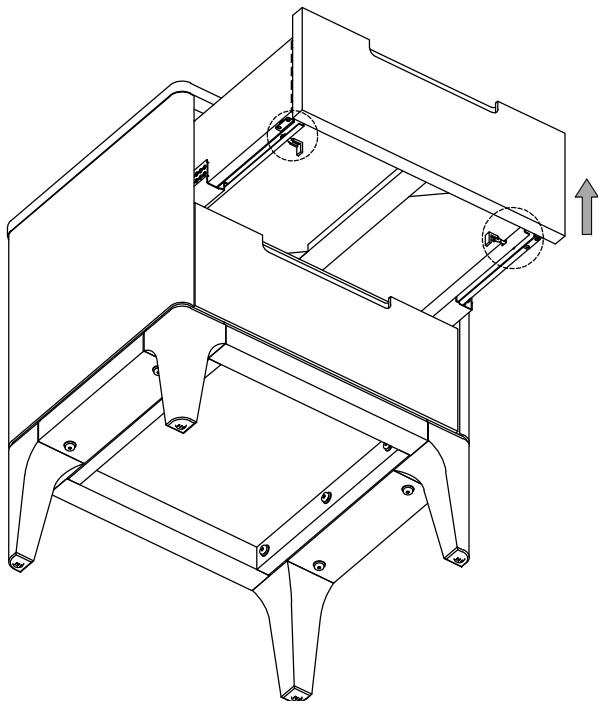


! Rotate the adjustment wheel on the drawer glides as the direction of the arrow.

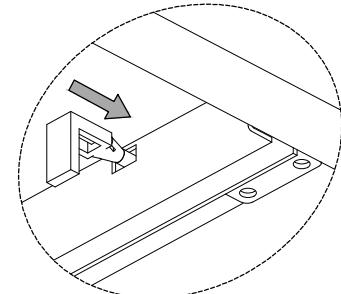


! Lock the trigger after adjustment

If the drawer needs to be lowered:

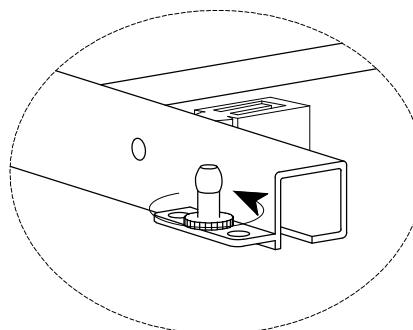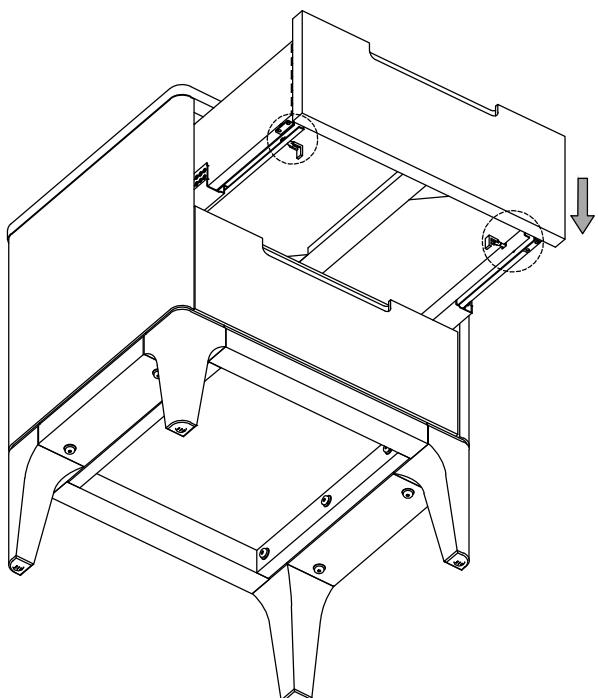

! Rotate the adjustment wheel on the drawer glides as the direction of the arrow.

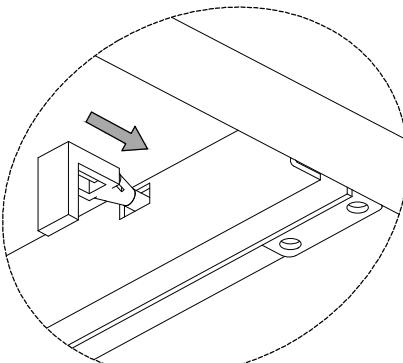

! Lock the trigger after adjustment