


ARTICLE.

ARTICLE.

VERSION 1.1

Assembly Instructions

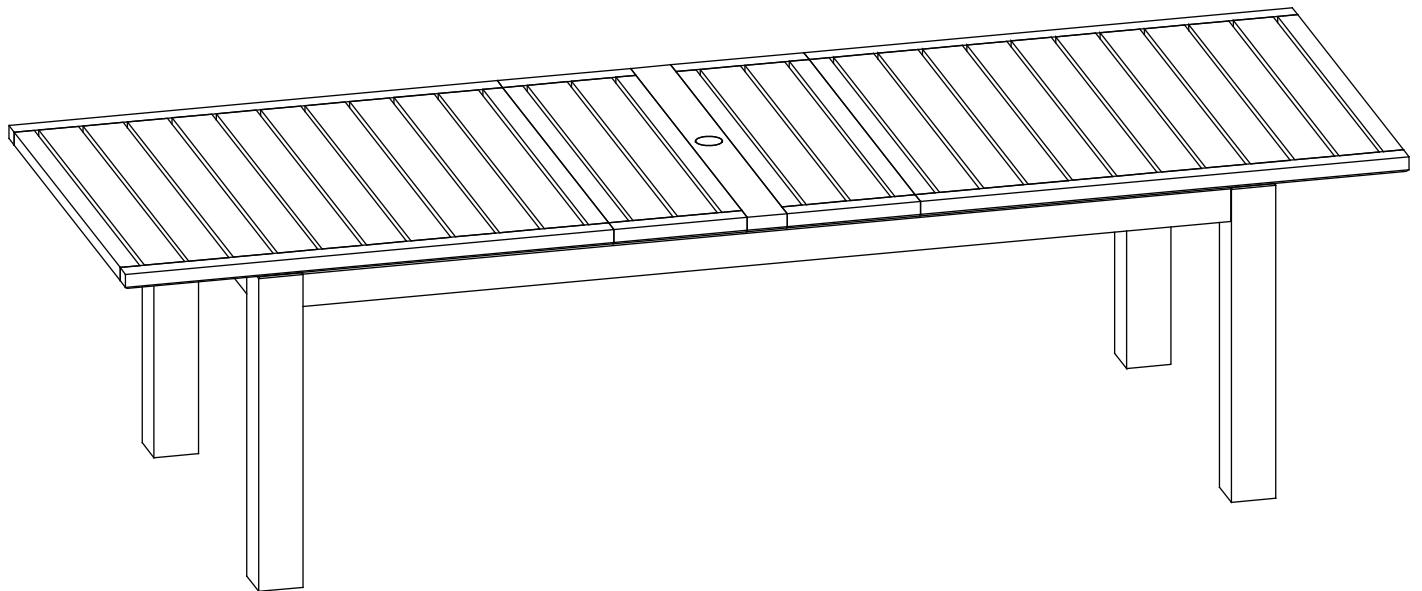

AVALON

90" - 114" Outdoor Extendable Dining Table

 
ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.



PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	Table Top 	1
B	Middle table top 	2
C	Table leg 	4
D	Umbrella hole cap 	1




Hardware may loosen over time, check the bolts regularly and tighten if necessary.

HARDWARE INVENTORY		
ID	DESCRIPTION	QTY
E	Bolt M8x80mm 	8
F	Flat washer Ø25x2mm 	8
G	Warp washer 	8
H	Allen key M4x80mm 	2

1


Insert the table legs into the four corners of the table so that the pre-drilled holes in the table legs (C) and the table top (A) are concentric with each other.

Fix the table legs with bolts (E), flat washers (F), warp washers (G) and allen key (H).

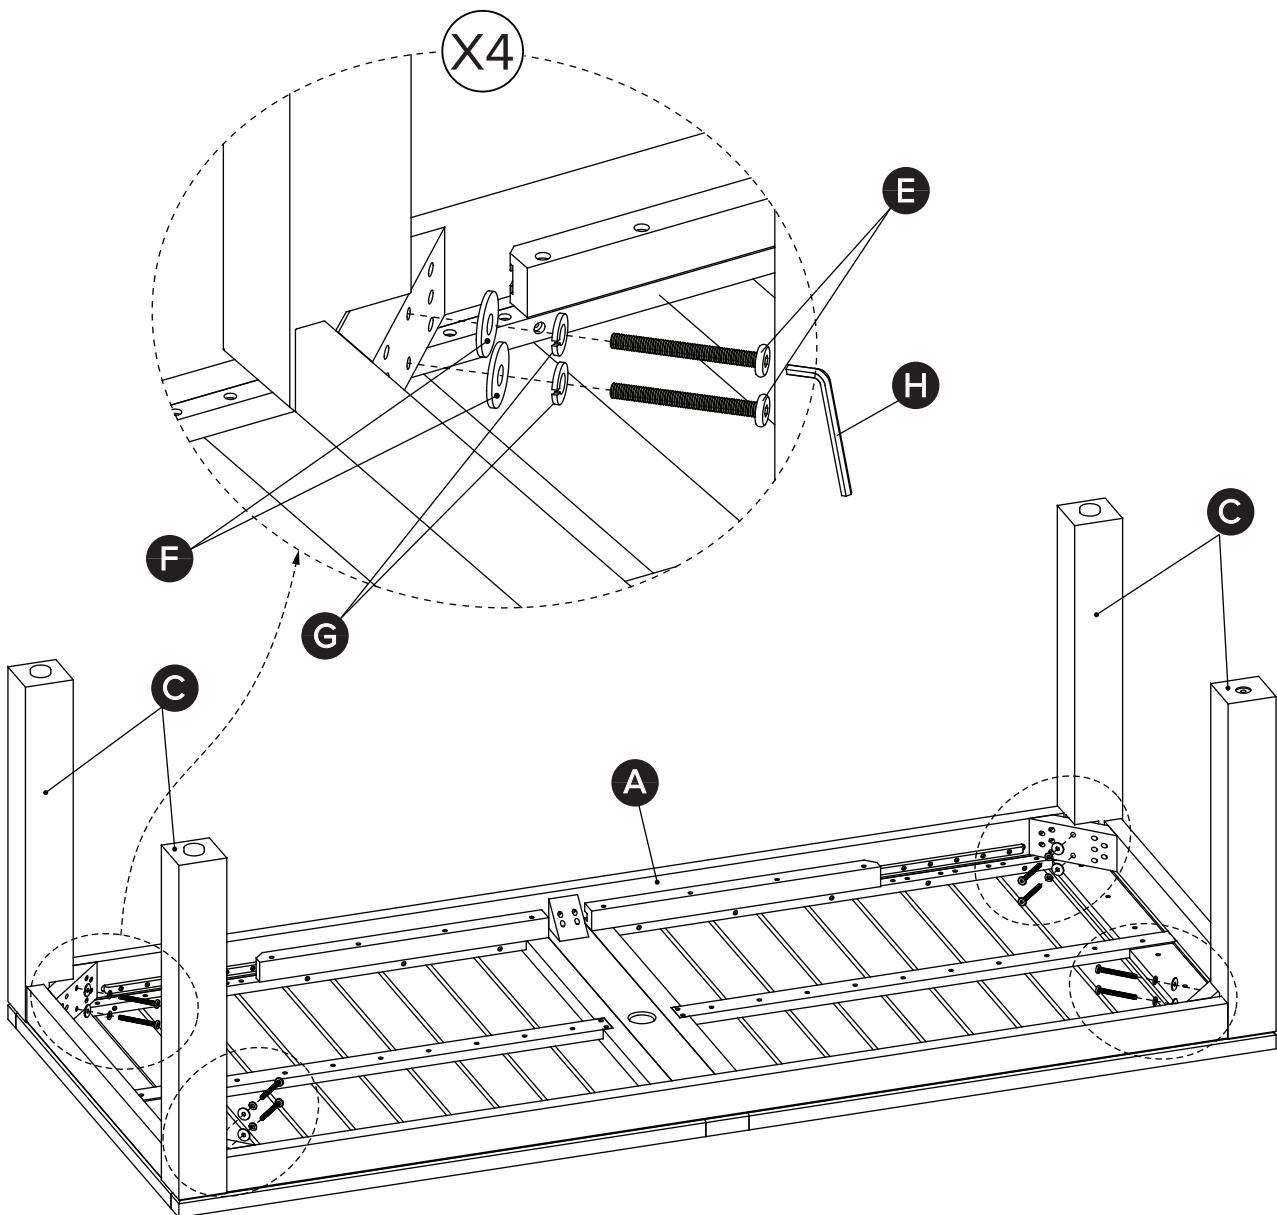

2

Unlock the duckbill under the table top, then use your hands to pull the two table tops apart.

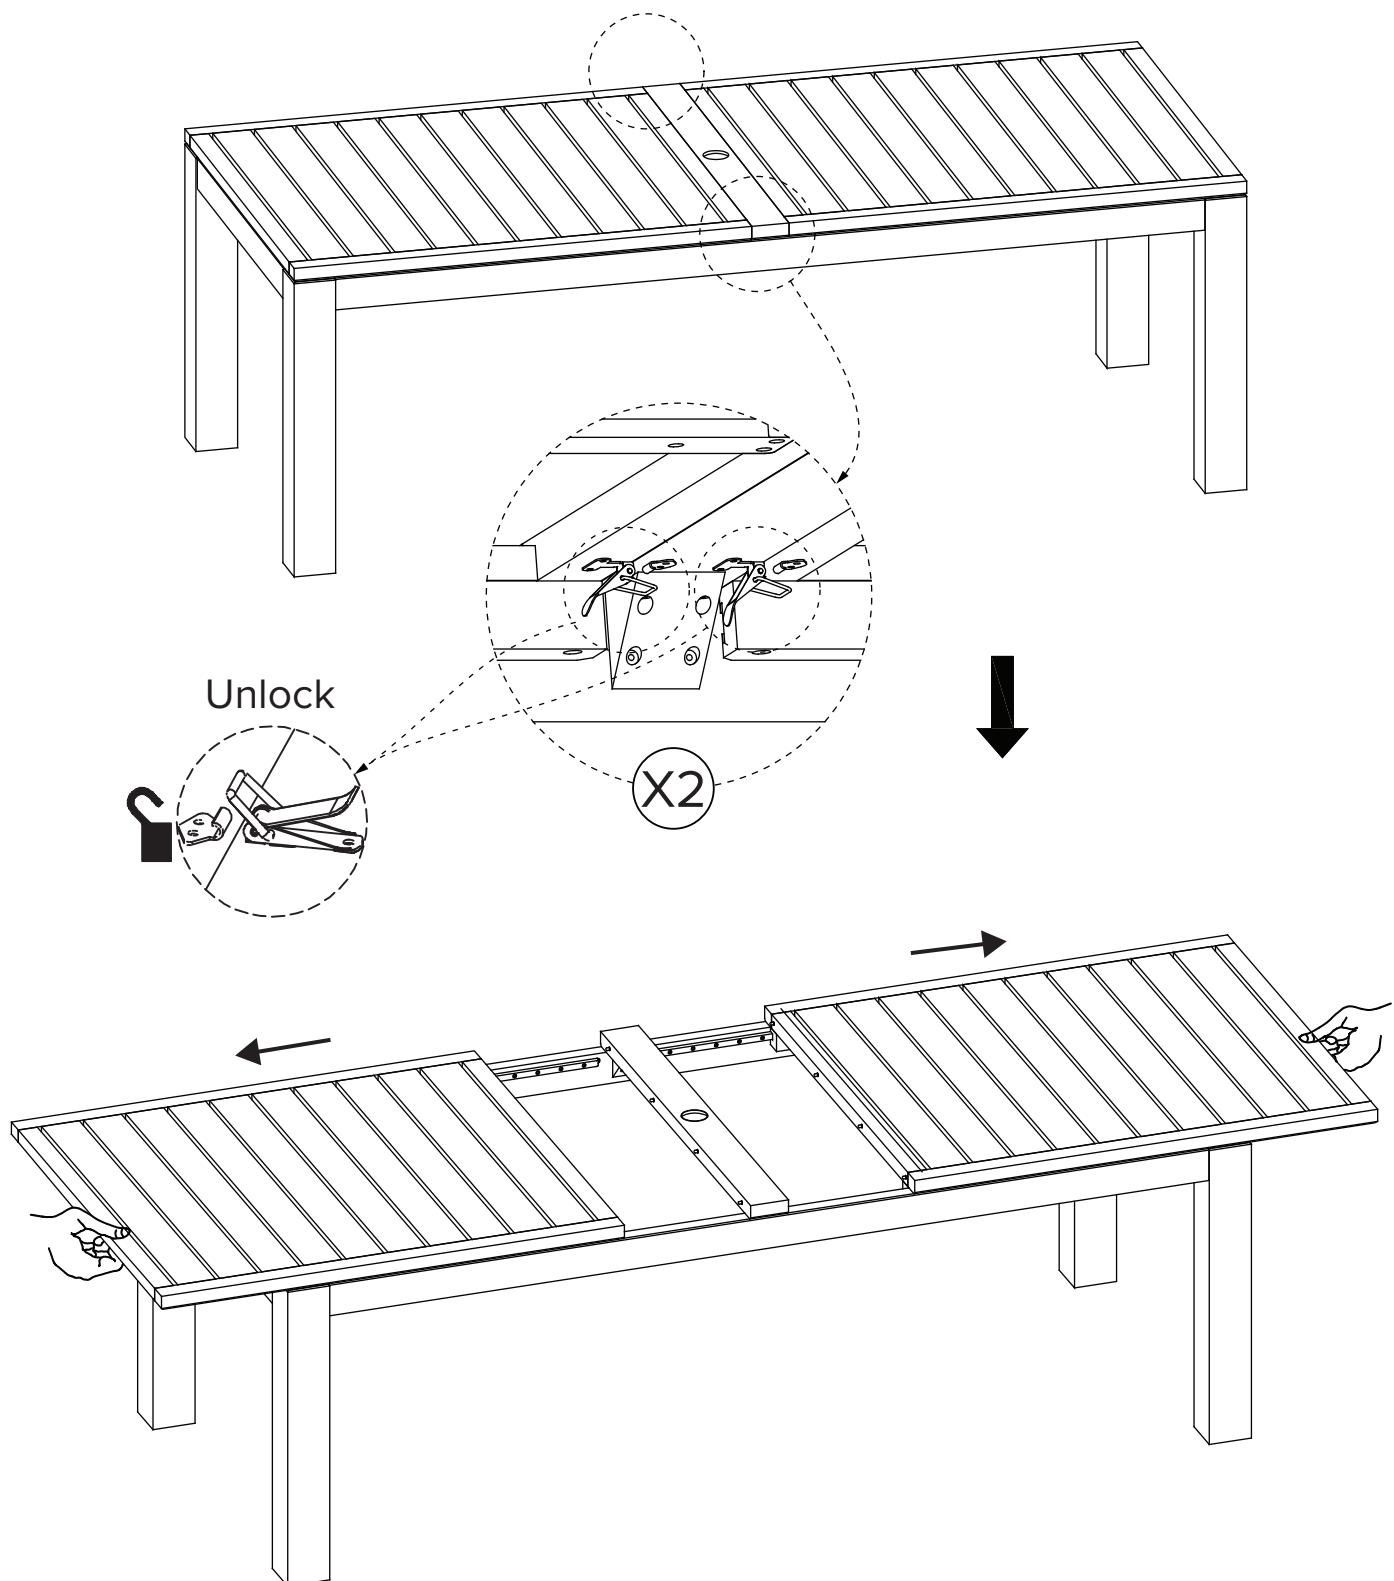



3

Place the middle table top in the position shown below.

Step 1: Push the middle table top into the center spoke position so that the male round pin on the center table top is concentric with the female round pin on the spoke with the hole.


Step 2: Use force to push the middle table top inward first.

Step 3: Use force to push the outer table top assembly inward.

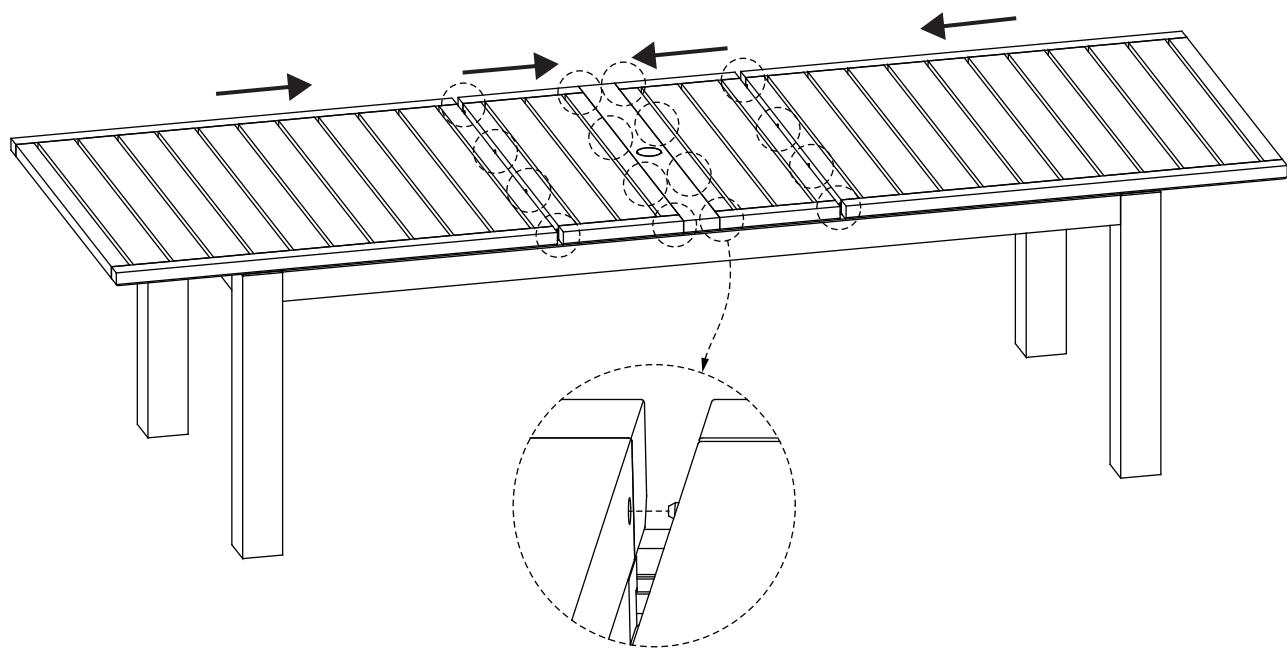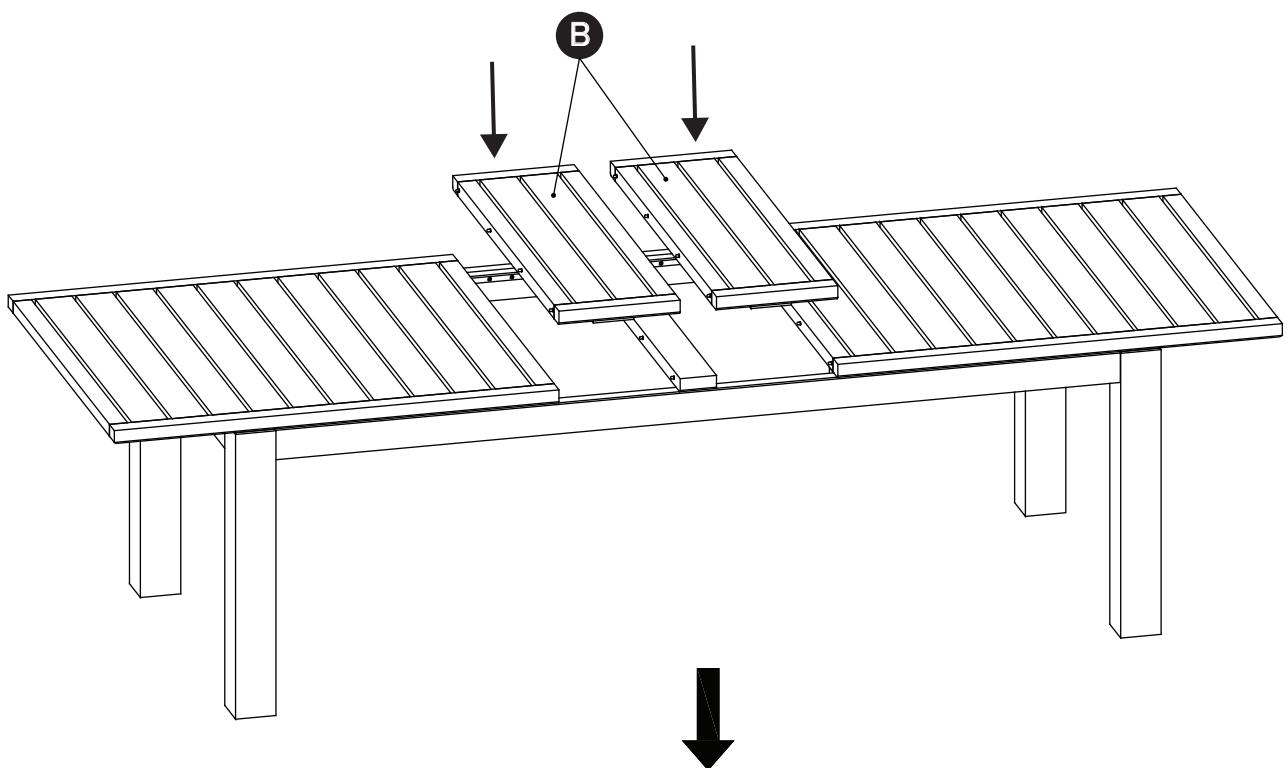

4

Close the duckbill lock to secure the table tops.

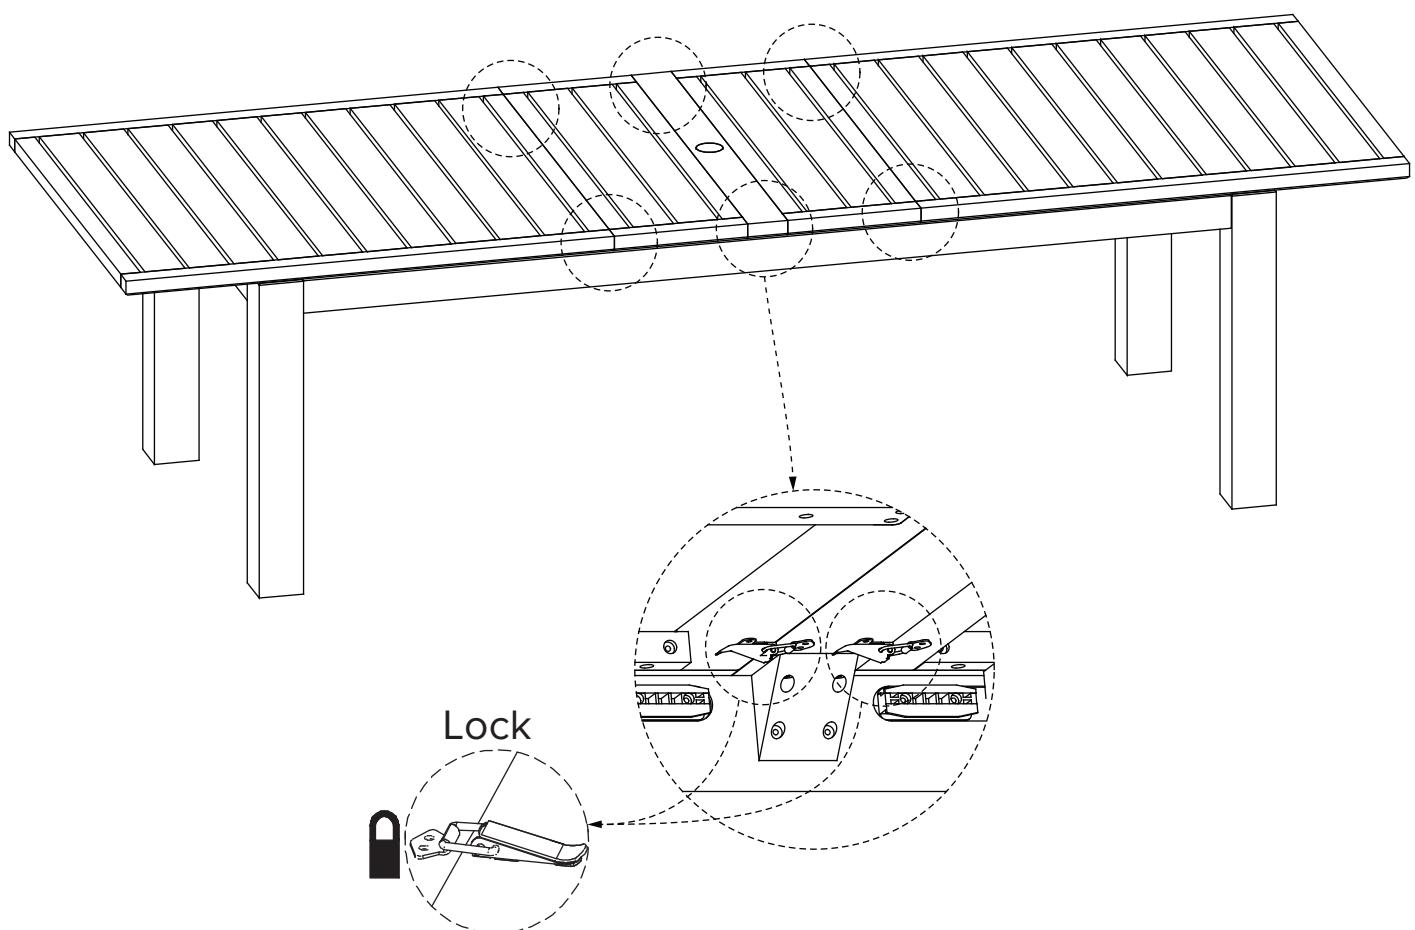

5

Put on the umbrella cap (D) if you do not pair the table with an umbrella. Turn the table upright and adjust the levelers at the bottom of the legs (if needed) to balance the table.

