


ARTICLE.

VERSION 1.1

Assembly Instructions

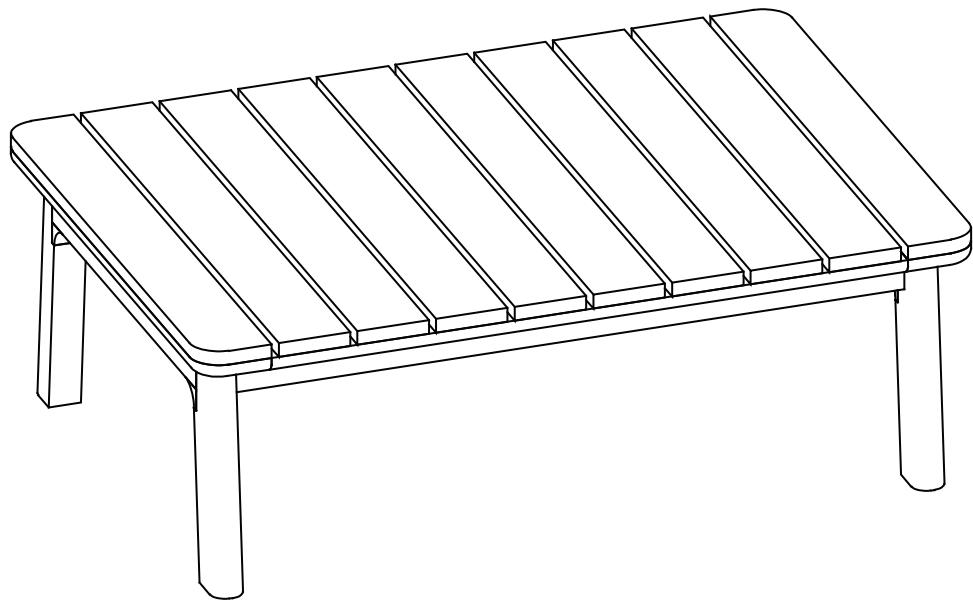


Elise
Outdoor Coffee Table

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.

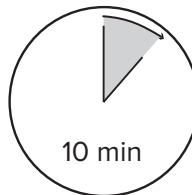

TIME



1 PEOPLE

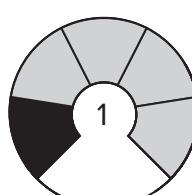

DIFFICULTY

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	Table Top	1
B	Table leg	2




Hardware may loosen over time, check the bolts regularly and tighten if necessary.





HARDWARE INVENTORY		
ID	DESCRIPTION	QTY
C	Bolt M6X45mm	8
D	Washer Ø18X2mm	8
E	Allen key M4x80mm	1

1


Place Table top (A) upside down on a padded non-marble surface. Insert Table leg (B) so that the Bolts go through pre-drilled holes at Table top corner. Secure with Washer (D) and Bolts (C) by using the Allen key (E).

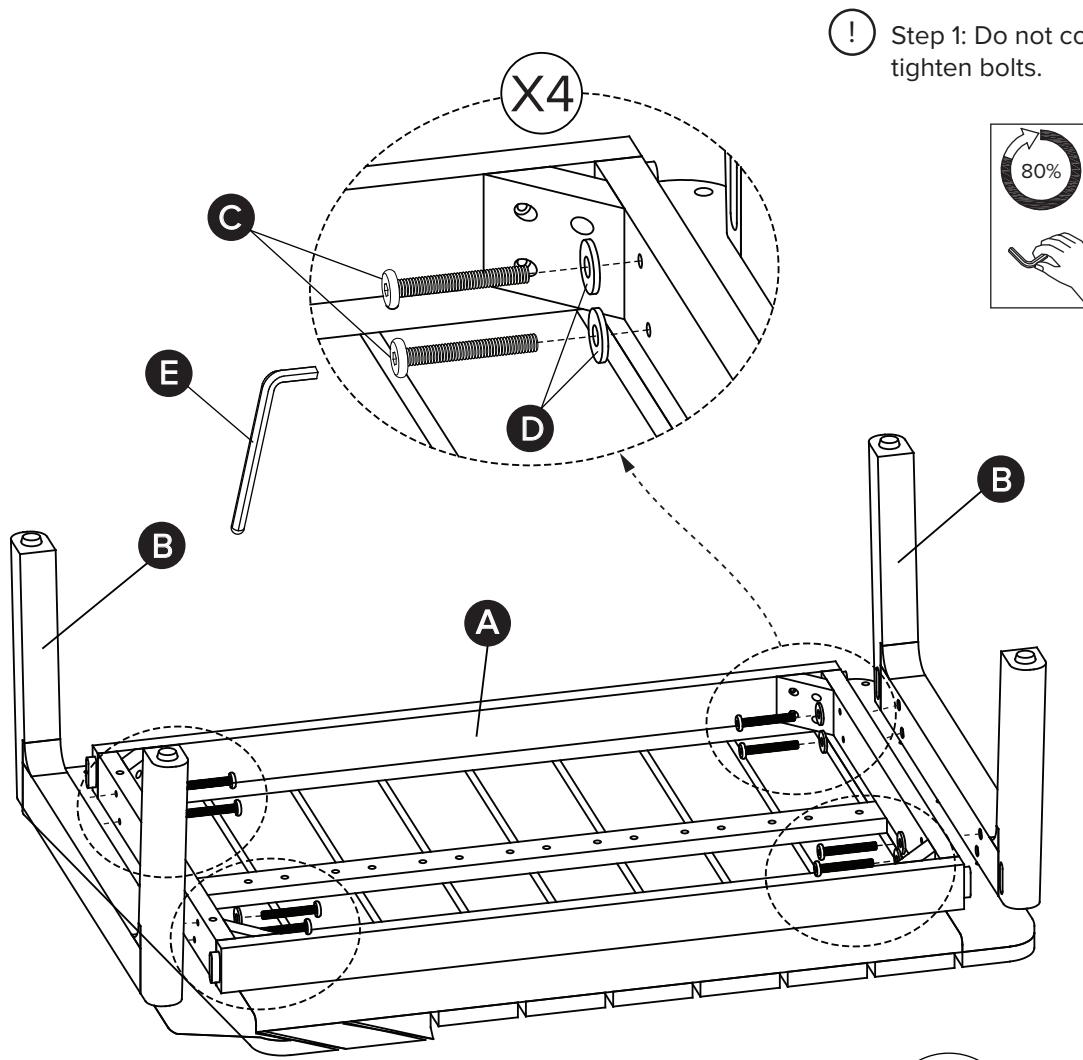

 ! Step 1: Do not completely tighten bolts.

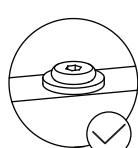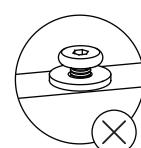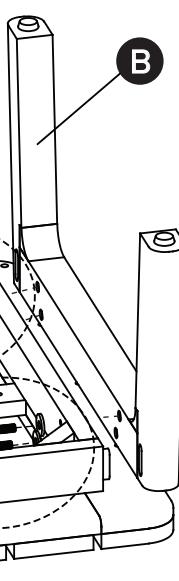


 ! Step 2: Once all bolts are placed, completely tighten all bolts.



2

Turn the table upright and adjust the levelers at the bottom of the legs (if needed) to balance the Coffee table.

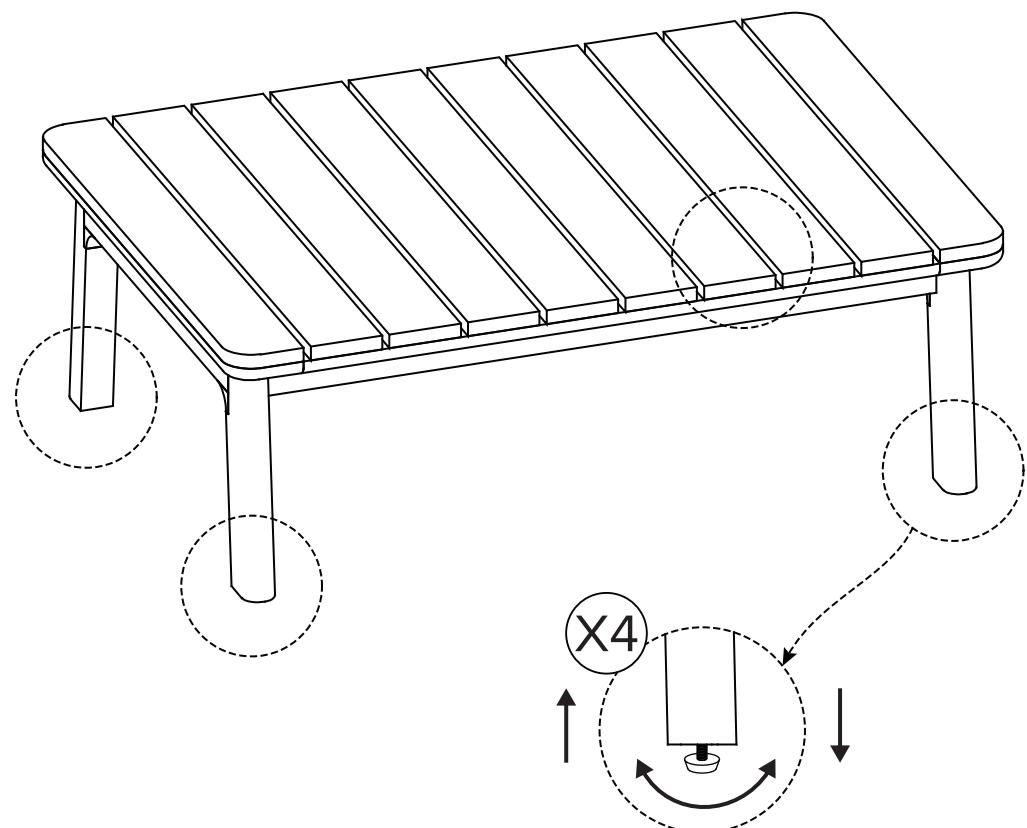

3

Your Coffee table is ready to be used.

