


VERSION 1.0

Assembly Instructions

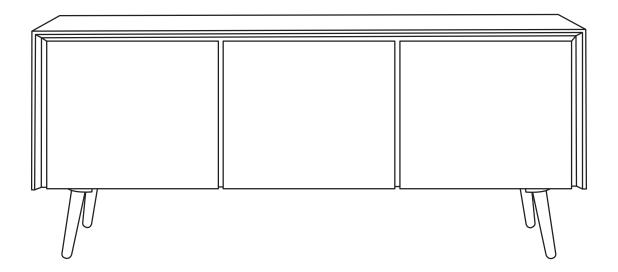

SENO


71" Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.

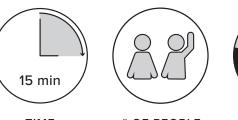



TIME

OF PEOPLE

DIFFICULTY




Installation Required





PARTS INVENTORY ID DESCRIPTION QTY А LEG 4 F В SHELF PIN 12 $\left[C \right]$ SHELF 3


SENO 71" Sideboard



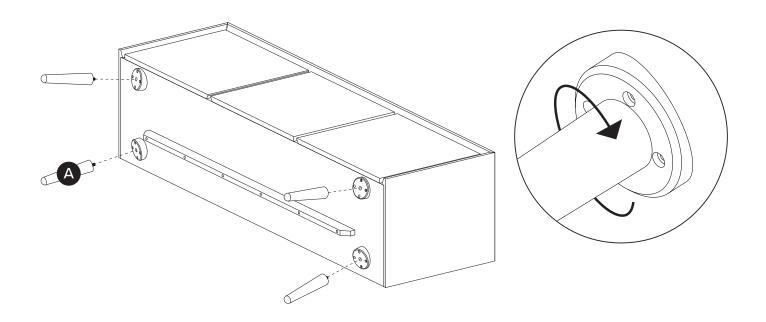




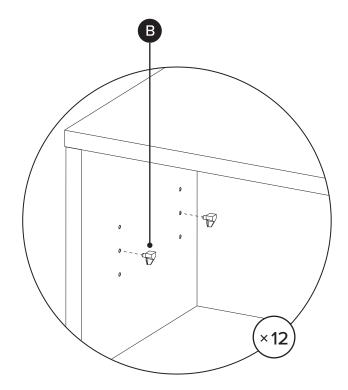

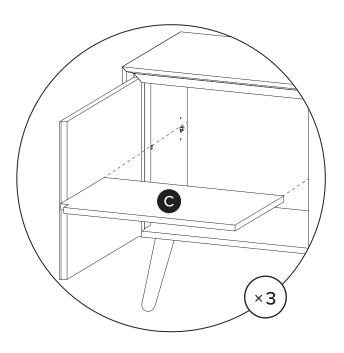

DOOR ADJUSTMENT INSTRUCTIONS


During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




REQUIRED TOOL




If the door is crooked, adjust hinge(s) up or down:

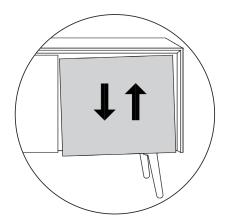

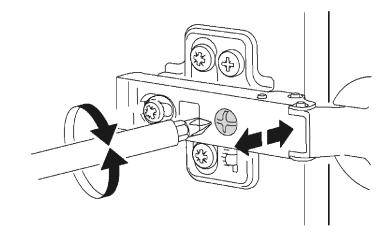




If the door needs adjustment side to side:

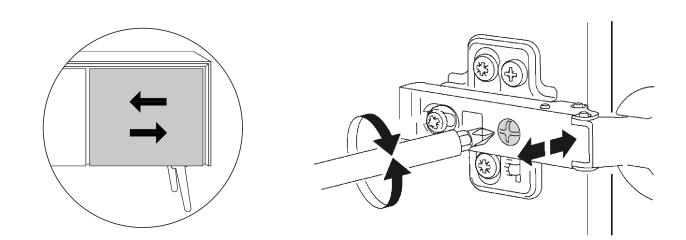



If the door needs adjustment forward or backward:

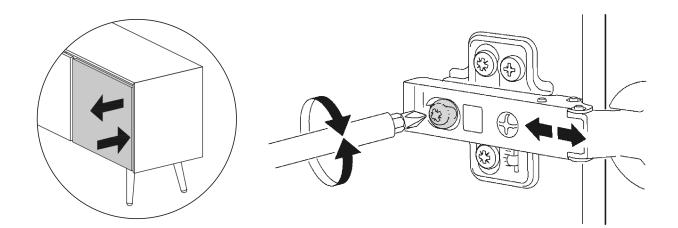



ANTI-TIP RESTRAINT INSTALLATION



Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:


- Install tip-over restraint provided. •
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, • shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.



TIME

OF PEOPLE DIFFICULTY

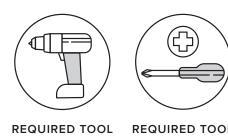



8MM / 5/16" DRILL BIT


REQUIRED TOOL


PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW	Bunn	4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW	anna	4
e	STRAP	\mathcal{O}	2

Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

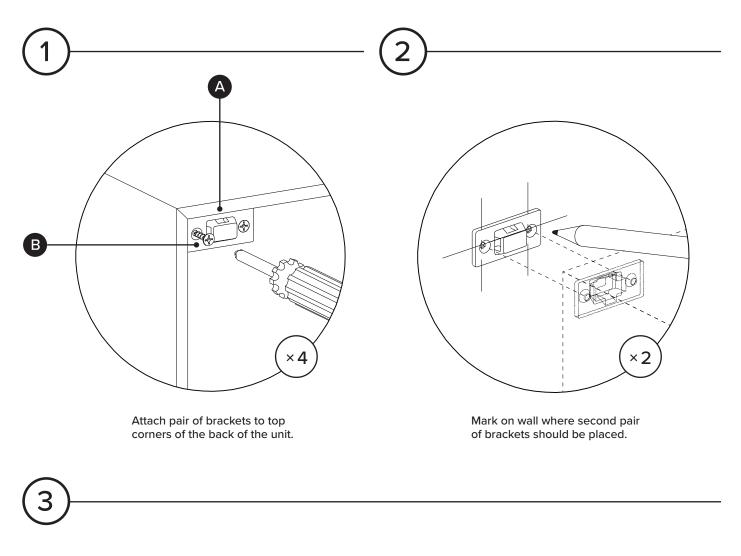

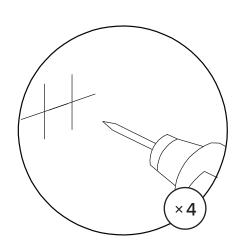


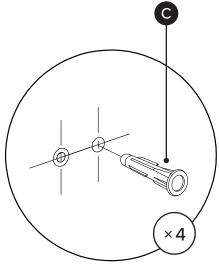


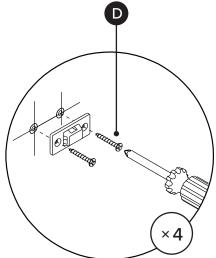

Drill holes in wall using 8mm / 5/16" drill bit.



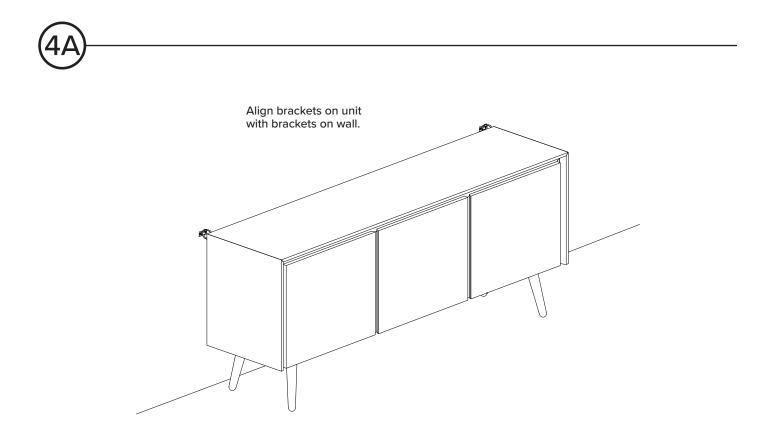

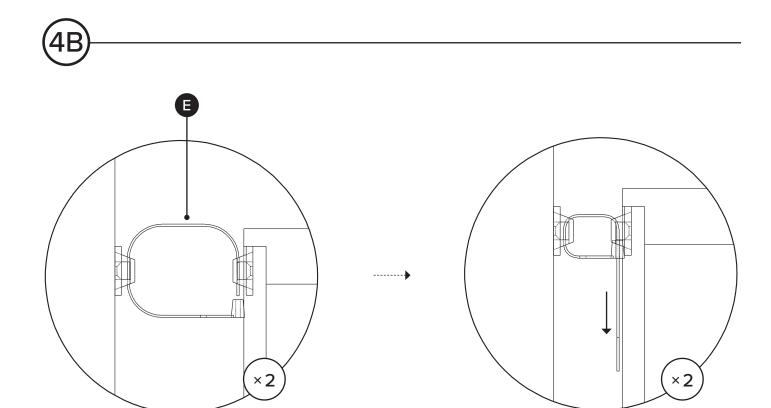

Pull strap down until it snap-locks.