



ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.




TIME




OF PEOPLE

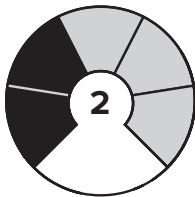





DIFFICULTY

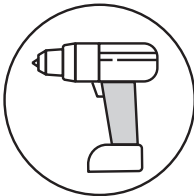

REQUIRED TOOL
8MM / 5/16" DRILL BIT

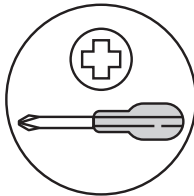


REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		2
B	M8 × 51MM PLUG		4
C	M6 × 70MM SCREW		4
D	STRAP		2


! Hardware (B/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

Place mirror in desired location and mark on wall where brackets (A) should be placed.

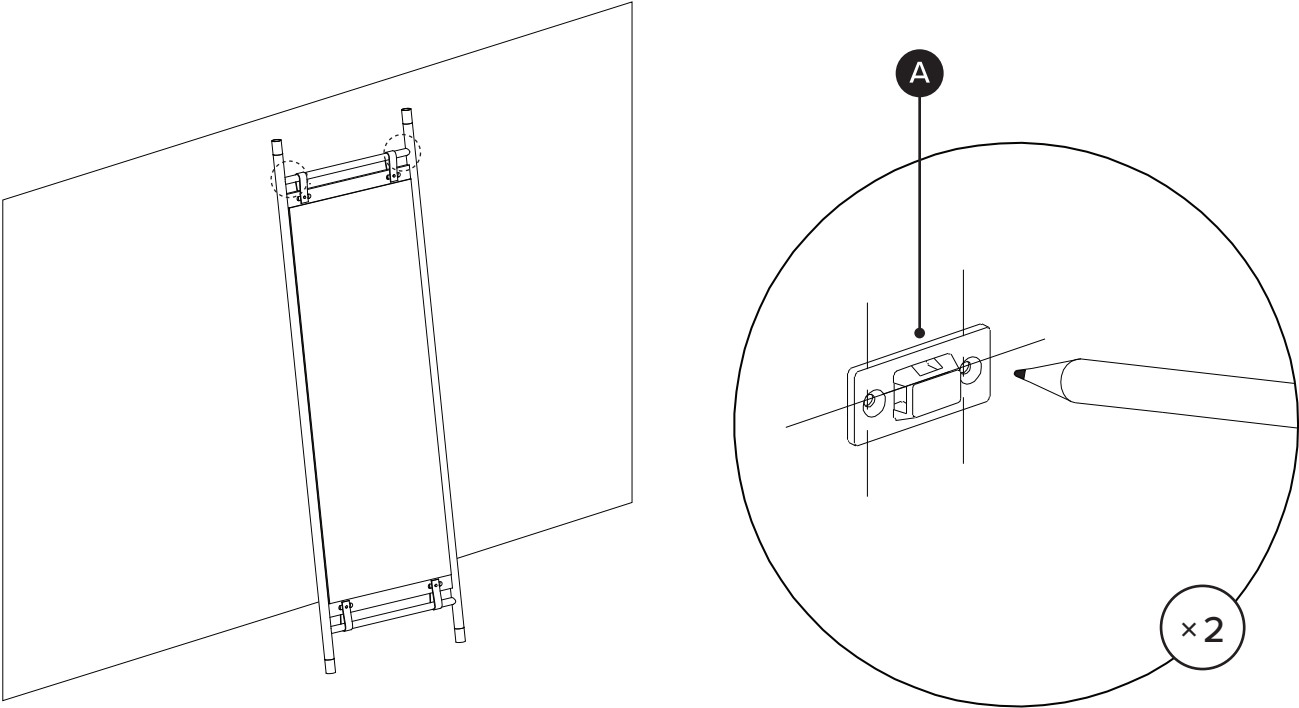

3

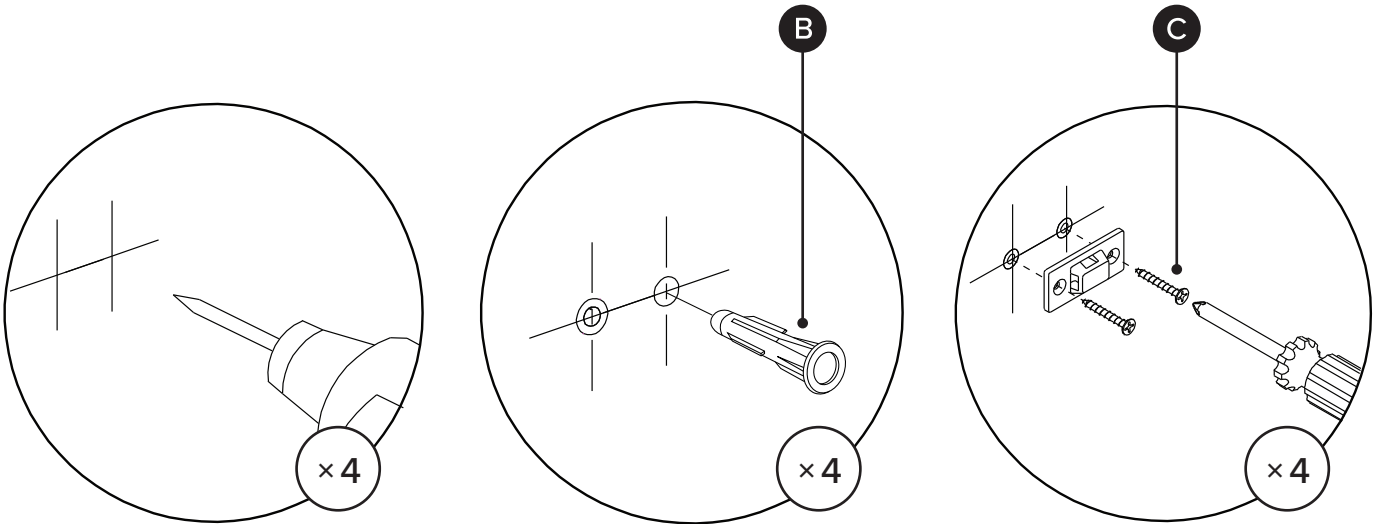

Drill holes in wall using
8mm / 5/16" drill bit.

3

Wrap straps (D) through pre-installed brackets on mirror and thread through brackets (A) on wall.
Pull straps until they snap-lock.

