


ARTICLE.

VERSION 1.1

Assembly Instructions

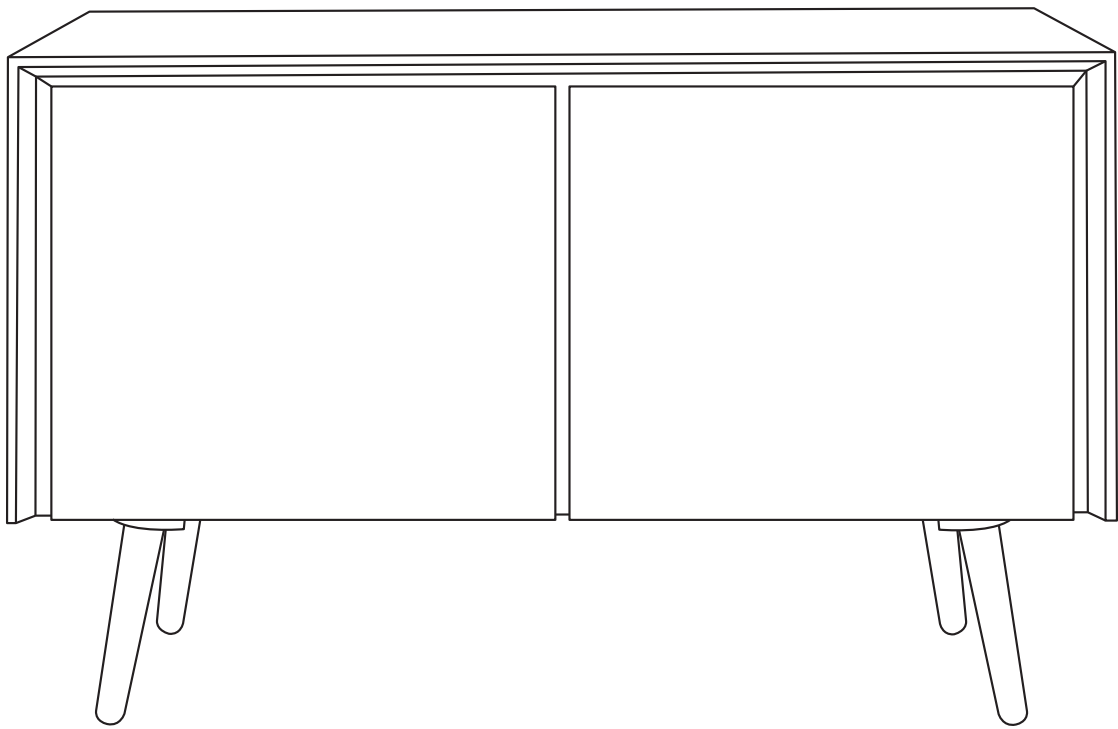

SENO


48" Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

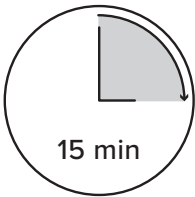

TIME




OF PEOPLE

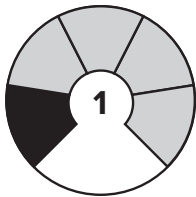



DIFFICULTY



ANTI-TIP
Installation Required



PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEG	4
B	SHELF PIN 	8
C	SHELF	2

1

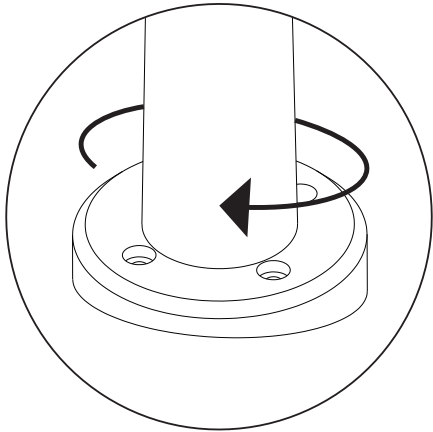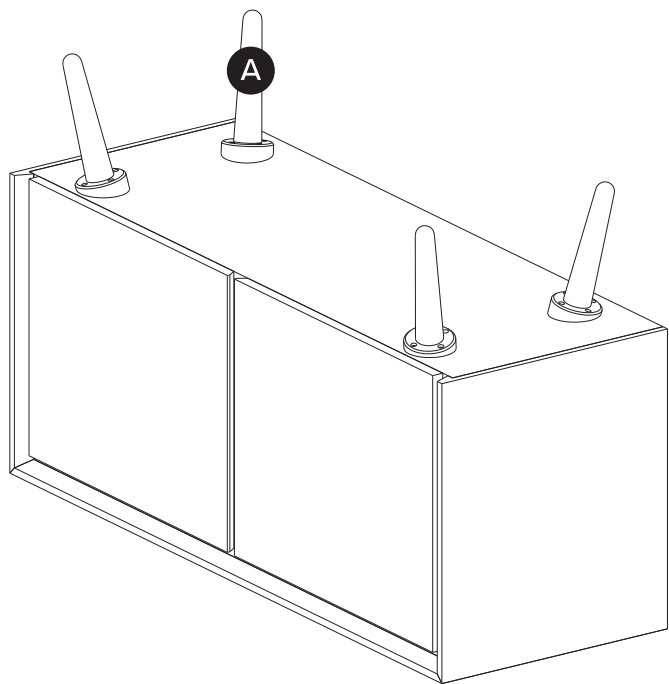

2A


2B

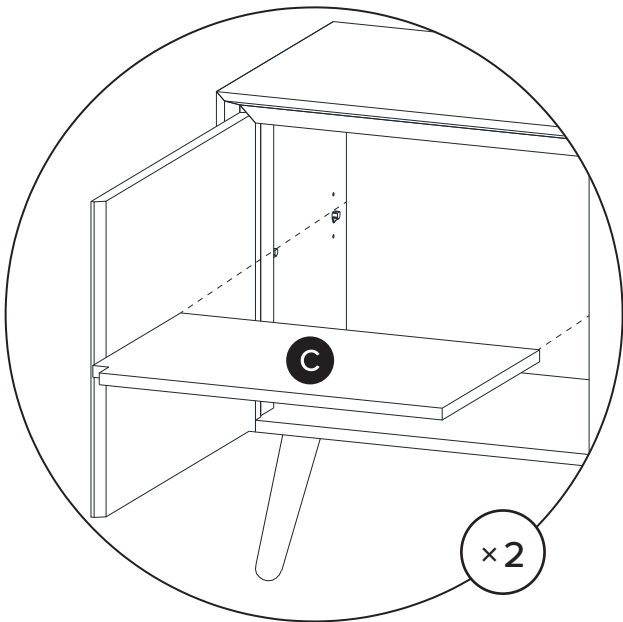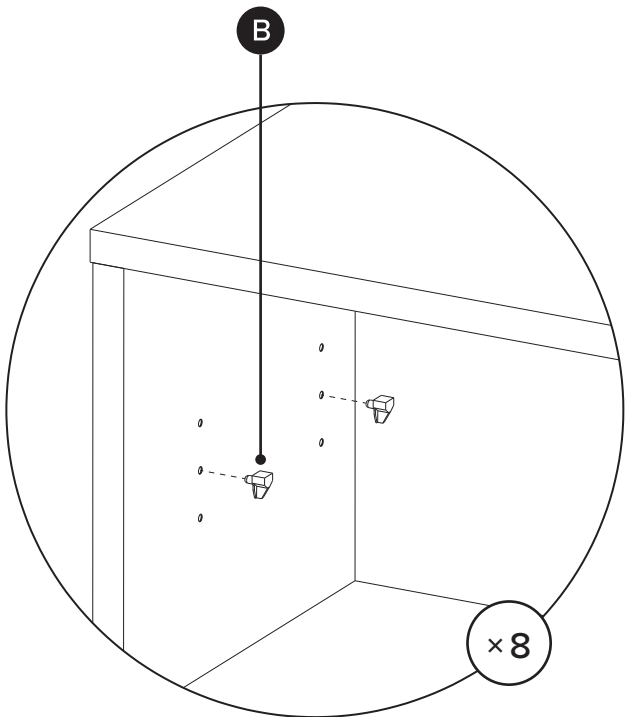

DOOR ADJUSTMENT INSTRUCTIONS





During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

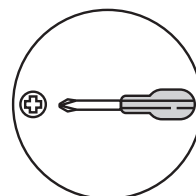

REQUIRED TOOL



3A

If the door is crooked, adjust hinge(s) up or down:

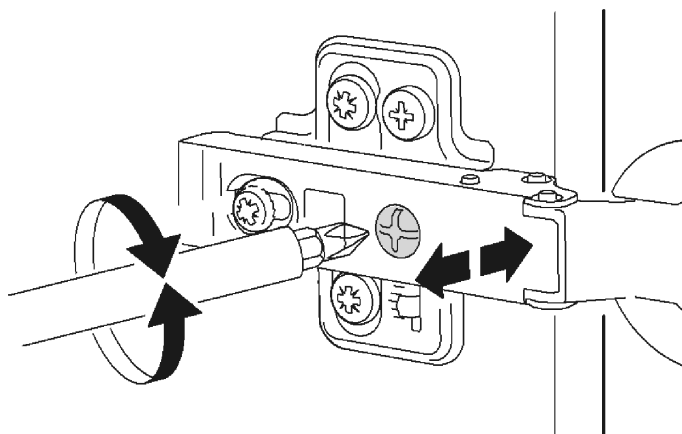
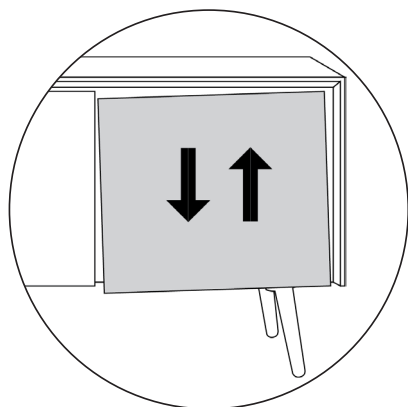


3B

If the door needs adjustment side to side:

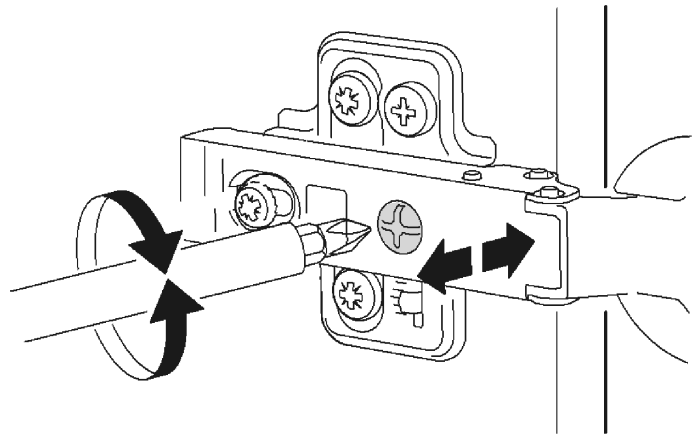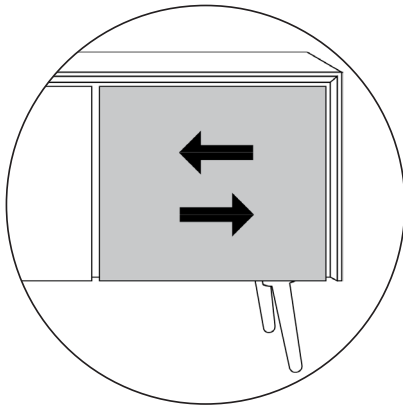**3C**

If the door needs adjustment forward or backward:

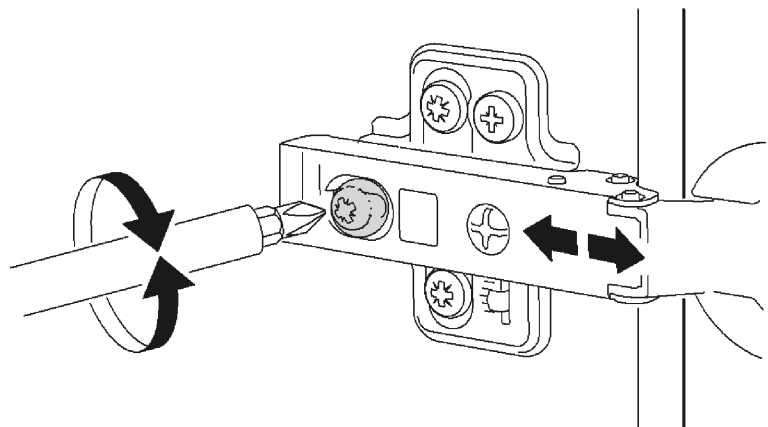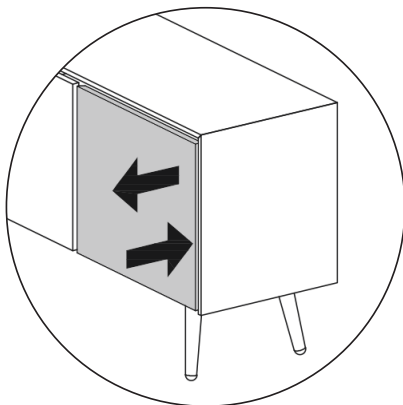



ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.




TIME




OF PEOPLE

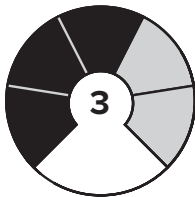

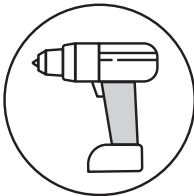




DIFFICULTY

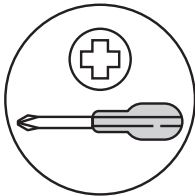

REQUIRED TOOL
8MM / 5/16" DRILL BIT




REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2


! Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

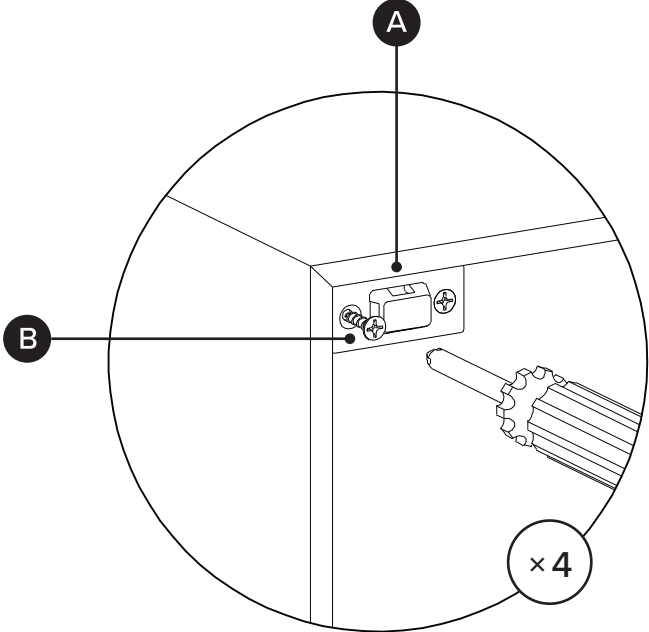


Attach pair of brackets to top corners of the back of the unit.

2


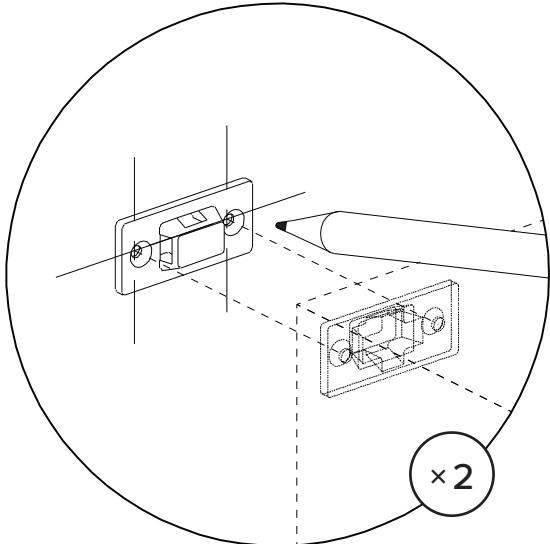


Mark on wall where second pair of brackets should be placed.

3

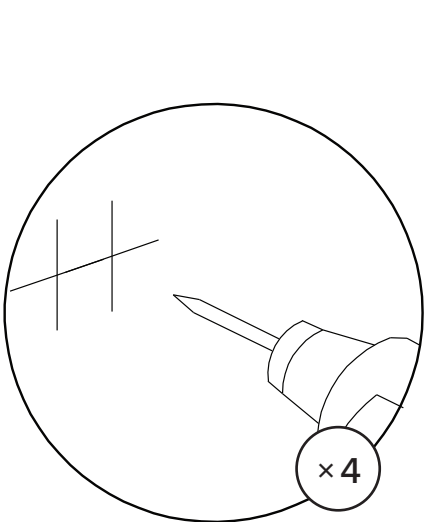


Drill holes in wall using 8mm / 5/16" drill bit.

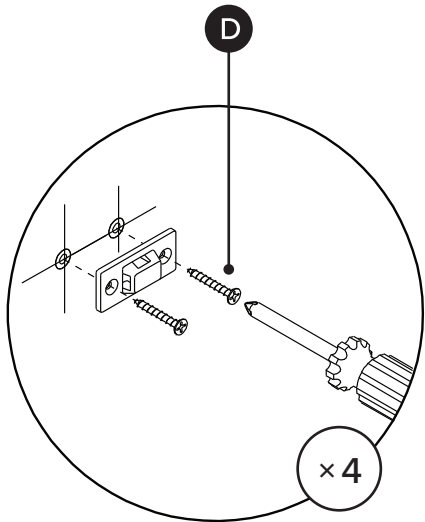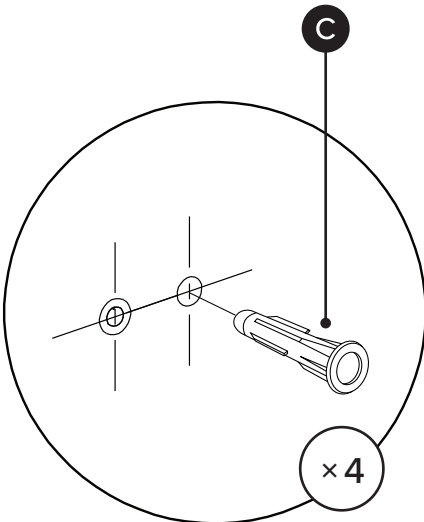


4A

Align brackets on unit
with brackets on wall.

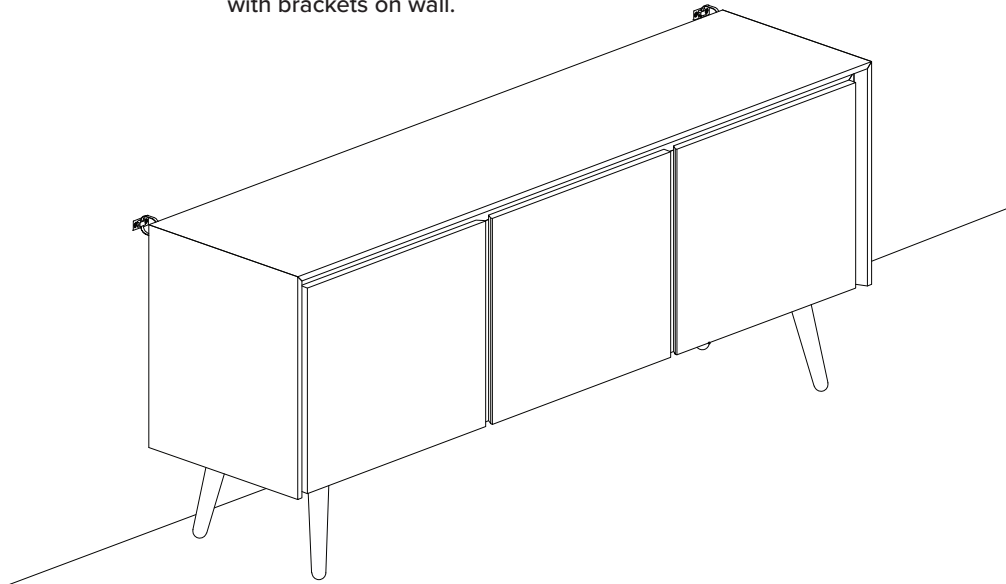

4B

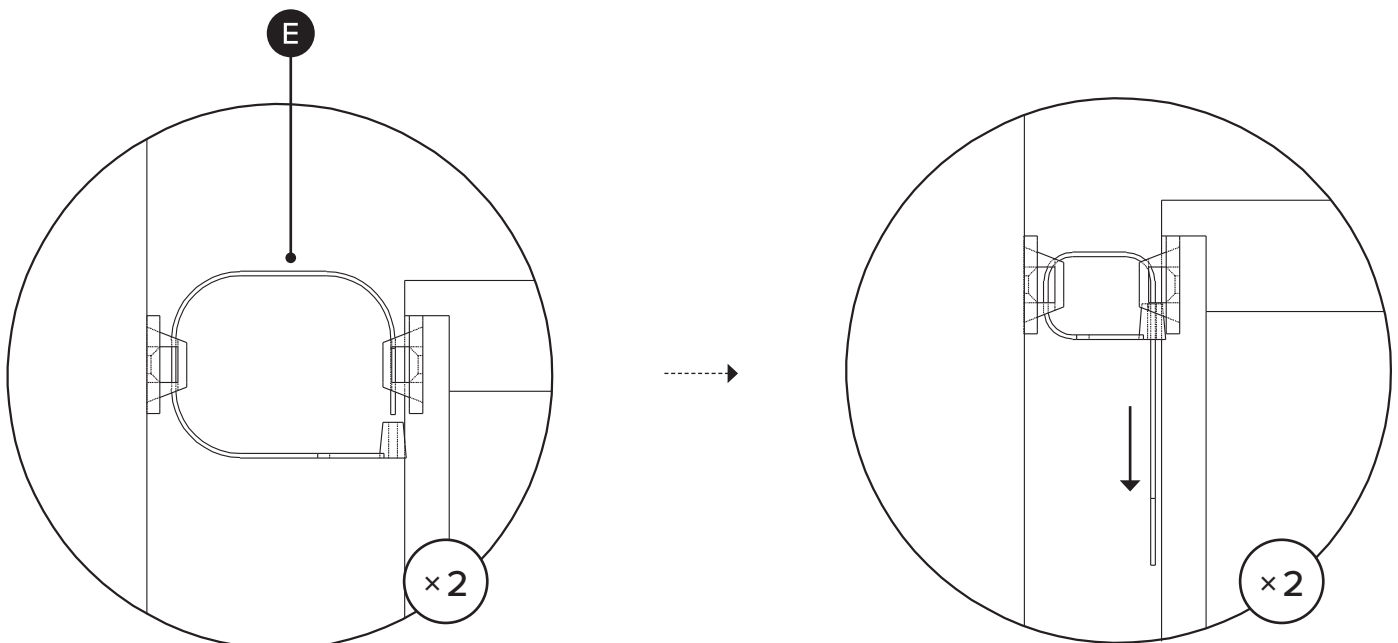

Pull strap down until it snap-locks.