


VERSION 1.0

## Assembly Instructions

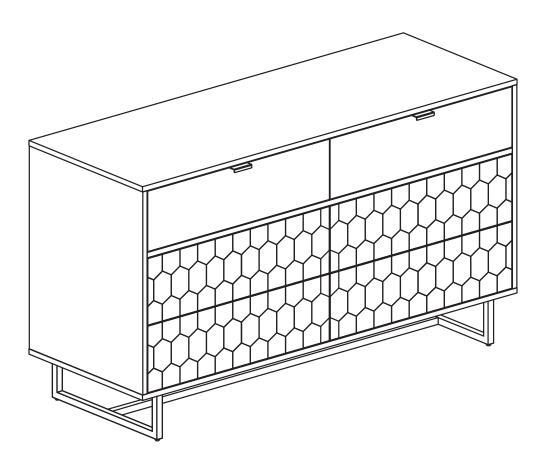

# GEOME

6 Drawer Double Dresser

### ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.







TIME

# OF PEOPLE


DIFFICULTY




Installation Required



PARTS INVENTORY				
ID	DESCRIPTION		QTY	
A	LEG FRAME		2	
B	SUPPORT BAR		1	
C	M6 × 15MM BOLT		4	
D	ALLEN KEY		1	
	M6 × 20MM BOLT		4	
F	M6 LOCK WASHER	P	4	
G	M6 WASHER	6	4	
		<u> </u>		

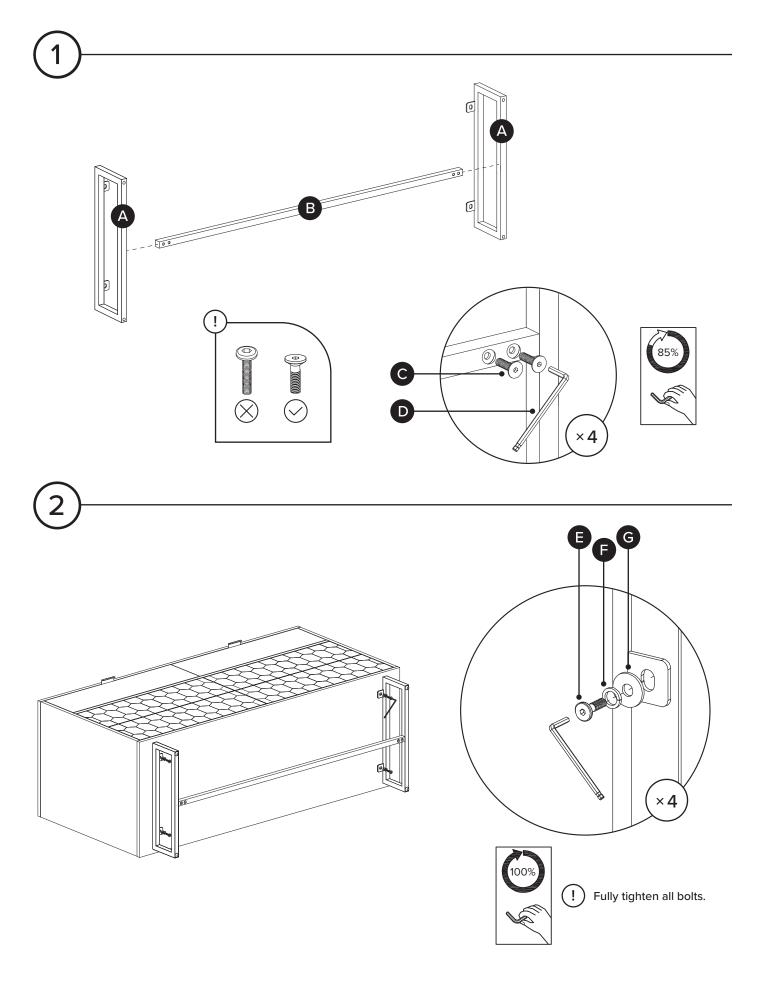

#### ARTICLE.

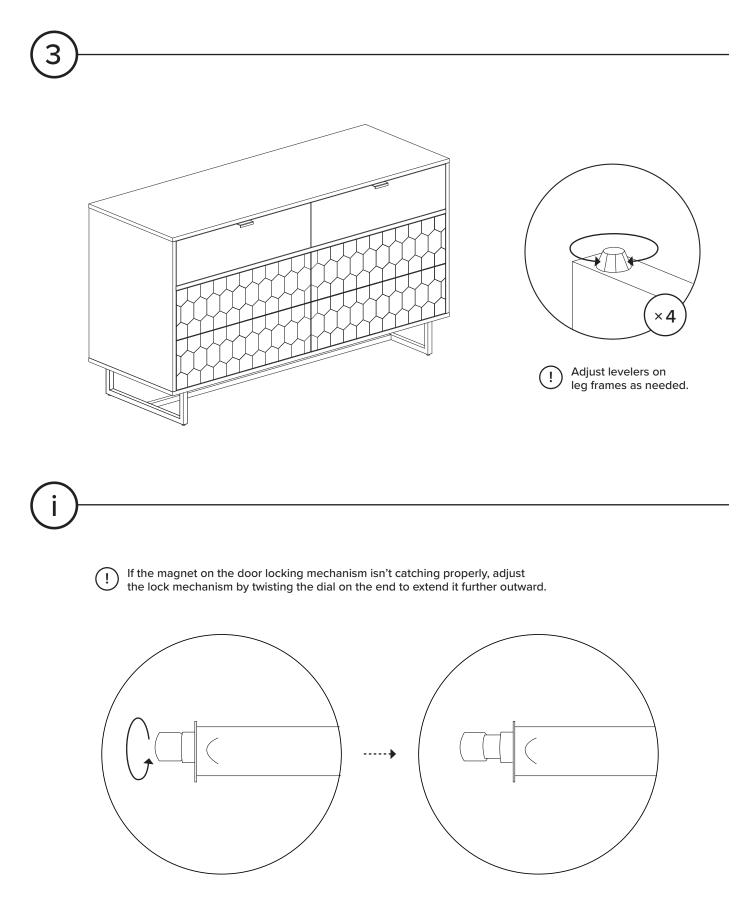








Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided. •
- NEVER put a TV on this product. •
- NEVER allow children to stand, climb or hang • on drawers, doors, or shelves.
- NEVER open more than one drawer at a time. •
- Place heaviest items in the lower drawers. •







TIME

**# OF PEOPLE** 

DIFFICULTY

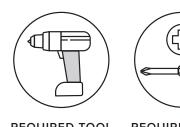




**REQUIRED TOOL** 8MM / 5/16" DRILL BIT


**REQUIRED TOOL** 


PARTS INVENTORY				
ID	DESCRIPTION		QTY	
A	BRACKET		4	
B	M4 × 20MM SCREW	Bunn	4	
C	M8 × 51MM PLUG		4	
D	M6 × 70MM SCREW	auture	4	
E	STRAP	$\mathcal{O}$	2	


Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

#### ARTICLE.

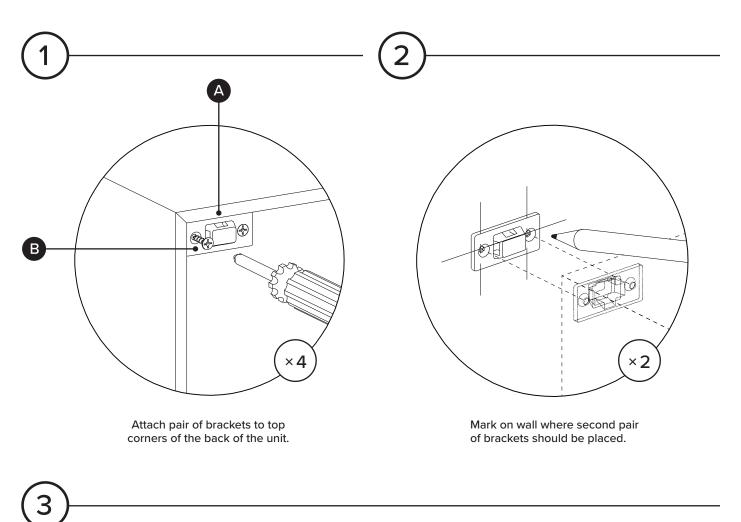

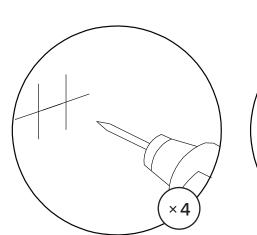


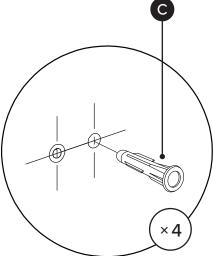

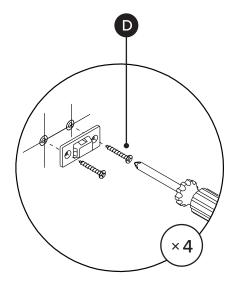

Drill holes in wall using 8mm / 5/16" drill bit.



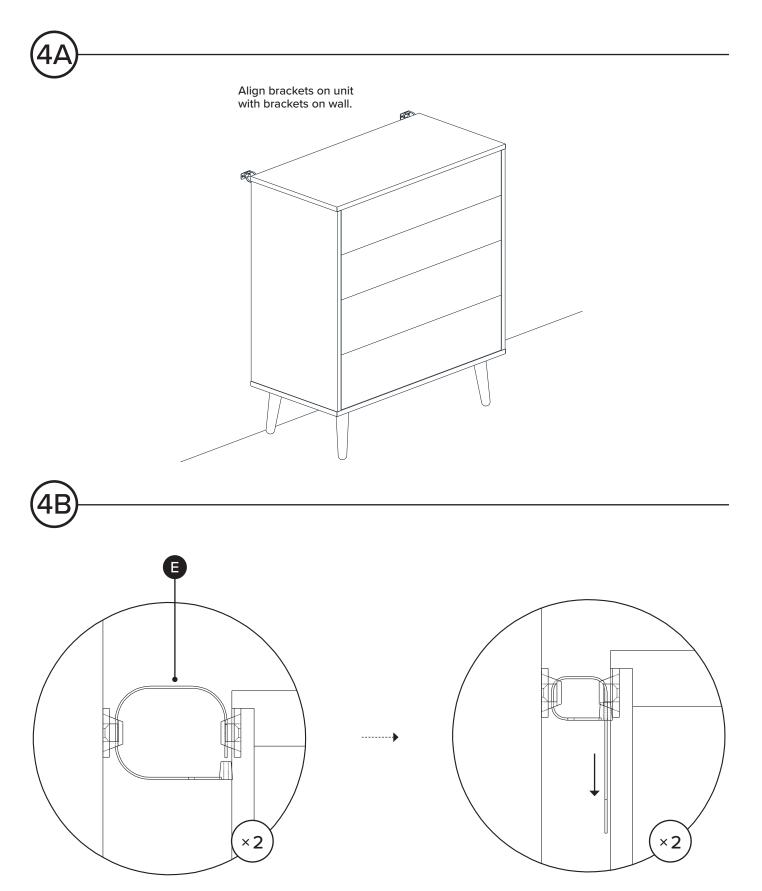

Pull strap down until it snap-locks.