


ARTICLE.

VERSION 1.3

Assembly Instructions

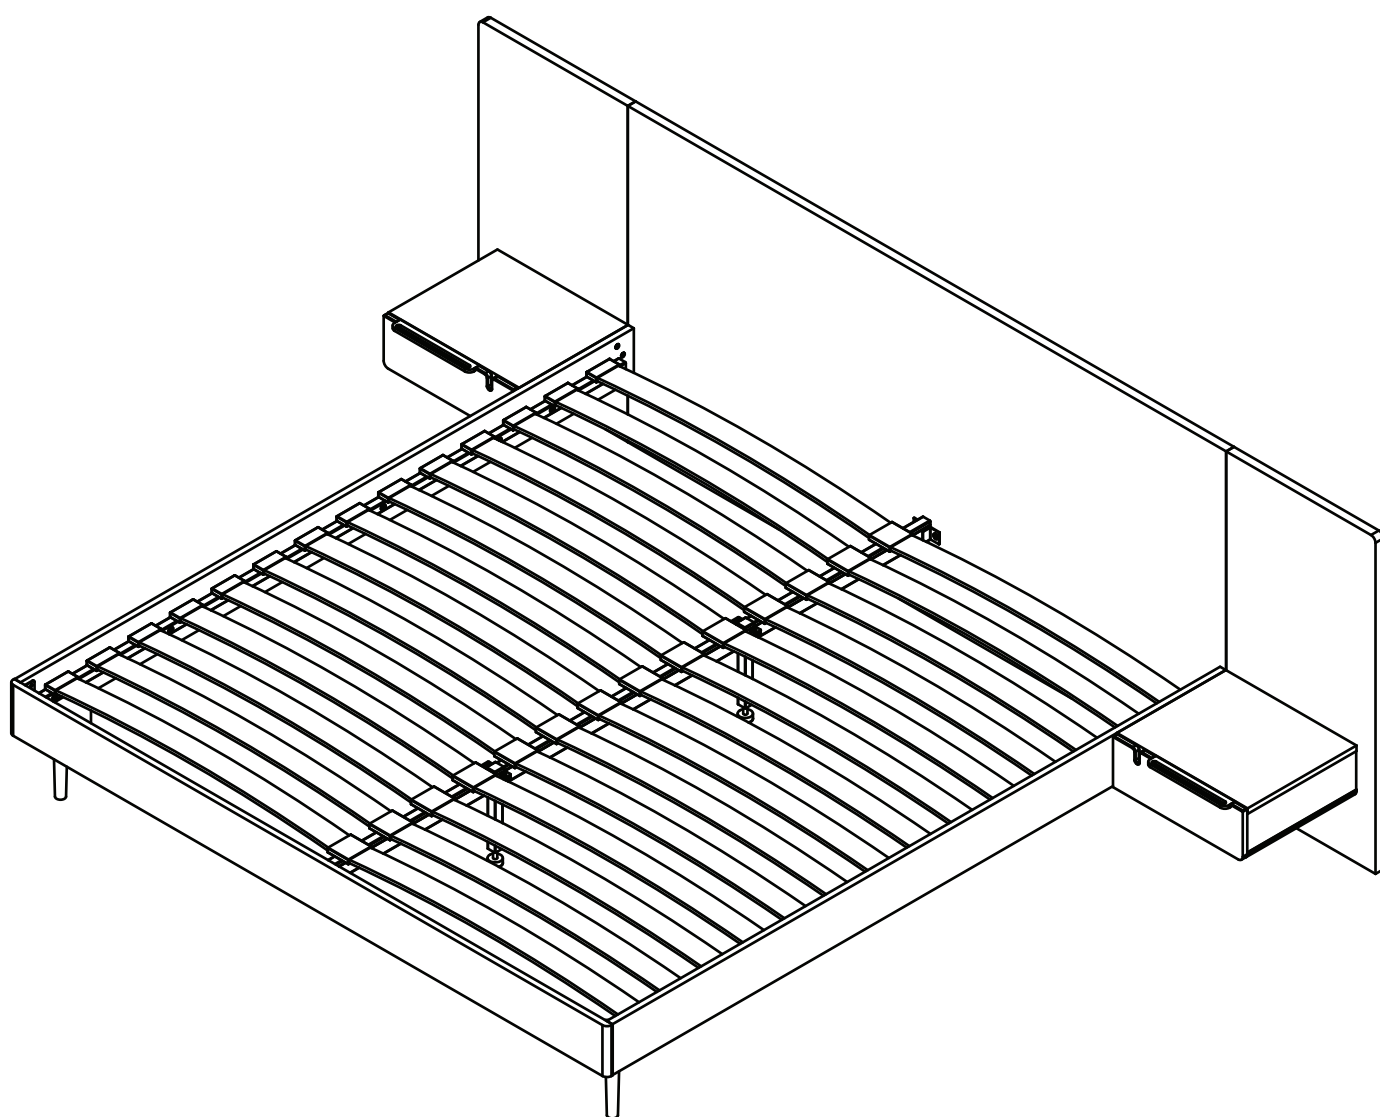

NERA

Bed with Nightstands

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME




OF PEOPLE





DIFFICULTY

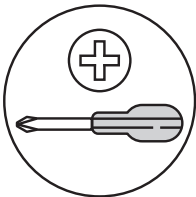



REQUIRED TOOL
Phillips screwdriver

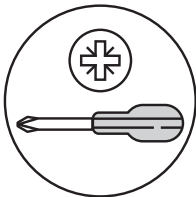


REQUIRED TOOL
Pozidriv screwdriver

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	LEFT SIDE HEADBOARD	1
C	RIGHT SIDE HEADBOARD	1
D	FOOTBOARD	1
E	CENTER BEAM BRACKET 	2
F	LEFT SIDE RAIL	1
G	RIGHT SIDE RAIL	1
H	LEFT CORNER PIECE	1
I	RIGHT CORNER PIECE	1
J	LEG 	2


PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
K	CENTER BEAM	1
L	CENTER LEG BRACKET (PRE-INSTALLED)	2
M	FLOATING CENTER LEG	2
N	LEFT NIGHTSTAND MOUNTING BRACKET	1
O	RIGHT NIGHTSTAND MOUNTING BRACKET	1
P	LEFT NIGHTSTAND	1
Q	RIGHT NIGHTSTAND	1
R	SLAT CLIP 	28
S	SLAT	28
T	SLAT CENTER BRACKET 	14



Structural integrity is warranted only if all fasteners are properly installed & tightened, and the bed is moved only per instructions.


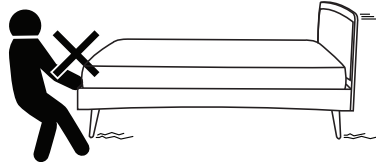


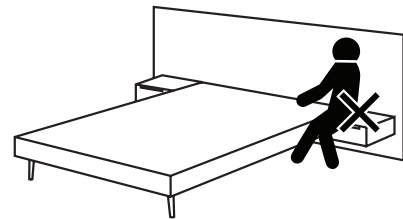





DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING











DO NOT SIT OR STAND ON NIGHTSTAND
MAY CAUSE INJURY AND/OR STRUCTURAL DAMAGE




HARDWARE / TOOLS INVENTORY

ID	DESCRIPTION	QTY
1	WOOD DOWEL 	8
2	DOUBLE COMPRESSION FITTING ANCHOR 	6
3	ALLEN KEY 	1
4	M10 × 10MM SCREW 	12
5	TEFLON PAD 	2
6	THIN ALLEN KEY 	1
7	M6 × 12MM BOLT 	4
8	LONG COMPRESSION FITTING ANCHOR 	4

HARDWARE / TOOLS INVENTORY CONT.



ID	DESCRIPTION	QTY
9	SHORT COMPRESSION FITTING ANCHOR 	10
10	M8 × 8.5MM SCREW 	8
11	M6 × 20MM BOLT (4 PRE-INSTALLED ON CENTER LEGS) 	12
12	M8 × 15MM BOLT 	4
13	M7.5 × 7MM SCREW 	6
14	M4 × 17MM SCREW 	4
15	M8 × 60MM BOLT 	4
16	M8 × 40MM BOLT 	4

1A

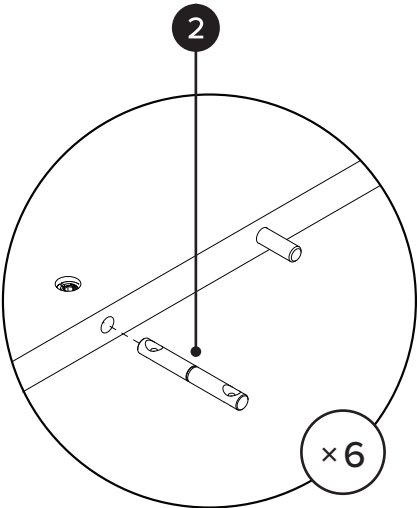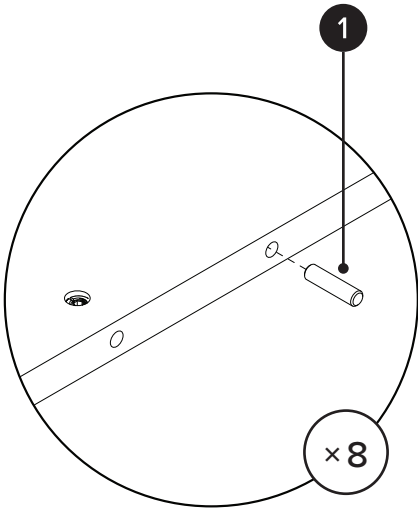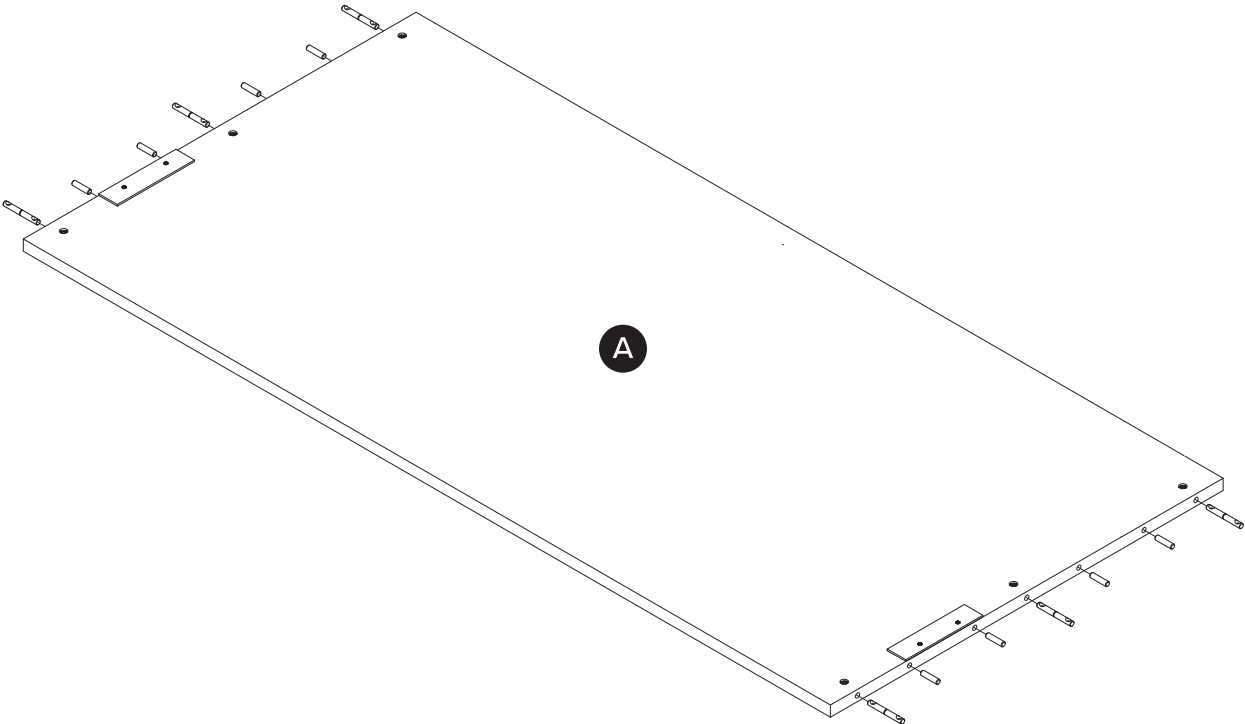



! Holes on double compression fitting anchors (2) must be facing inwards on headboard (A).

1B

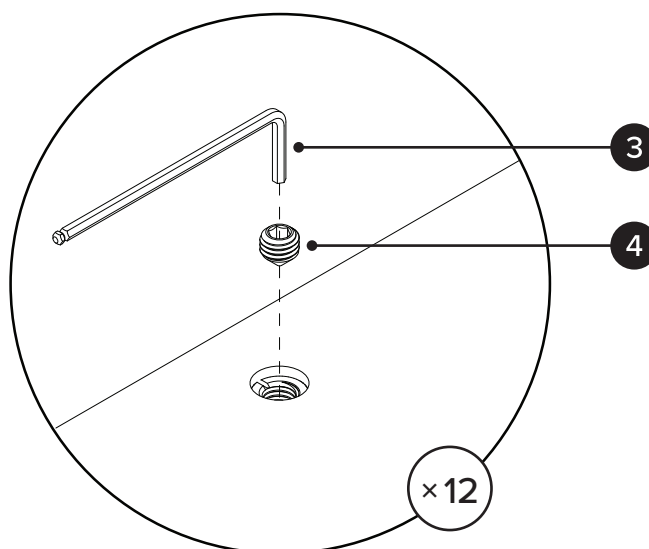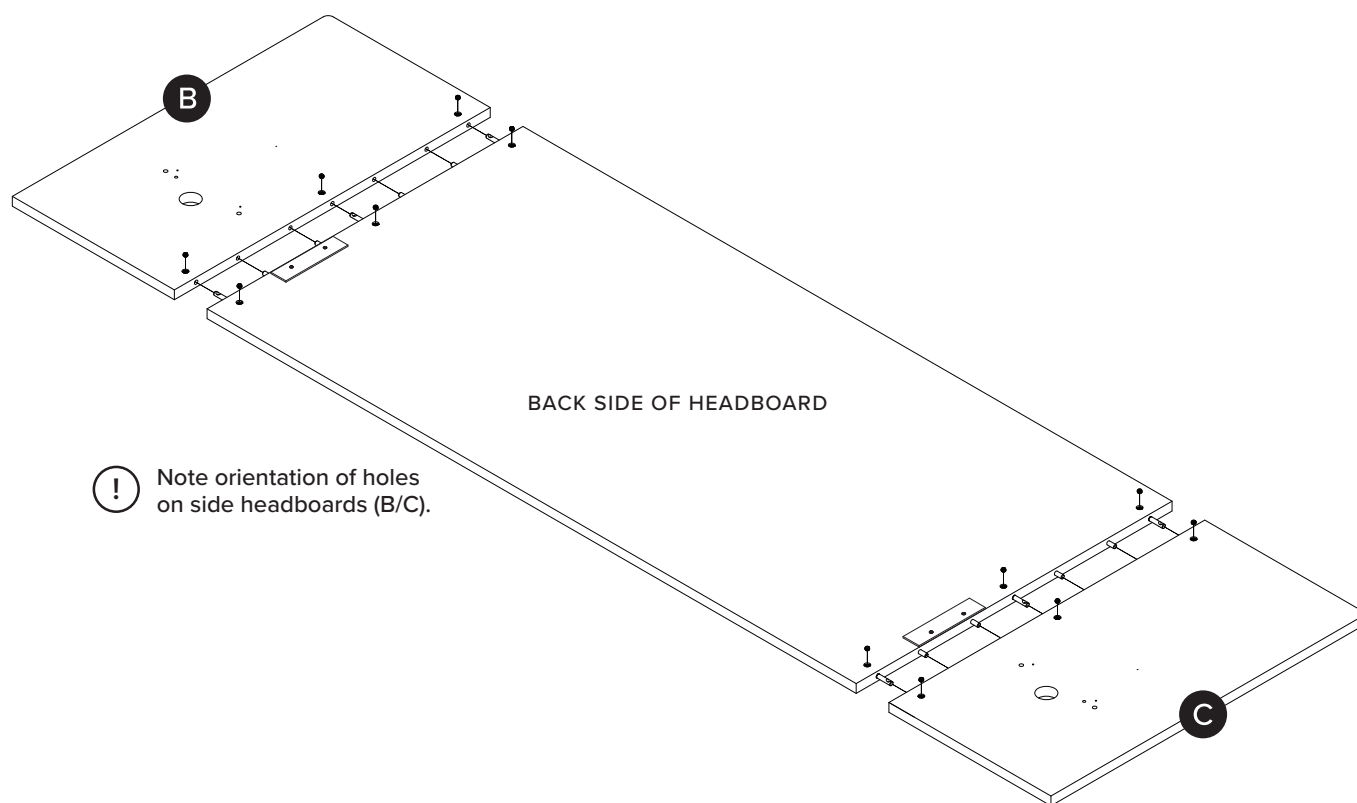



! Secure first 6 screws (4) into headboard (A) first before attaching left and right side headboards (B/C).

2A

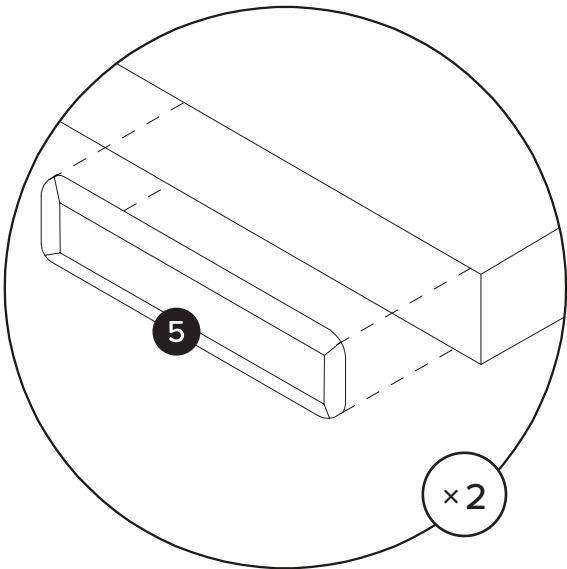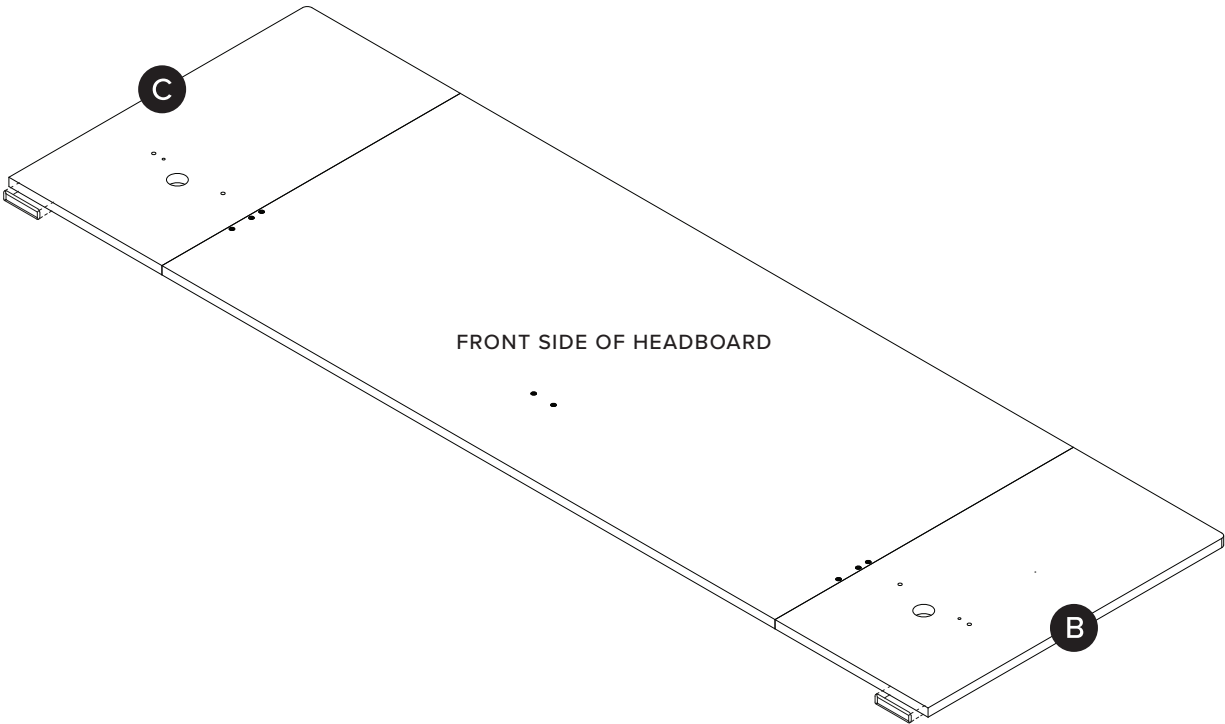


! First remove plastic backing from teflon pads (5). Stick on bottom side of headboards (B/C) approx. 1/4" in from the edges.


2B

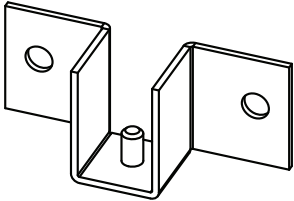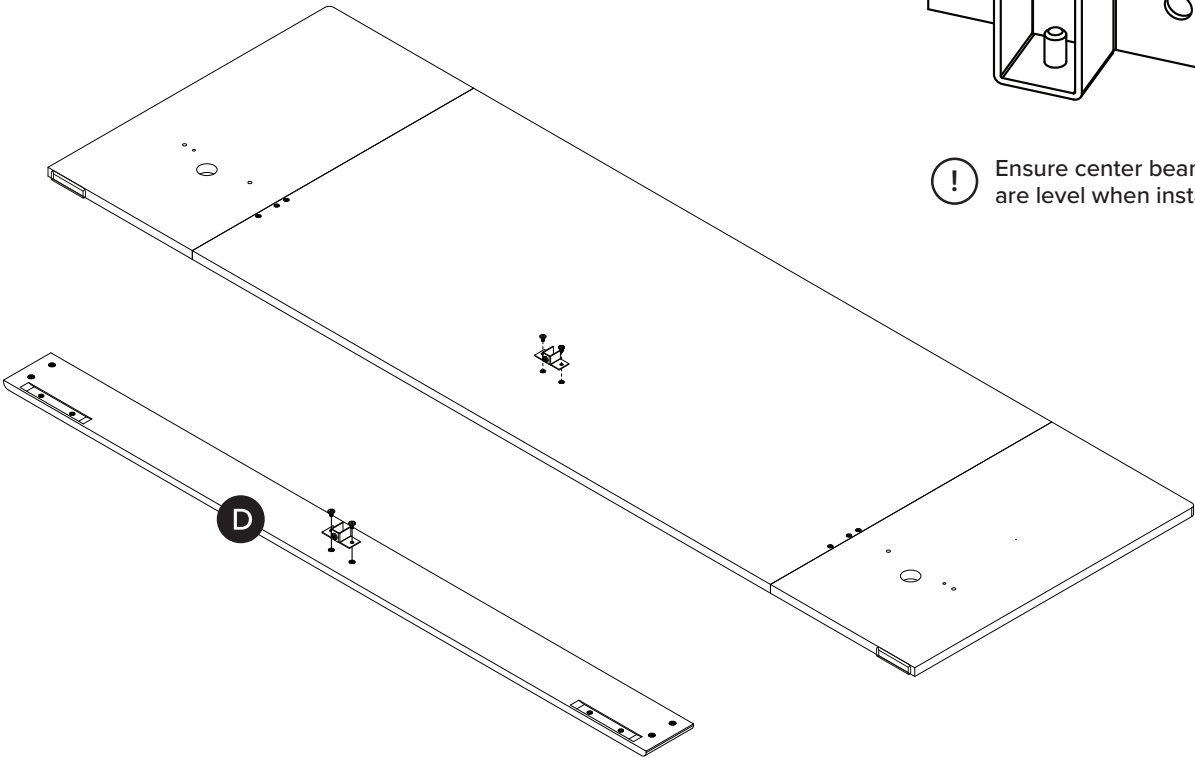






! Ensure center beam brackets (E) are level when installed.

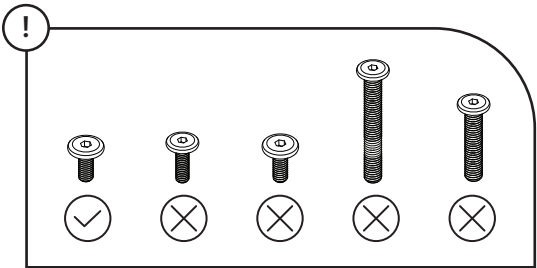

! Use the 4 shortest bolts (7) provided.





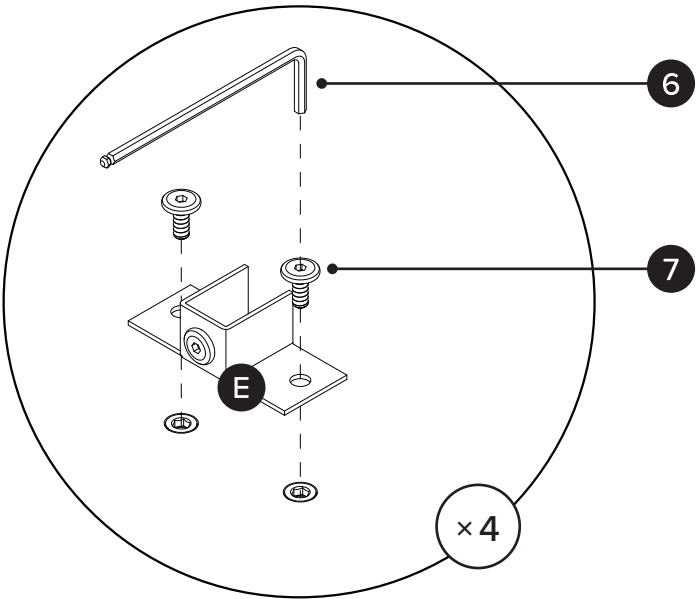



3

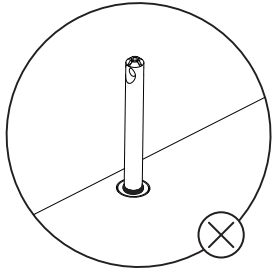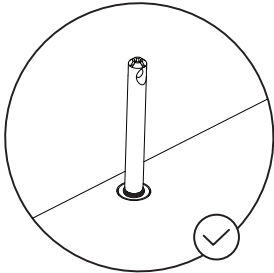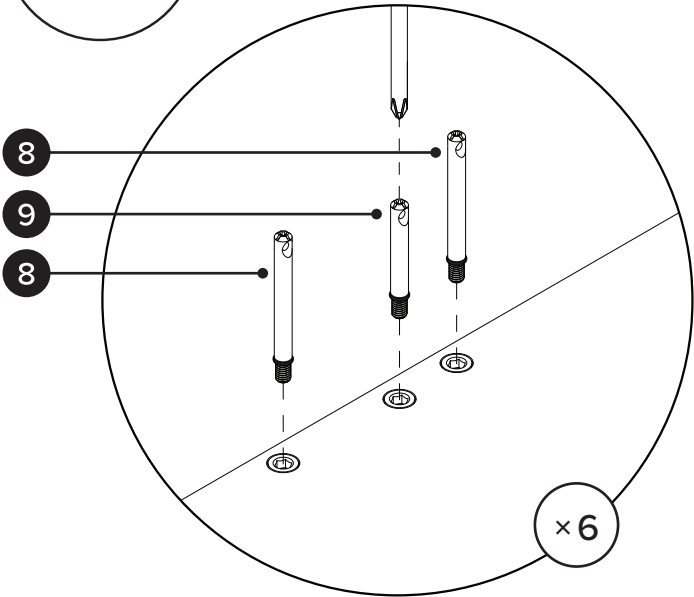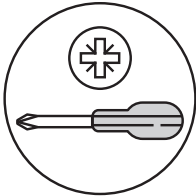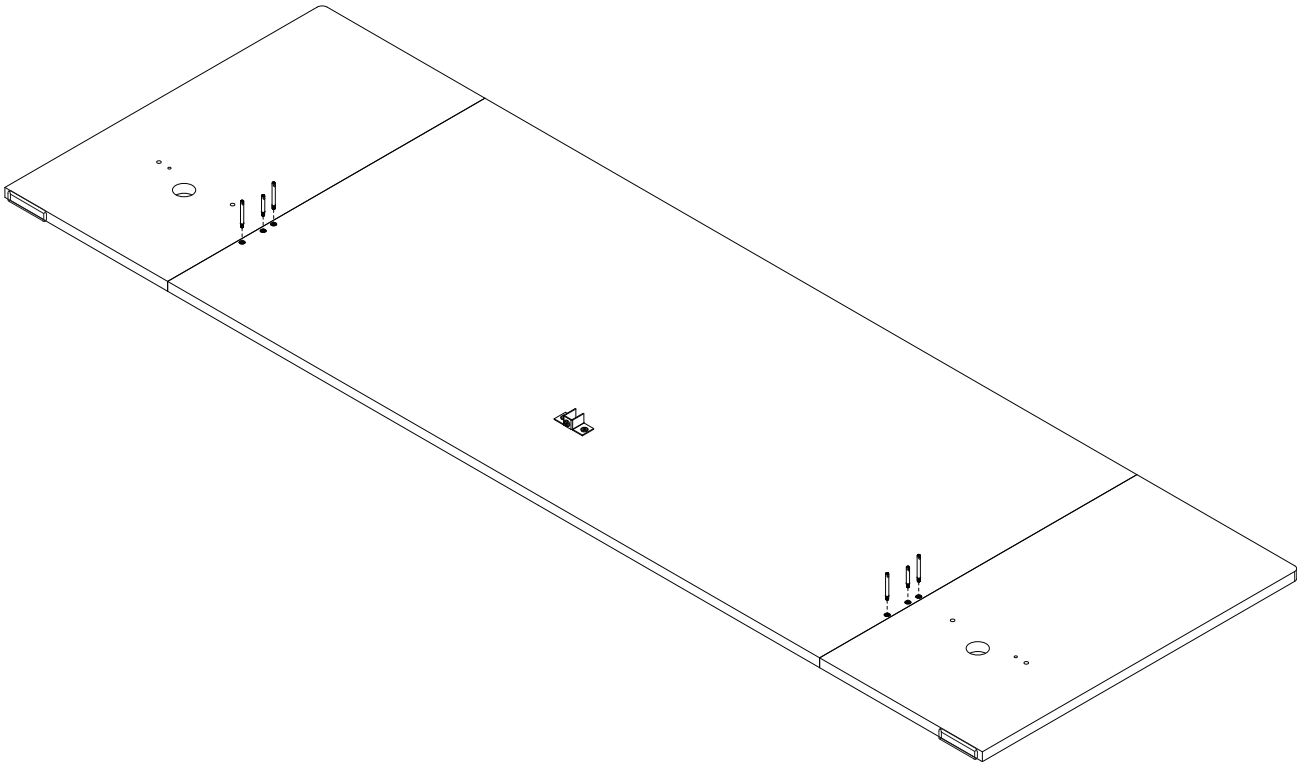






Holes on compression fitting anchors must be facing inwards on headboard. Ensure rubber seal on anchors are tight.

4

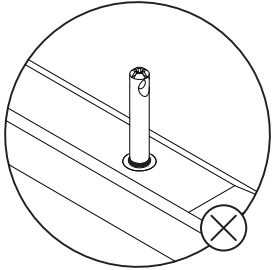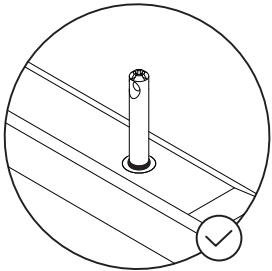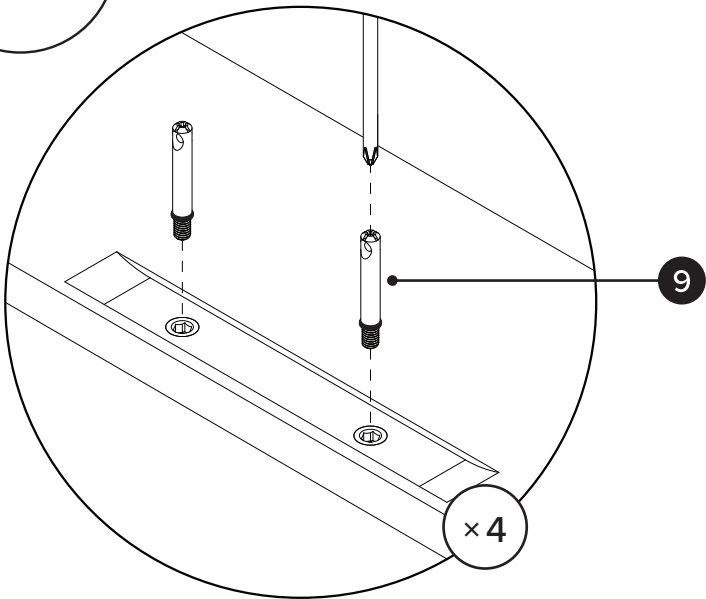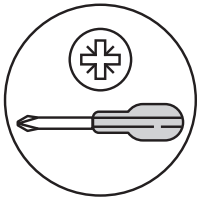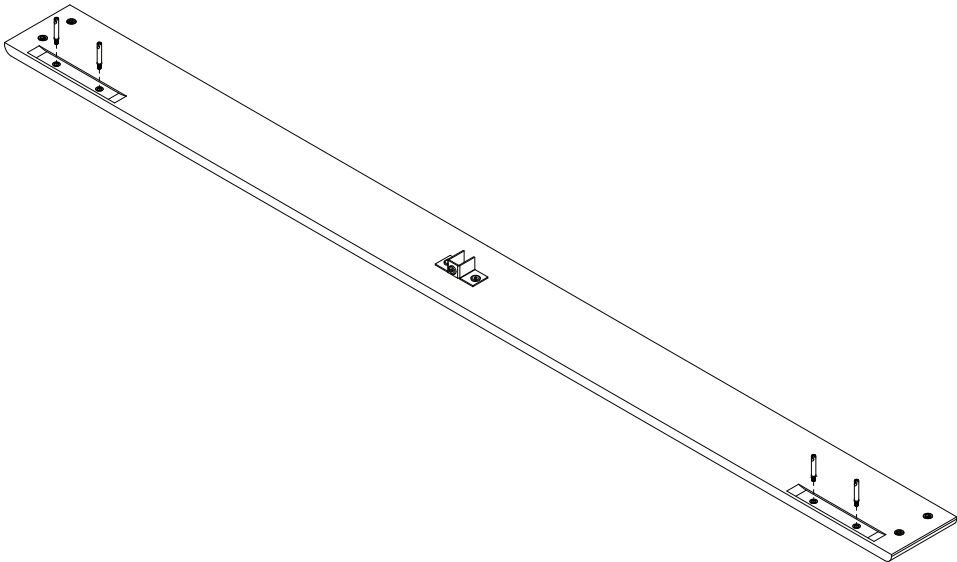

 Holes on short compression fitting anchors (9) must be facing down on footboard. Ensure rubber seal on anchors are tight.


5

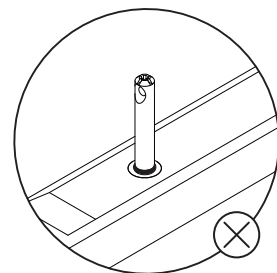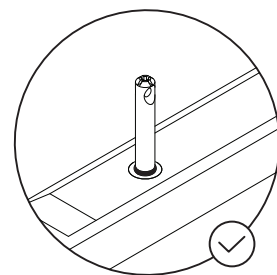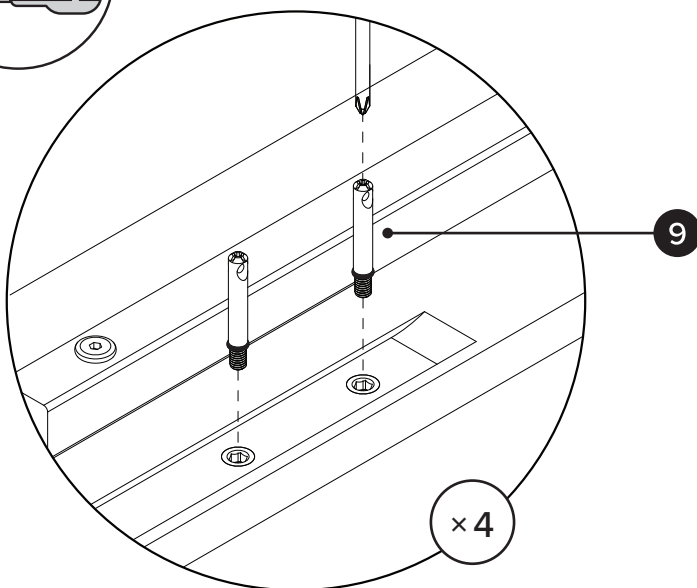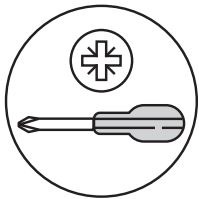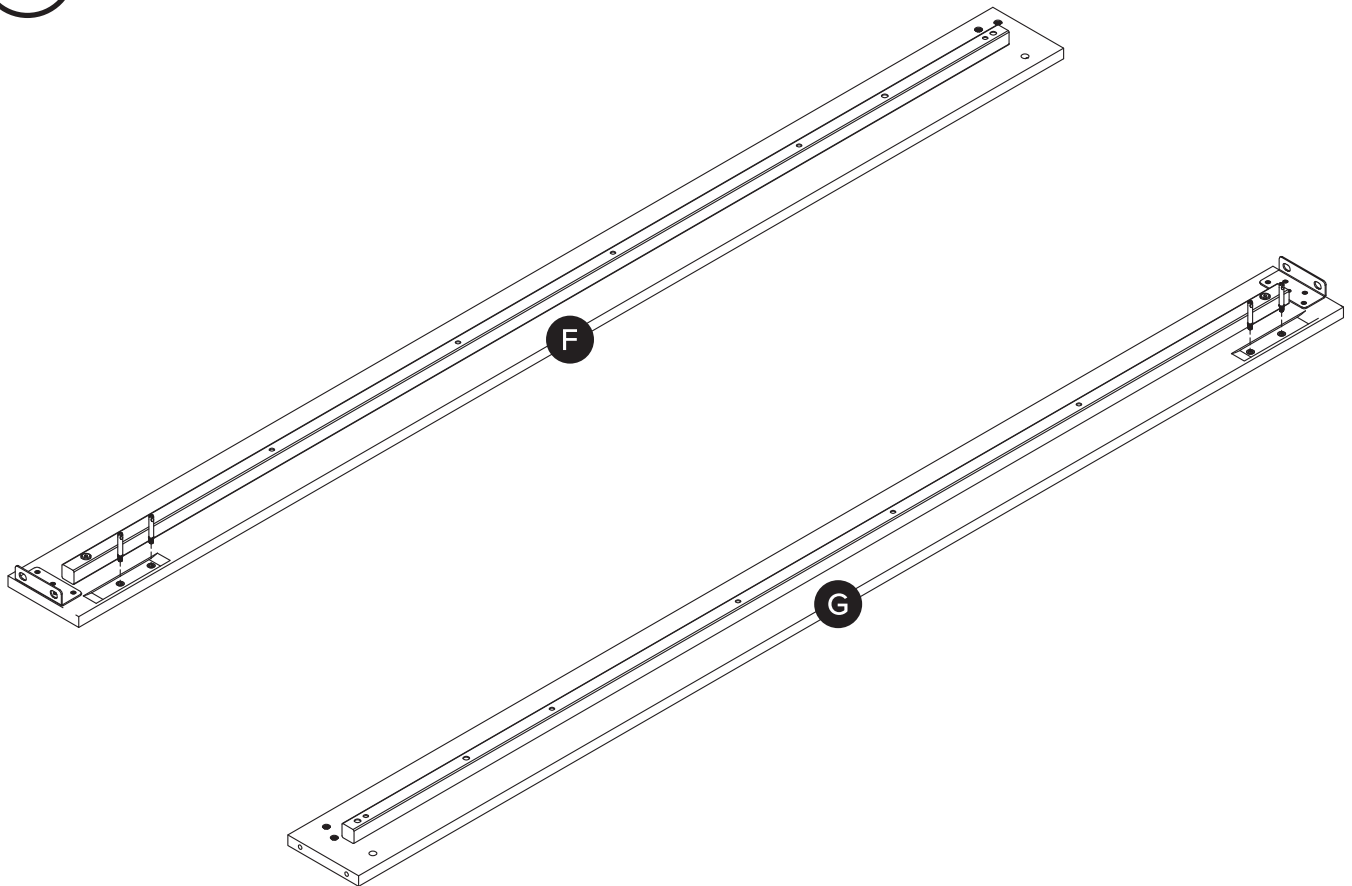


! Holes on short compression fitting anchors (9) must be facing down on side rails (F/G). Ensure rubber seal on anchors are tight.

6



! Note placement of holes on each corner piece, left vs. right.

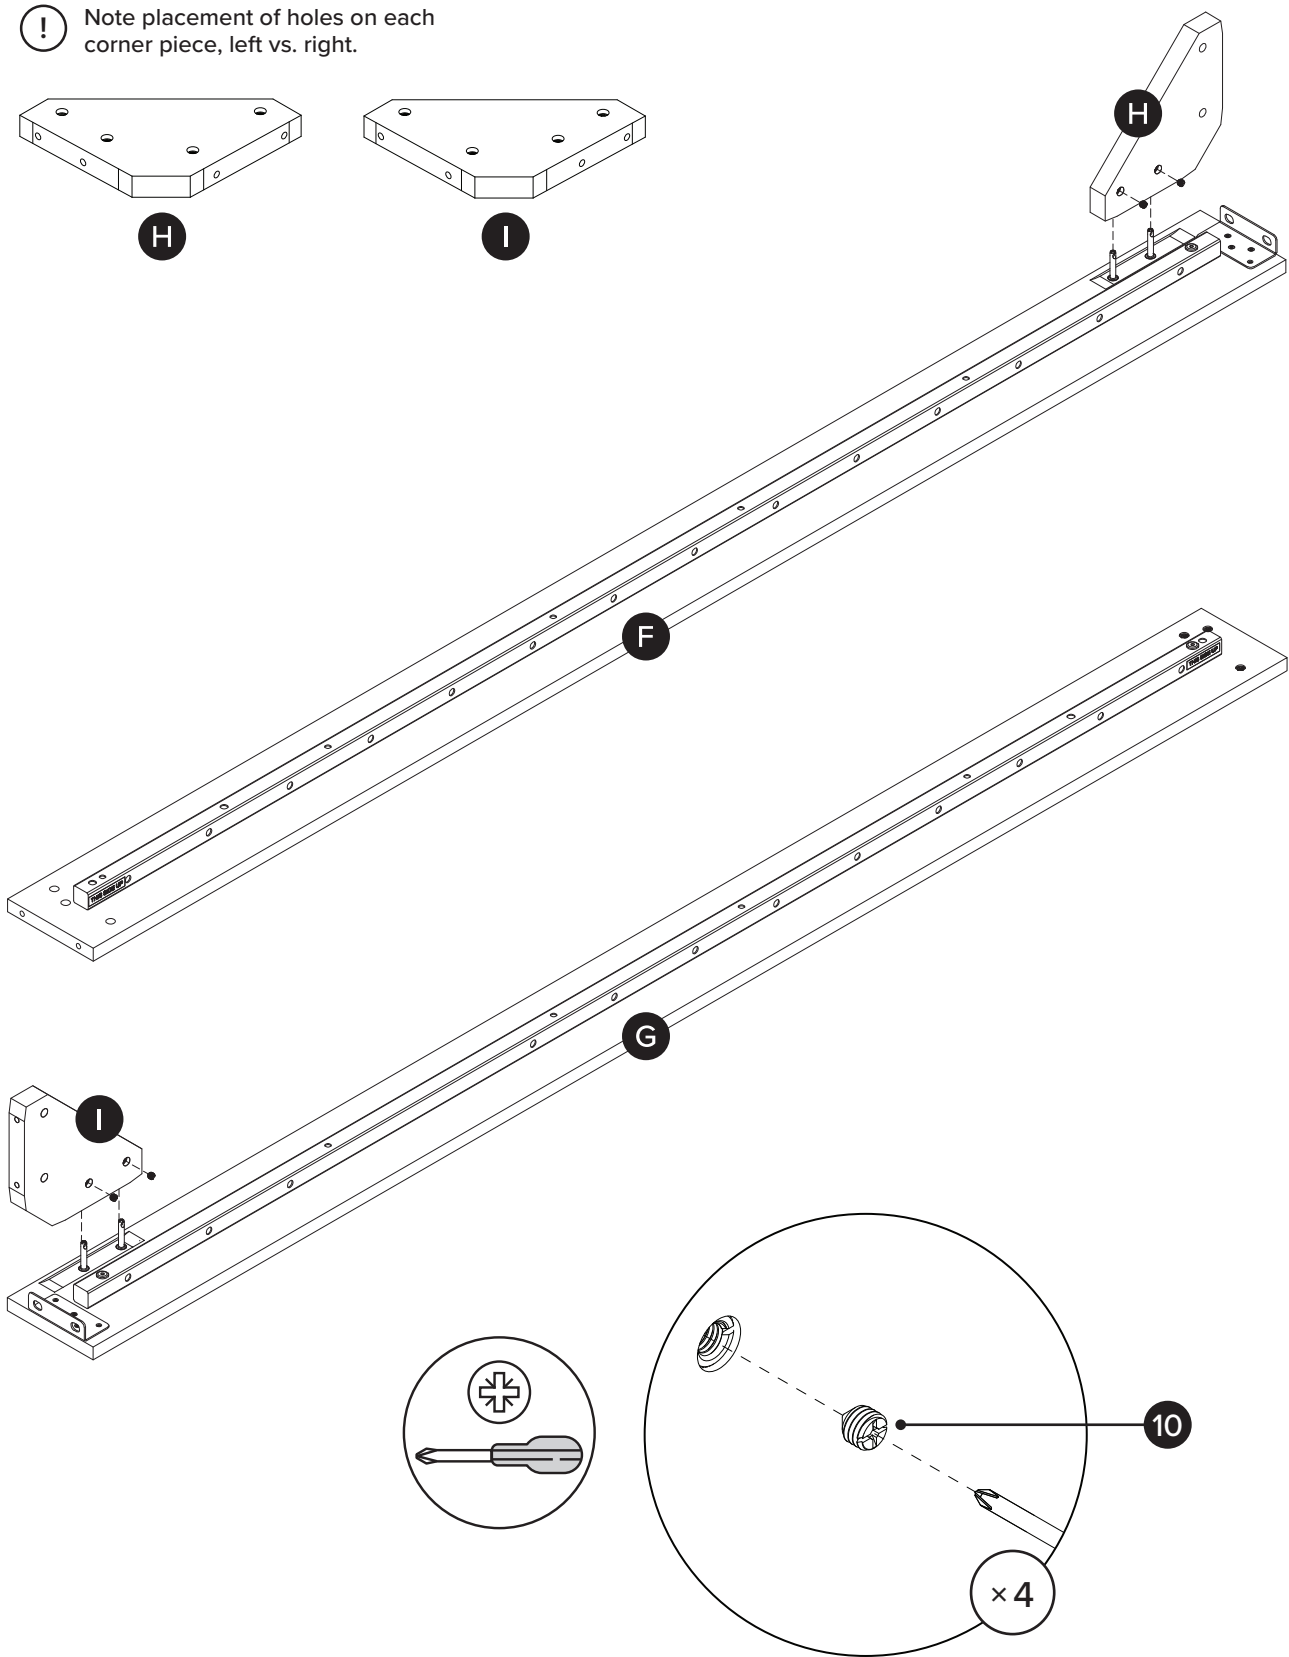

7

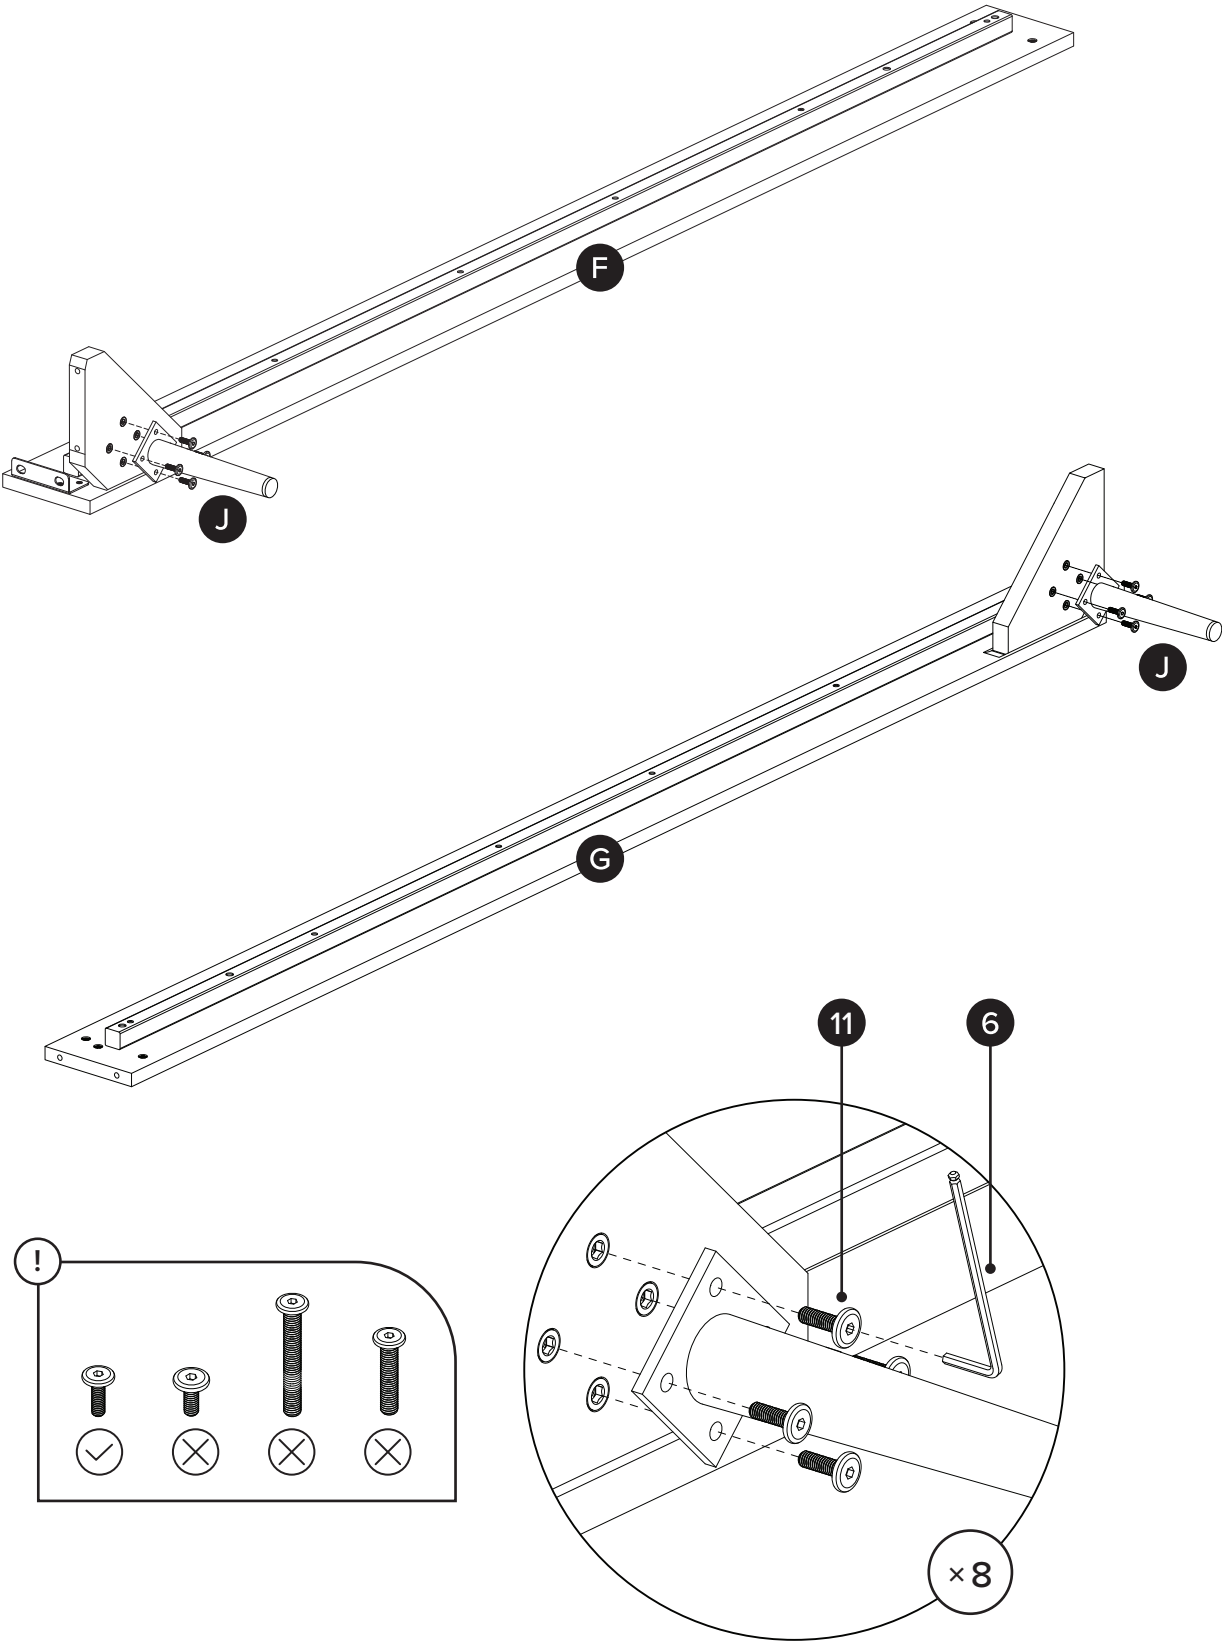


8

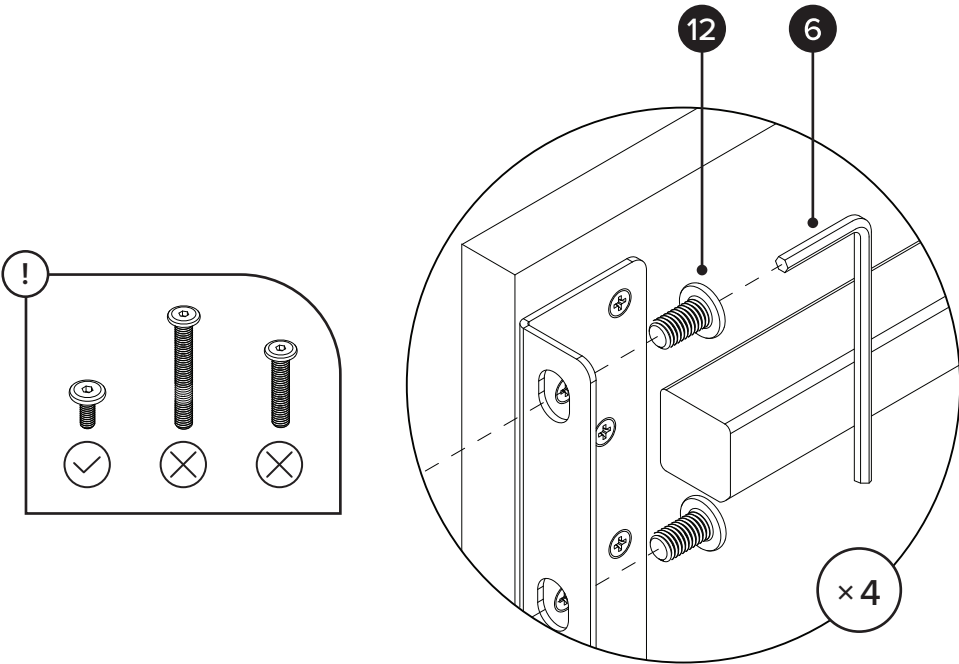
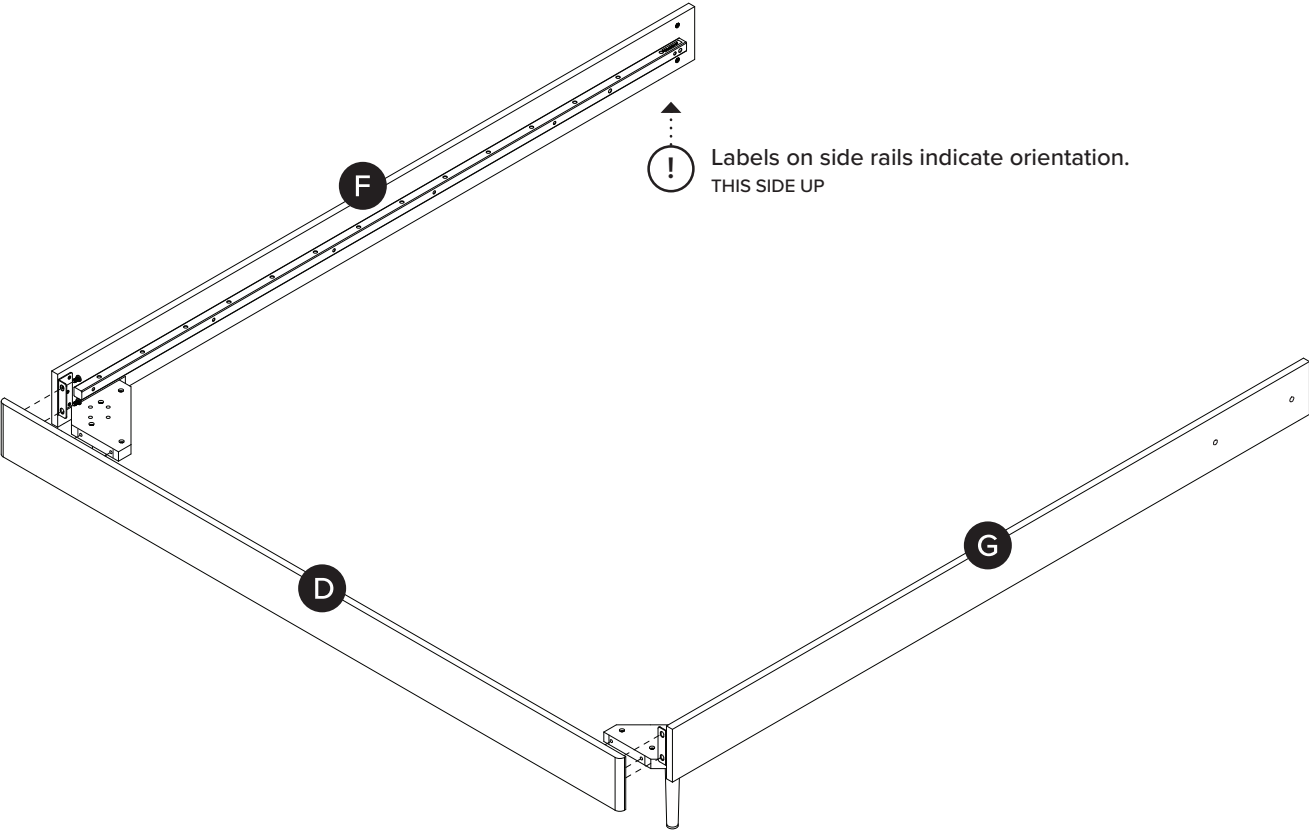


! Ensure side rails (F/G) are parallel with footboard (D) when tightening bolts (12).


8

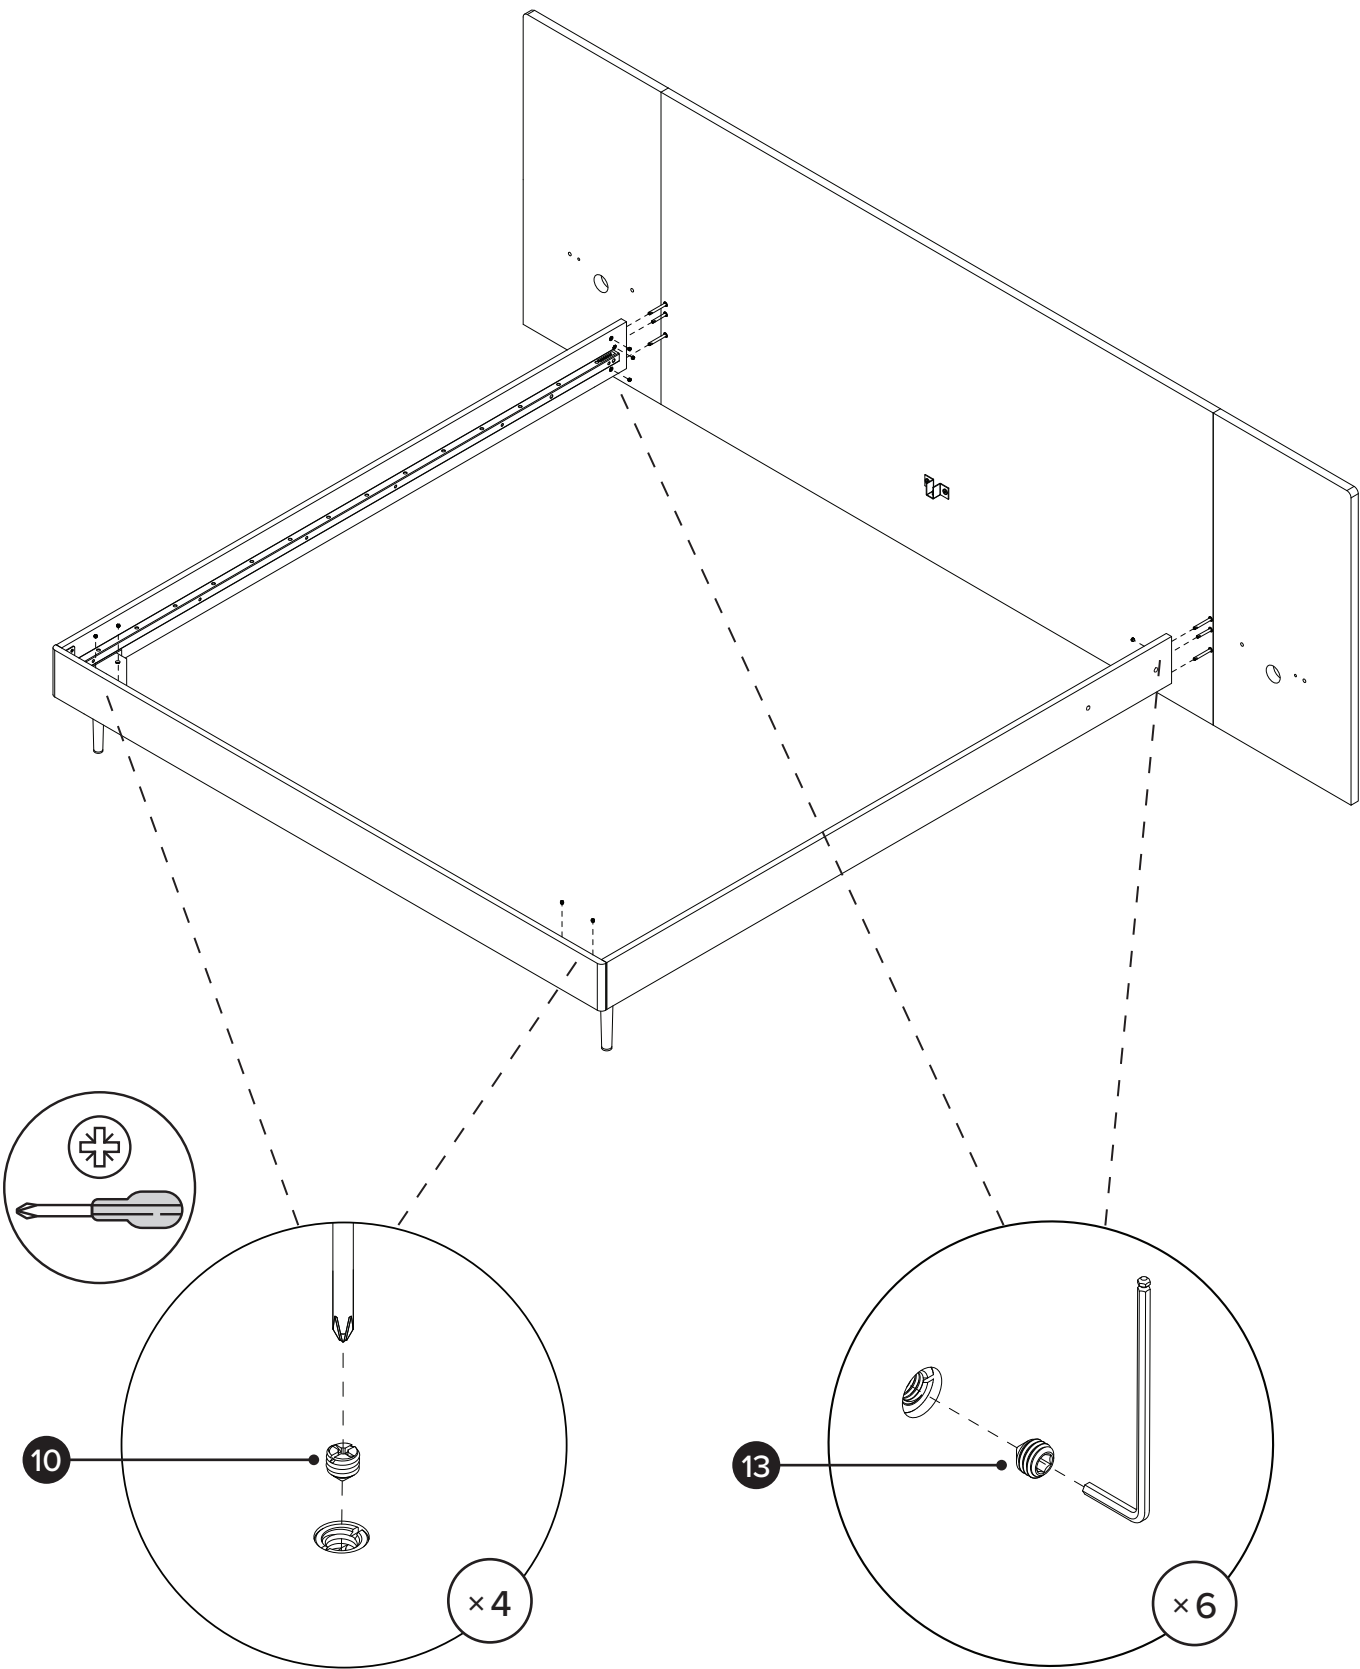

9

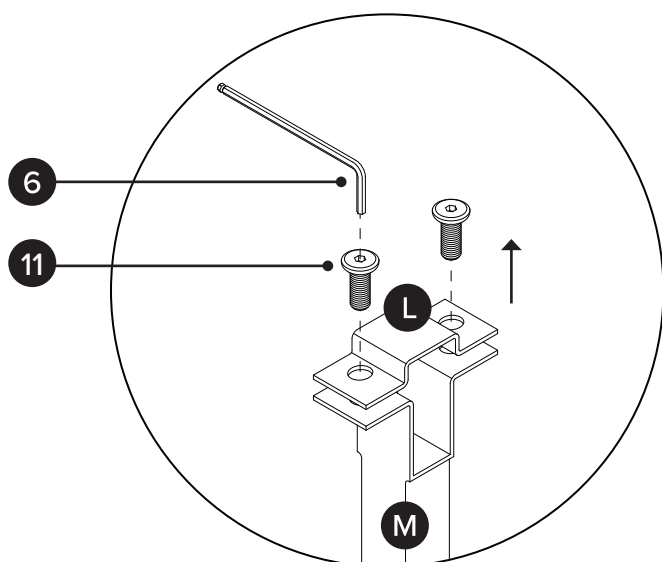
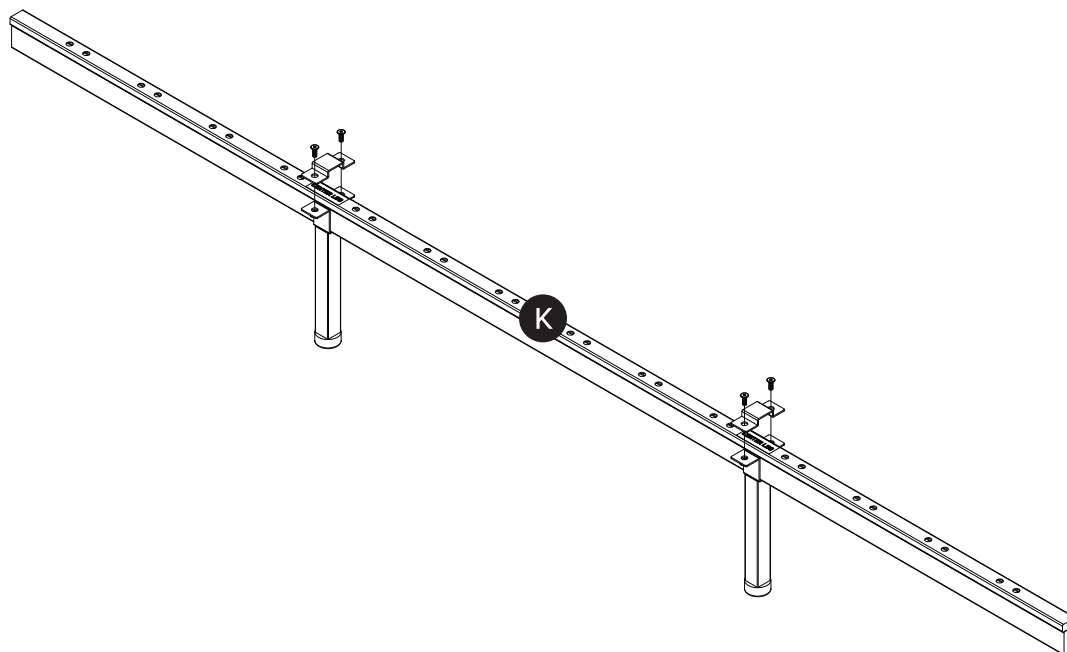


! Unscrew bolts (11) from center leg brackets (L) and floating center legs (M) before attaching to center beam (K).

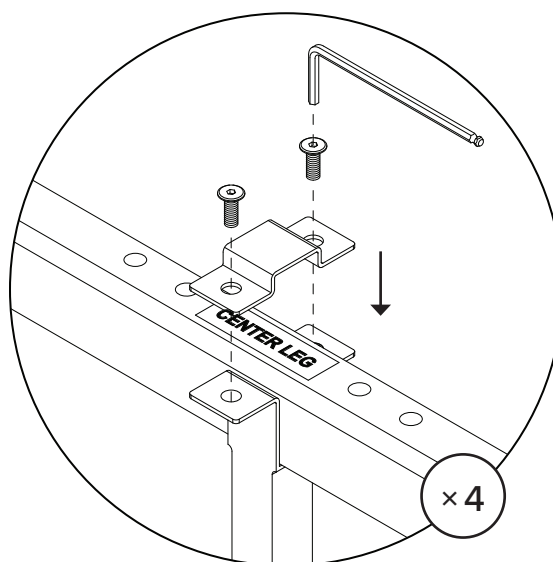


! Attach floating center legs (M) where labels are situated on center beam (K). Ensure that legs are straight, perpendicular to center beam.

10

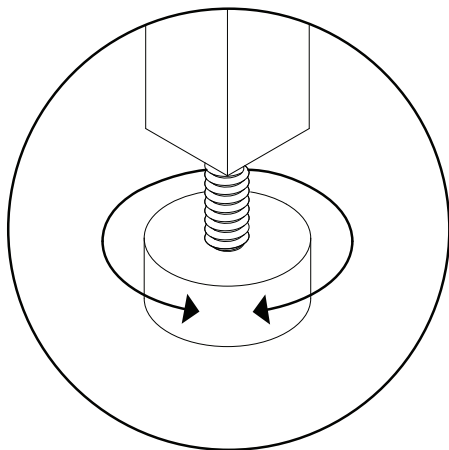
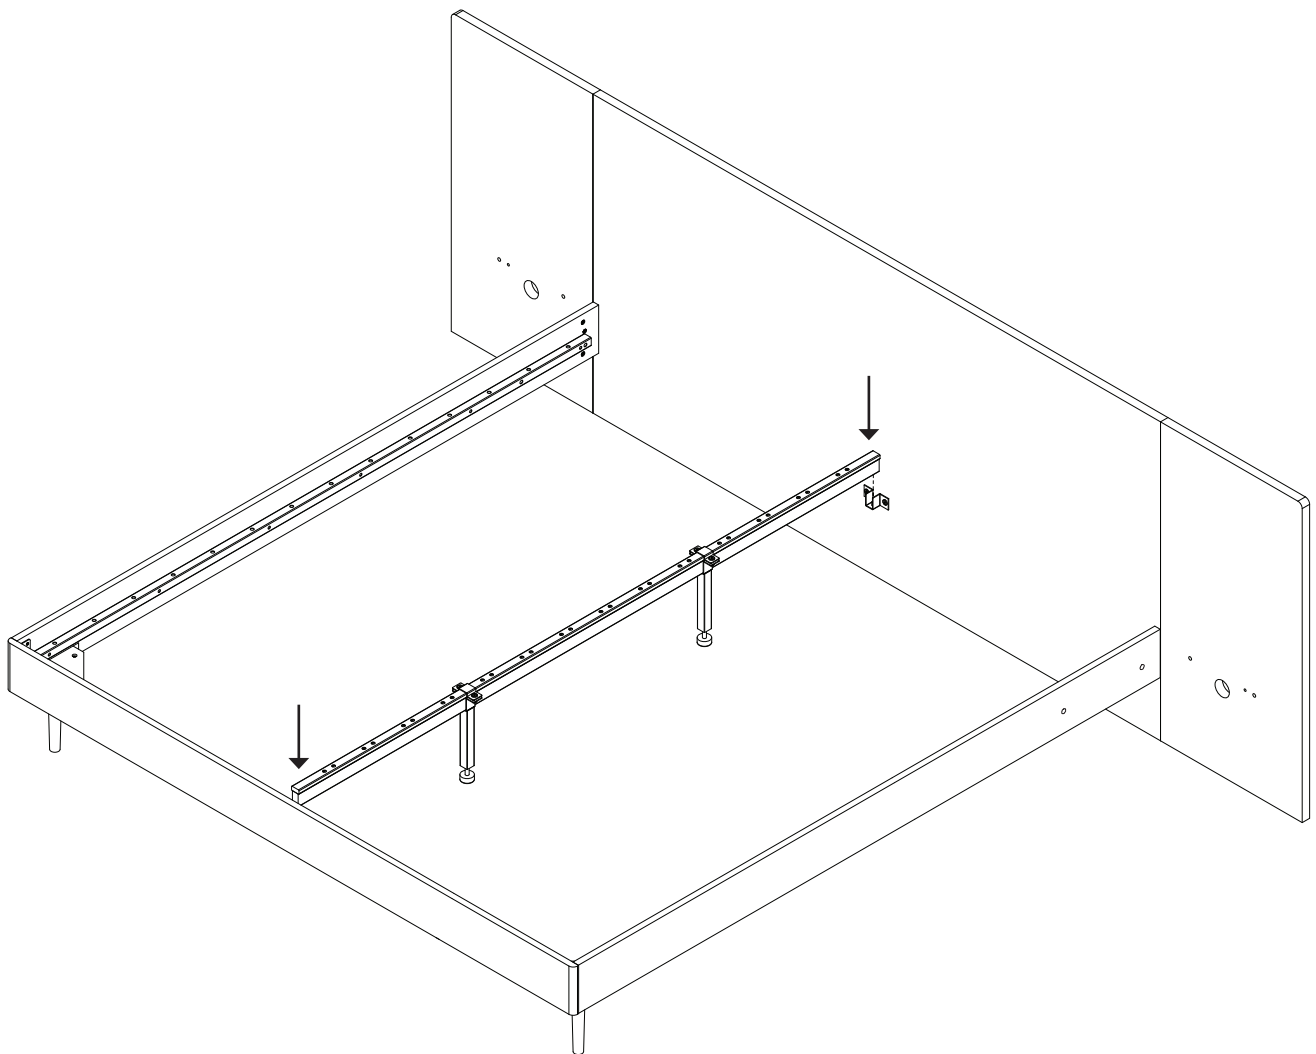


! Adjust levelers on floating center legs to allow for a 3-5mm clearance.

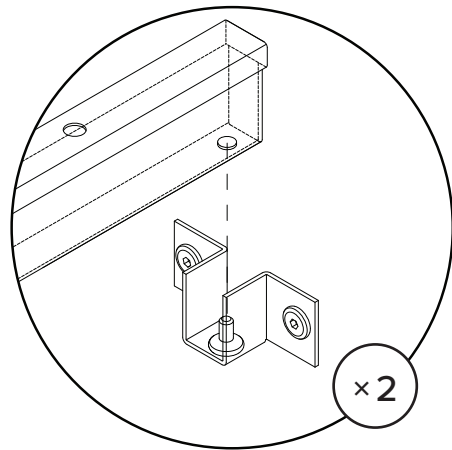


! Insert pins on center beam brackets into center beam when installing.




11

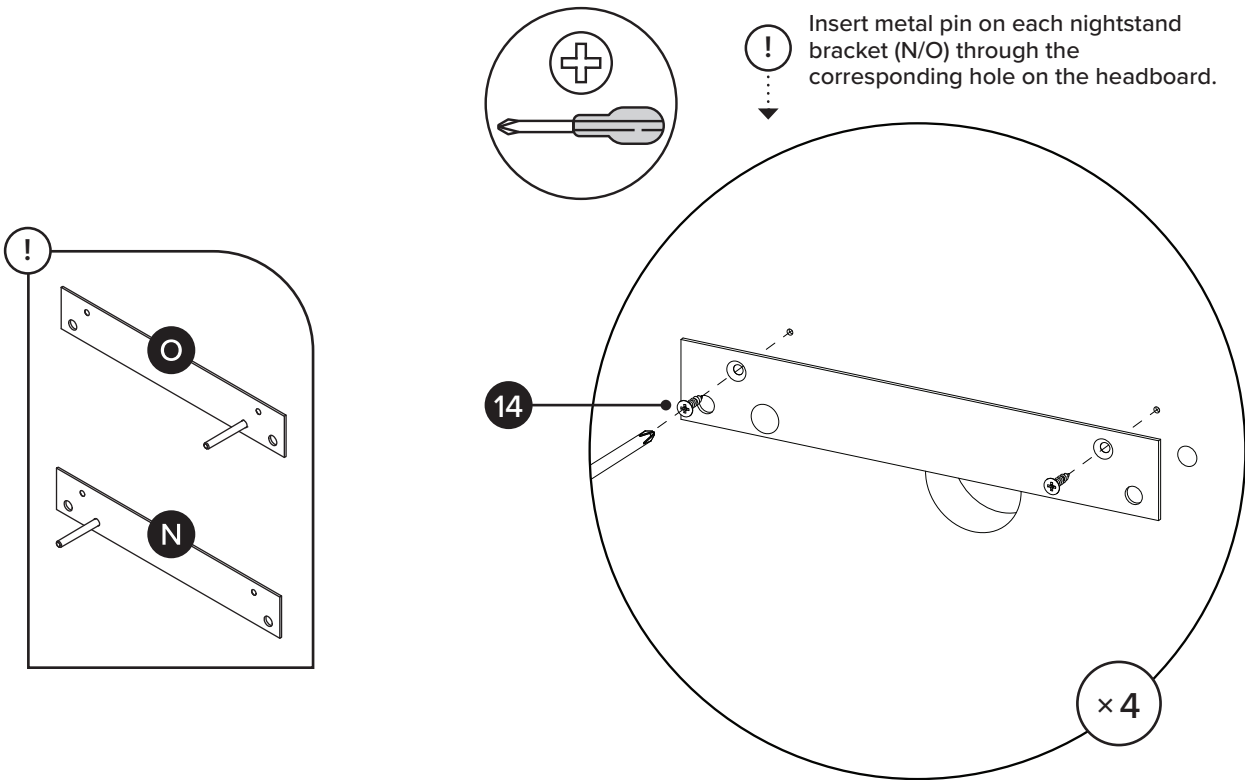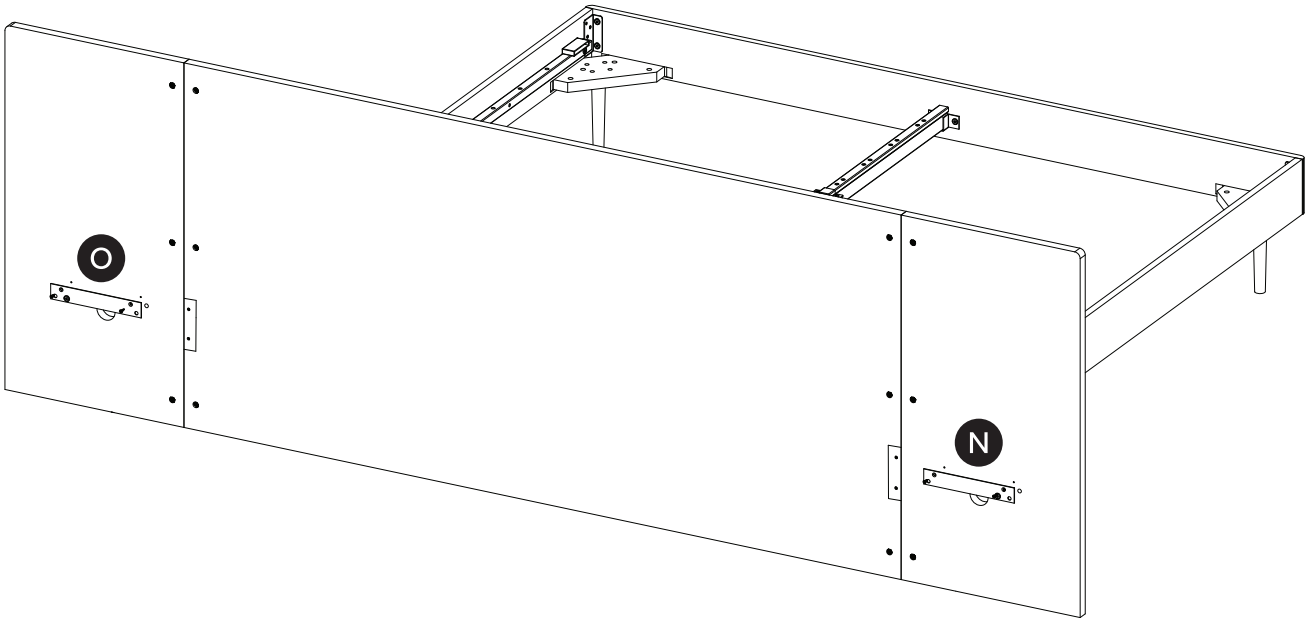



12

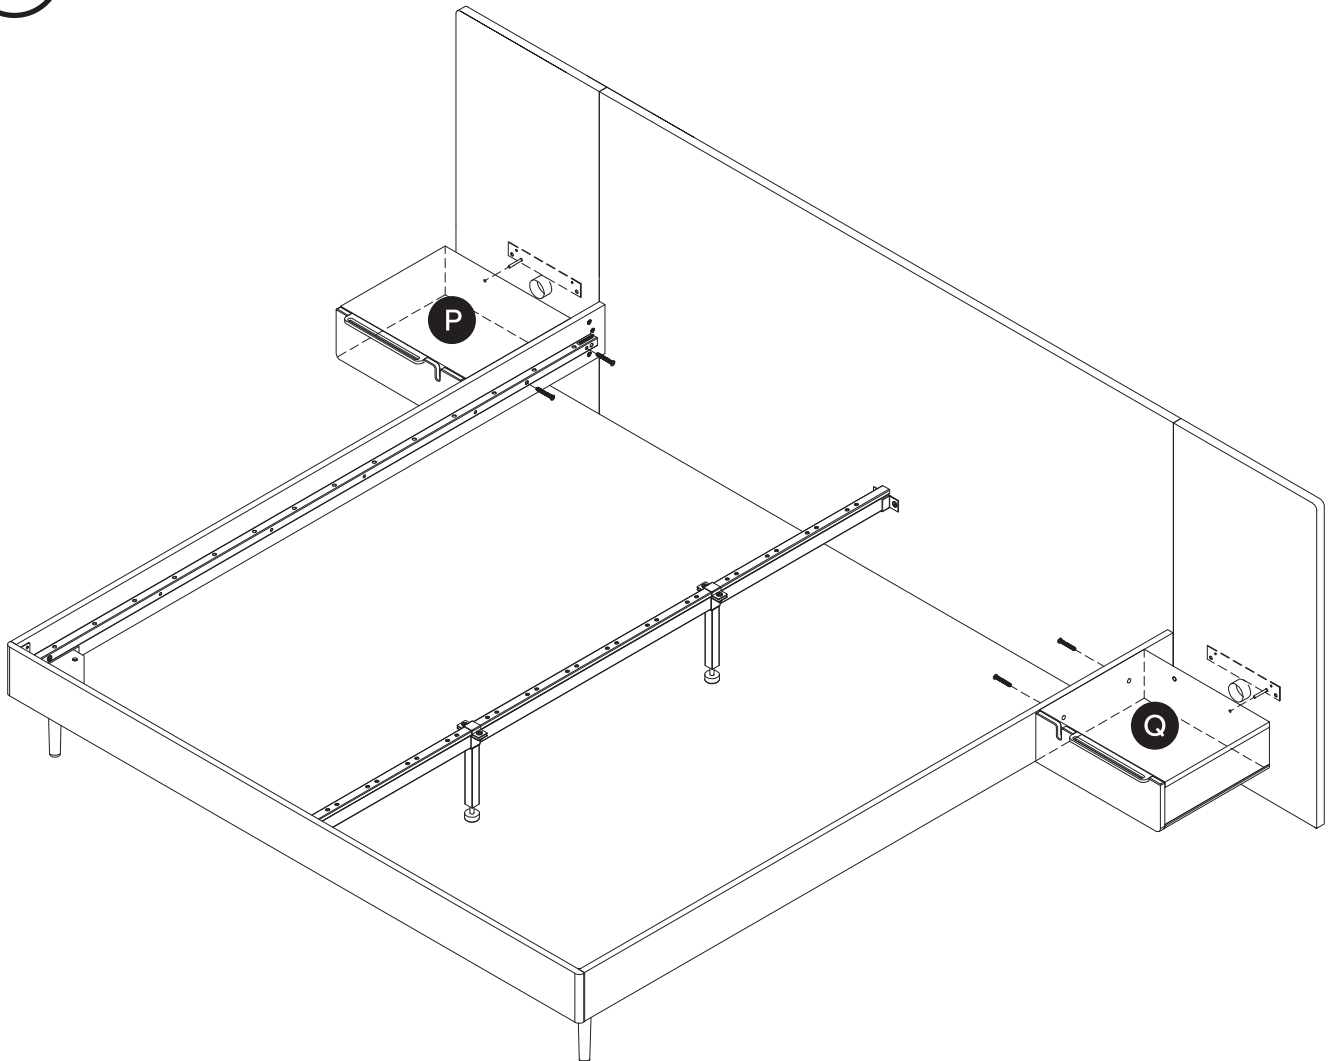


! Mount nightstands (P/Q) on pins before securing with bolts (15).

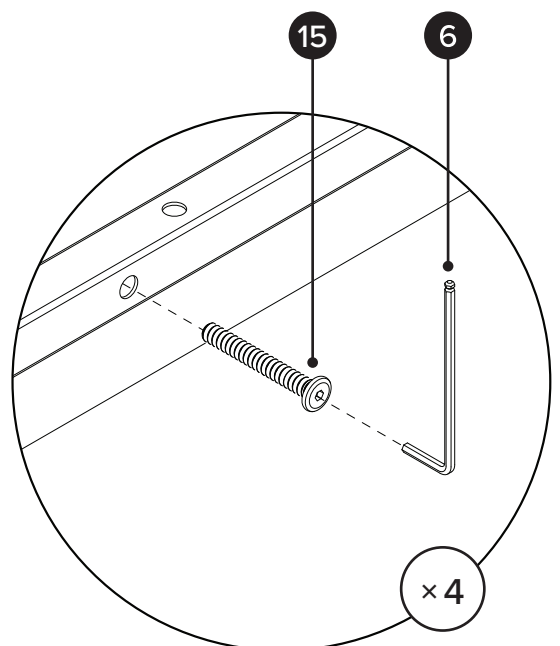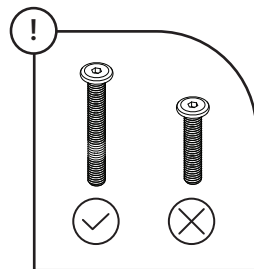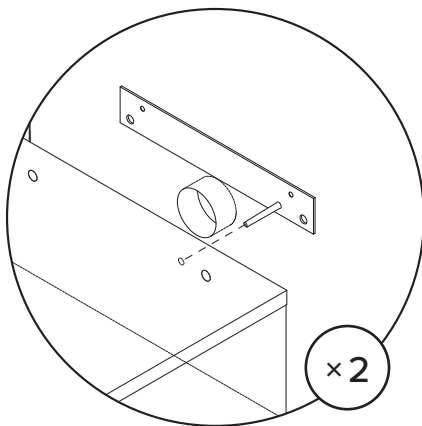


13

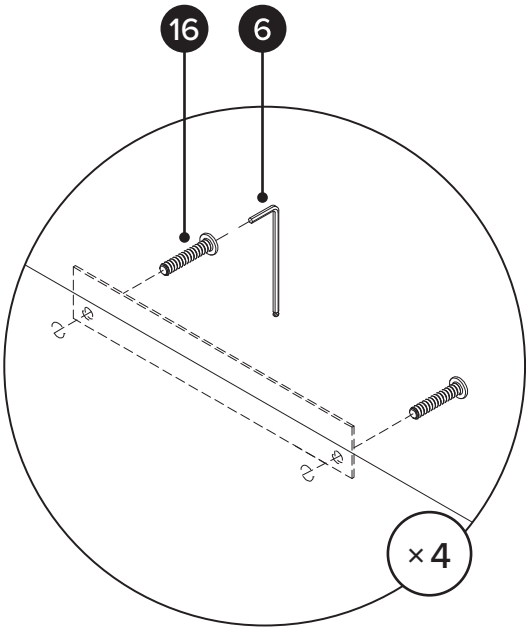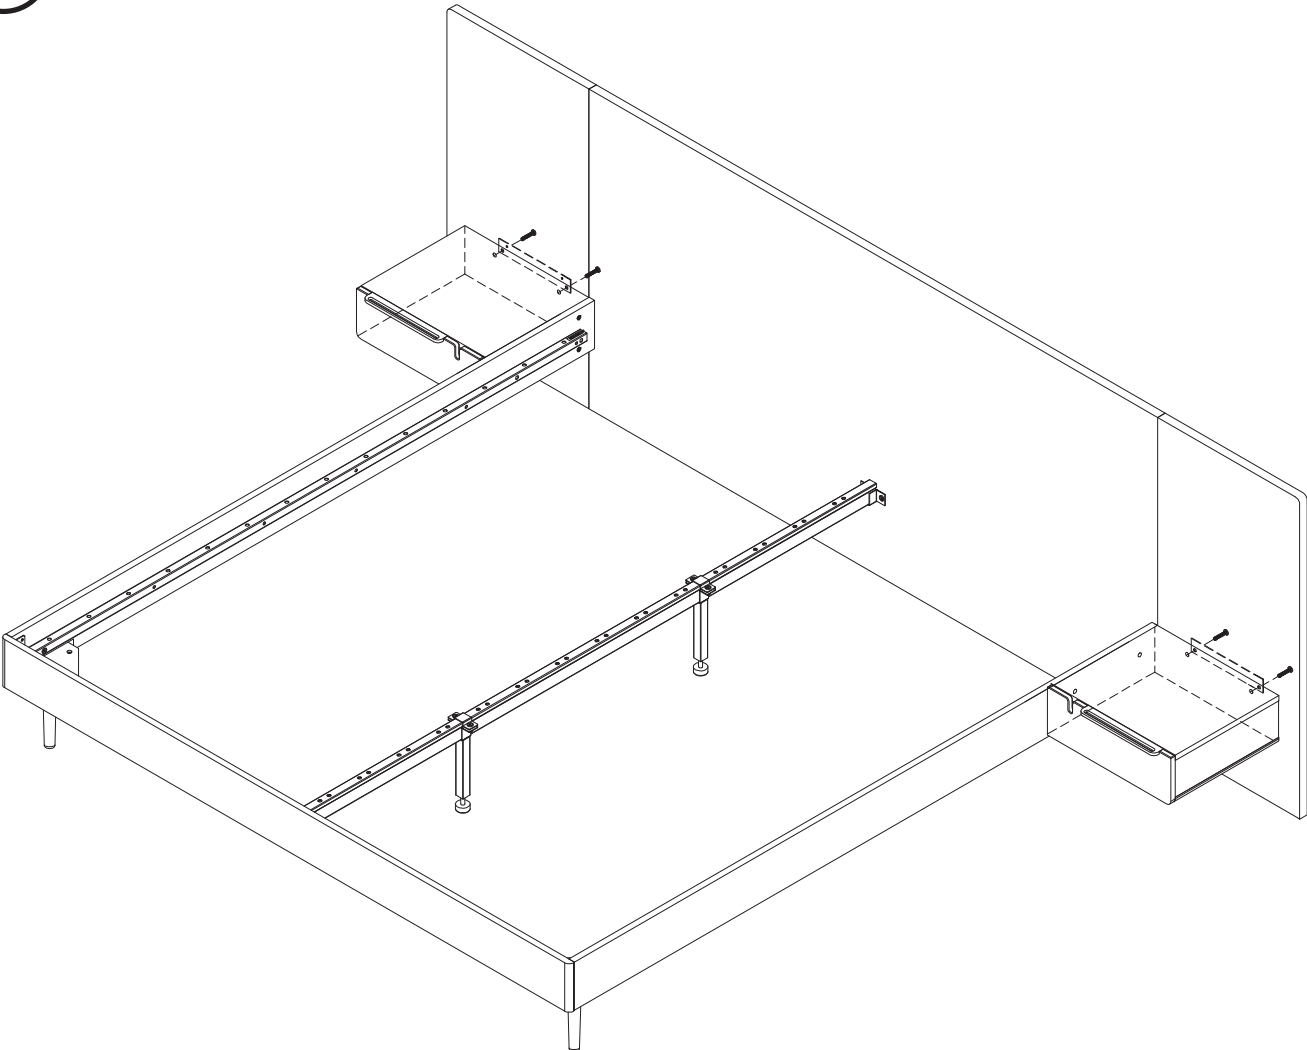

14A

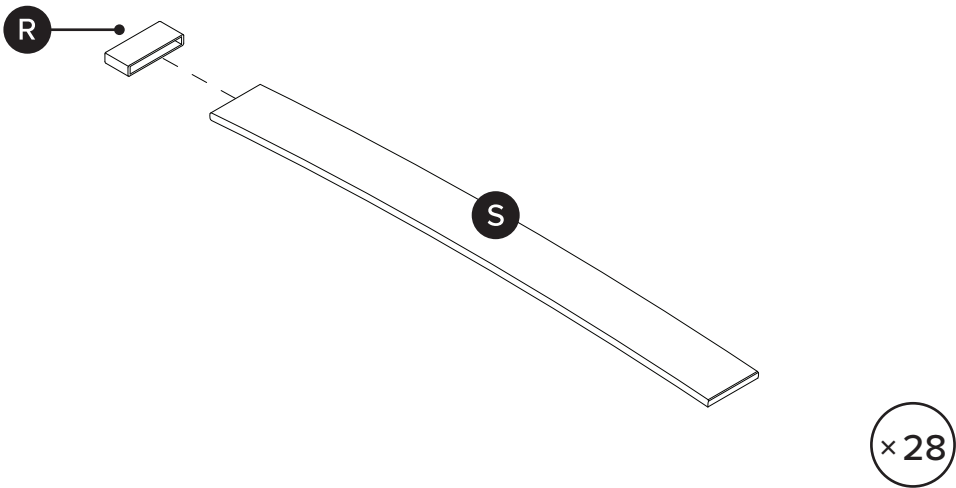

14B

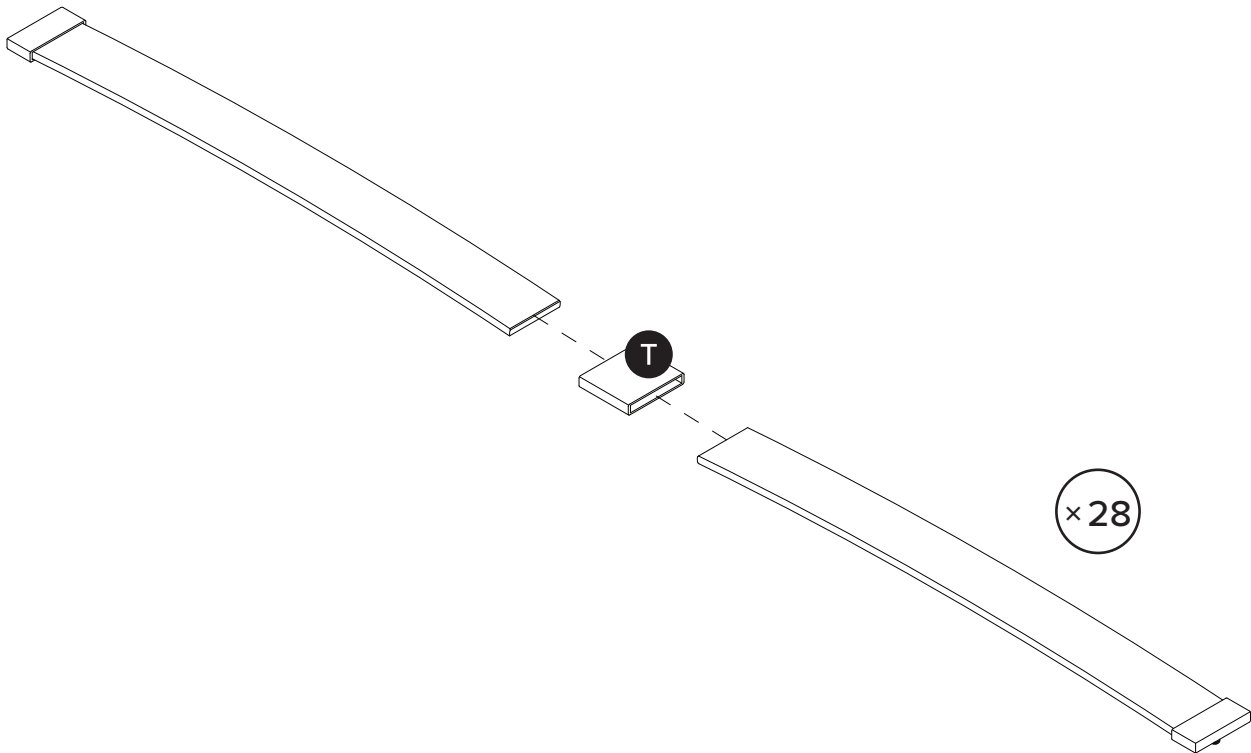

15

