


ARTICLE.

VERSION 1.1

Assembly Instructions

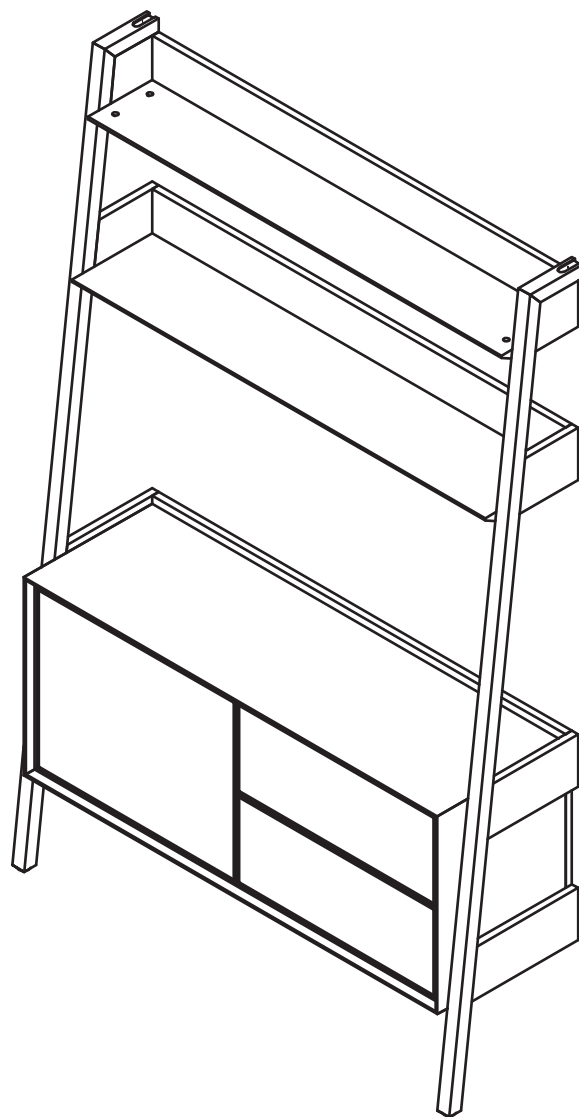

FANTOL


Storage Shelf

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME




OF PEOPLE

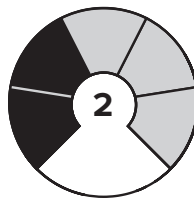






DIFFICULTY

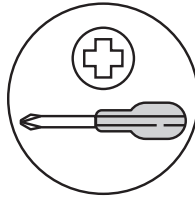






ANTI-TIP
Installation Required



REQUIRED TOOL


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEFT SIDE FRAME	1
B	RIGHT SIDE FRAME	1
C	TOP SHELF	1
D	SECOND SHELF	1
E	CABINET	1
F	INNER CABINET SHELF	1
G	CAM LOCK SCREW 	32
H	WOOD DOWEL 	20
I	CAM LOCK NUT 	32
J	ALLEN KEY 	1
K	SHELF PIN 	4

Hardware (M/N) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



ANTI-TIP KIT INVENTORY		
ID	DESCRIPTION	QTY
L	BRACKET 	2
M	M8 × 51MM PLUG 	2
N	M6 × 70MM SCREW 	2
O	M4 × 20MM SCREW 	2
P	WASHER 	2




ASSEMBLED UNIT

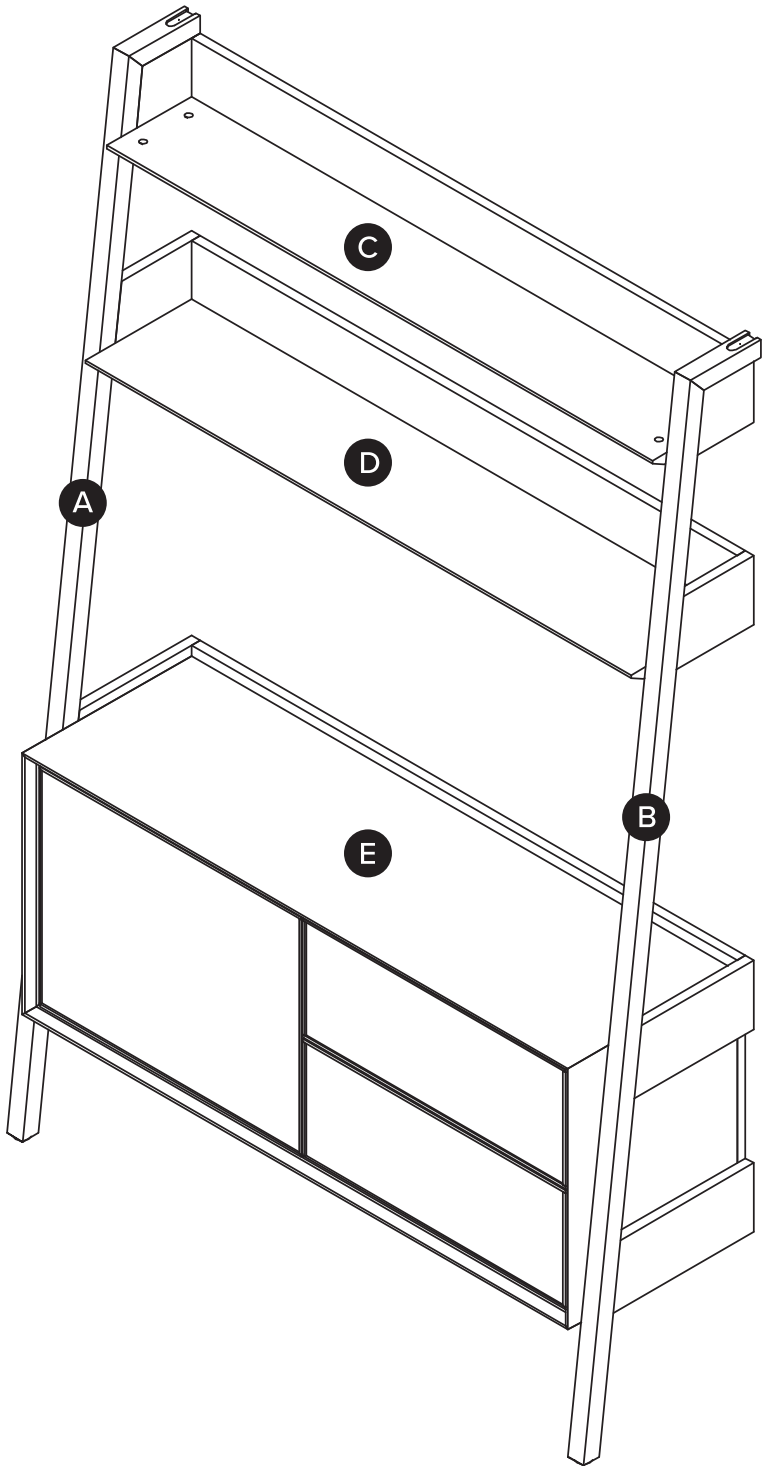

1

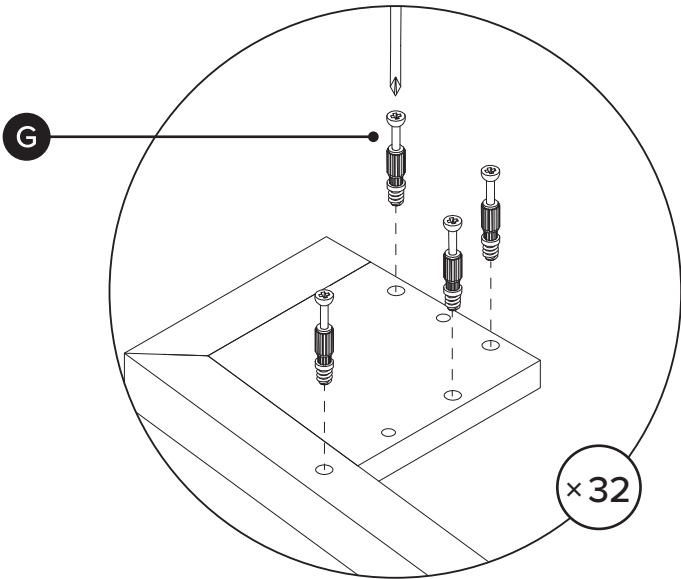
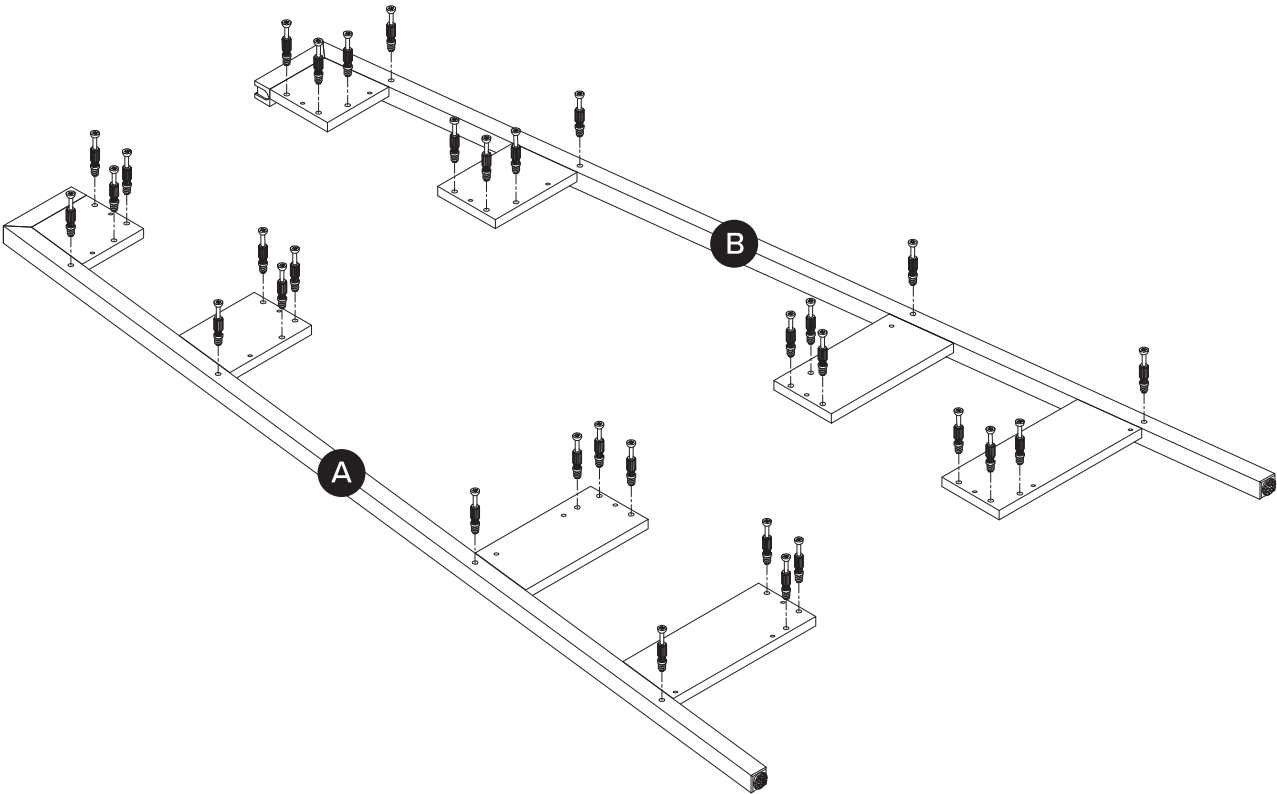


2

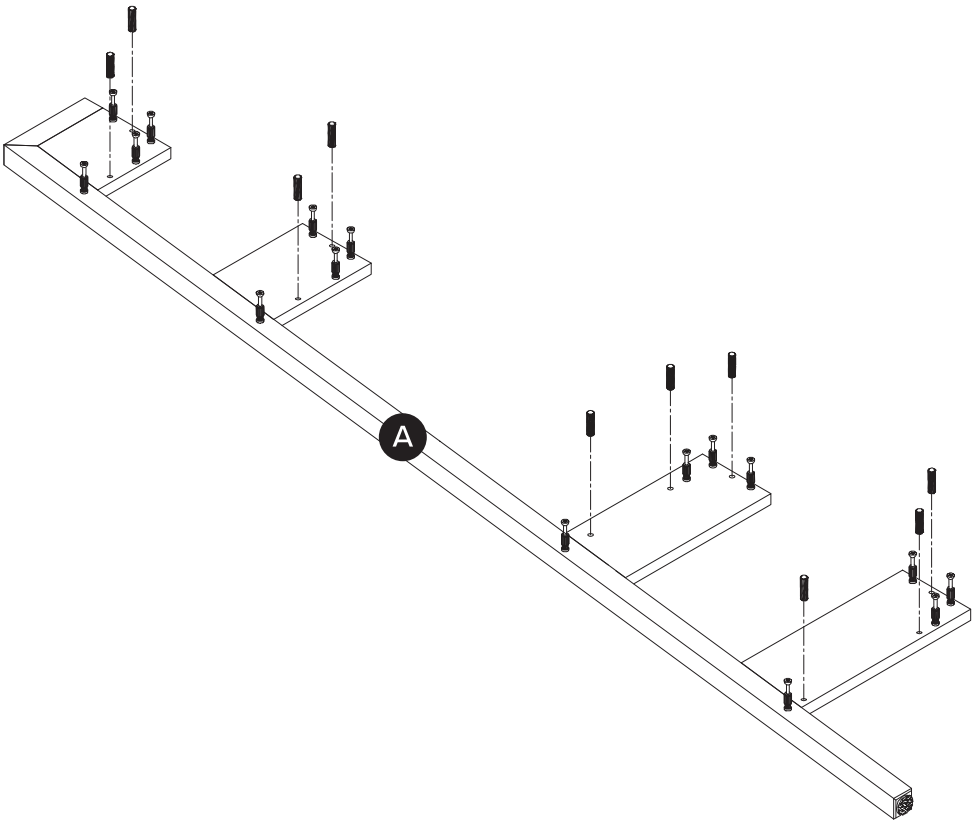


! Insert 2 wood dowels for top 2 shelves.

! Insert 3 wood dowels for cabinet.

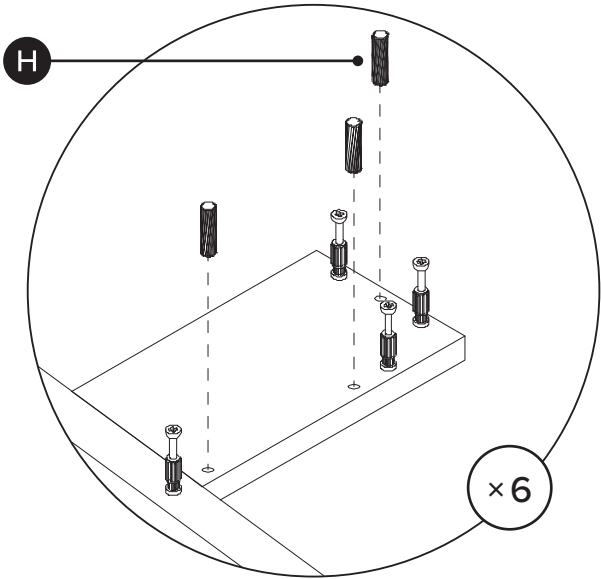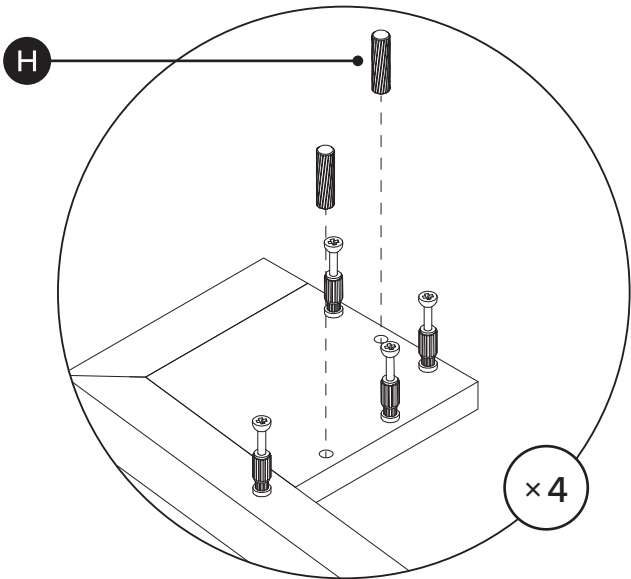




3

- ! Remove drawers from cabinet (E) before assembling with side frames.

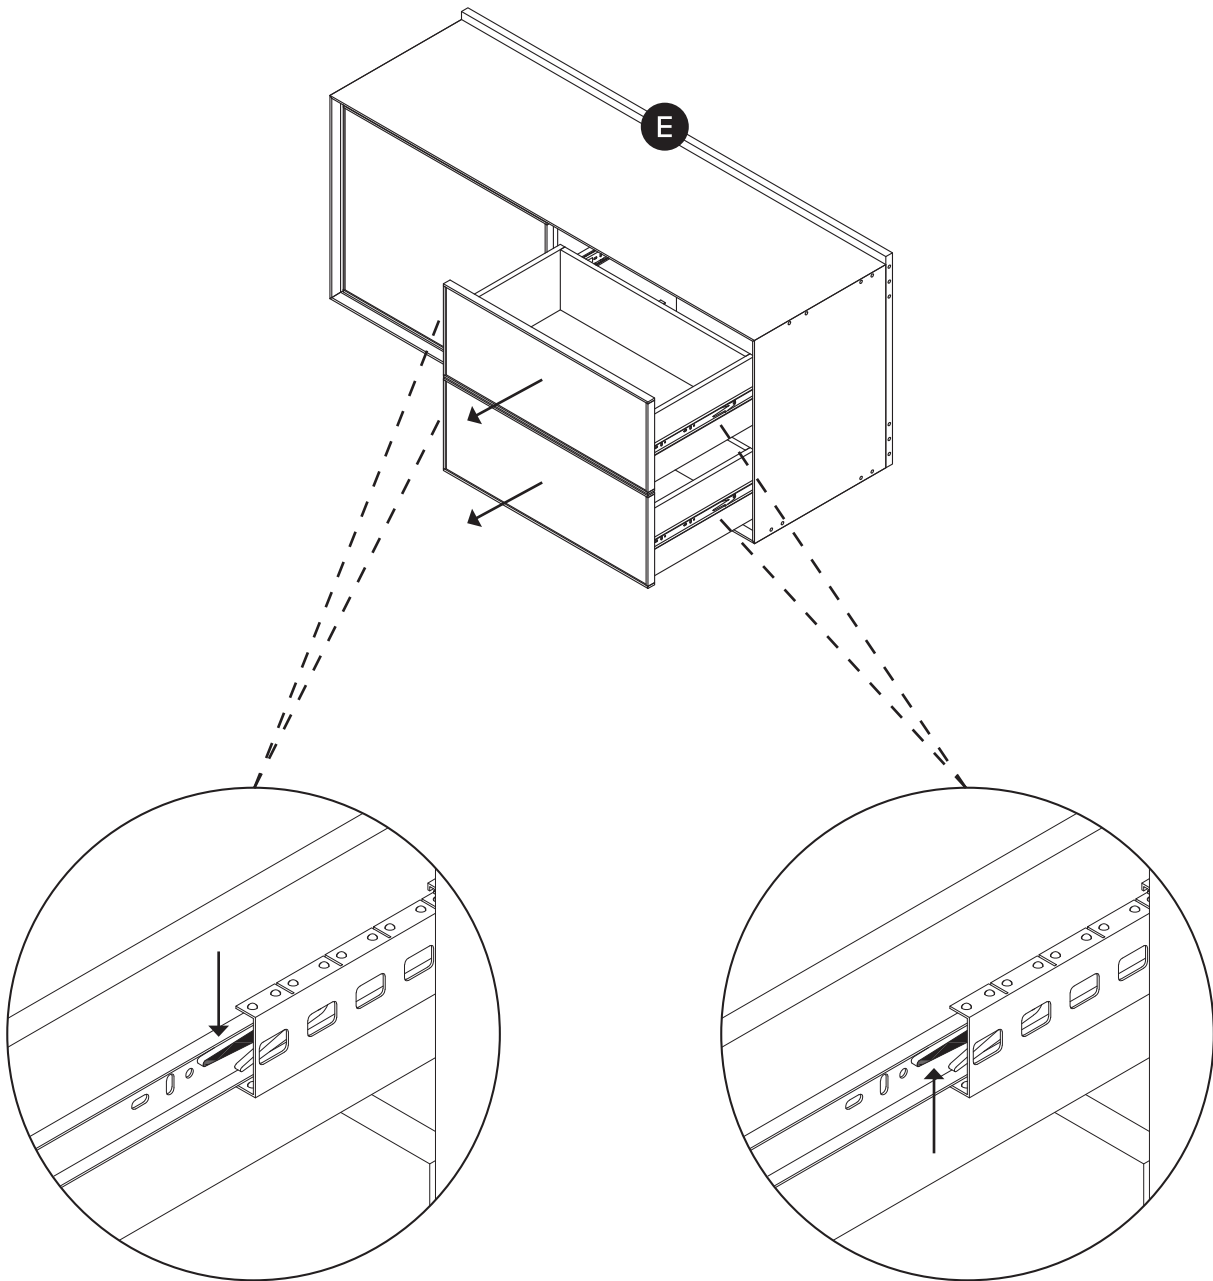


- ! Press lever down on left side of drawer and up on right side of drawer at the same time to release and lift out.

4

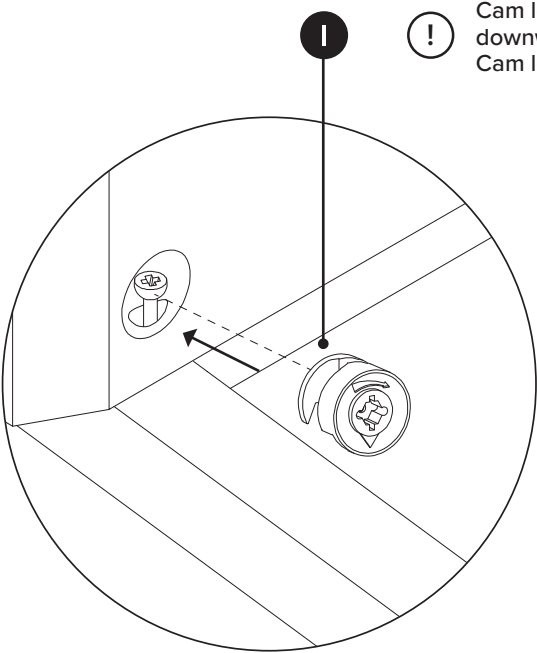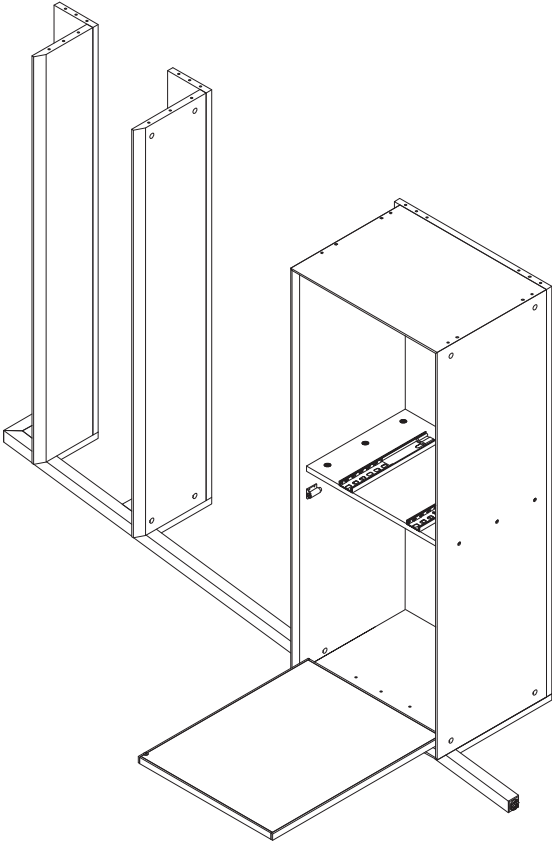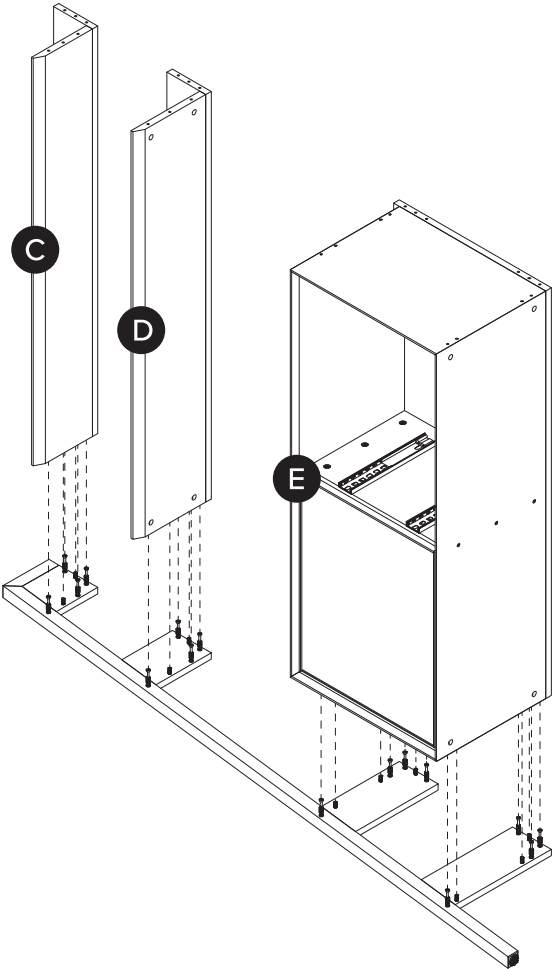


! Cam lock nut starting position: arrow pointing downwards, towards screw head.
Cam lock nut end position: arrow facing upwards.


→
× 16

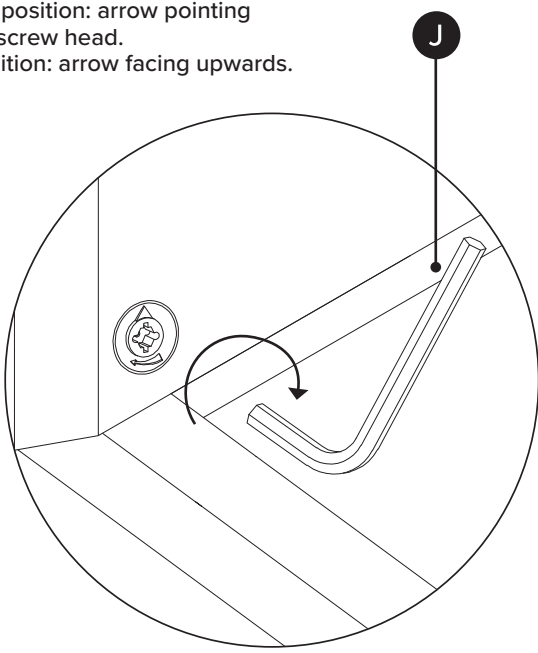


5

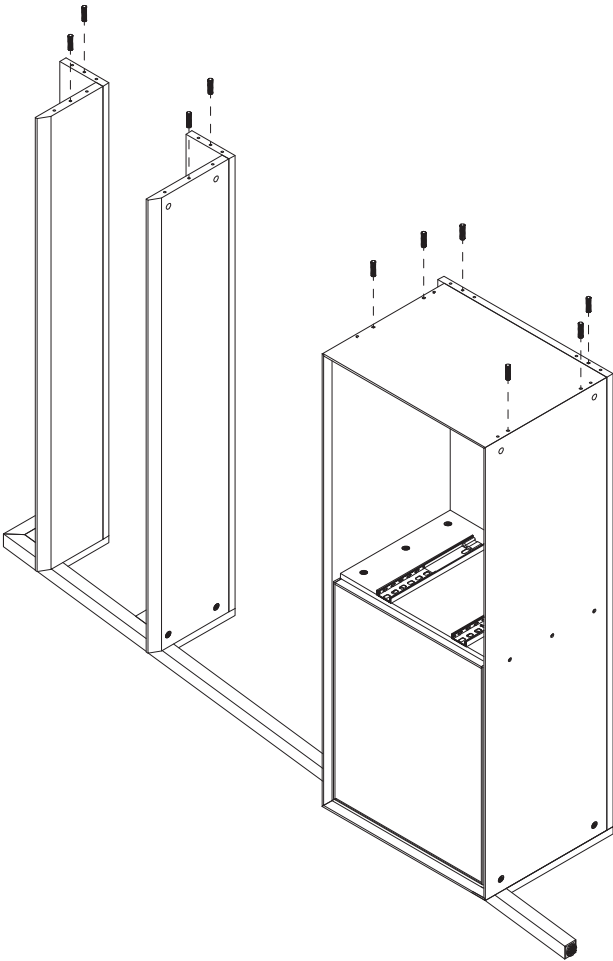


Insert 2 wood dowels into
top 2 shelves (C/D), and
6 into cabinet (E).

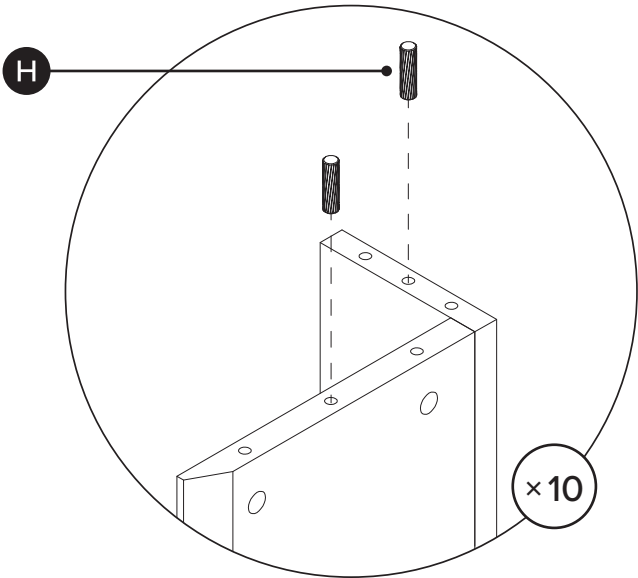


6

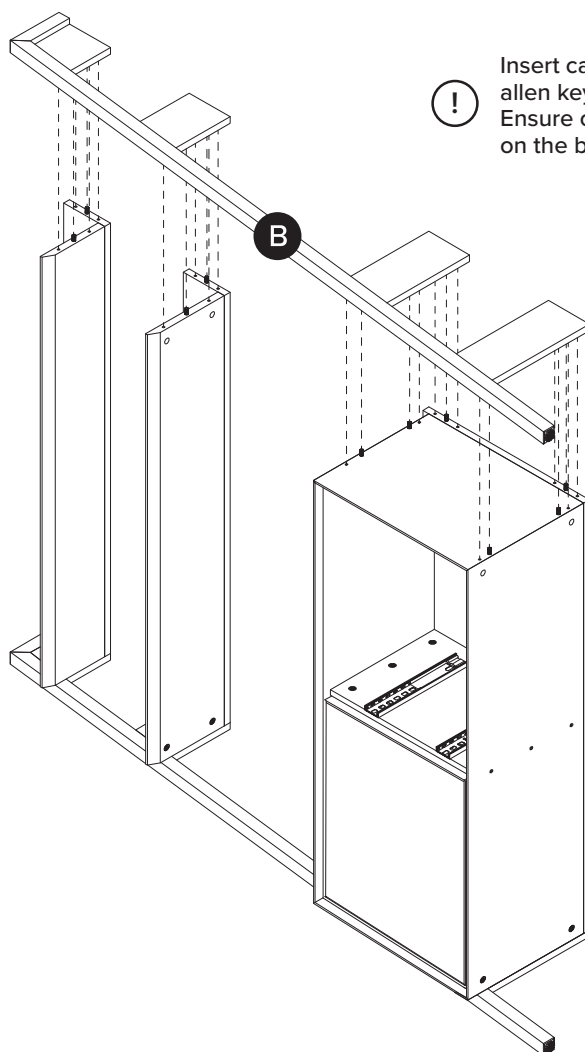


Insert cam lock nuts (I) and turn with allen key (J) to secure.
Ensure cam lock nuts are also secured on the backs of each shelf.

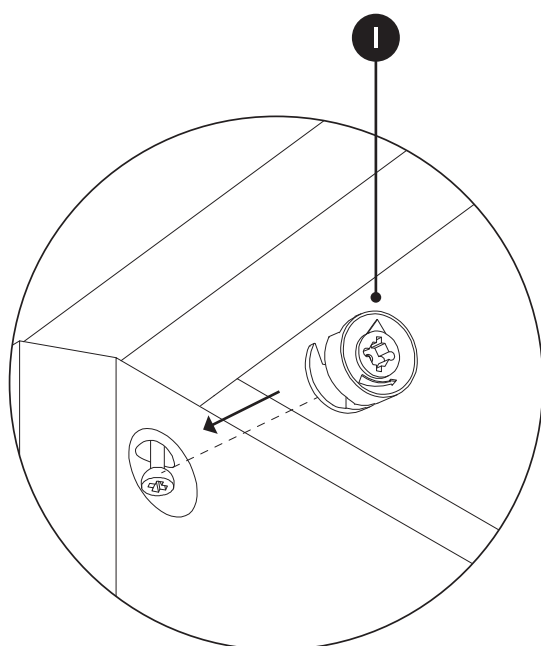

× 16

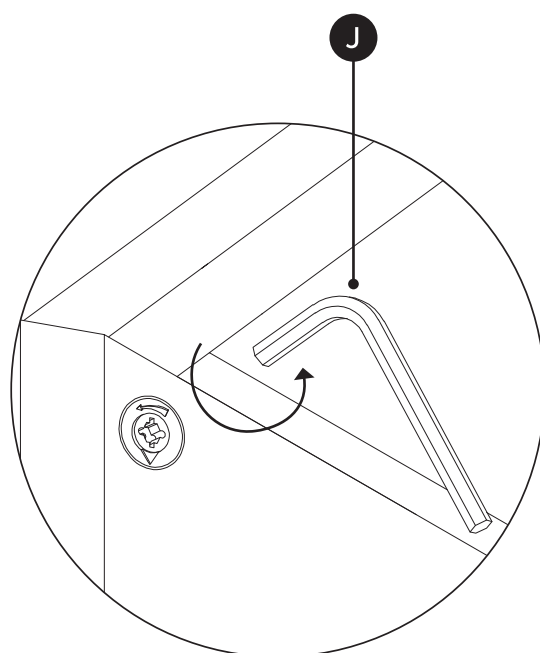


7

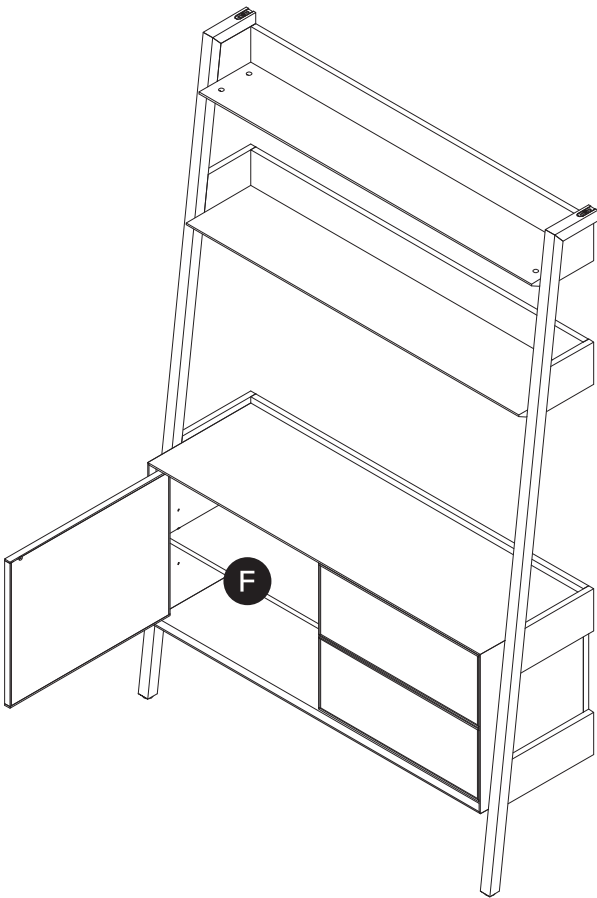


K



Insert shelf pins (K) at desired height and secure shelf (F) on pins.

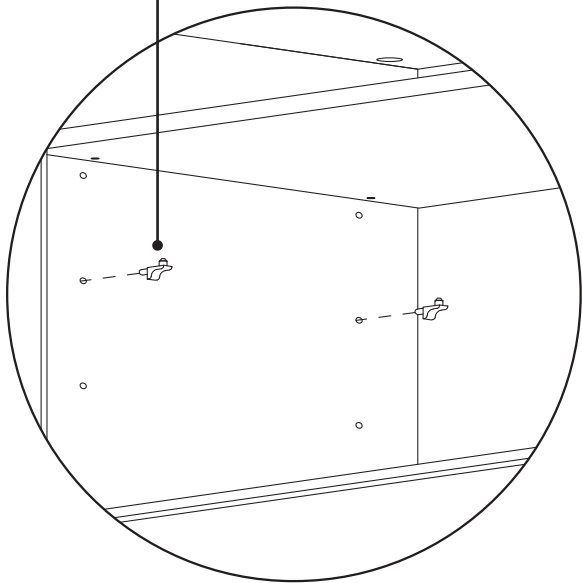

× 4

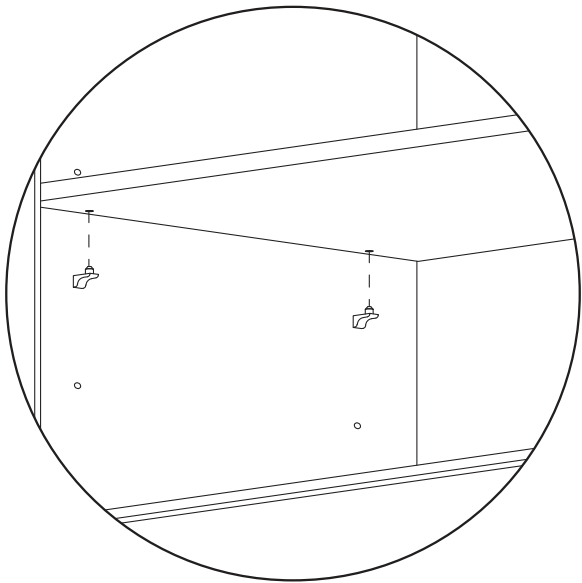




ANTI-TIP RESTRAINT INSTALLATION

WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

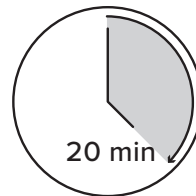


TIME

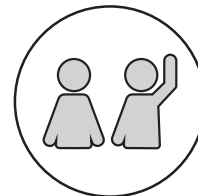


OF PEOPLE

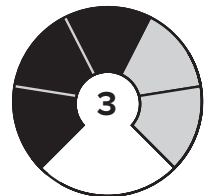

DIFFICULTY

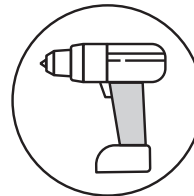


REQUIRED TOOL
8MM / 5/16" DRILL BIT

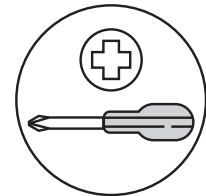


REQUIRED TOOL

1

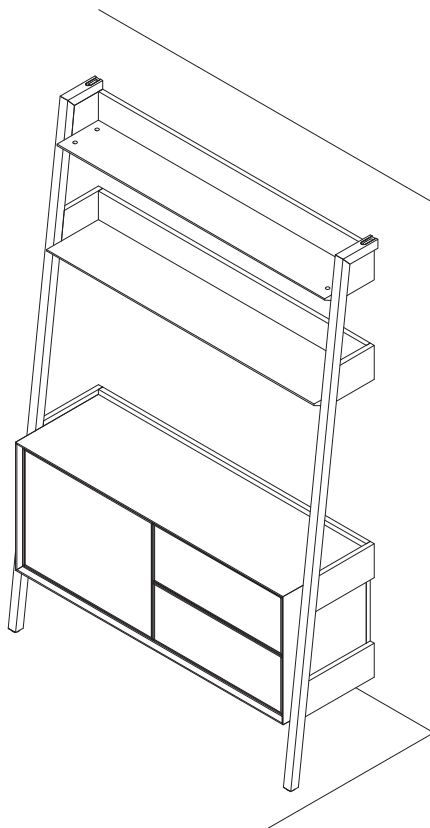


Place unit in desired location and mark on wall where holes should be drilled.

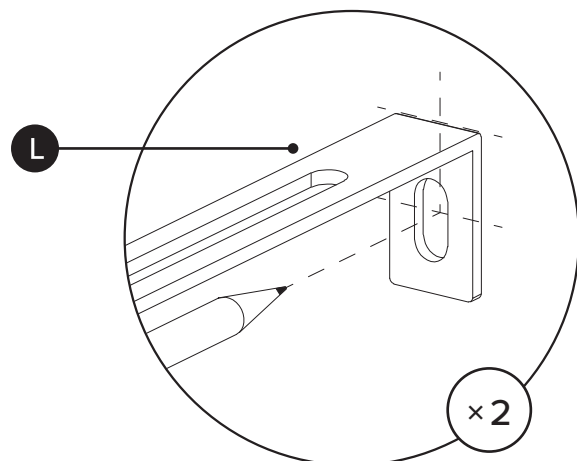


2

! Hardware (M/N) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

Drill holes into drywall, insert wall plugs (M), and attach unit to wall with screws (N).

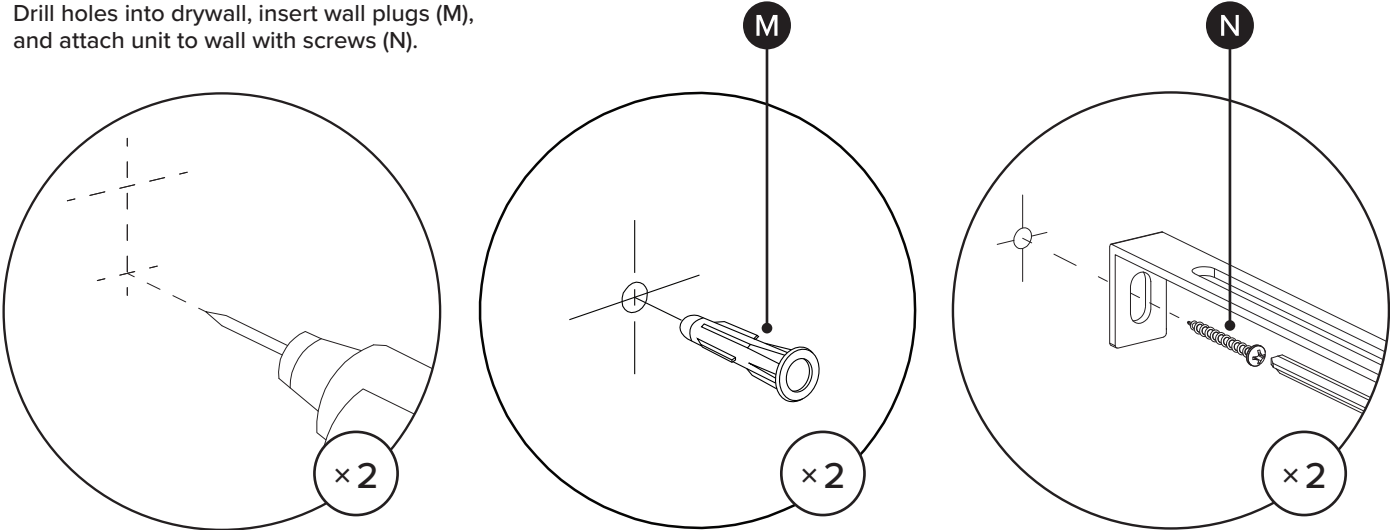

3

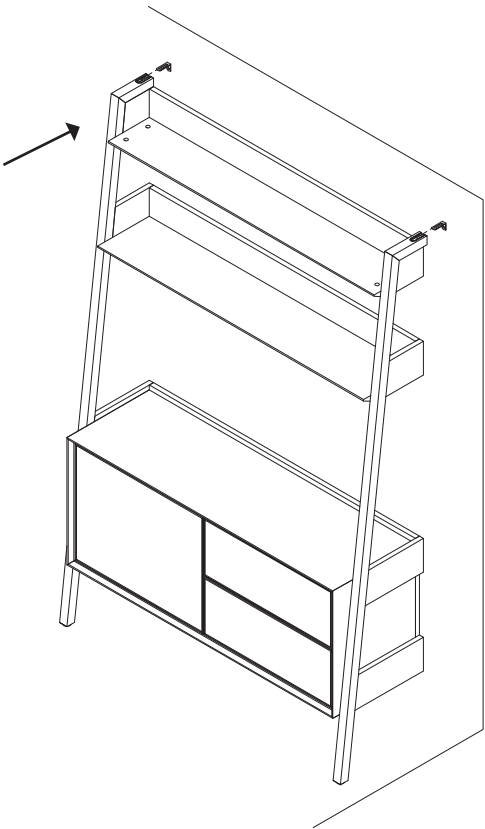

Move shelf up against wall and attach brackets to top shelf from above.

