


ARTICLE.

VERSION 1.4

Assembly Instructions

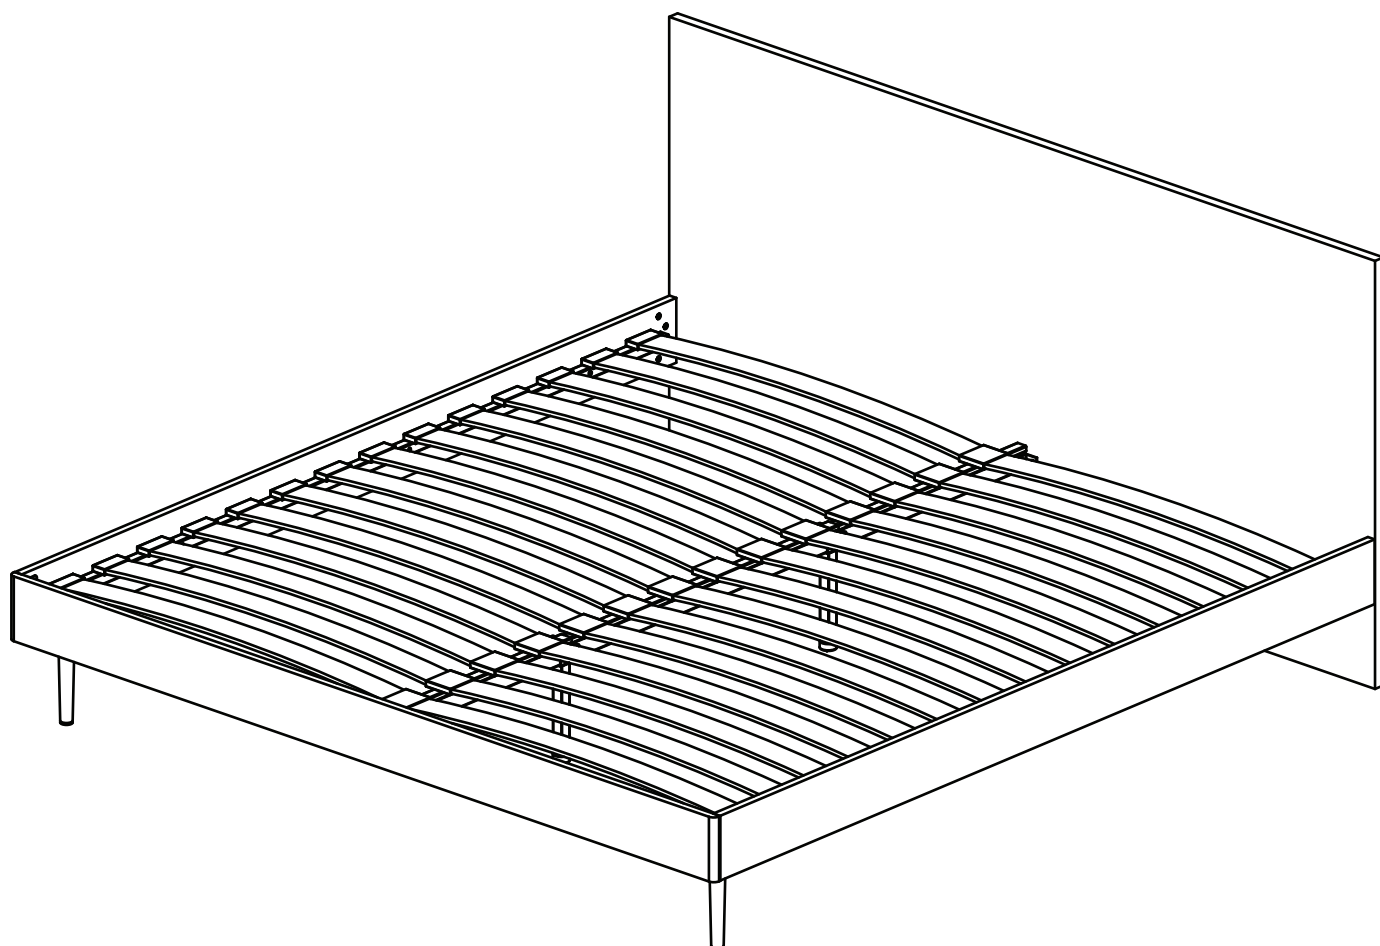

NERA


Bed

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME




DIFFICULTY






OF PEOPLE

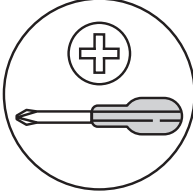

REQUIRED TOOL
Phillips screwdriver


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	FOOTBOARD	1
C	CENTER BEAM BRACKET 	2
D	LEFT SIDE RAIL	1
E	RIGHT SIDE RAIL	1
F	LEFT CORNER PIECE	1
G	RIGHT CORNER PIECE	1

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
H	LEG 	2
I	CENTER BEAM	1
J	CENTER LEG BRACKET (PRE-INSTALLED)	2
K	FLOATING CENTER LEG	2
L	SLAT CLIP 	28
M	SLAT	28
N	SLAT CENTER BRACKET 	14






!




Structural integrity is warranted only if all fasteners are properly installed & tightened, and the bed is moved only per instructions.

!





DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING

HARDWARE / TOOLS INVENTORY			
ID	DESCRIPTION		QTY
O	TEFLON PAD		2
P	ALLEN KEY		1
Q	M6 × 12MM BOLT		4
R	LONG COMPRESSION FITTING ANCHOR		4
S	SHORT COMPRESSION FITTING ANCHOR		10


HARDWARE / TOOLS INVENTORY CONT.			
ID	DESCRIPTION		QTY
T	M8 × 8MM SCREW		14
U	M6 × 20MM BOLT (4 PRE-INSTALLED ON CENTER LEGS)		12
V	M8 × 15MM BOLT		4

1A

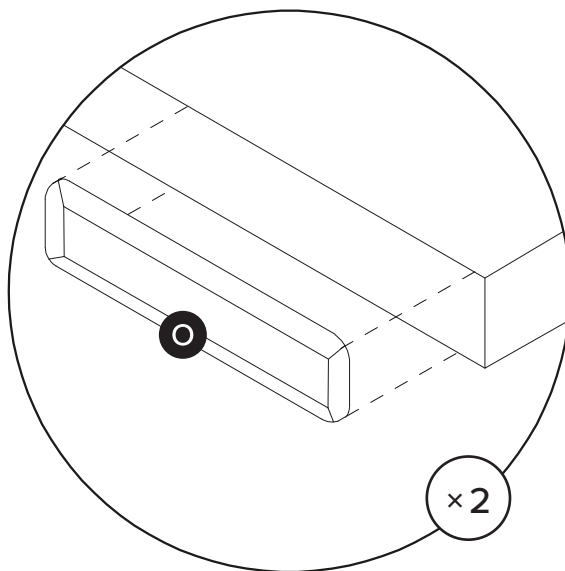
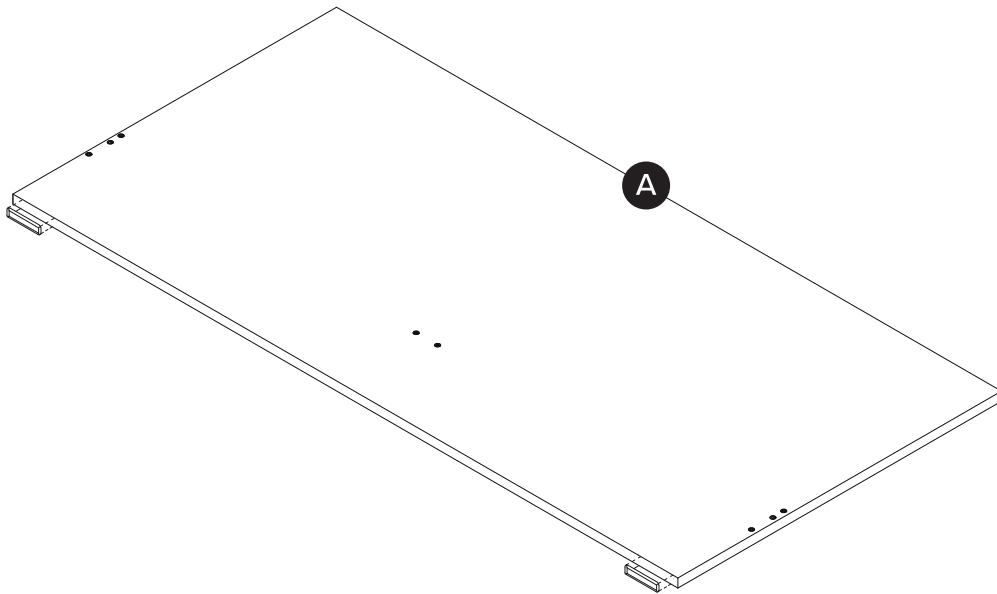


First remove plastic backing from teflon pads (O). Stick on bottom side of headboard (A) approx. 1/4" in from the edges.


1B

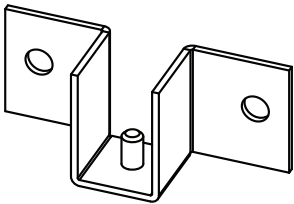



! Ensure center beam brackets (C) are level when installed.

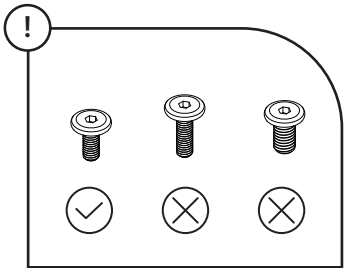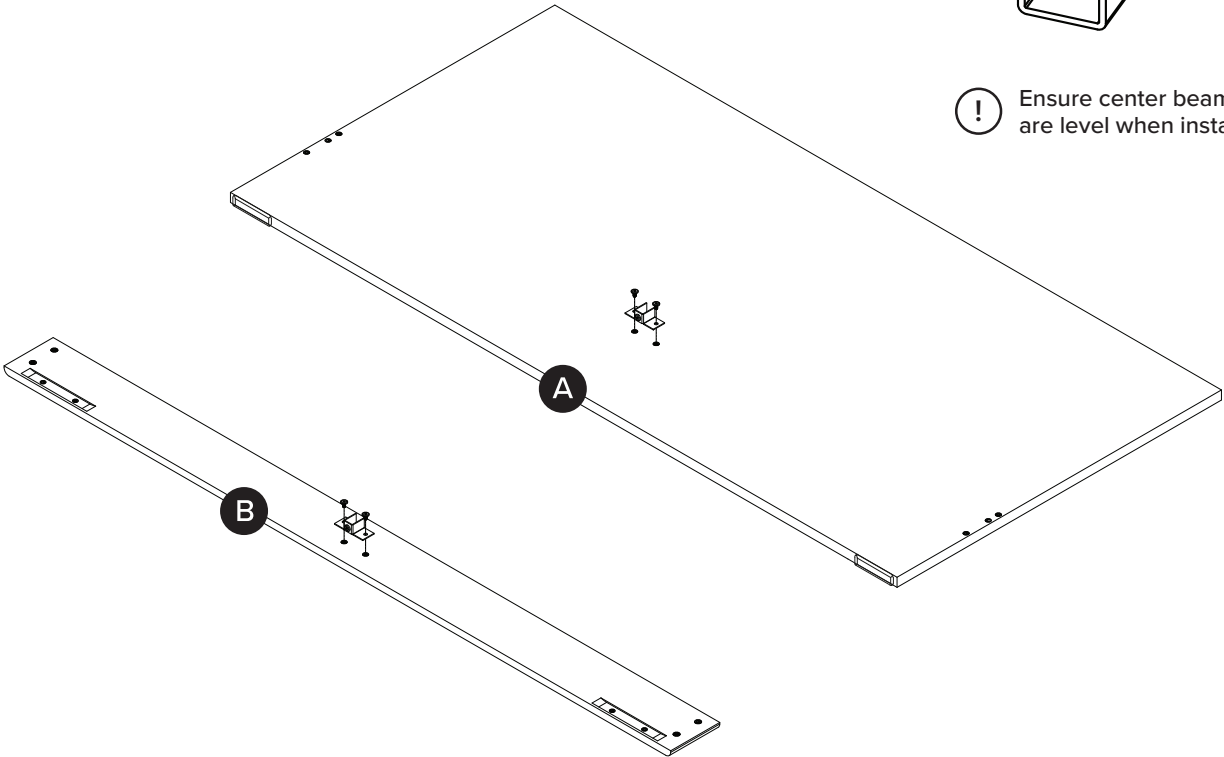



! Use the 4 shortest bolts (Q) provided.

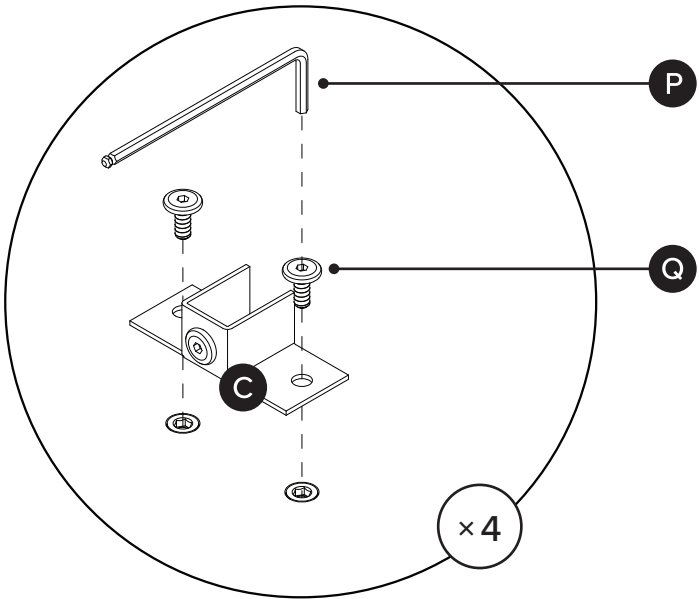



2

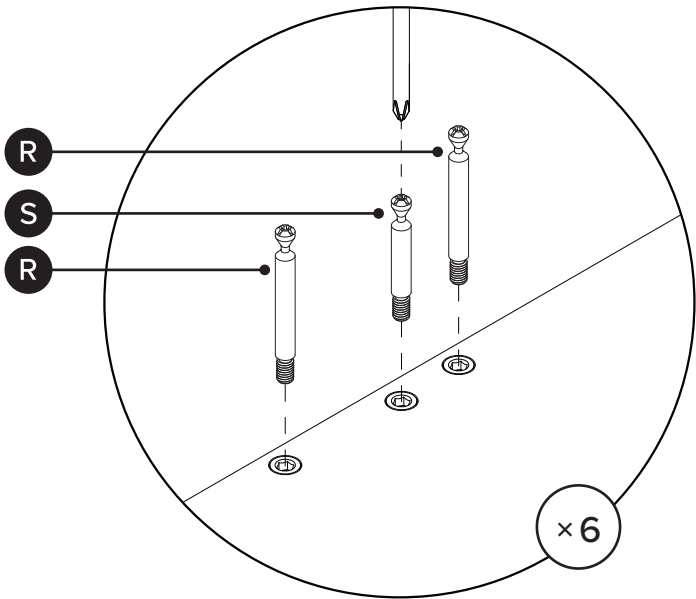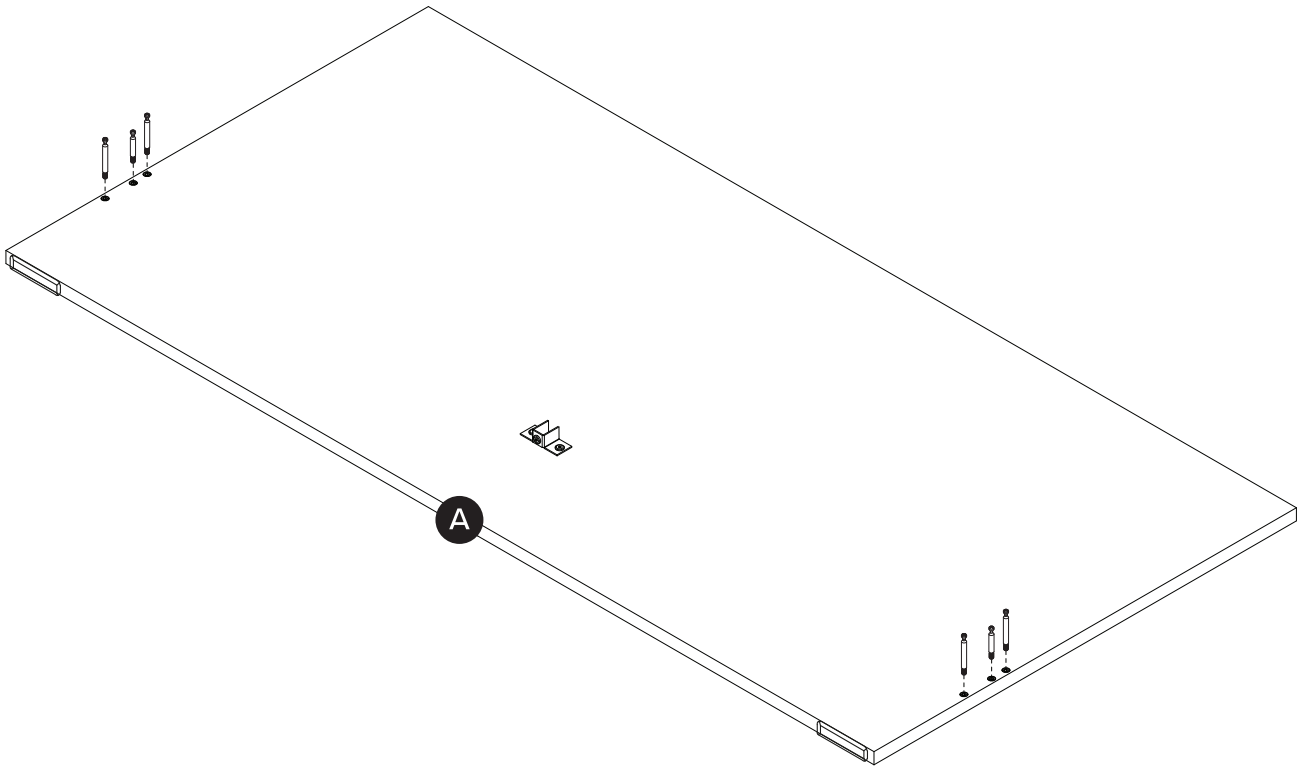

3

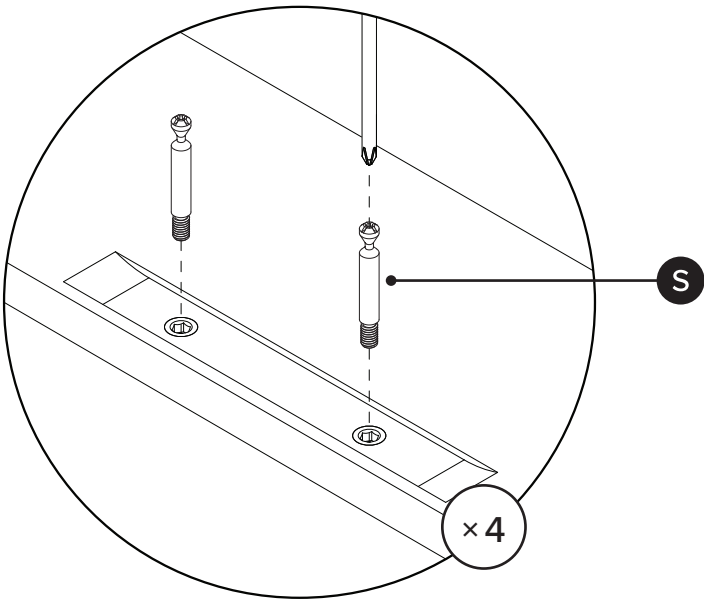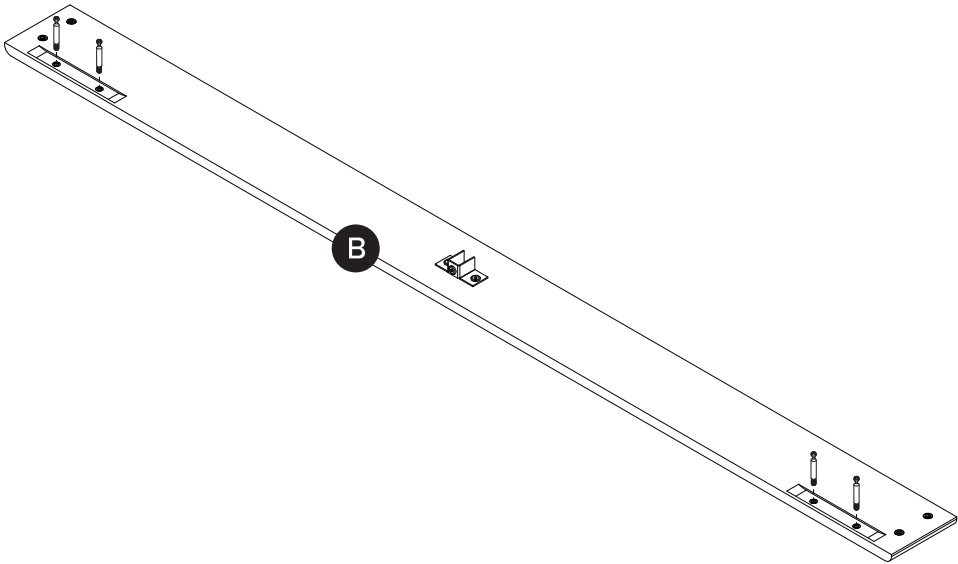


4

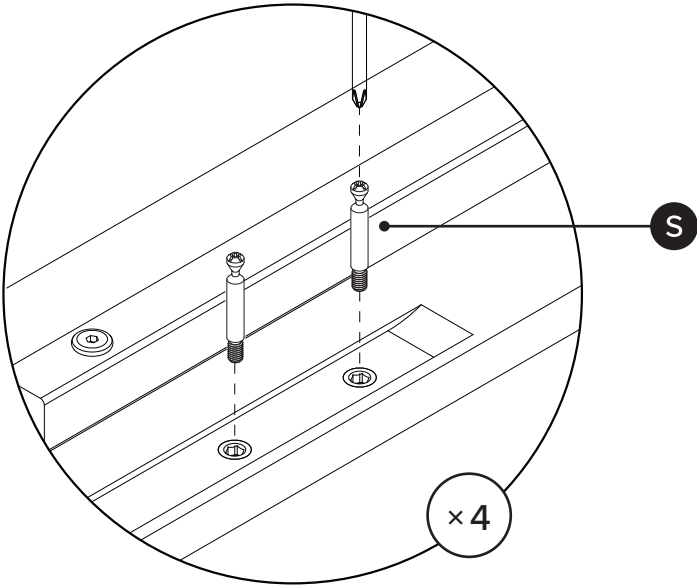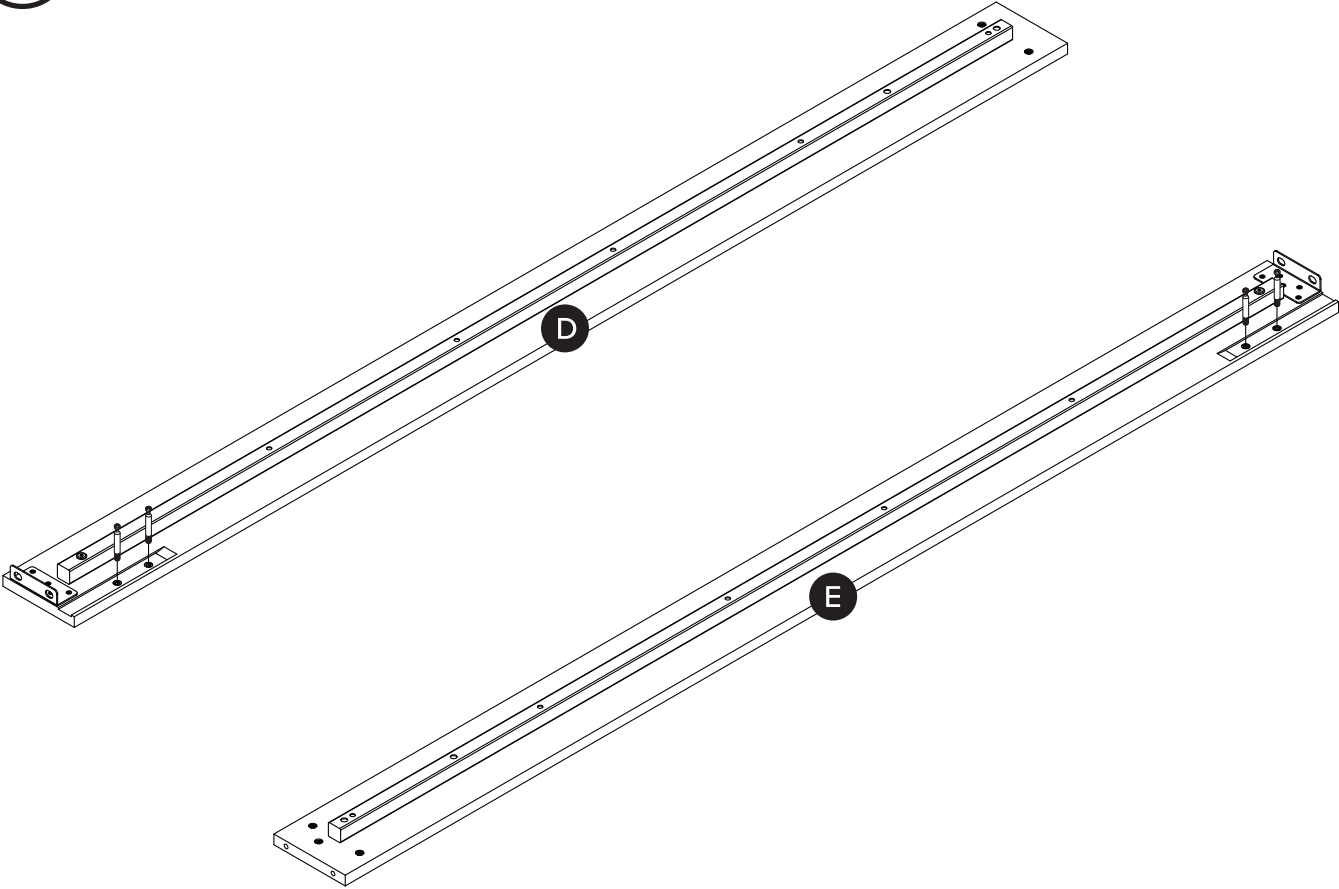


5



! Note placement of holes on each corner piece, left vs. right.

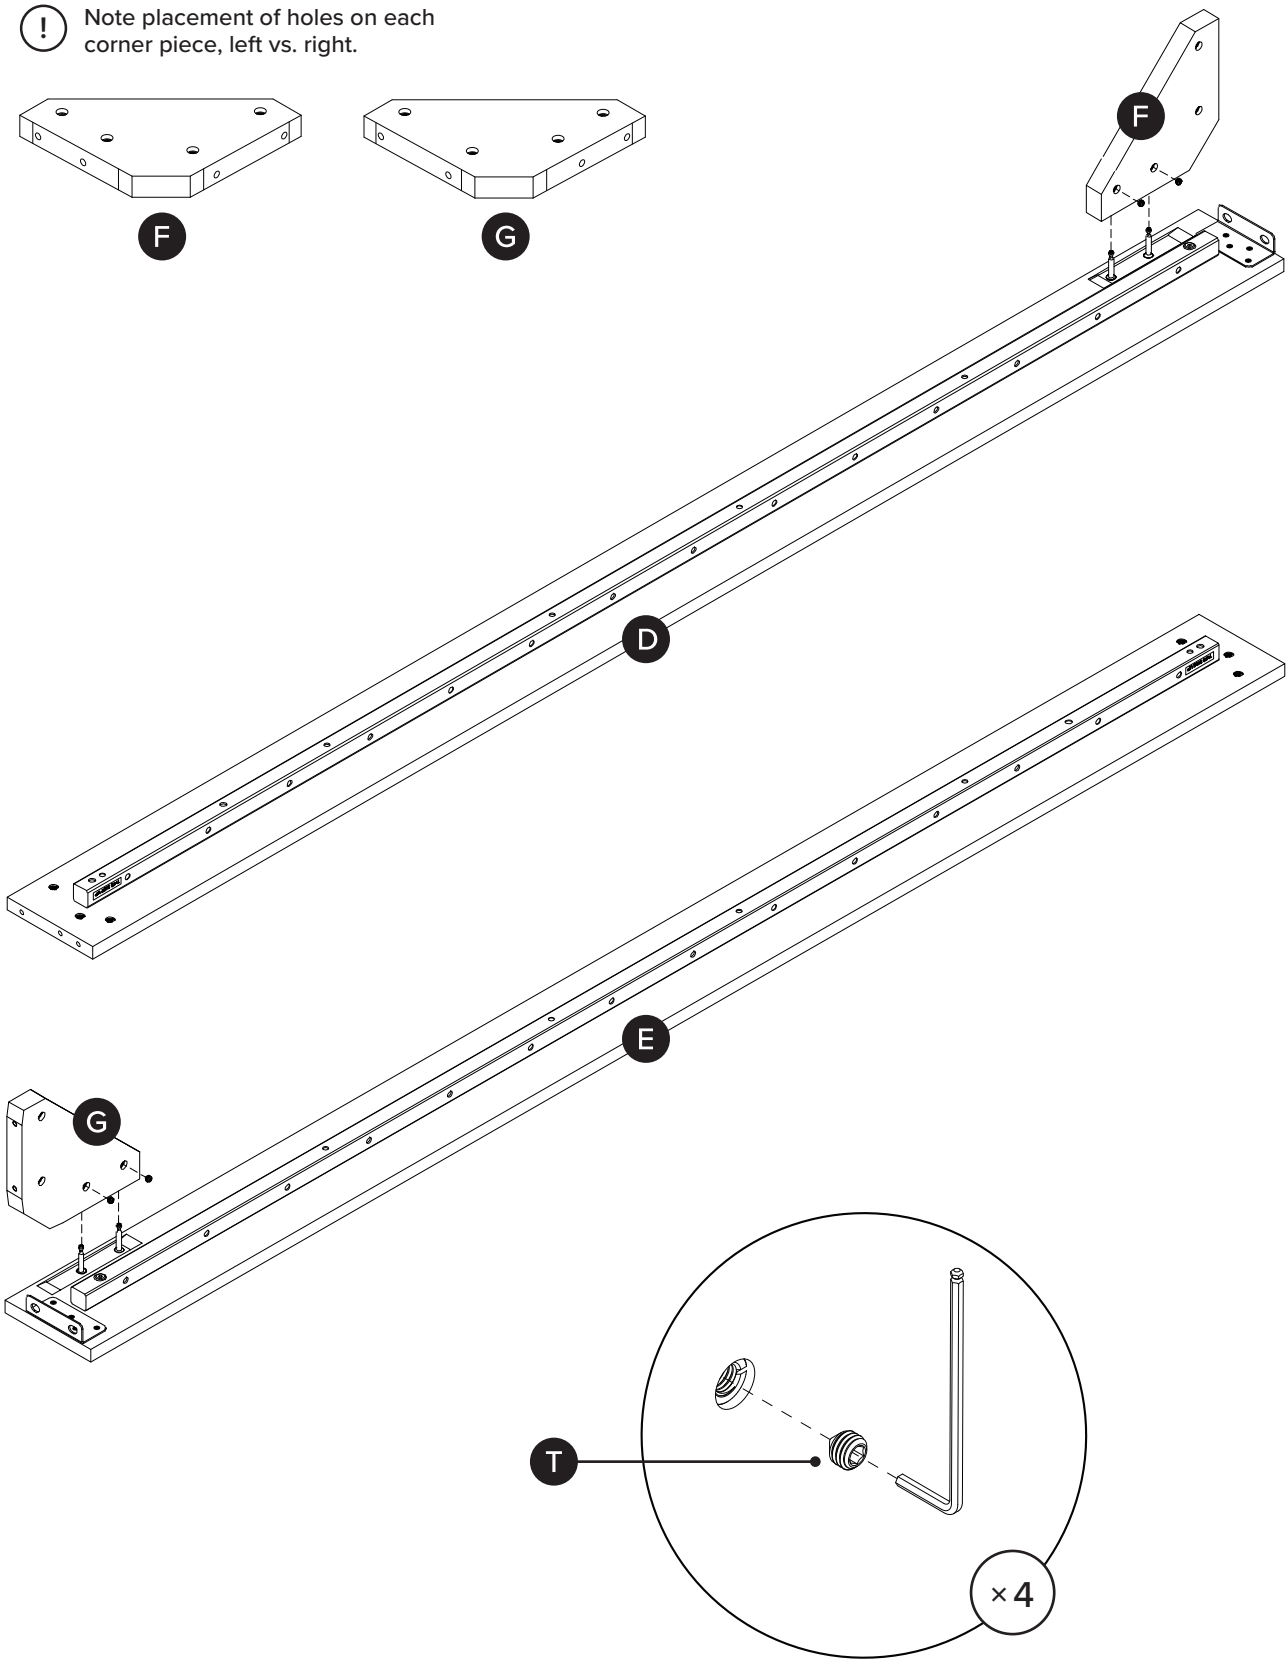

6

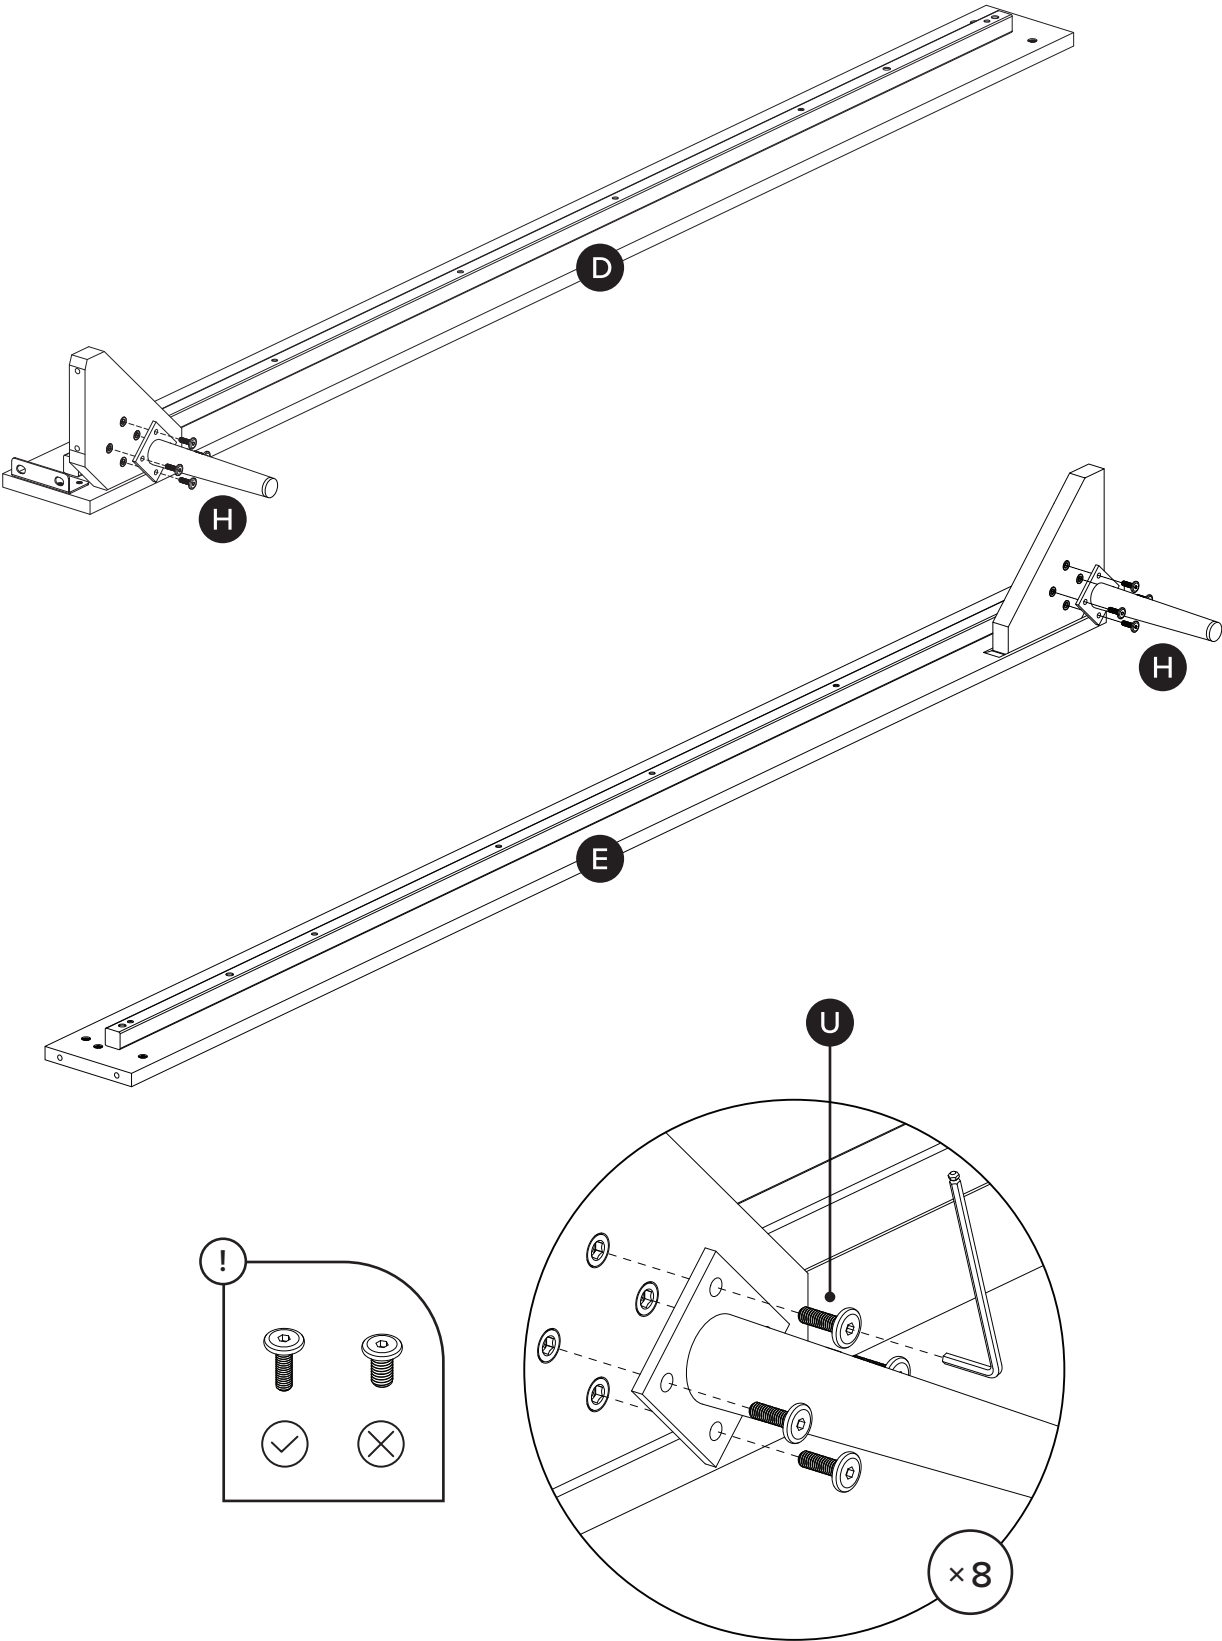


7A

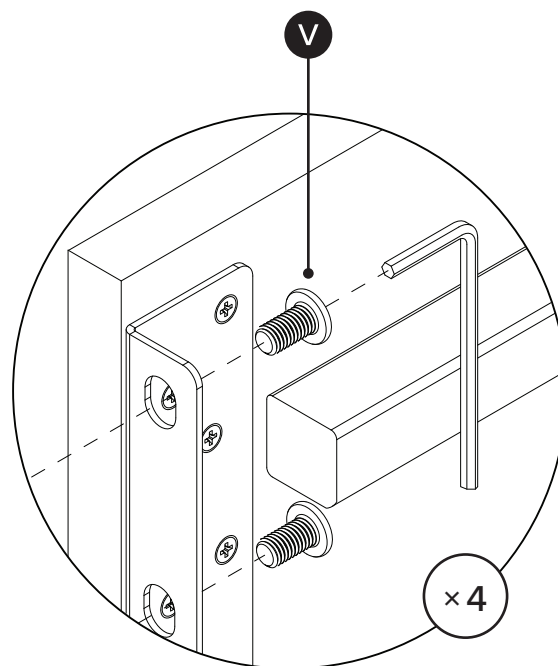
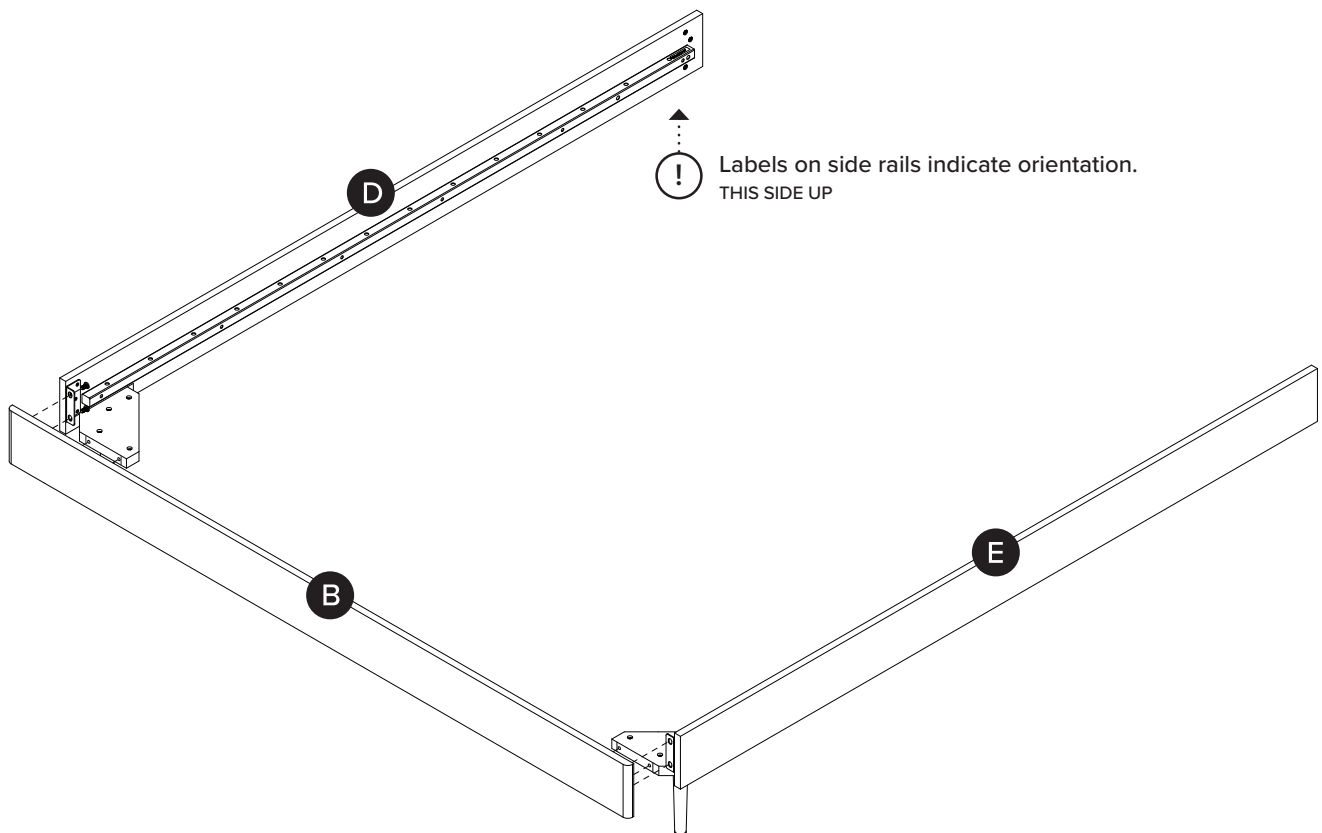


! Ensure side rails (D/E) are parallel with footboard (B) when tightening bolts (V).


7B

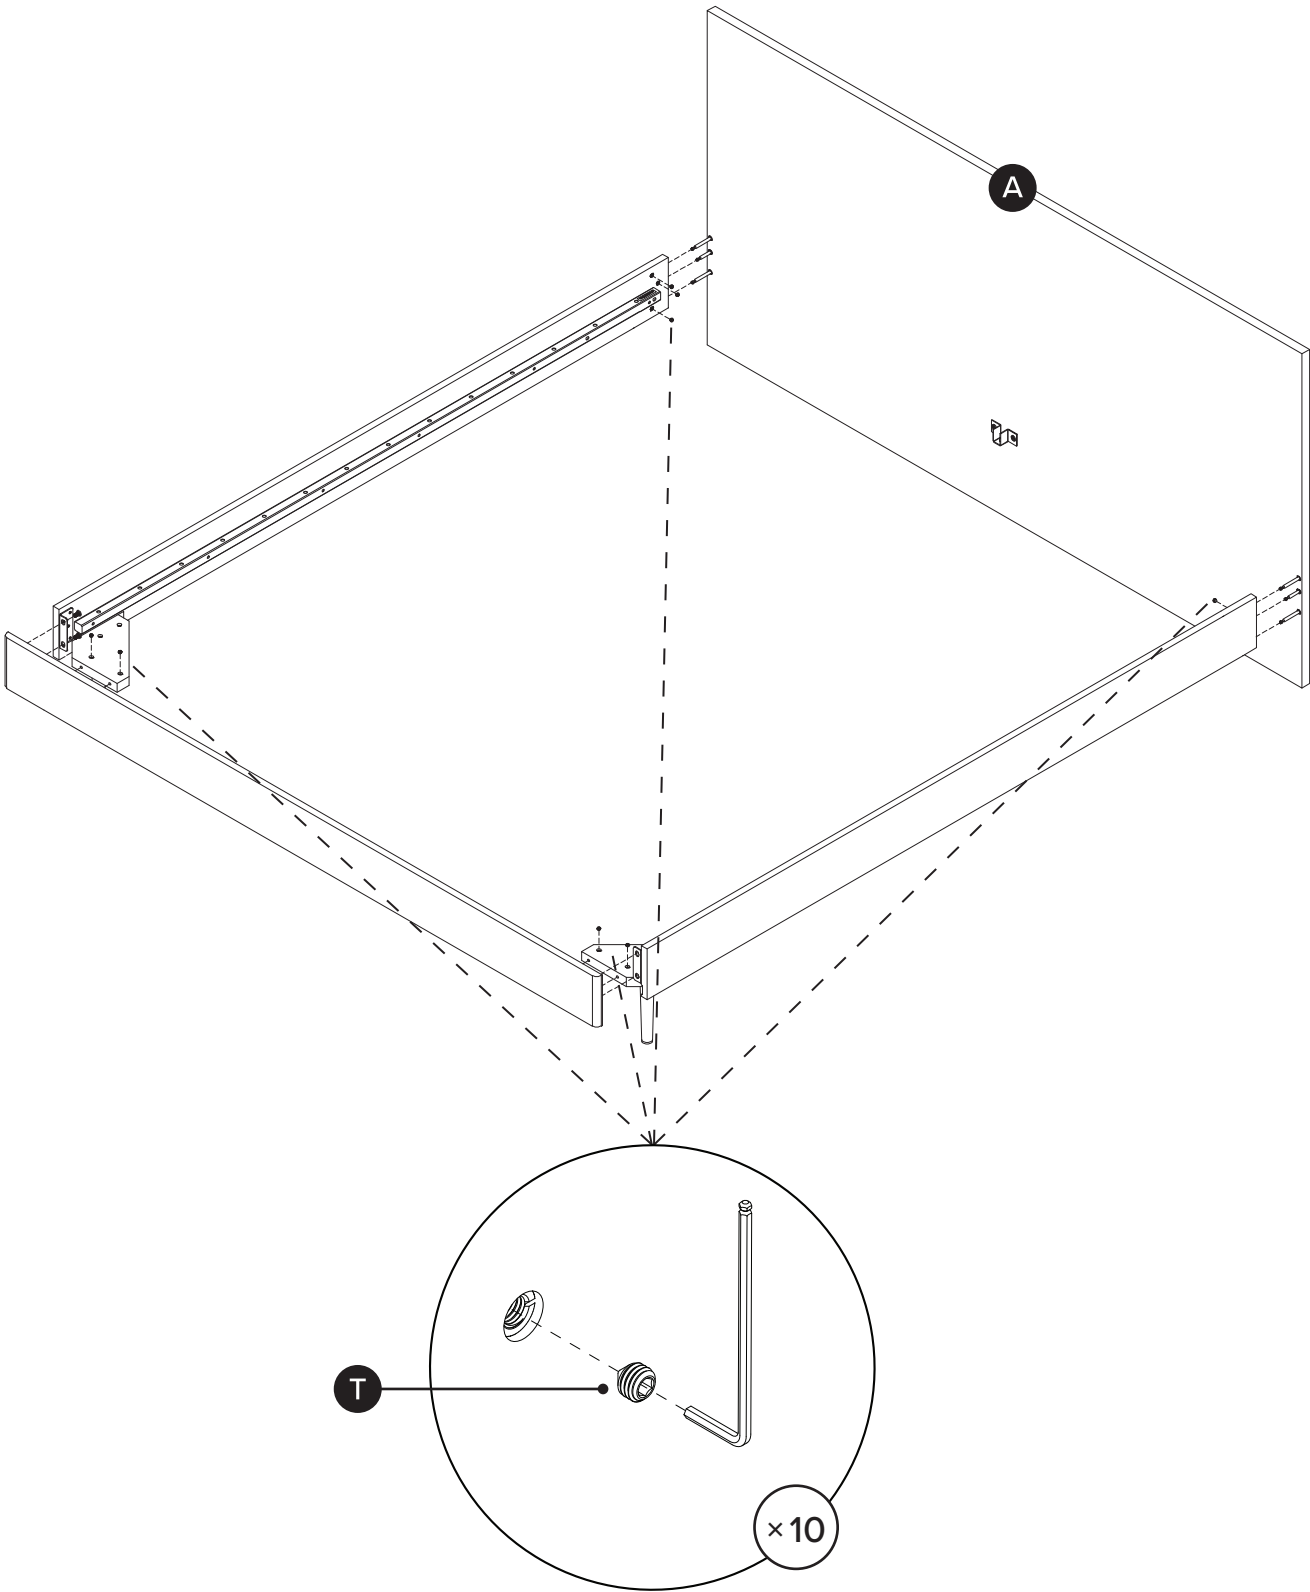

8

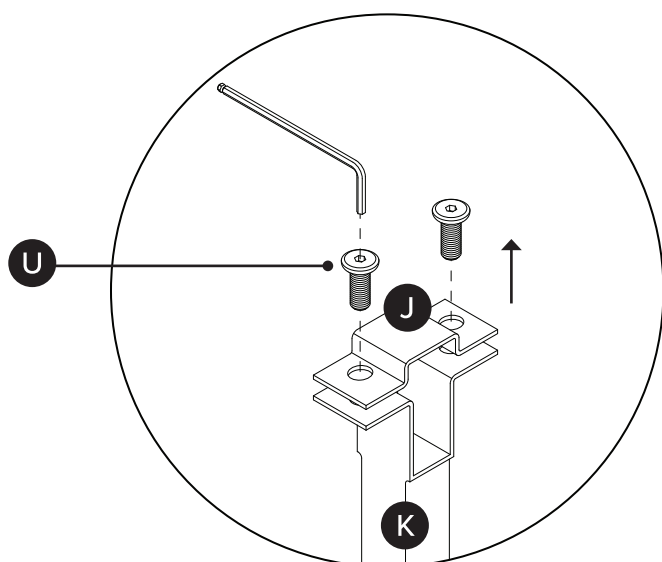
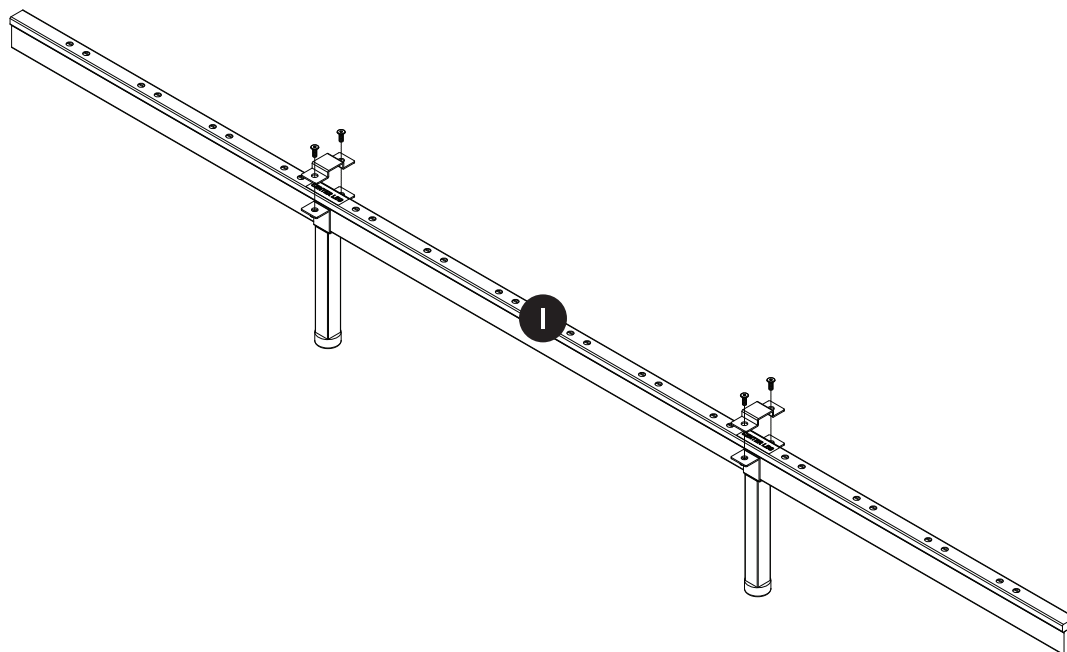


! Unscrew bolts (U) from center leg brackets (J) and floating center legs (K) before attaching to center beam (I).

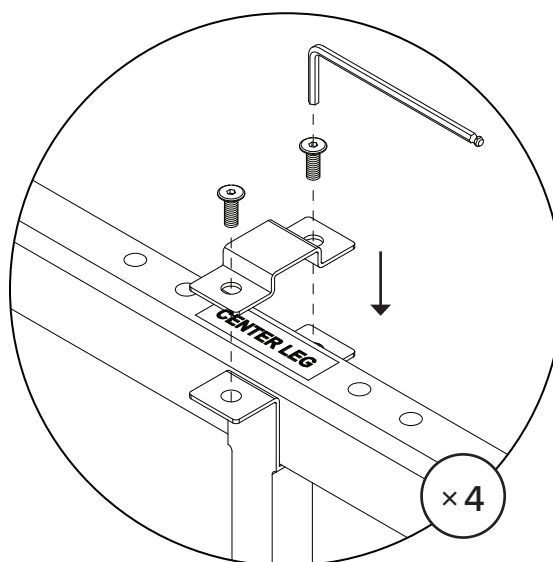


! Attach floating center legs (K) where labels are situated on center beam (I). Ensure that legs are straight, perpendicular to center beam.

9

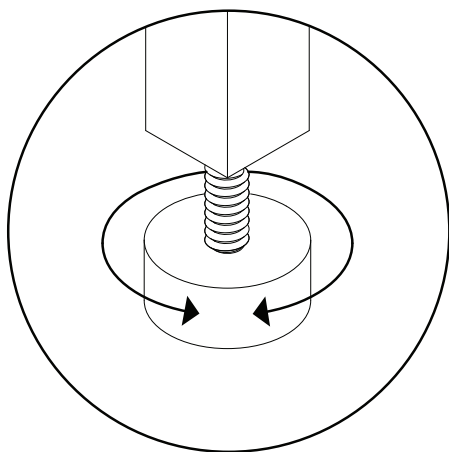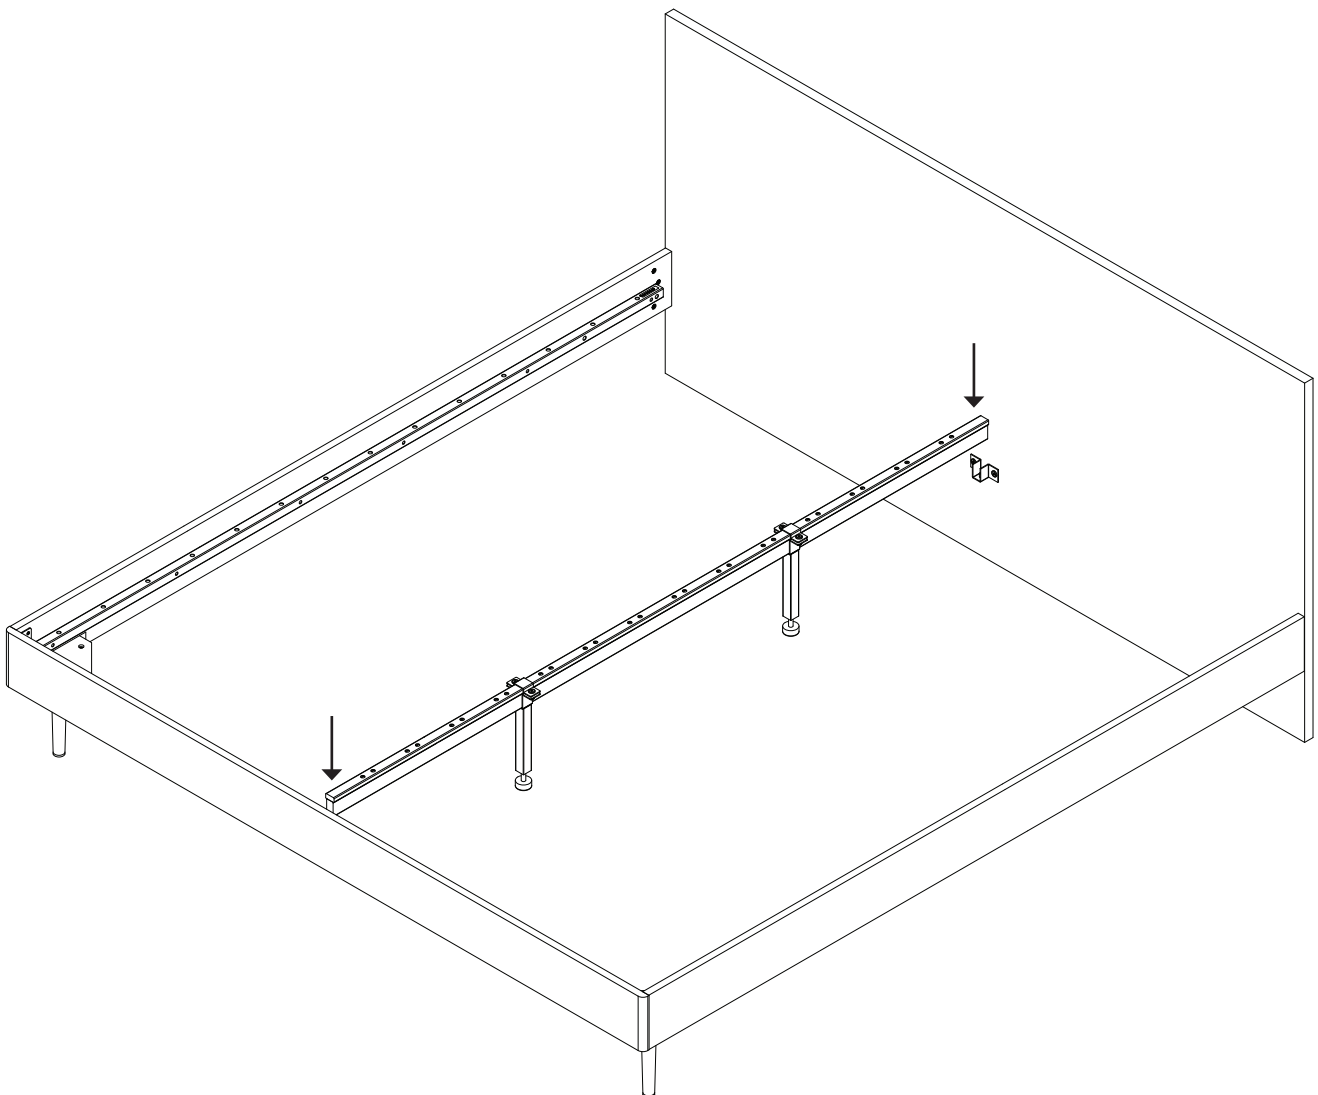


! Adjust levelers on floating center legs to allow for a 3-5mm clearance.

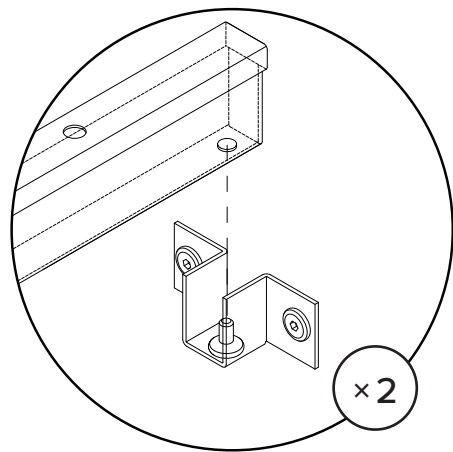


! Insert pins on center beam brackets into center beam when installing.

10A

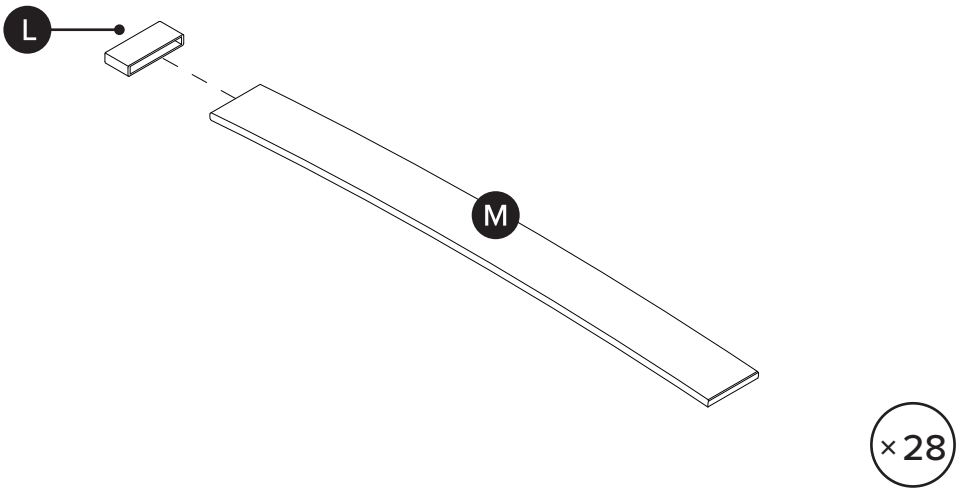

10B

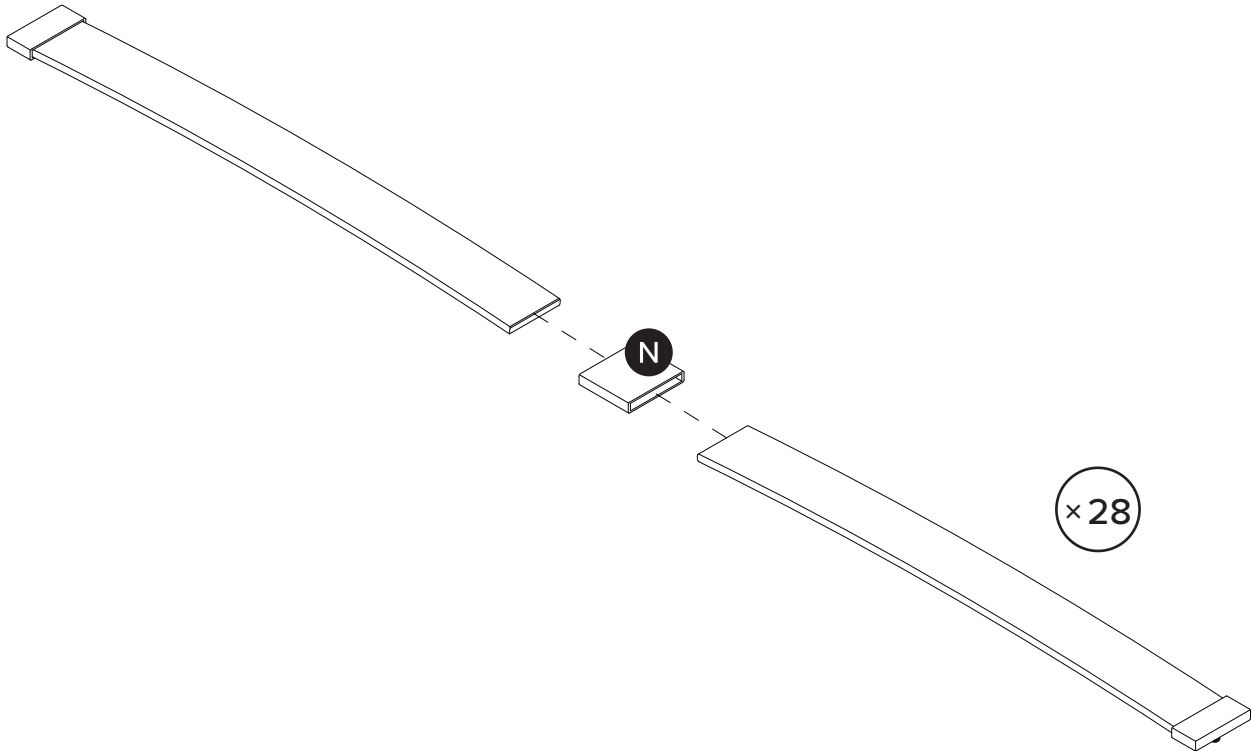

11

