


# ARTICLE.

VERSION 1.1

## Assembly Instructions

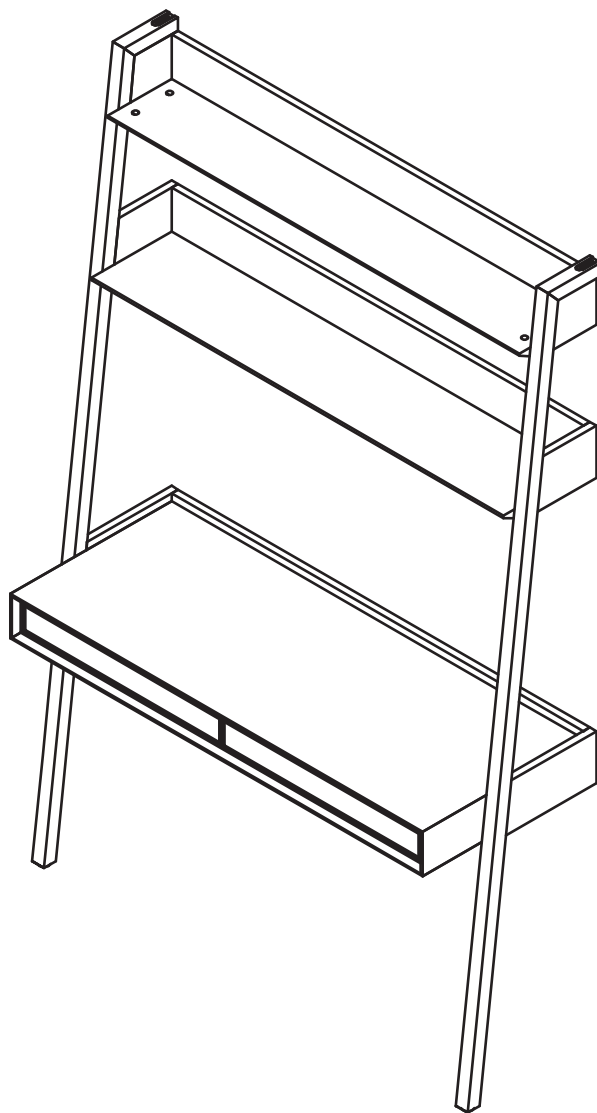

# FANTOL


Desk

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

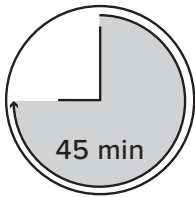

TIME



# OF PEOPLE

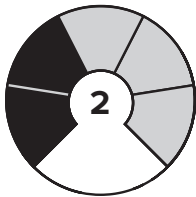


DIFFICULTY





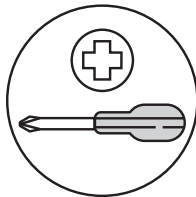

ANTI-TIP

Installation Required








REQUIRED TOOL

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEFT SIDE FRAME	1
B	RIGHT SIDE FRAME	1
C	TOP SHELF	1
D	SECOND SHELF	1
E	DESK TOP WITH DRAWERS	1
F	CAM LOCK SCREW 	24
G	WOOD DOWEL 	14
H	CAM LOCK NUT 	24
I	ALLEN KEY 	1




Hardware (K/L) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



ANTI-TIP KIT INVENTORY			
ID	DESCRIPTION		QTY
J	BRACKET 		4
K	M8 × 51MM PLUG 		4
L	M6 × 70MM SCREW 		4
M	M4 × 20MM SCREW 		4
N	WASHER 		4




ASSEMBLED UNIT

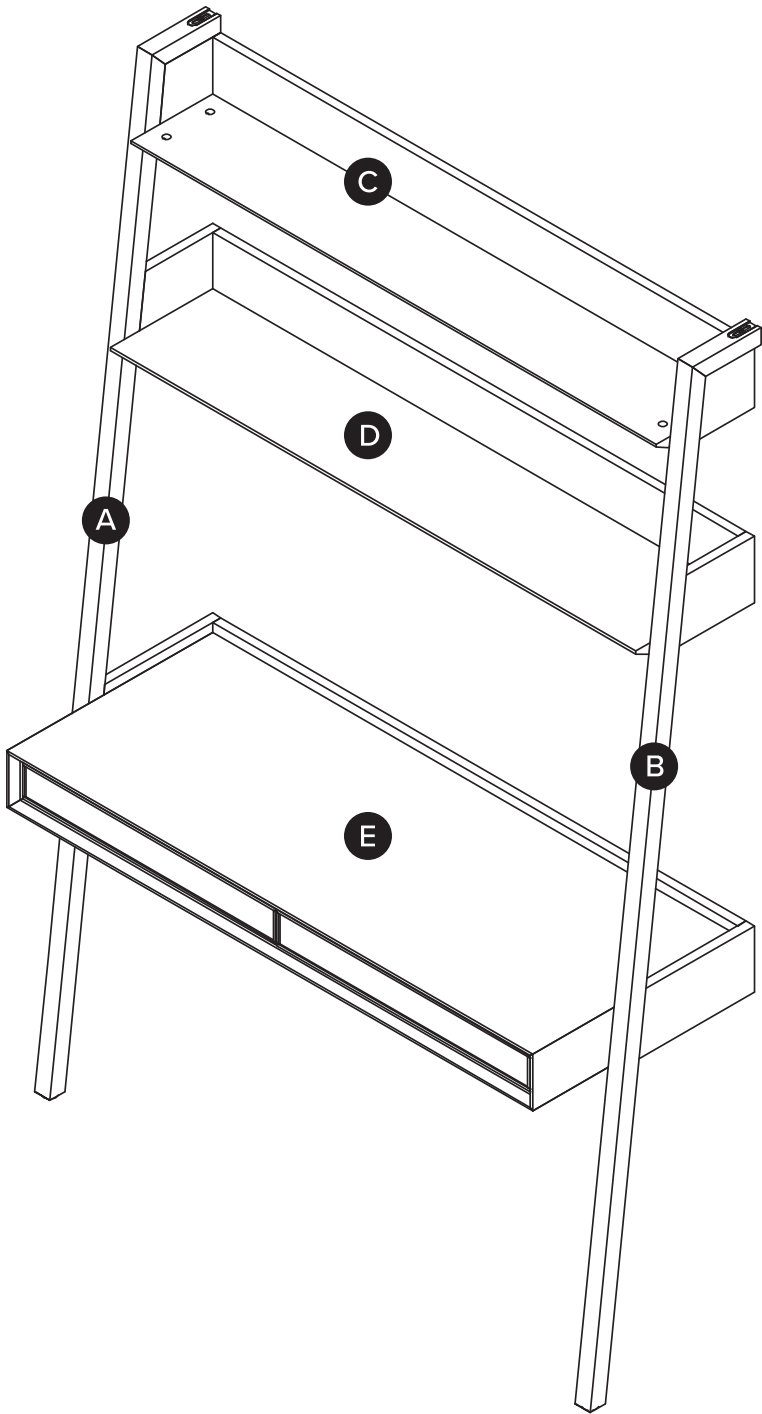

1

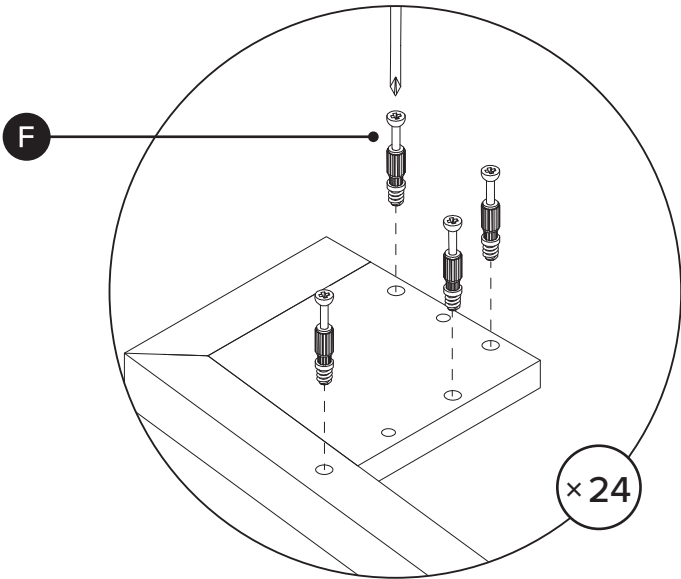
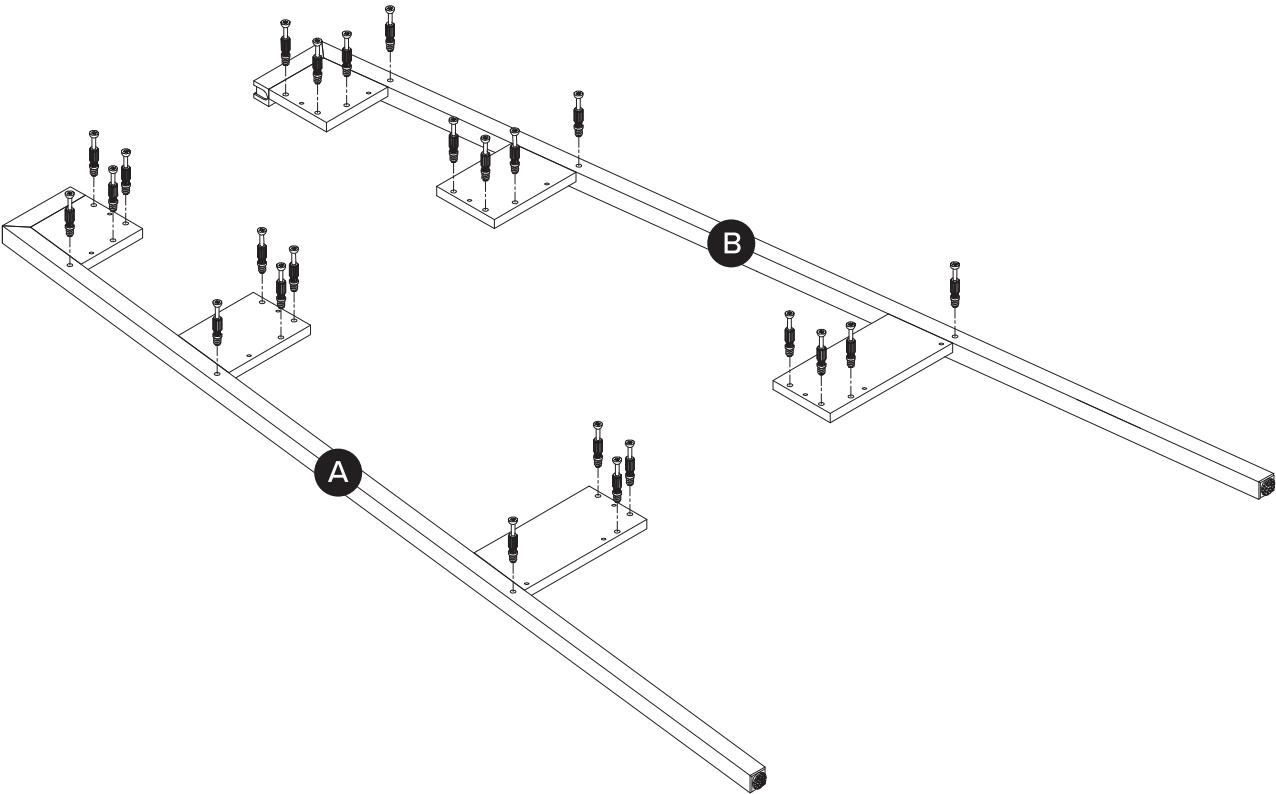


2

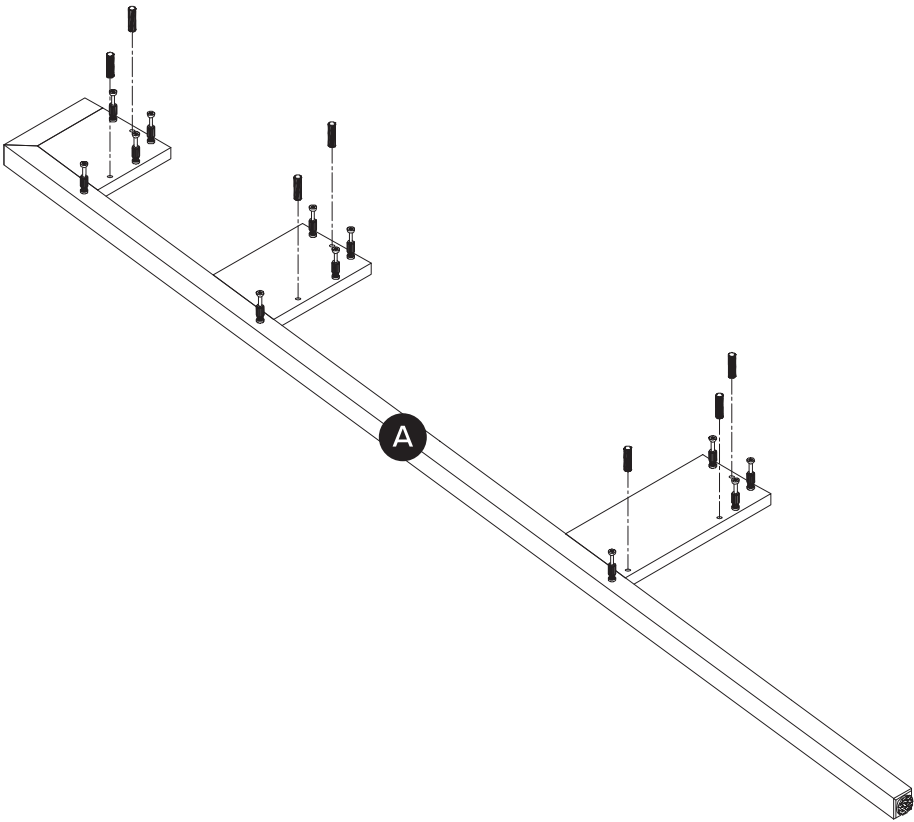


! Insert 2 wood dowels for top 2 shelves.

! Insert 3 wood dowels for desk top.

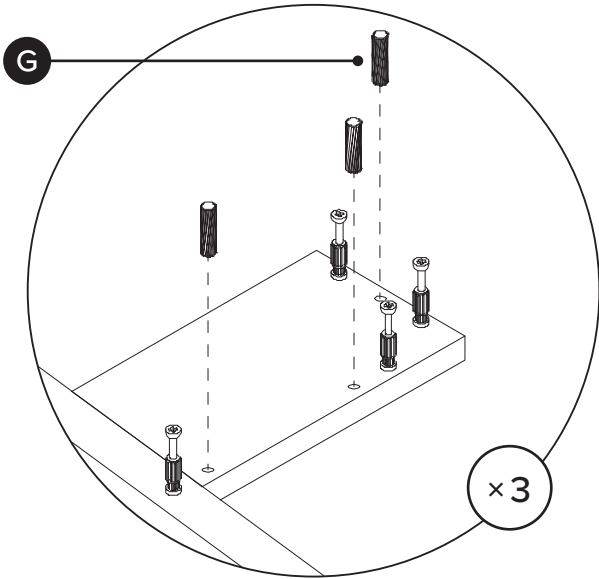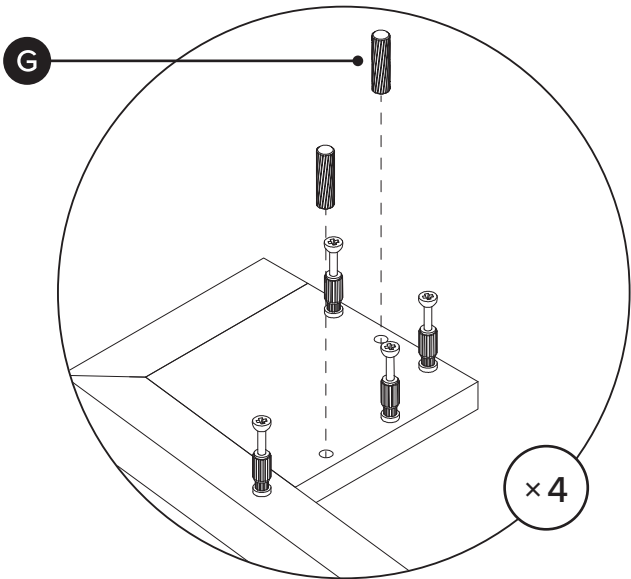


3

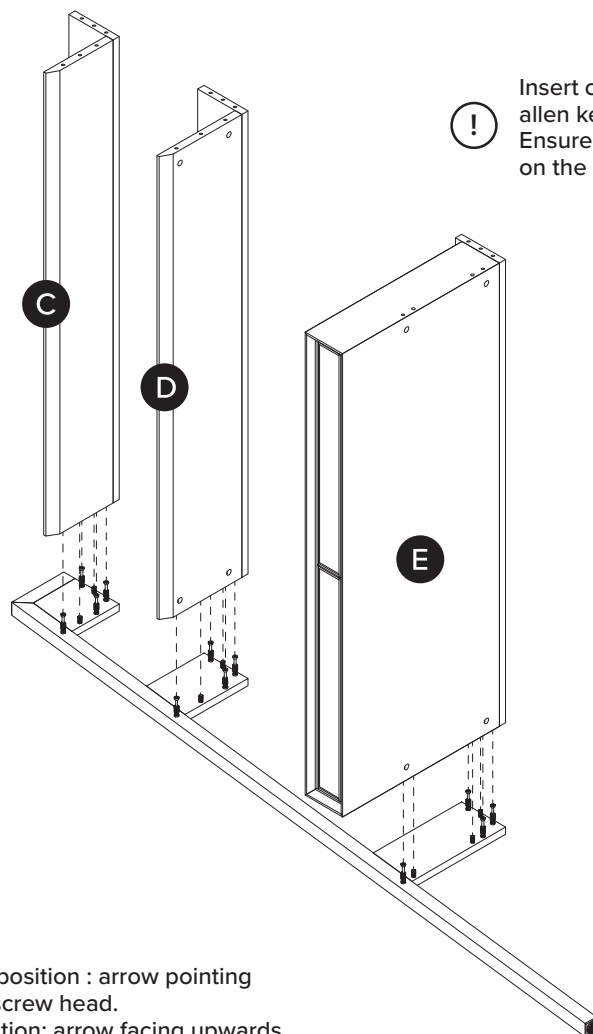


Insert cam lock nuts (H) and turn with allen key (I) to secure.  
Ensure cam lock nuts are also secured on the backs of each shelf.




Cam lock nut starting position : arrow pointing downwards, towards screw head.  
Cam lock nut end position: arrow facing upwards.

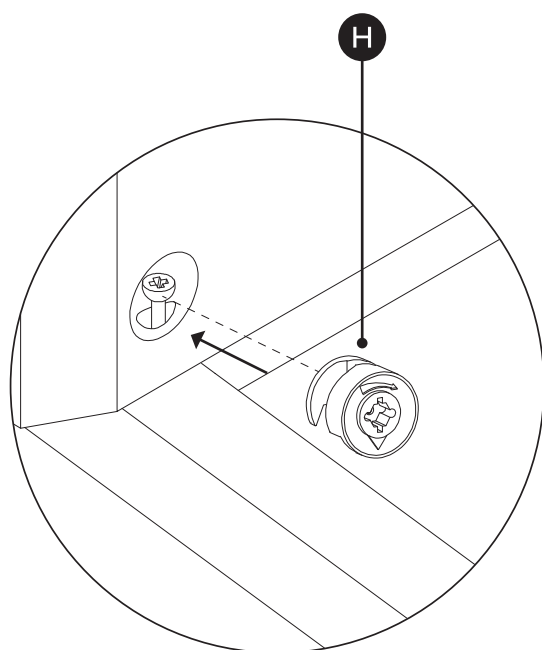

× 12


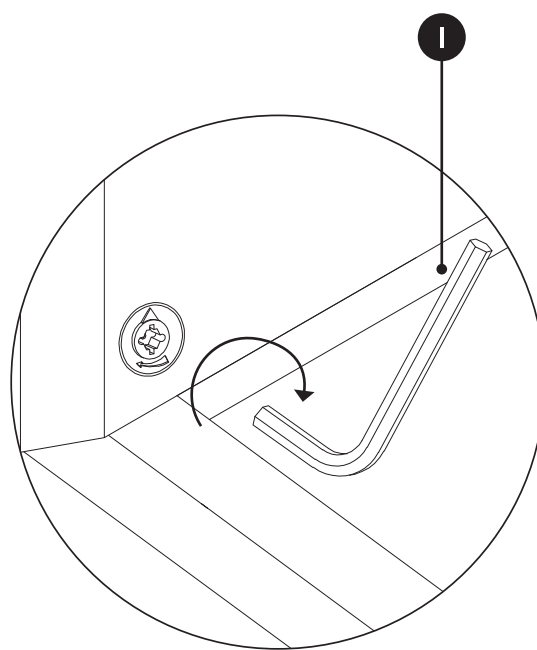


4

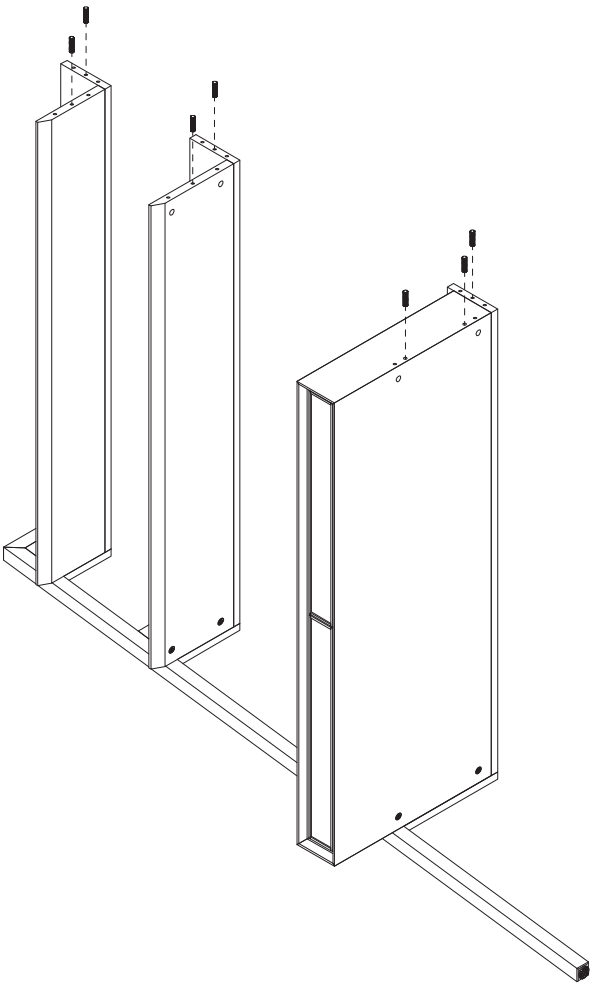


! Insert 2 wood dowels into top 2 shelves (C/D).


! Insert 3 wood dowels (I) into desk top (E).

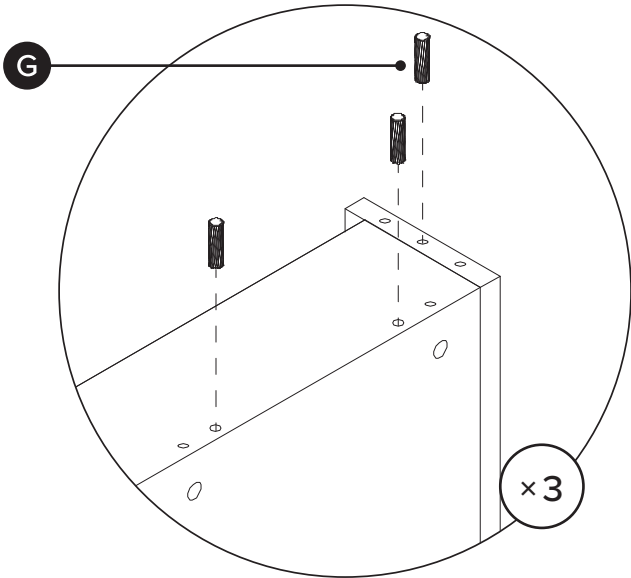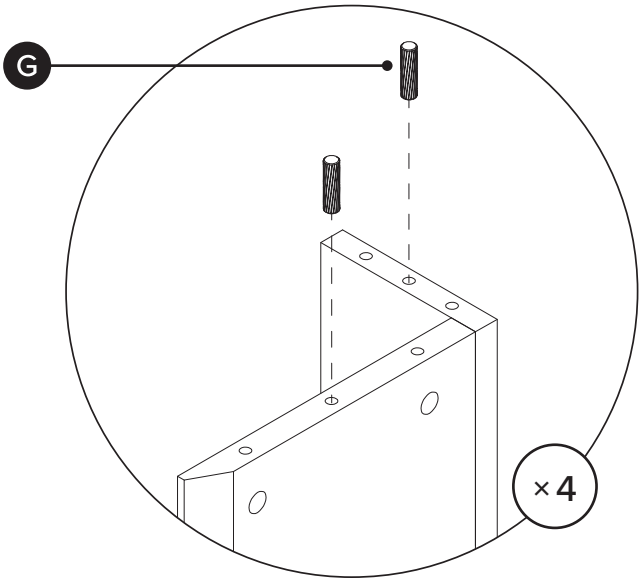


5

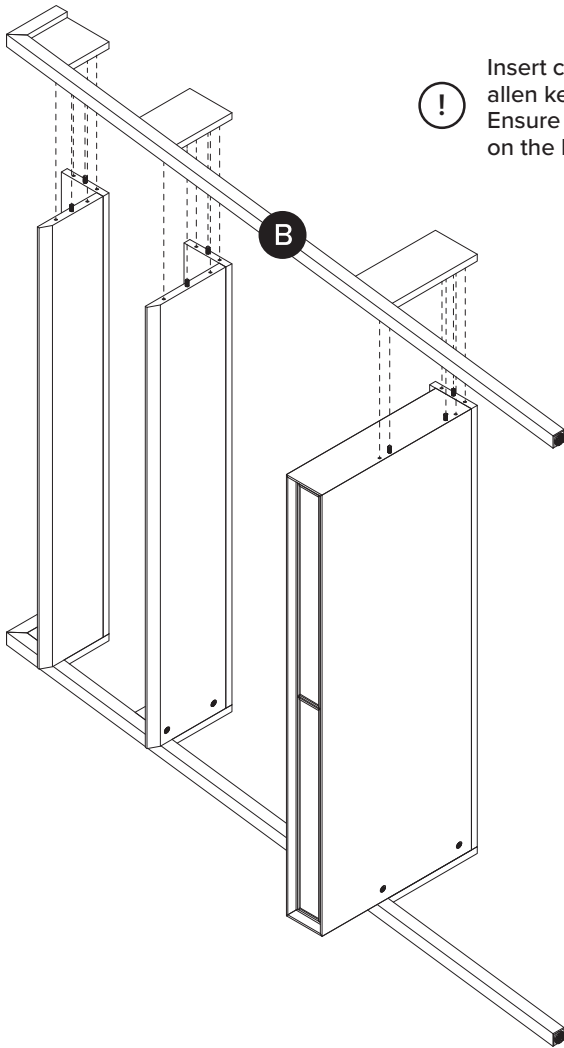


Insert cam lock nuts (H) and turn with allen key (I) to secure. Ensure cam lock nuts are also secured on the backs of each shelf.

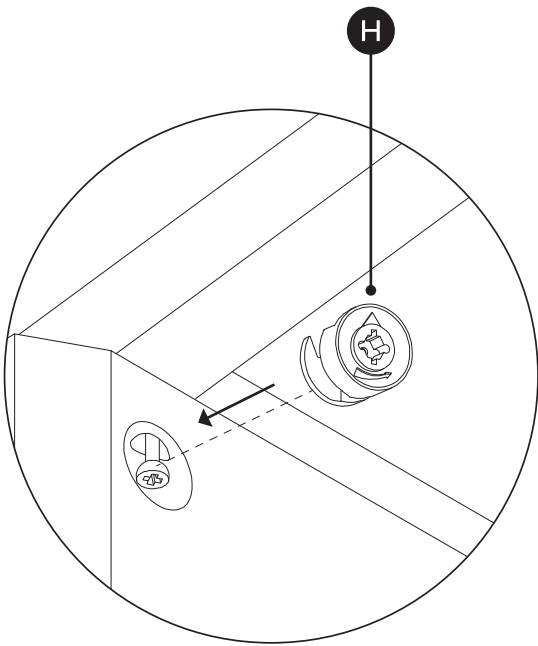

×12

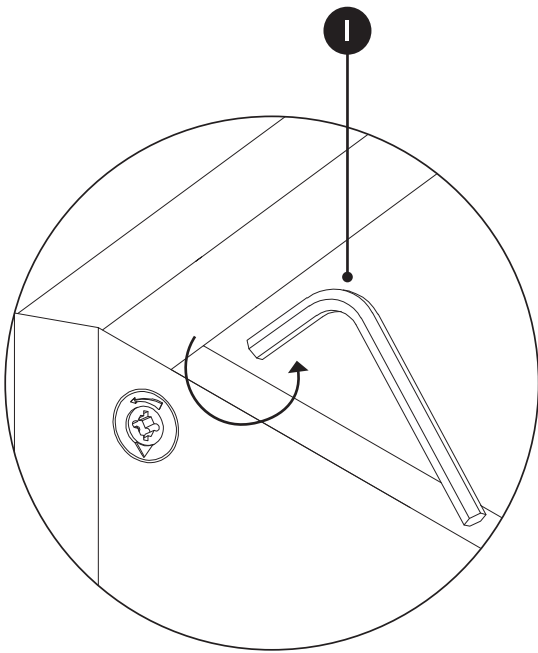



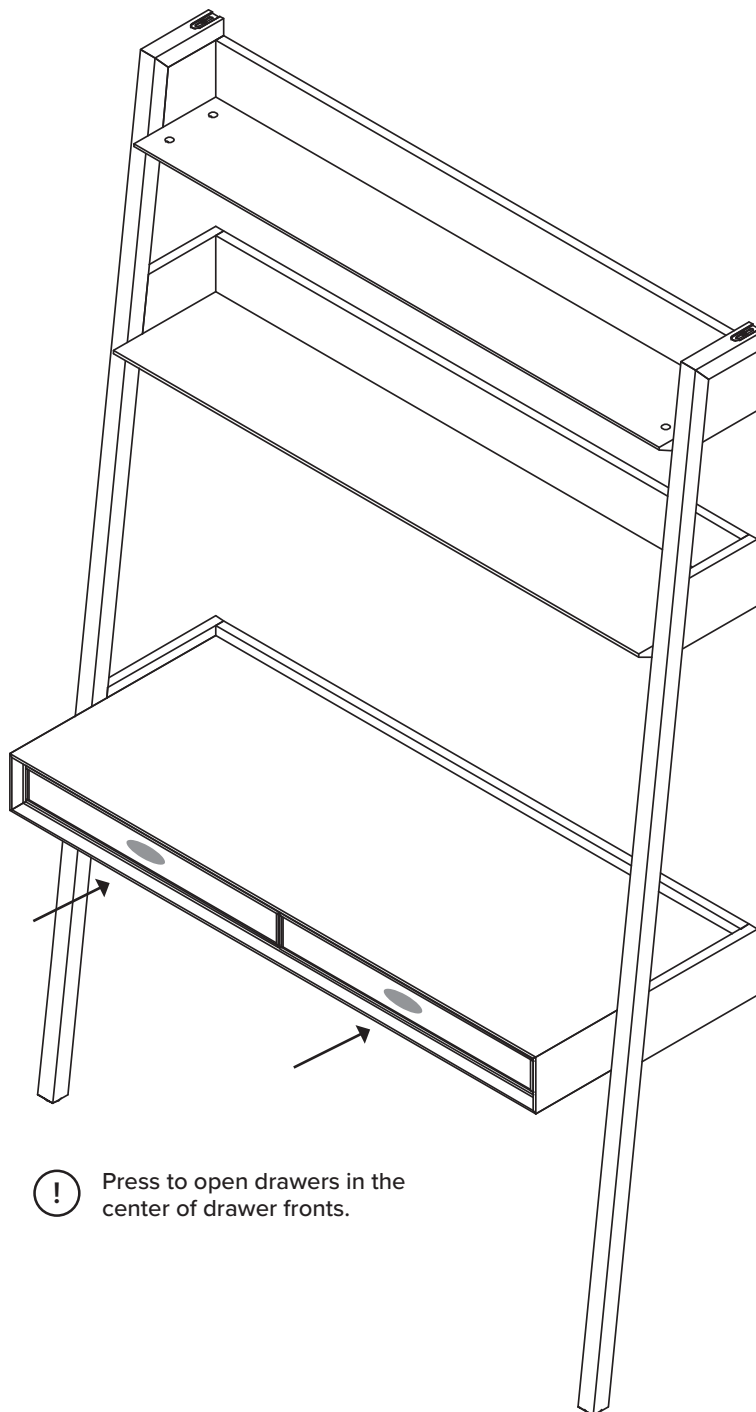

ⓘ Press to open drawers in the center of drawer fronts.




## ANTI-TIP RESTRAINT INSTALLATION

### WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

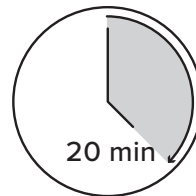


20 min


TIME




# OF PEOPLE

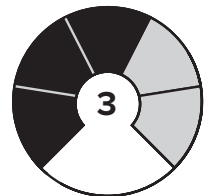

DIFFICULTY

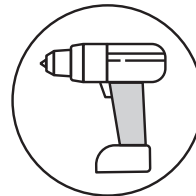


REQUIRED TOOL  
8MM / 5/16" DRILL BIT

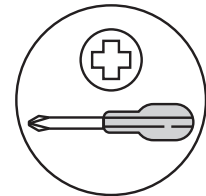


REQUIRED TOOL

1

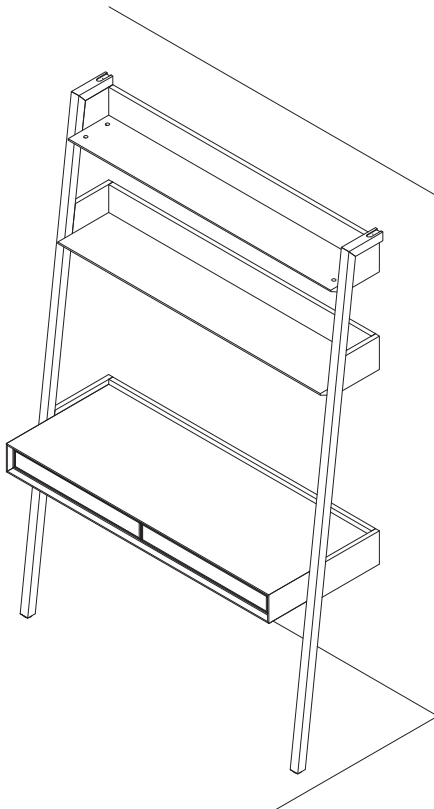

Place unit in desired location and mark on wall where holes should be drilled.



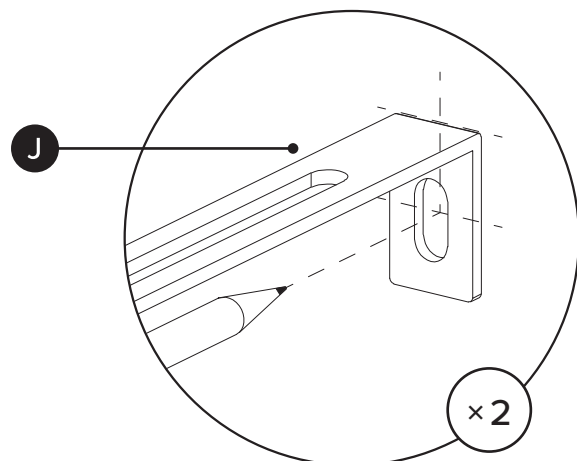


2




Hardware (K/L) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


Drill holes into drywall, insert wall plugs (K), and attach brackets to wall with screws (L).

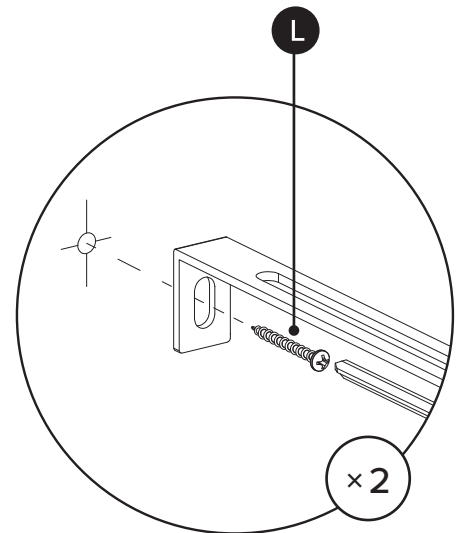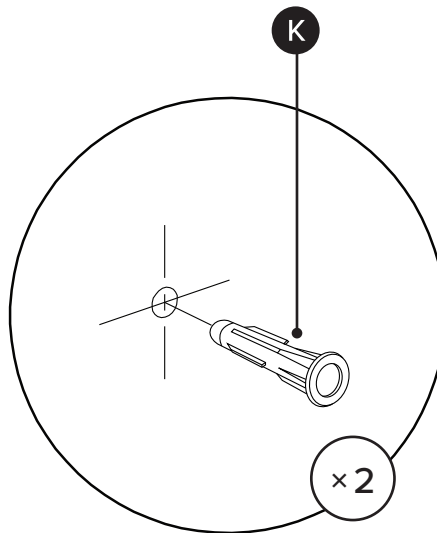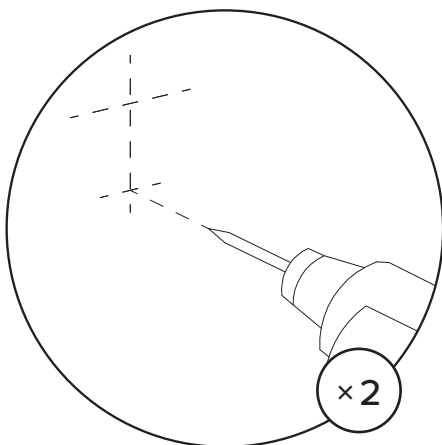

3

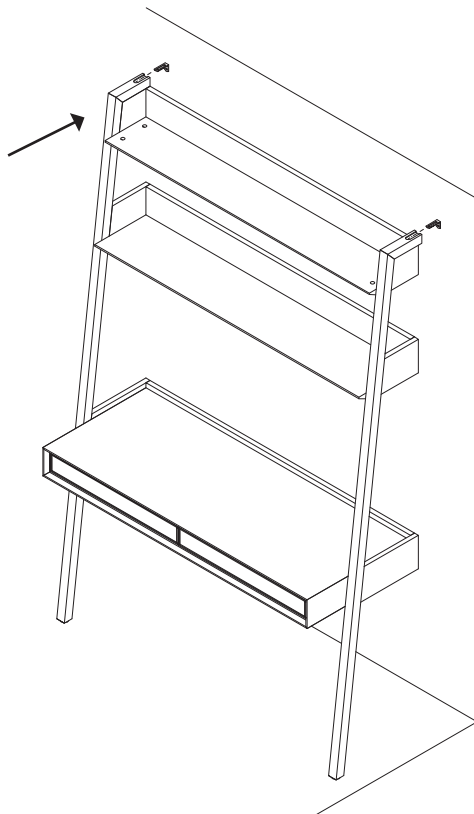


Move shelf up against wall and attach brackets to top shelf from above.

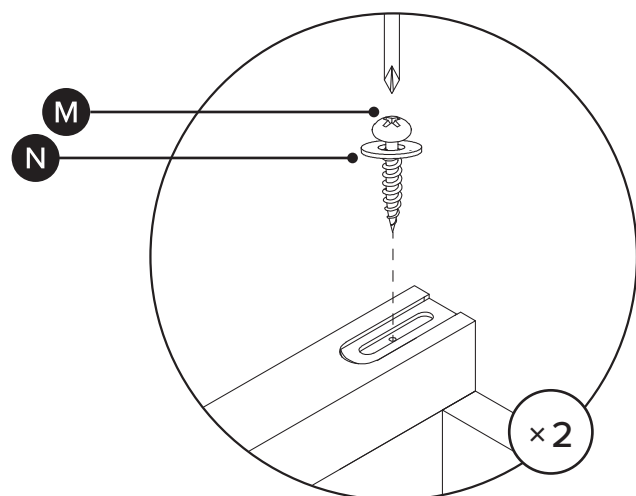

4A

Drill holes into drywall below drawer shelf (E) and attach brackets (J) to wall with wall plugs (K) and screws (L).

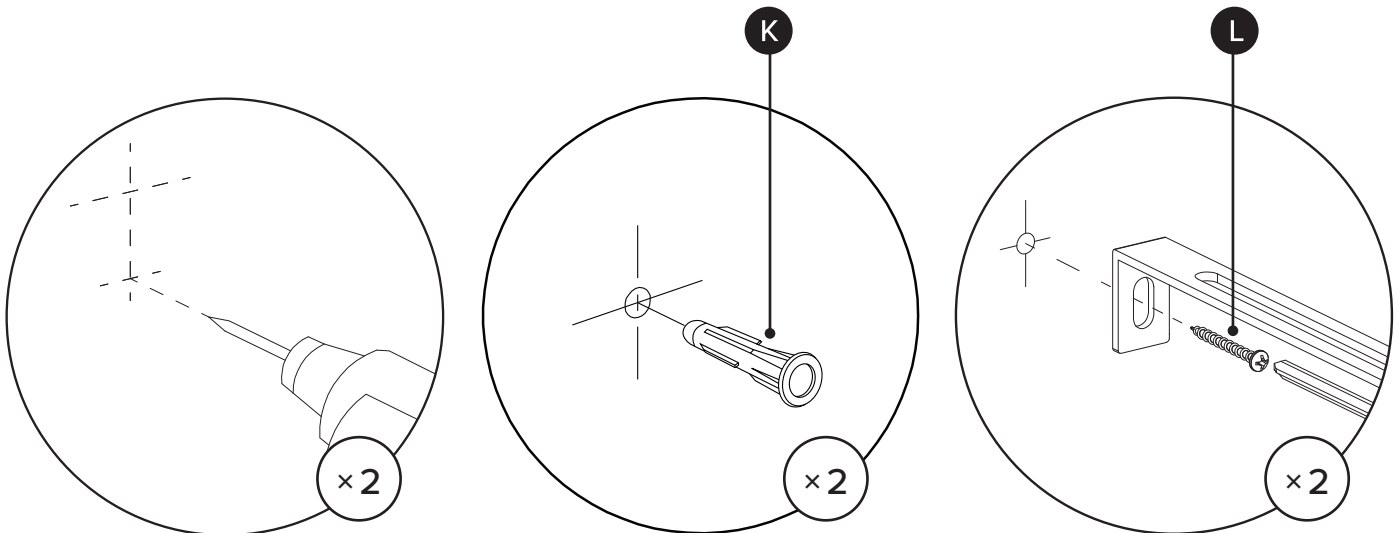

4B

Attach brackets to drawer shelf from below.

