


ARTICLE.

VERSION 1.1

Assembly Instructions

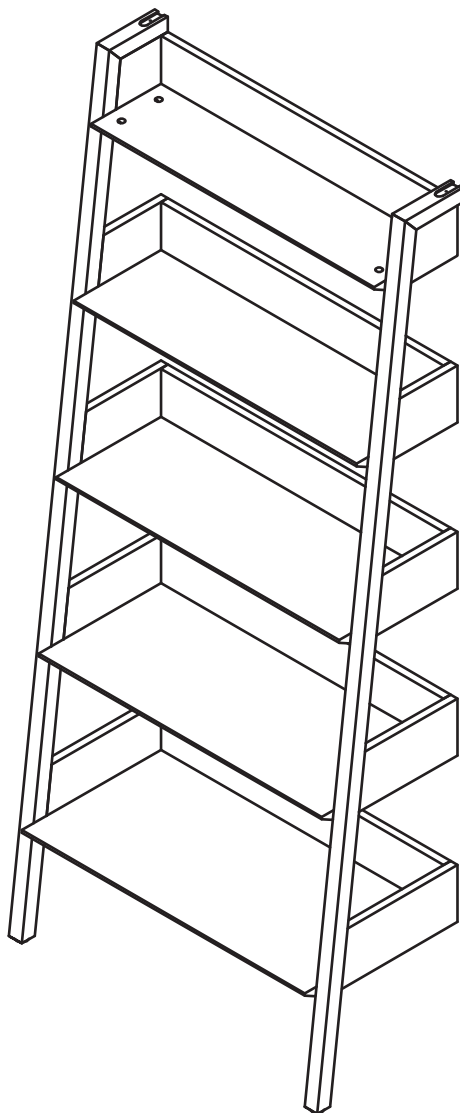

FANTOL

Narrow Bookcase

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



TIME



OF PEOPLE

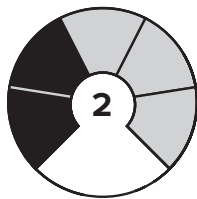


DIFFICULTY





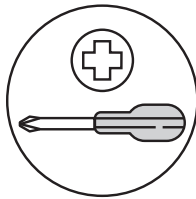

ANTI-TIP

Installation Required





REQUIRED TOOL

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEFT SIDE FRAME	1
B	RIGHT SIDE FRAME	1
C	TOP SHELF	1
D	SECOND SHELF	1
E	THIRD SHELF	1
F	FOURTH SHELF	1
G	BOTTOM SHELF	1
H	CAM LOCK SCREW 	40
I	WOOD DOWEL 	26
J	CAM LOCK NUT 	40
K	ALLEN KEY 	1




Hardware (M/N) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



ANTI-TIP KIT INVENTORY		
ID	DESCRIPTION	QTY
L	BRACKET 	3
M	M8 × 51MM PLUG 	3
N	M6 × 70MM SCREW 	3
O	M4 × 20MM SCREW 	3
P	WASHER 	3




ASSEMBLED UNIT

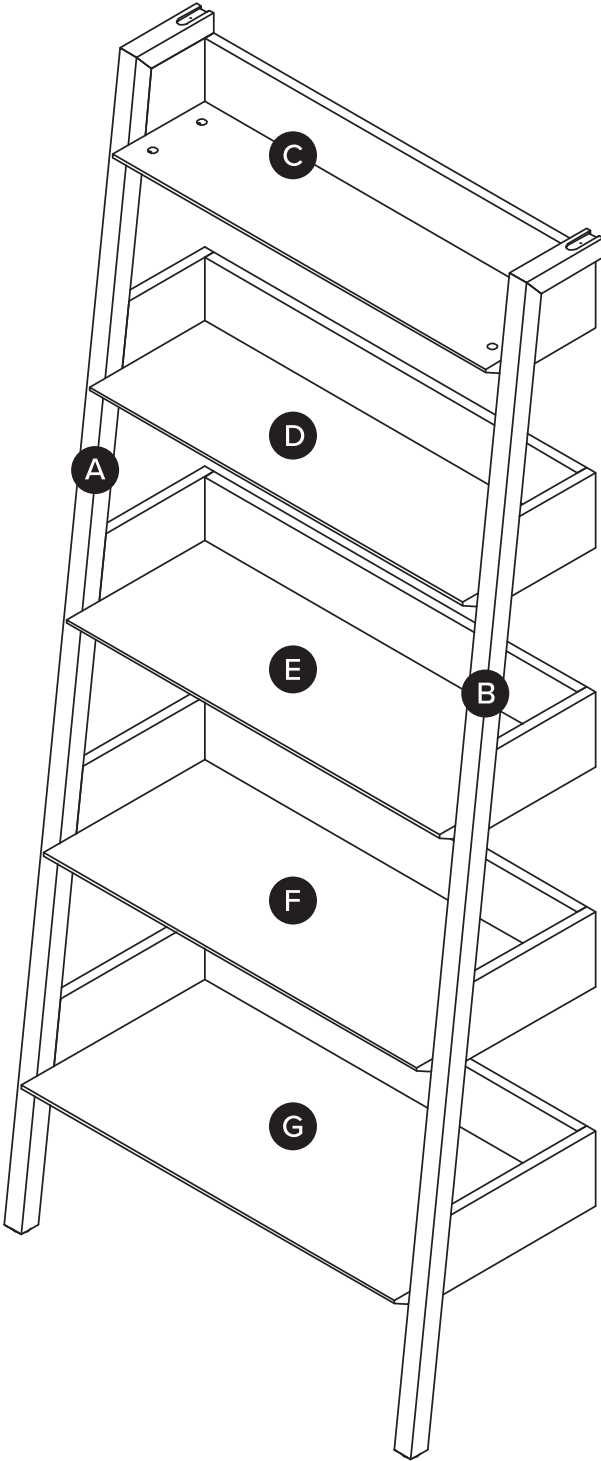

1

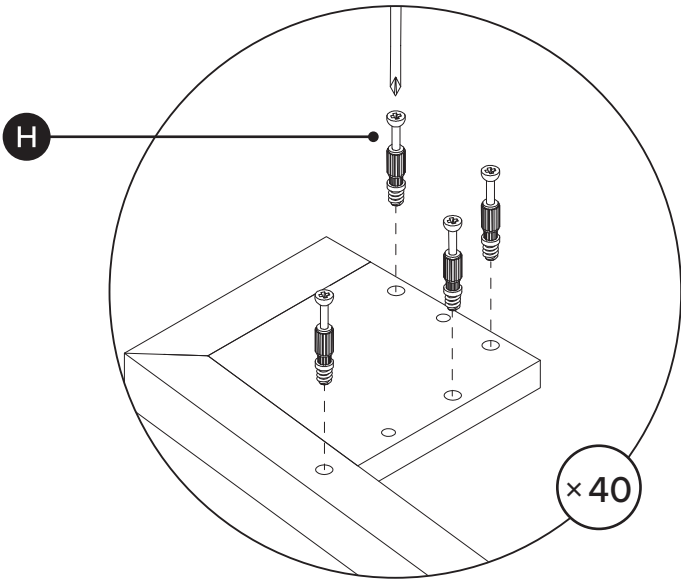
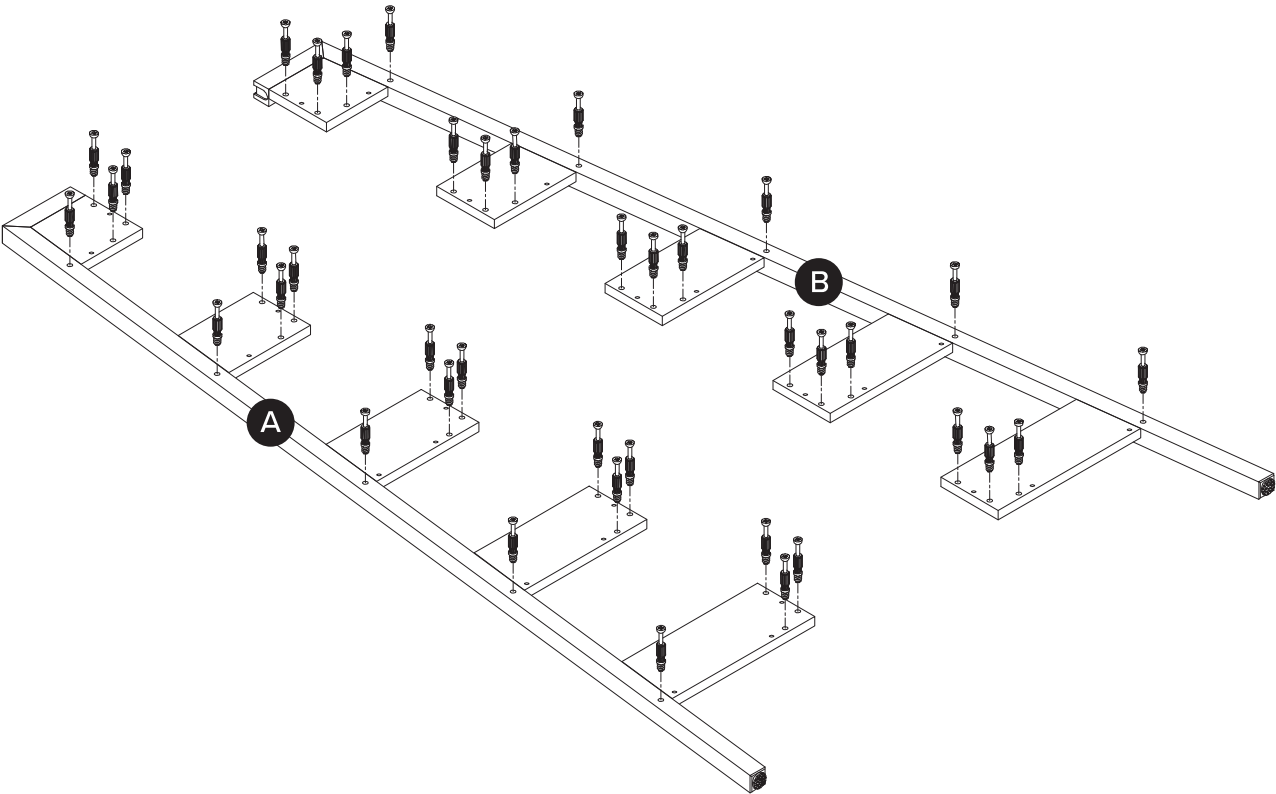


2

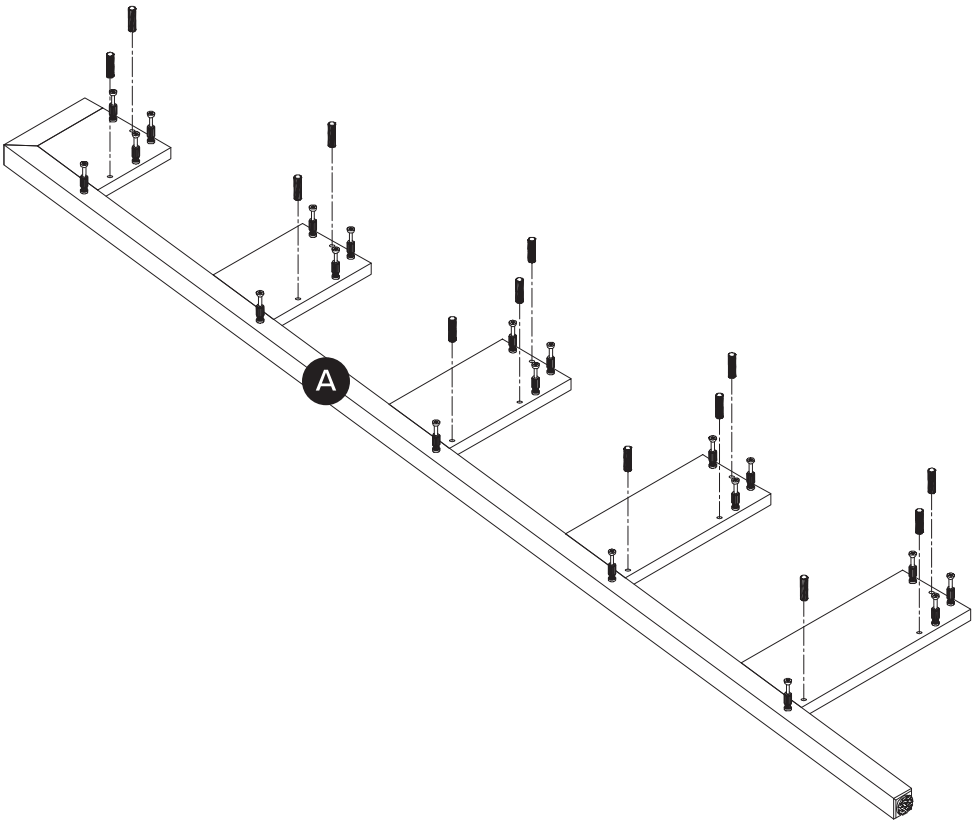


! Insert 2 wood dowels for top 2 shelves.

! Insert 3 wood dowels for bottom 3 shelves.

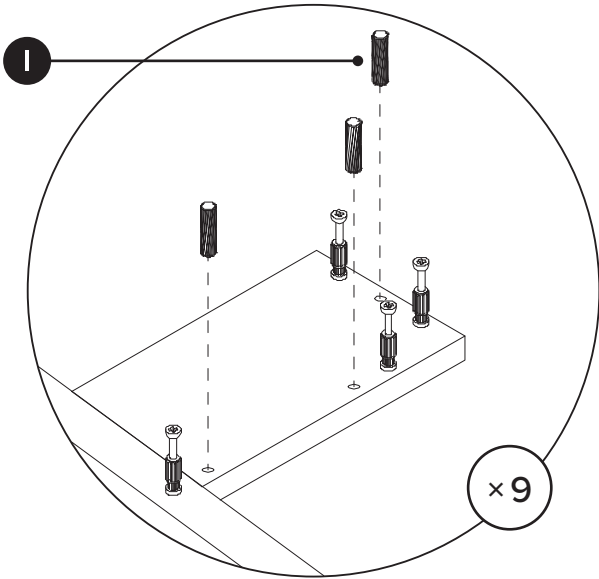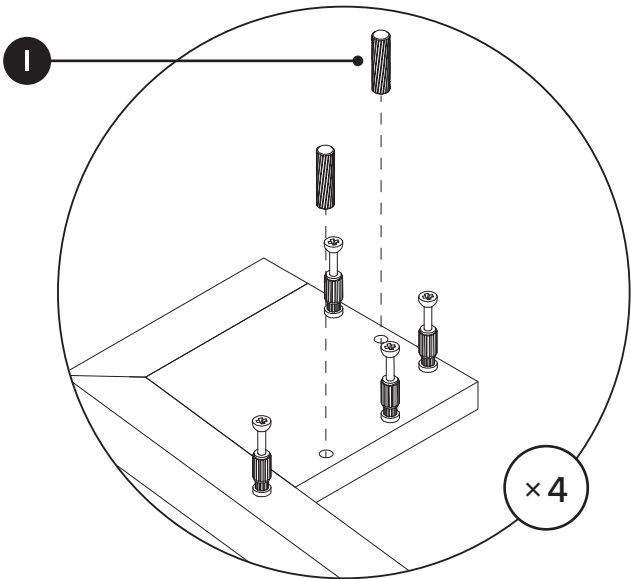


3

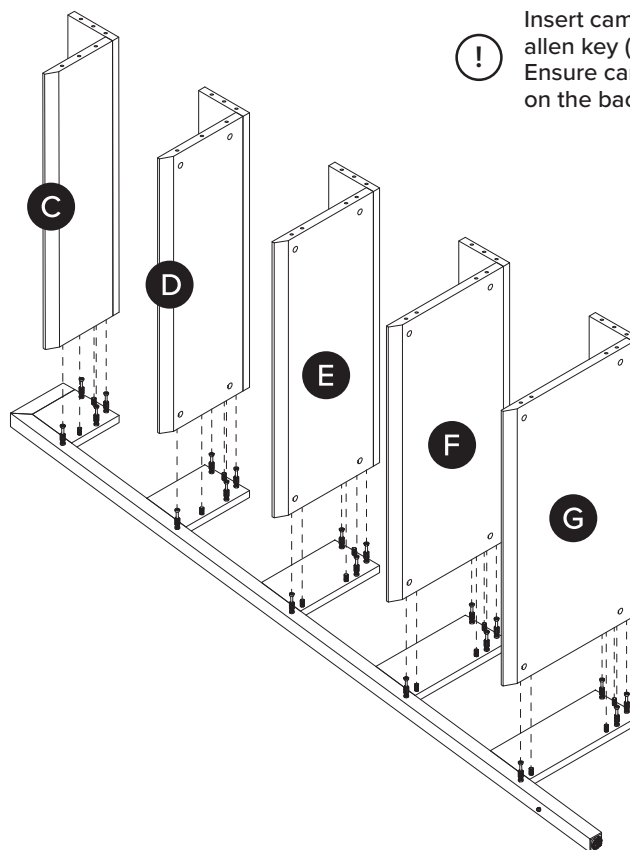


Insert cam lock nuts (J) and turn with allen key (K) to secure.
Ensure cam lock nuts are also secured on the backs of each shelf.




Cam lock nut starting position : arrow pointing downwards, towards screw head.
Cam lock nut end position: arrow facing upwards.

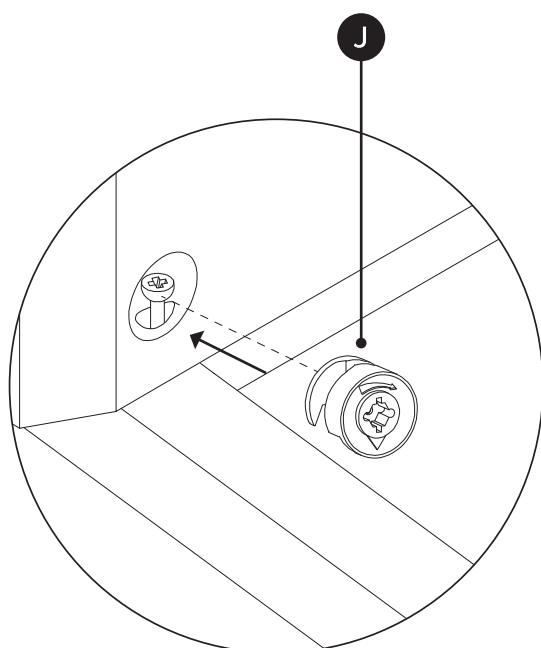


× 20

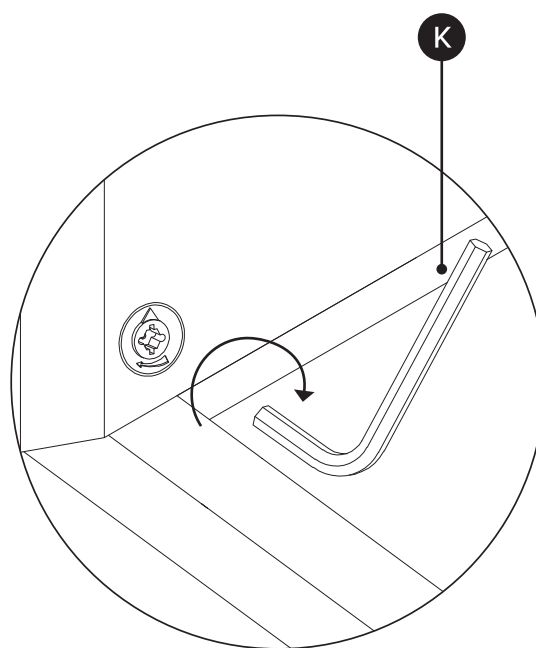


4

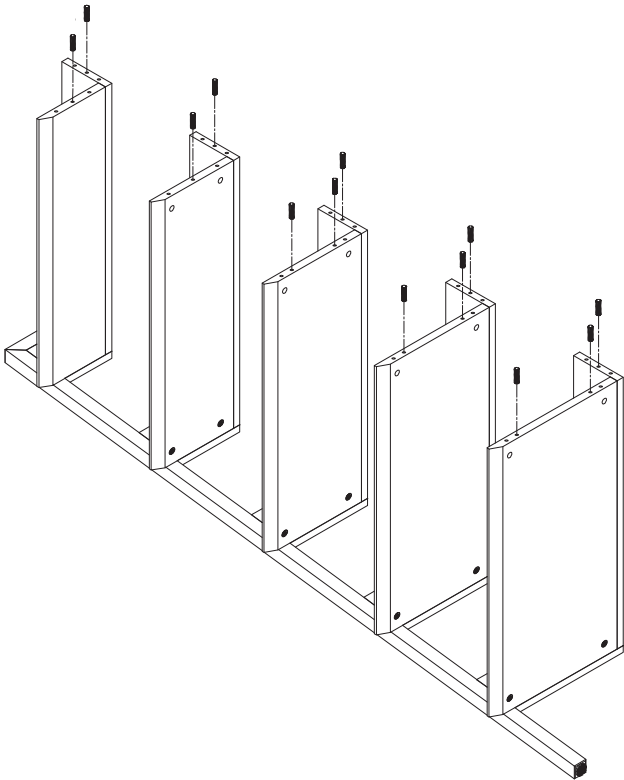


! Insert 2 wood dowels into top 2 shelves (C/D).

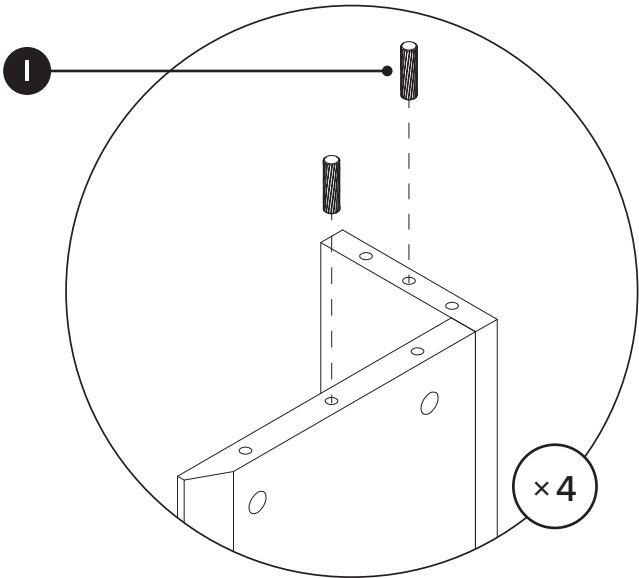


! Insert 3 wood dowels (I) into bottom 3 shelves (E/F/G).

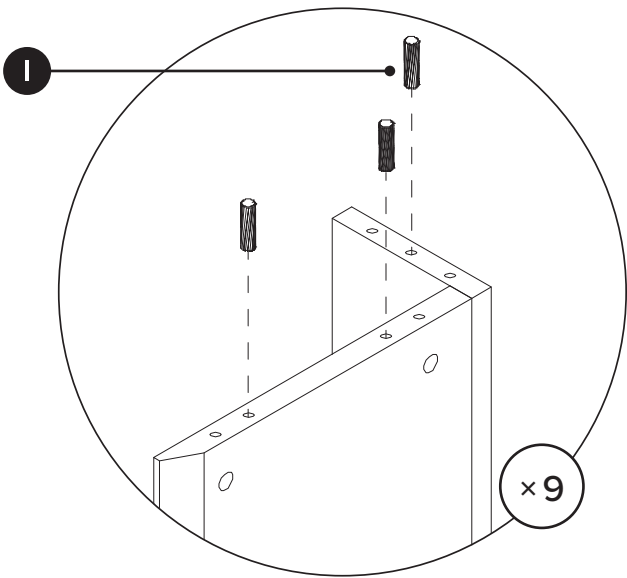


5

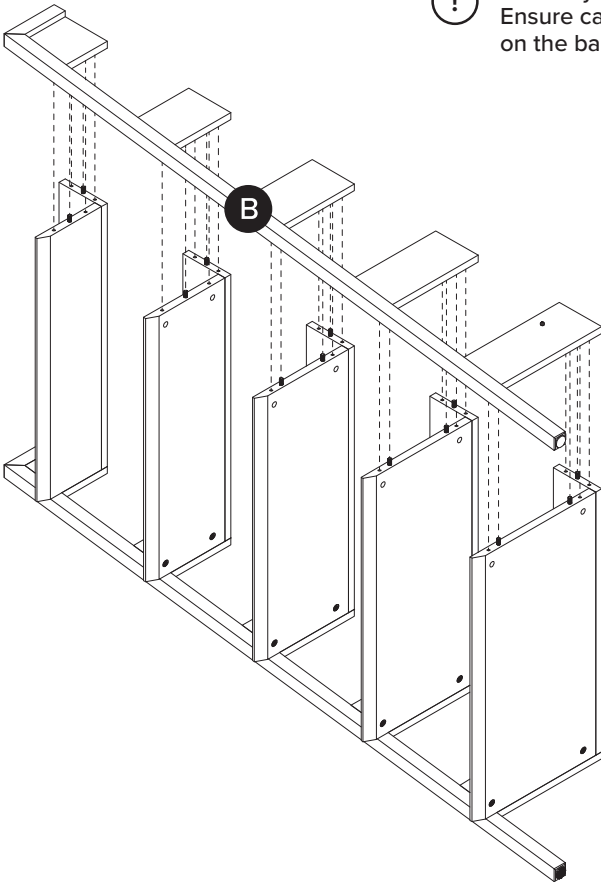

Insert cam lock nuts (J) and turn with allen key (K) to secure. Ensure cam lock nuts are also secured on the backs of each shelf.

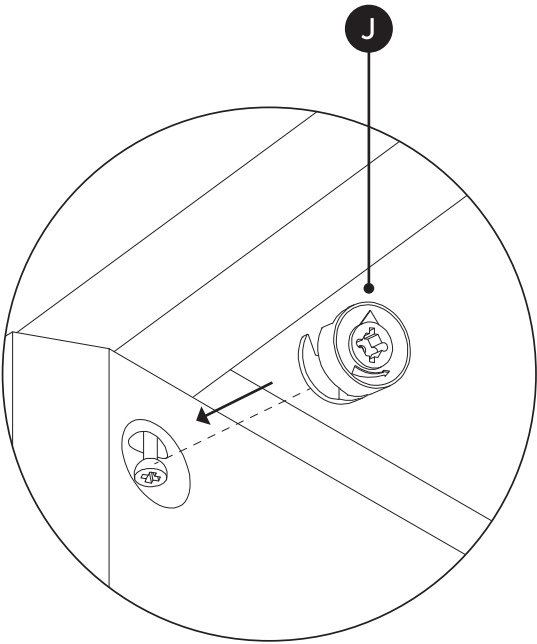

× 20

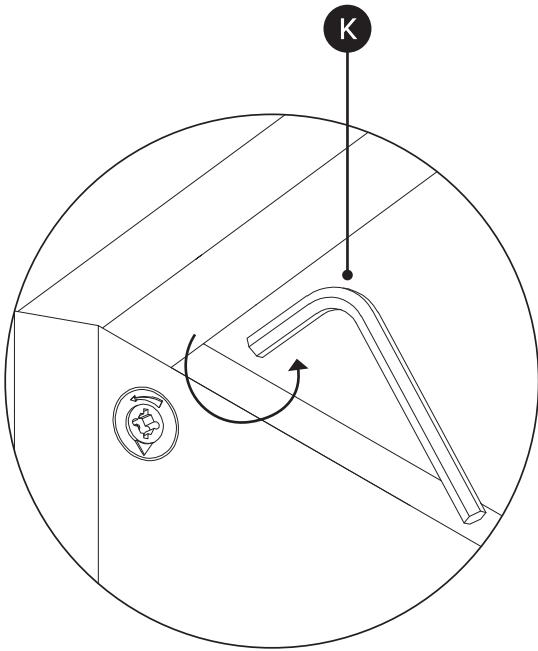




ANTI-TIP RESTRAINT INSTALLATION

WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:


- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

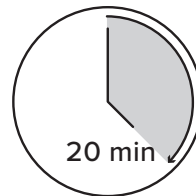


20 min

TIME

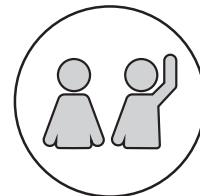


OF PEOPLE

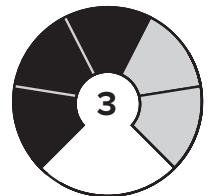


3

DIFFICULTY

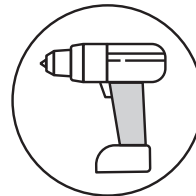


REQUIRED TOOL
8MM / 5/16" DRILL BIT

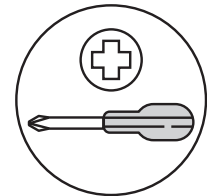


REQUIRED TOOL


1

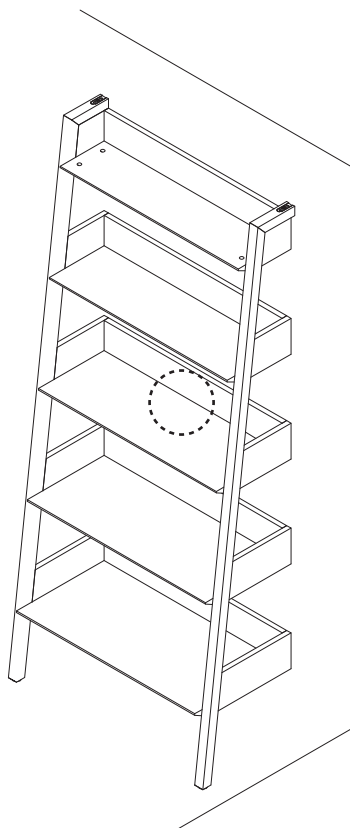


Attach one bracket (L) underneath third shelf in the middle of the unit.

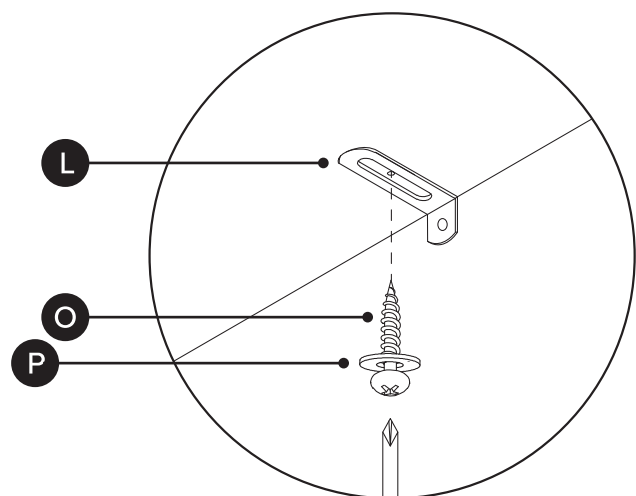

2

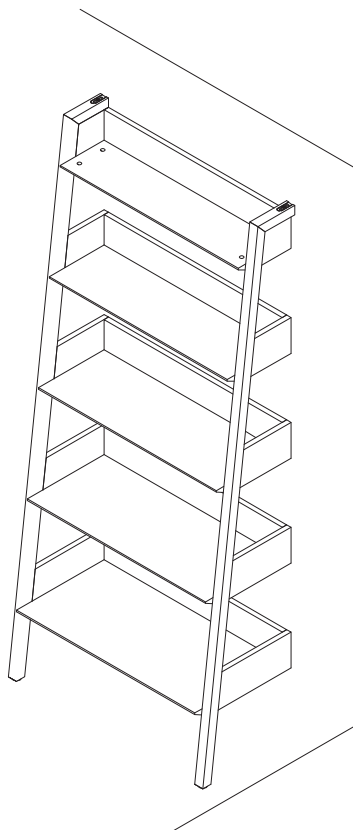

Place unit in desired location and mark on wall where holes should be drilled.



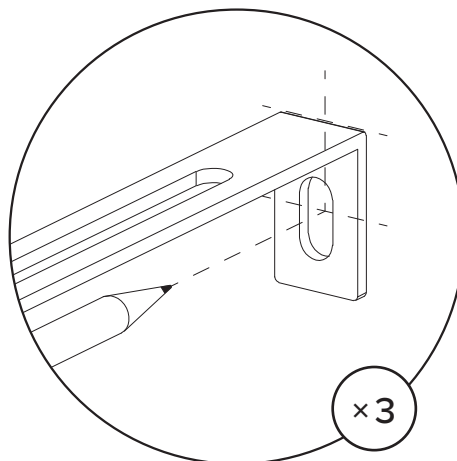


3




Hardware (M/N) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

Drill holes into drywall, insert wall plugs (M), and attach brackets to wall with screws (N).

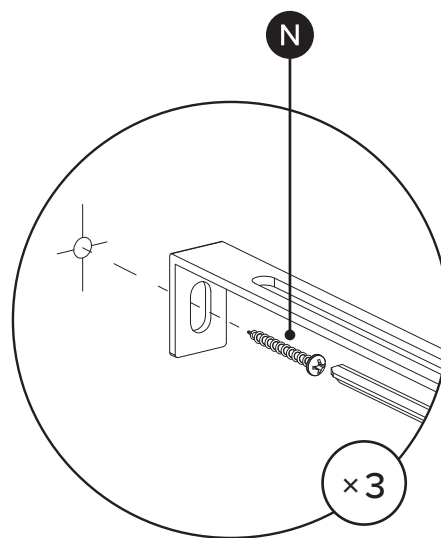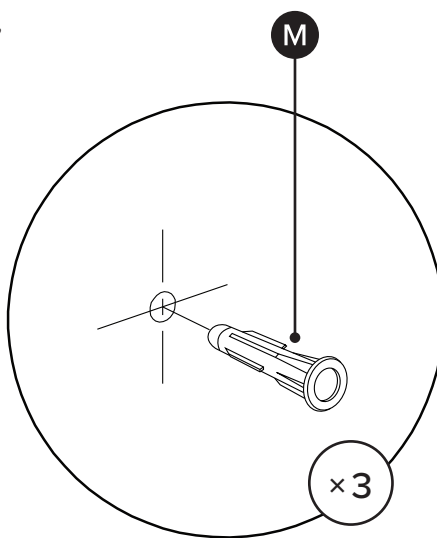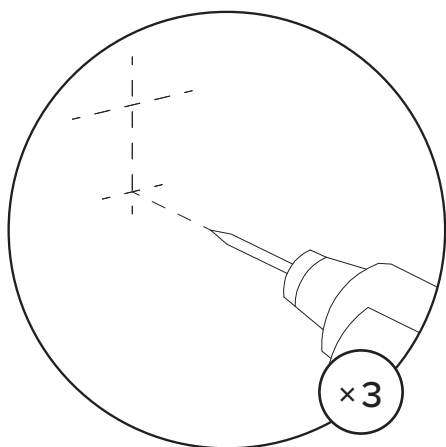

4

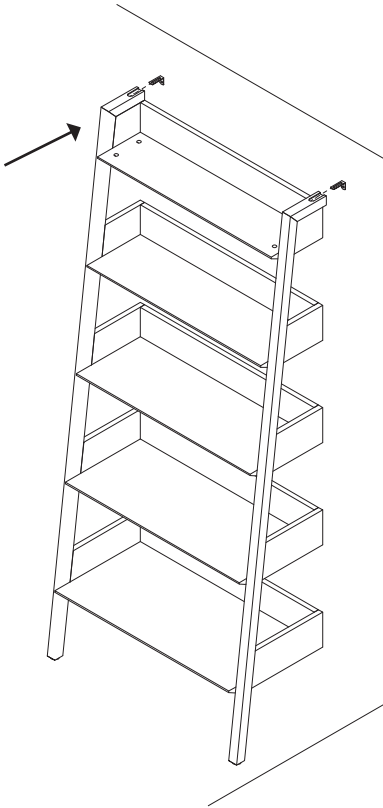

Attach brackets to top shelf from above.

