


# ARTICLE.

VERSION 1.1

## Assembly Instructions

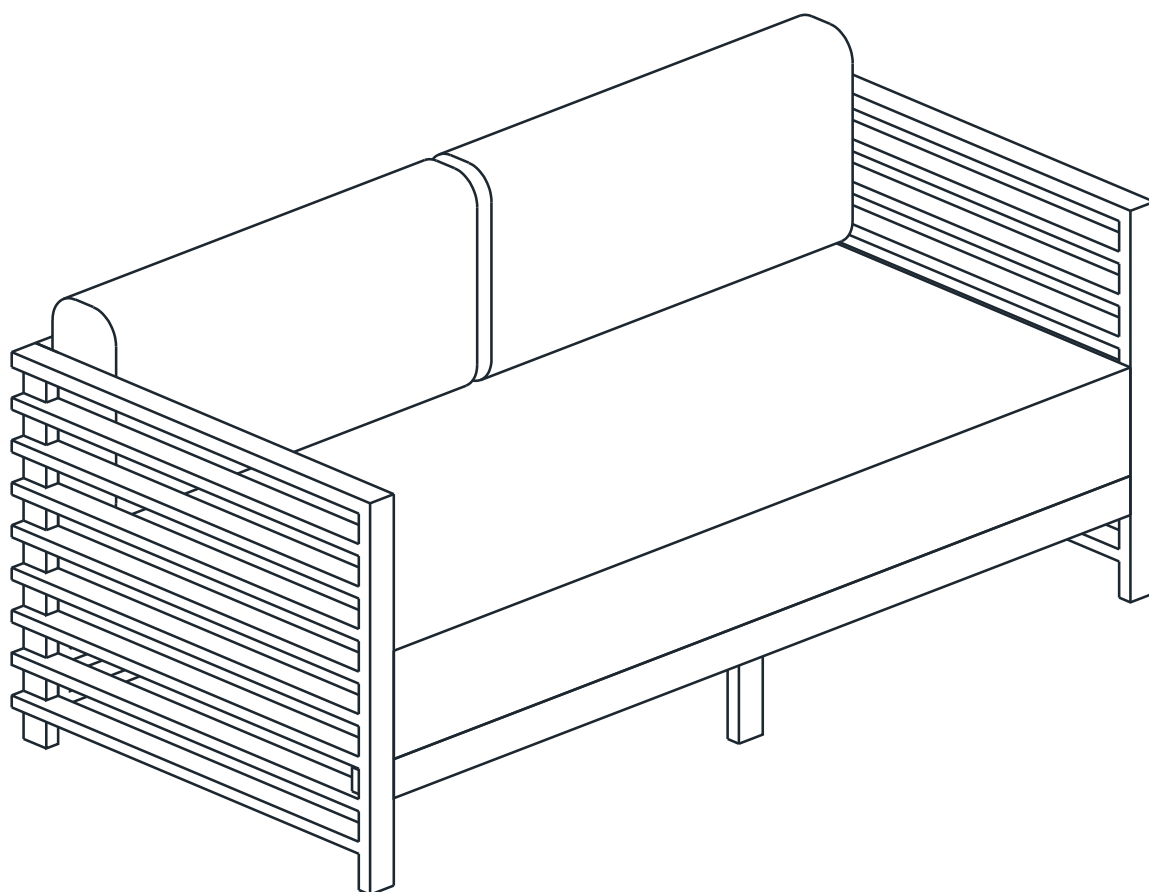

# KOPELIN

Sofa

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.


!

Hardware may loosen over time, check the bolts regularly and tighten if necessary.




20 min

TIME

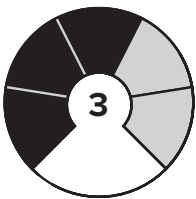


3

DIFFICULTY





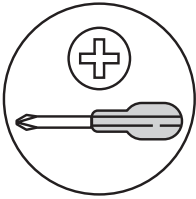


# OF PEOPLE





REQUIRED TOOL


| PARTS INVENTORY |                  |     |
|-----------------|------------------|-----|
| ID              | DESCRIPTION      | QTY |
| A               | FRONT FRAME      | 1   |
| B               | CENTER LEG       | 1   |
| C               | SOFA BACK        | 1   |
| D               | RIGHT SIDE FRAME | 1   |
| E               | LEFT SIDE FRAME  | 1   |
| F               | SEAT PANEL       | 2   |
| G               | SEAT CUSHION     | 1   |
| H               | BACK CUSHION     | 2   |

| PARTS INVENTORY CONT. |   |     |
|-----------------------|---|-----|
| ID                    | DESCRIPTION   | QTY |
| I                     | M6 × 35MM SCREW  | 4   |
| J                     | ALLEN KEY        | 1   |
| K                     | M6 × 40MM BOLT   | 6   |
| L                     | M6 × 70MM BOLT   | 2   |
| M                     | M4 × 25MM SCREW  | 4   |


1

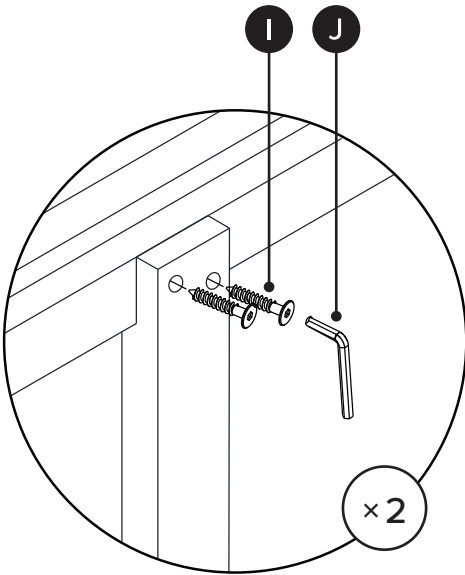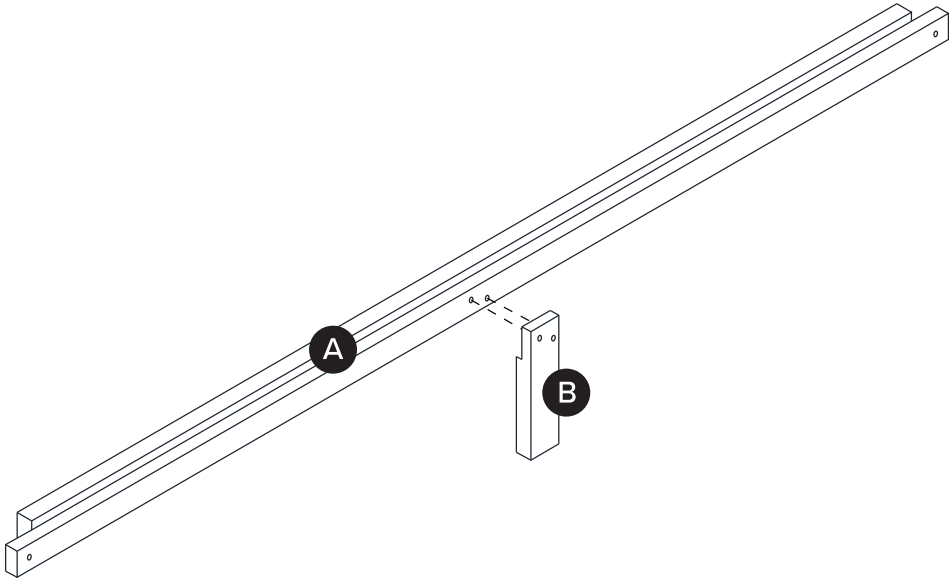


2

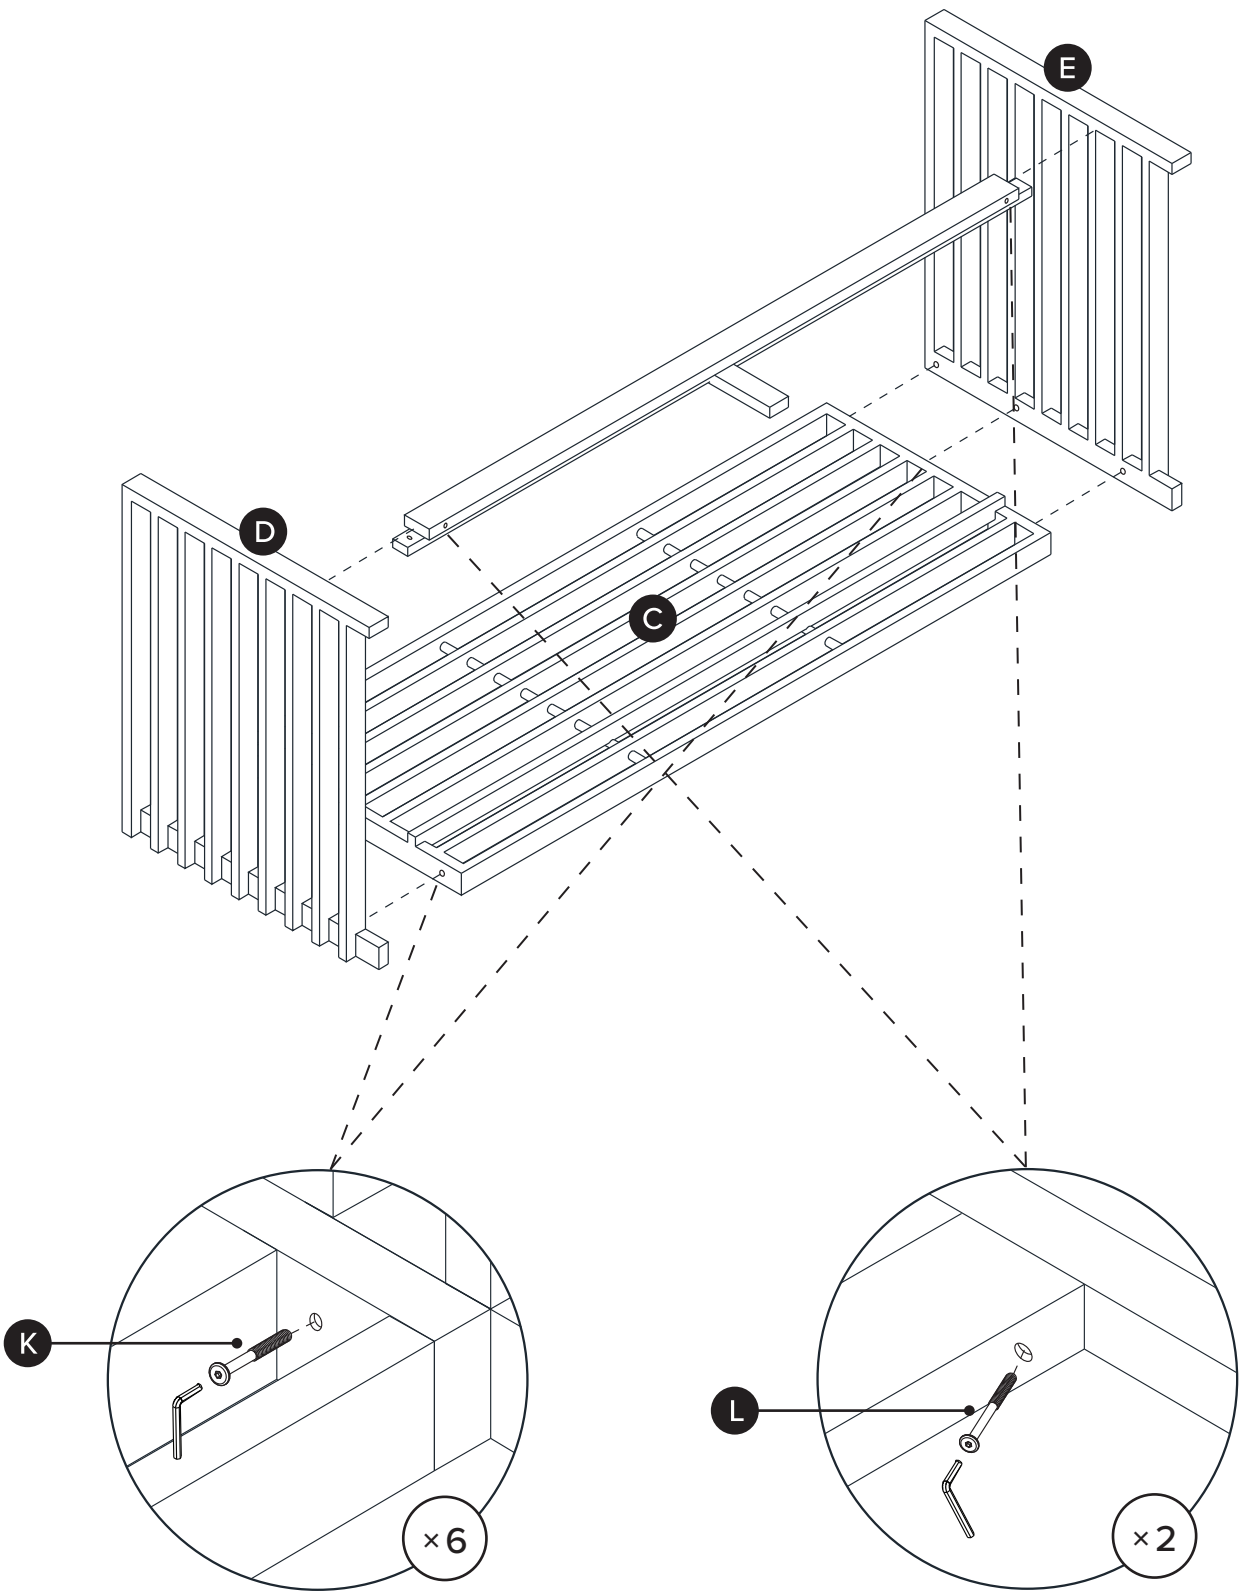

3

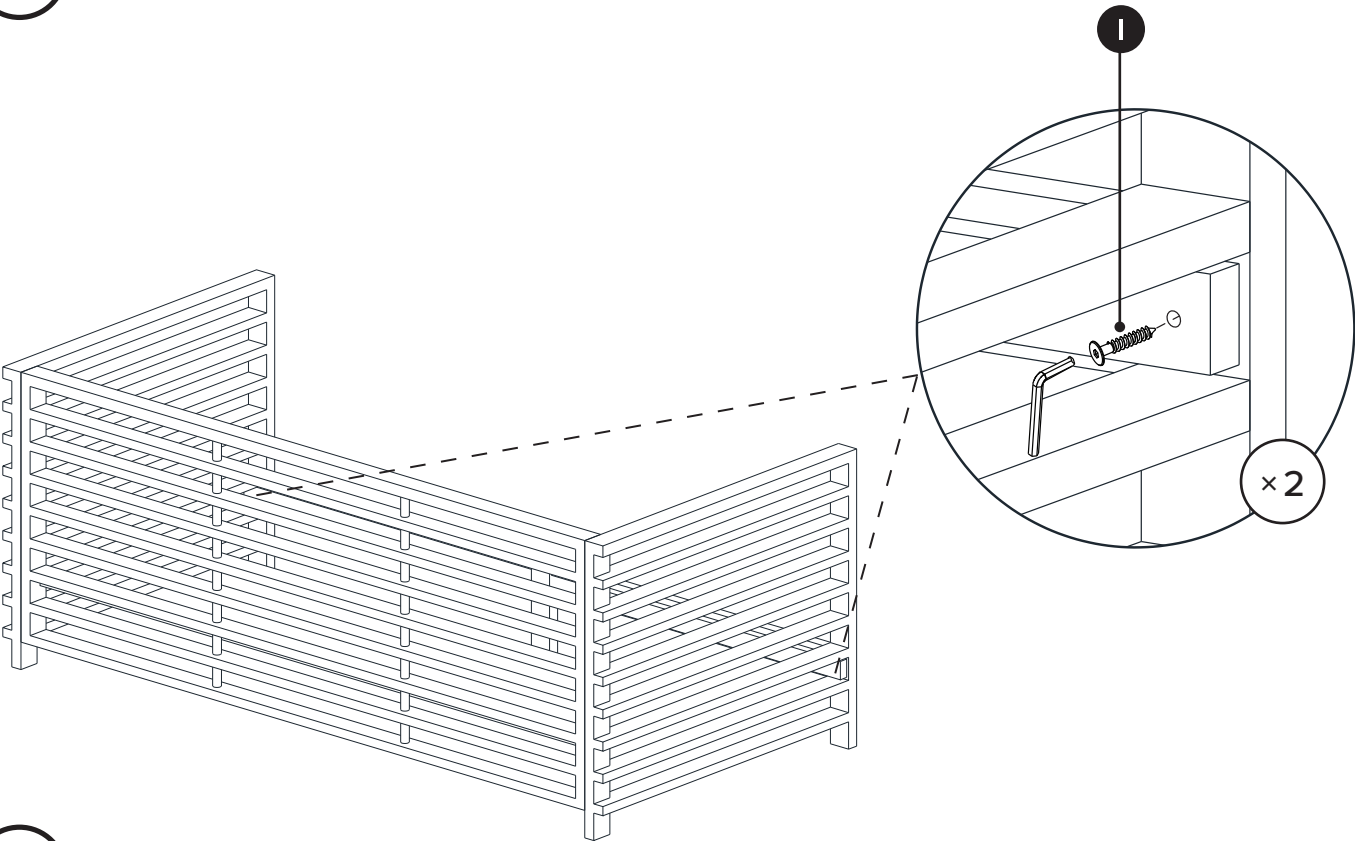

4

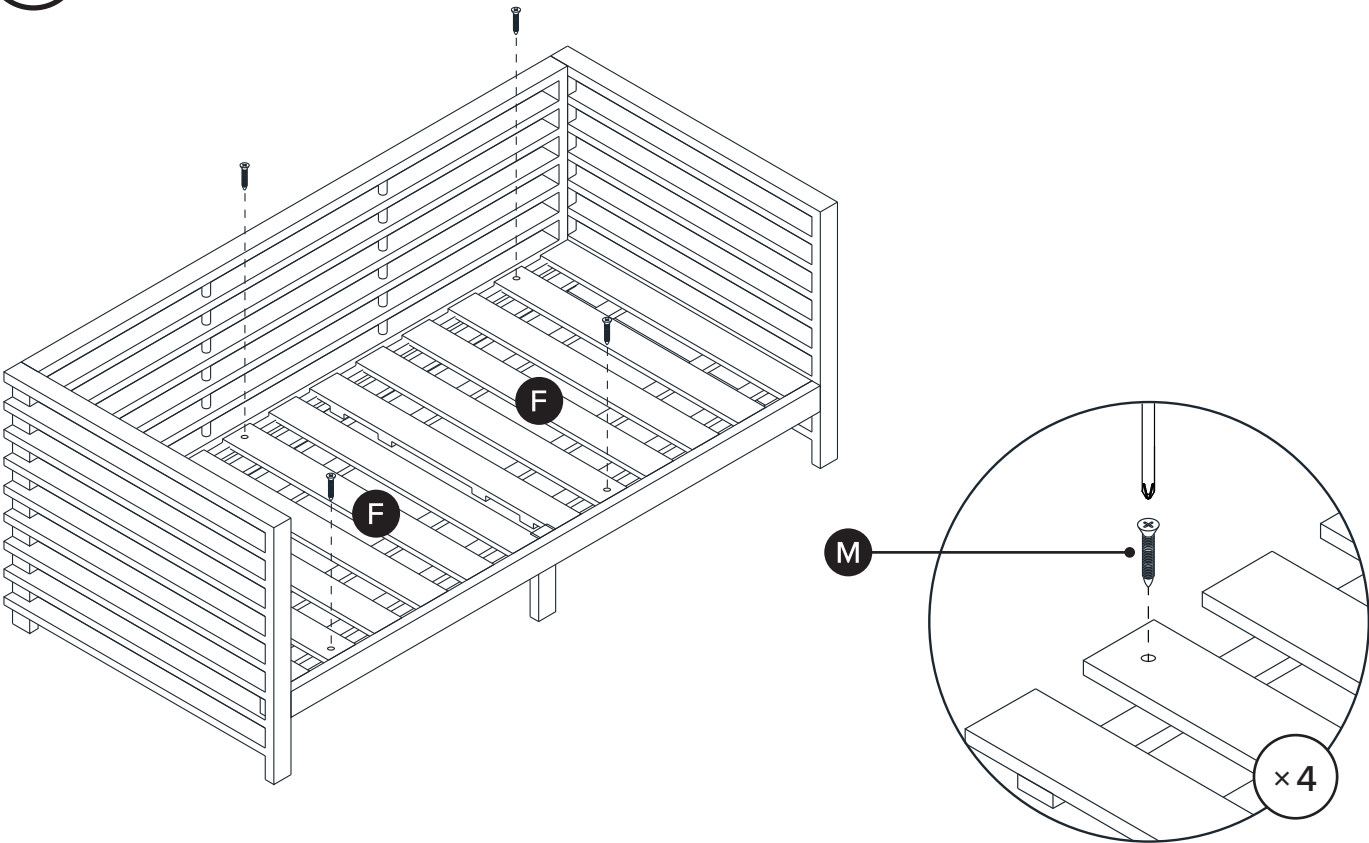

5

