


VERSION 1.0

Assembly Instructions

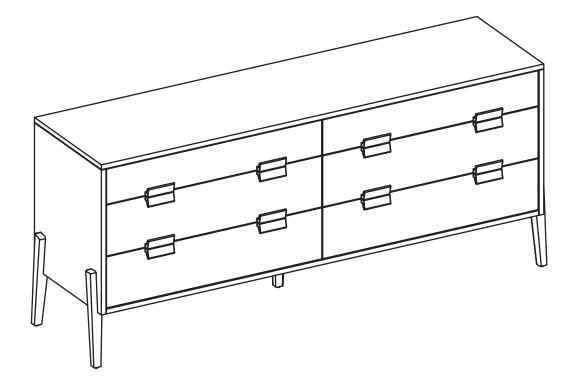

VIREO


6 Drawer Double Dresser

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.





TIME

OF PEOPLE







ANTI-TIP Installation Required


PARTS INVENTORY				
ID	DESCRIPTION		QTY	
A	RIGHT DRAWER		1	
B	LEFT DRAWER		1	
C	LEG 1		1	
D	LEG 2		1	
B	LEG 3		1	
Ð	LEG 4		1	
G	MIDDLE LEG		1	
Ð	ALLEN KEY		1	
0	BOLT		8	
J	LOCK WASHER	Ð	8	
K	WASHER		8	


ARTICLE.

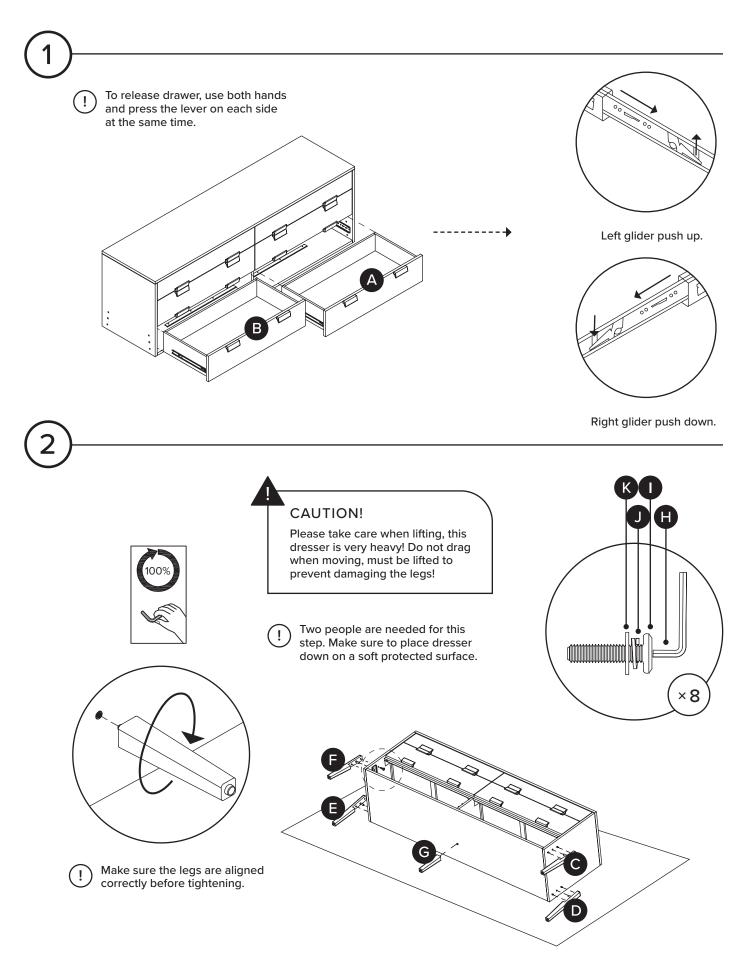


ARTICLE.



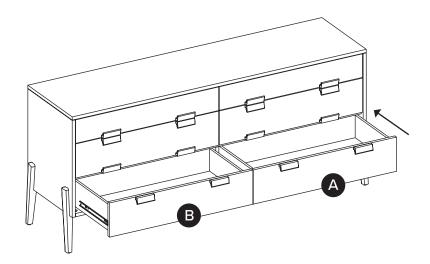



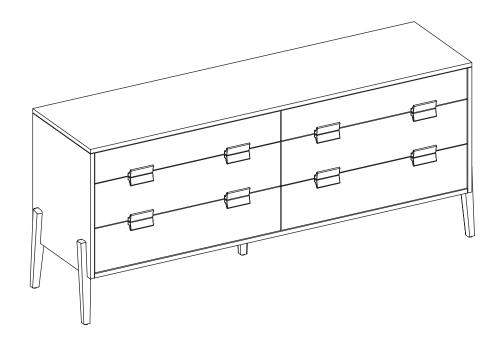

ARTICLE. 1010 Raymur Ave. Vancouver, BC V6A 3T2




ANTI-TIP RESTRAINT INSTALLATION



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided. •
- NEVER put a TV on this product. •
- NEVER allow children to stand, climb or hang • on drawers, doors, or shelves.
- NEVER open more than one drawer at a time. •
- Place heaviest items in the lower drawers. •








TIME

OF PEOPLE

DIFFICULTY

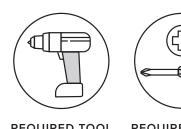




REQUIRED TOOL 8MM / 5/16" DRILL BIT

REQUIRED TOOL

PARTS INVENTORY				
ID	DESCRIPTION		QTY	
A	BRACKET		4	
B	M4 × 20MM SCREW	Omm	4	
C	M8 × 51MM PLUG		4	
D	M6 × 70MM SCREW	annach	4	
₿	STRAP	0	2	


Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

ARTICLE.

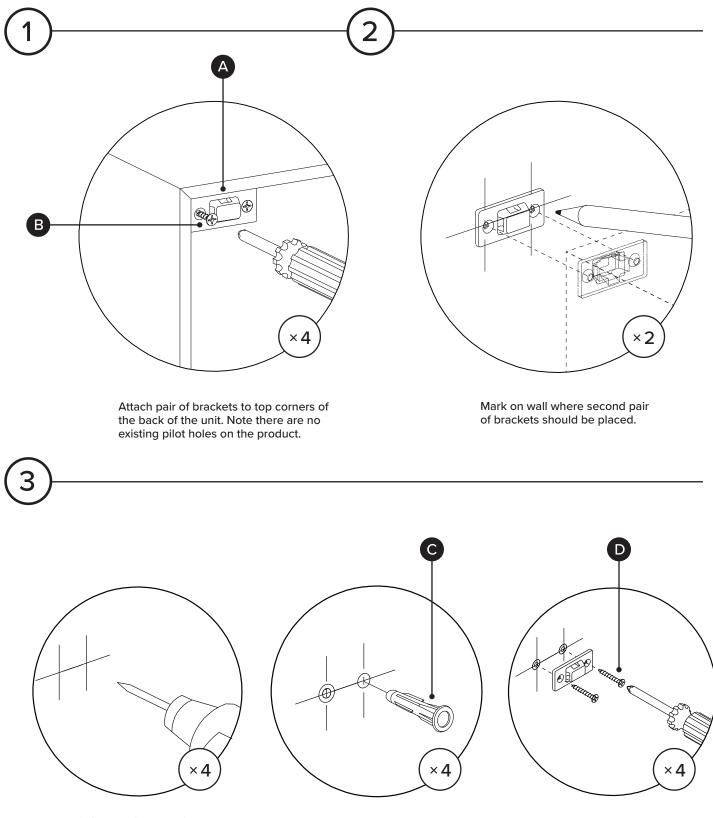



Drill holes in wall using 8mm / 5/16" drill bit.



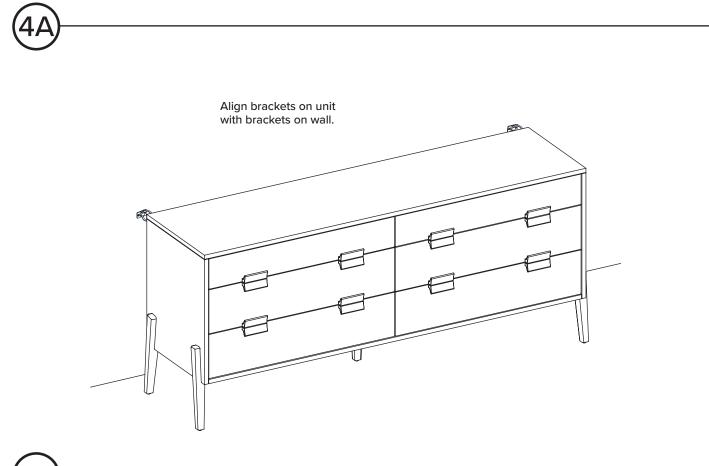



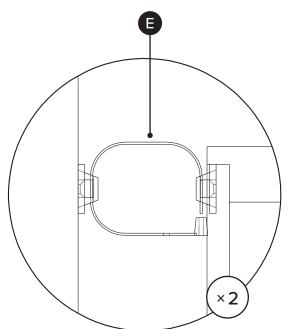

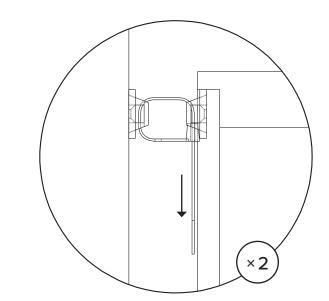

Pull strap down until it snap-locks.