


# ARTICLE.

VERSION 1.0

## Assembly Instructions

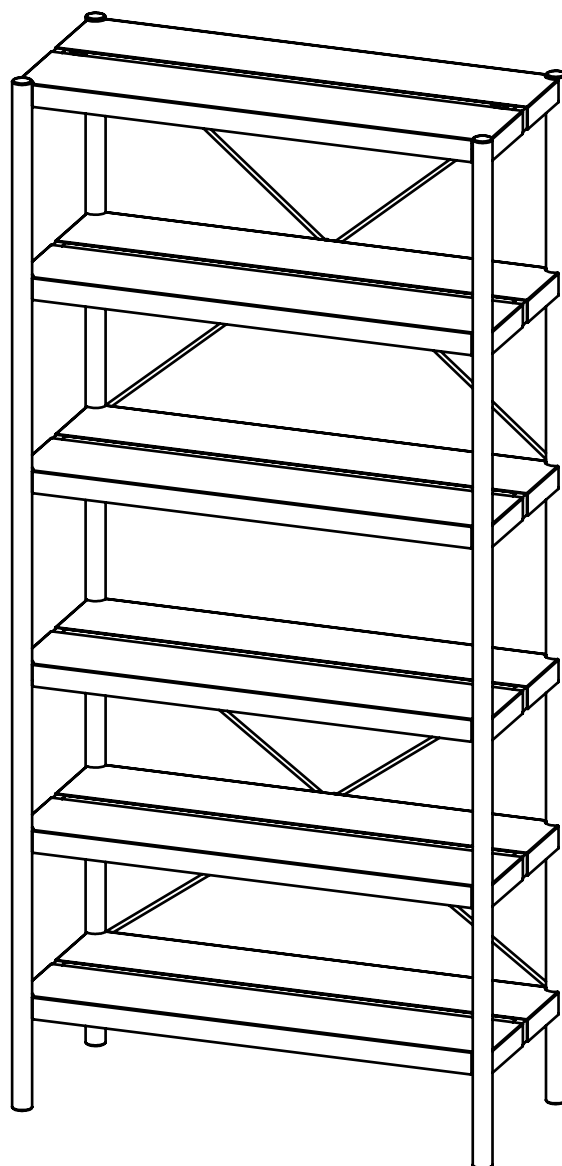

# ROSCOE


Tall Bookcase

## ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email [service@article.com](mailto:service@article.com) or chat live at [article.com](https://www.article.com).

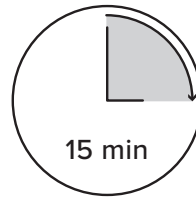


TIME







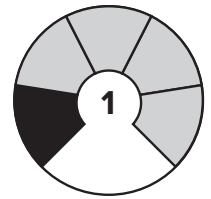



# OF PEOPLE

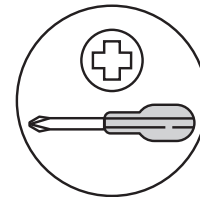





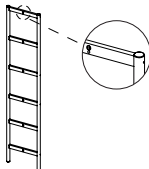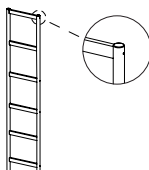



DIFFICULTY




REQUIRED TOOLS


PARTS INVENTORY		
ID	DESCRIPTION	QTY
<b>A</b>	LEG 1 	1
<b>B</b>	LEG 2 	1
<b>C</b>	BEAM 	6
<b>D</b>	WOOD DOWEL 	12
<b>E</b>	PANEL 	12
<b>F</b>	1084MM BACK BEAM 	2
<b>G</b>	1145MM BACK BEAM 	2
<b>H</b>	BUTTERFLY NUT 	4

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
<b>I</b>	M6 × 30MM BOLT 	12
<b>J</b>	M6 × 15MM BOLT 	34
<b>K</b>	BOLT NUT 	2
<b>L</b>	M8 × 51MM PLUG 	2
<b>M</b>	SCREW 	2
<b>N</b>	STRAP 	2
<b>O</b>	WRENCH 	1
<b>P</b>	ALLEN KEY 	1



1

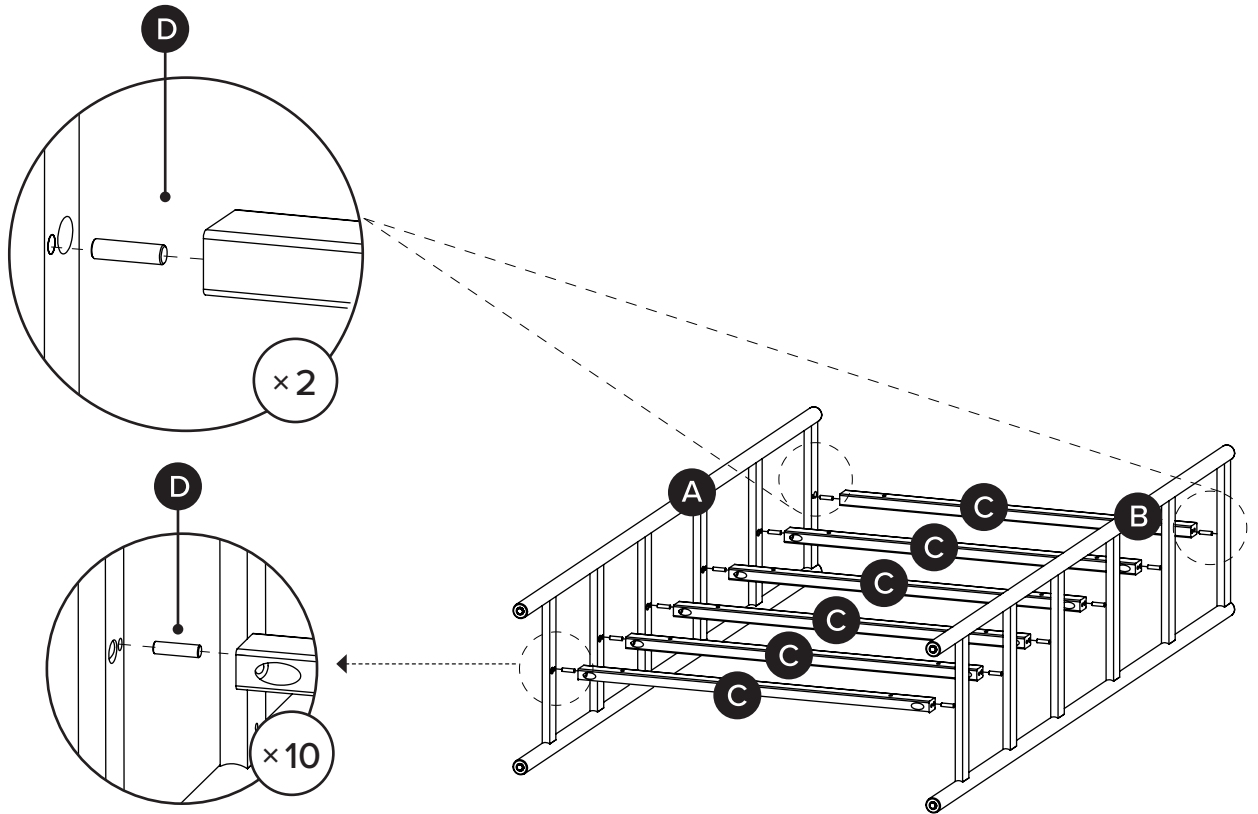




2

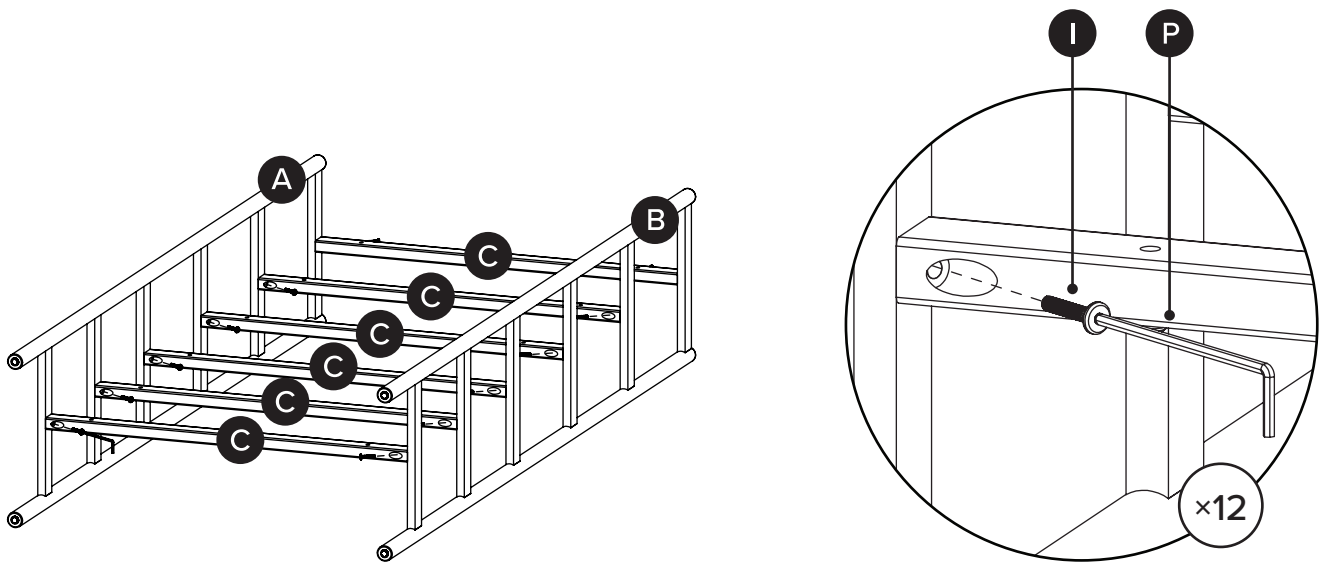



3

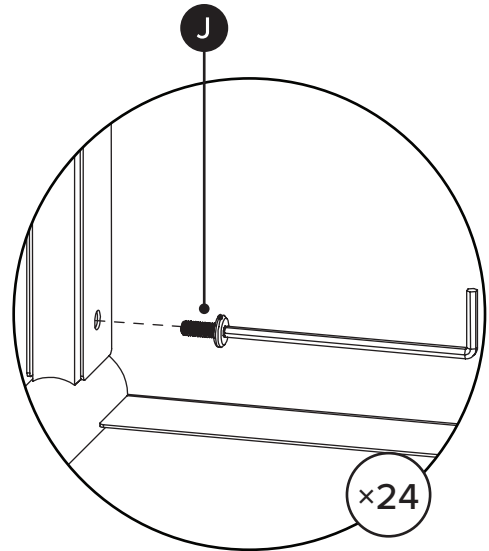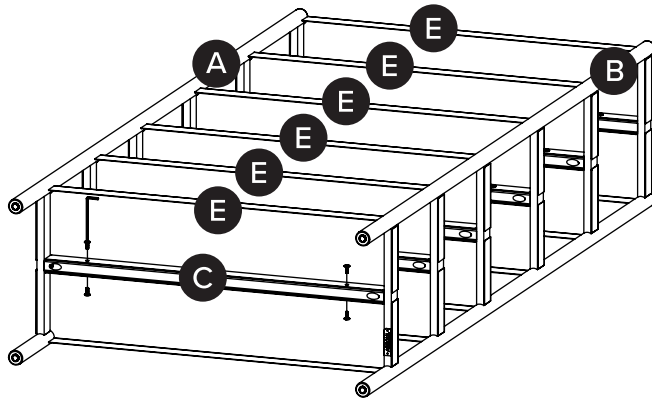

4

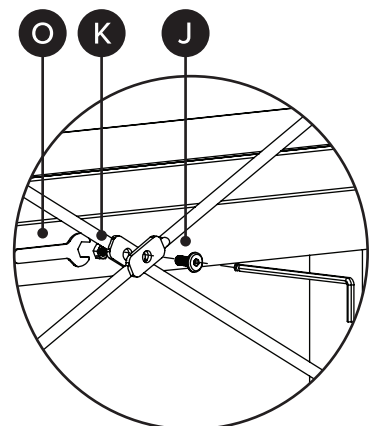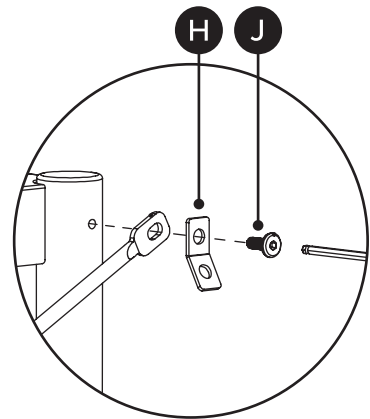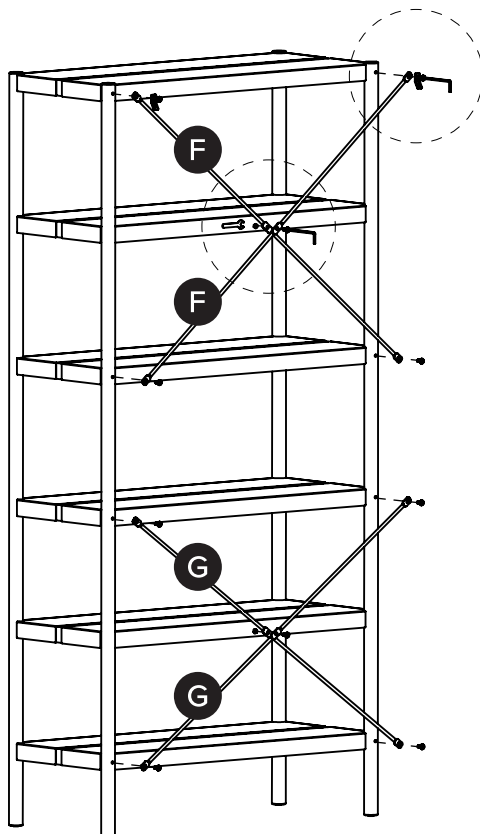

5

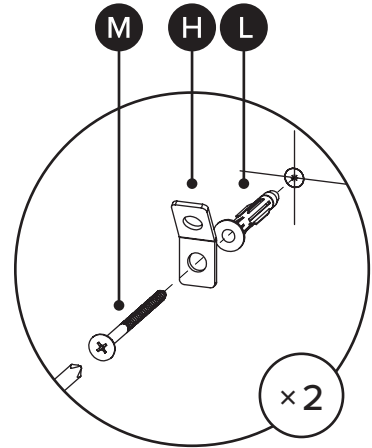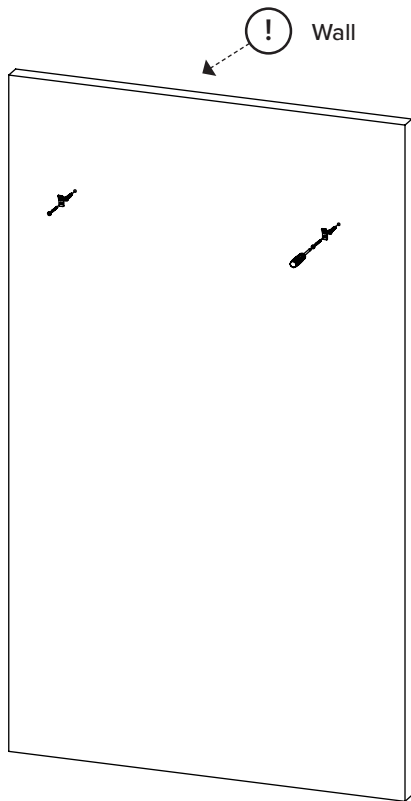

6

