ARTICLE.

Assembly Instructions



NERA

Cabinet

ARTICLE. NERA Cabinet Page 2 of 13

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.






| PARTS INVENTORY | | | | |
|-----------------|----------------|-----|-----|--|
| ID | DESCRIPTION | | QTY | |
| A | LEG FRAME | | 2 | |
| В | SHELF | | 2 | |
| G | M6 × 15MM BOLT | | 12 | |
| D | ALLEN KEY | *** | 1 | |
| B | SHELF PIN | | 8 | |

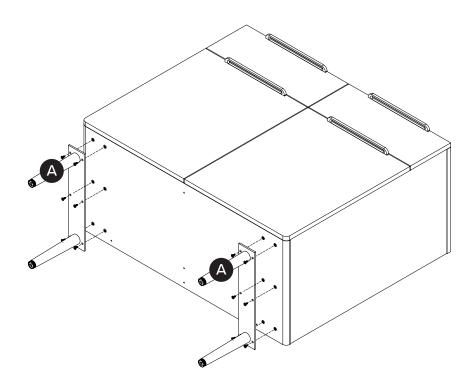

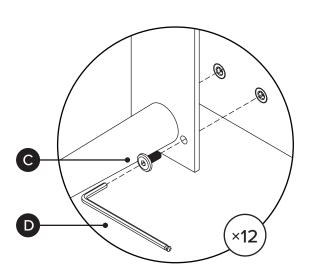




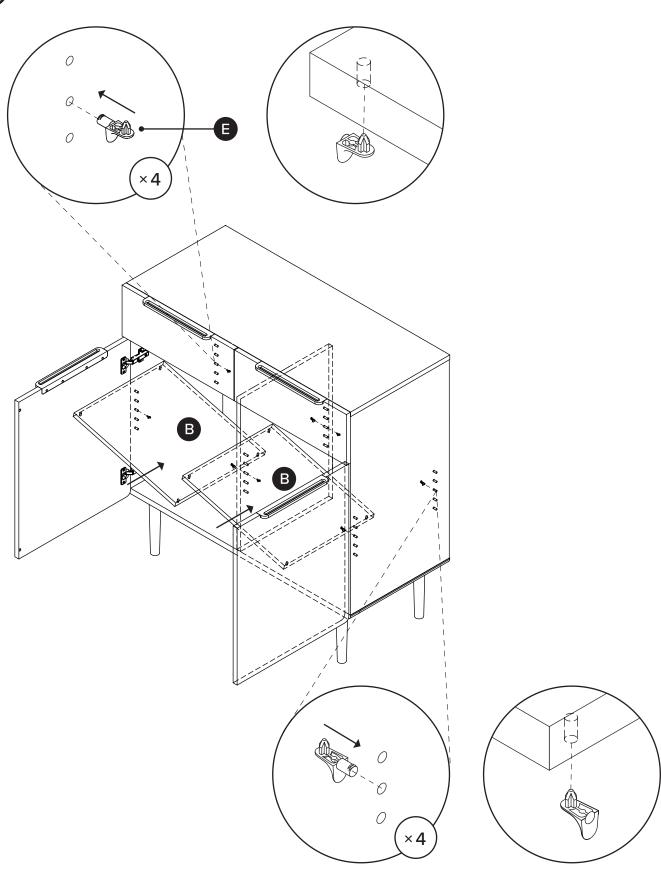







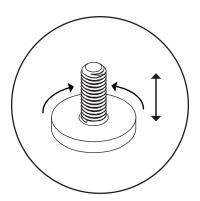


Adjust levelers on legs as needed.




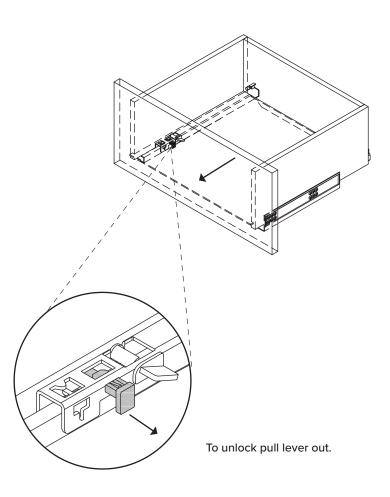


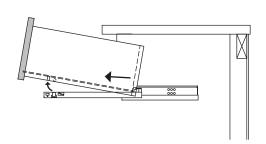


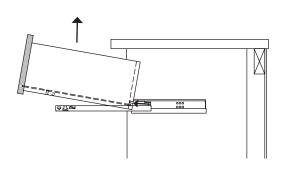




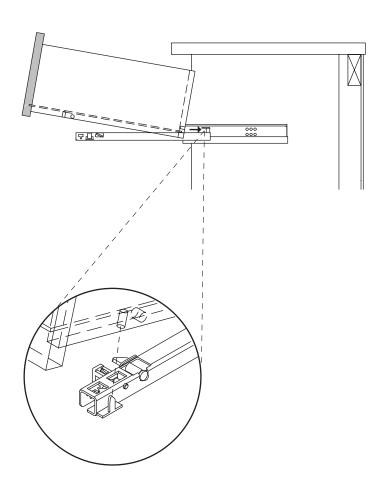


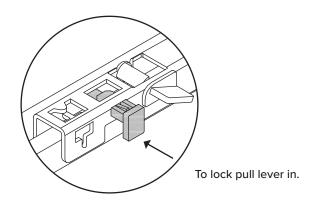


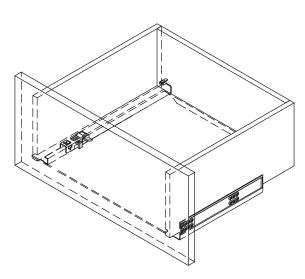




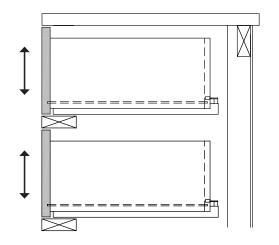

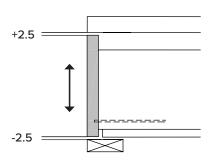

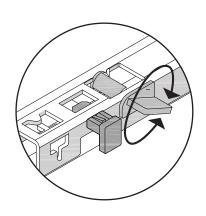


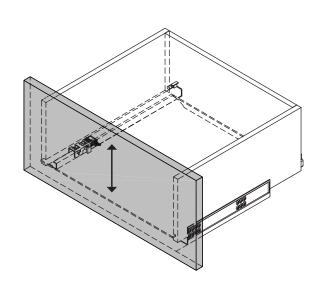

ARTICLE. NERA Cabinet Page 9 of 13


DOOR ADJUSTMENT INSTRUCTIONS

During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




REQUIRED TOOL




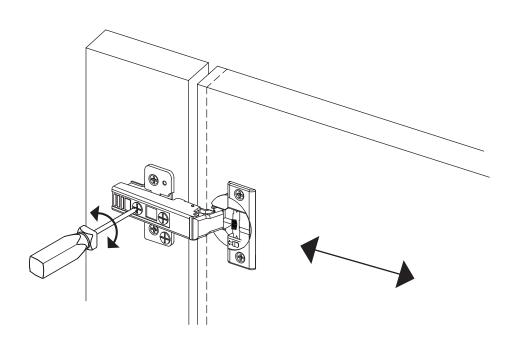




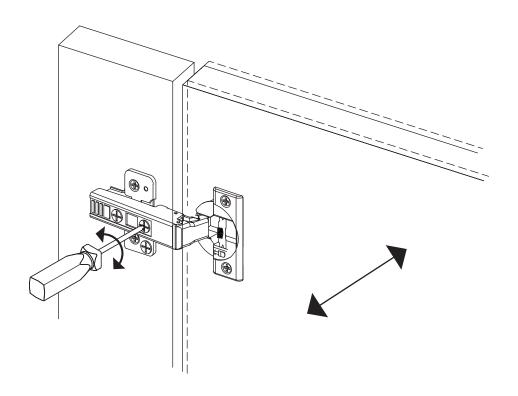

(8)

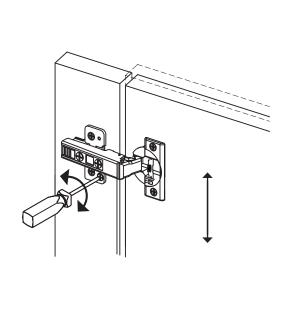

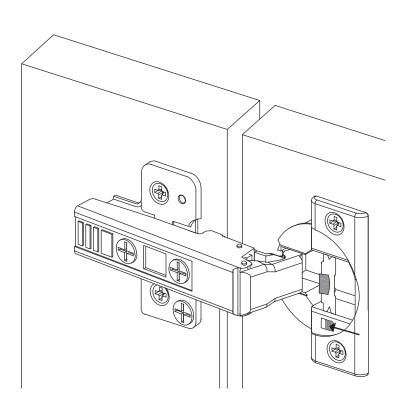

1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION



WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- · Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.








REQUIRED TOOL 8MM / 5/16" DRILL BIT

REQUIRED TOOL


| PARTS INVENTORY | | | | |
|-----------------|-----------------|-------|-----|--|
| ID | DESCRIPTION | | QTY | |
| A | BRACKET | | 4 | |
| B | M4 × 17MM SCREW | gram. | 4 | |
| G | M8 × 51MM PLUG | | 4 | |
| D | M6 × 70MM SCREW | Gunna | 4 | |
| • | STRAP | | 2 | |

Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



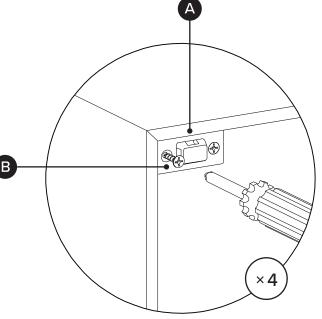


Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

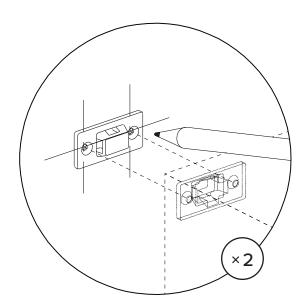

Mark on wall where second pair of brackets should be placed.



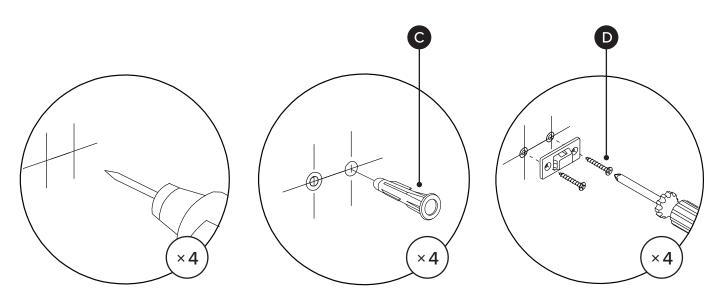


Drill holes in wall using 8mm / 5/16" drill bit.



Align brackets on unit with brackets on wall.





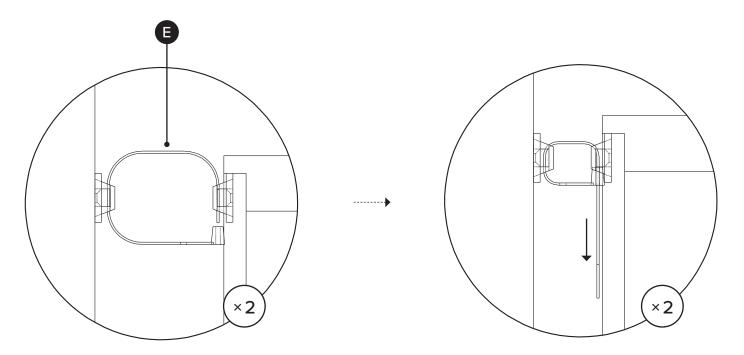

Pull strap down until it snap-locks.