


ARTICLE.

VERSION 1.0

Assembly Instructions

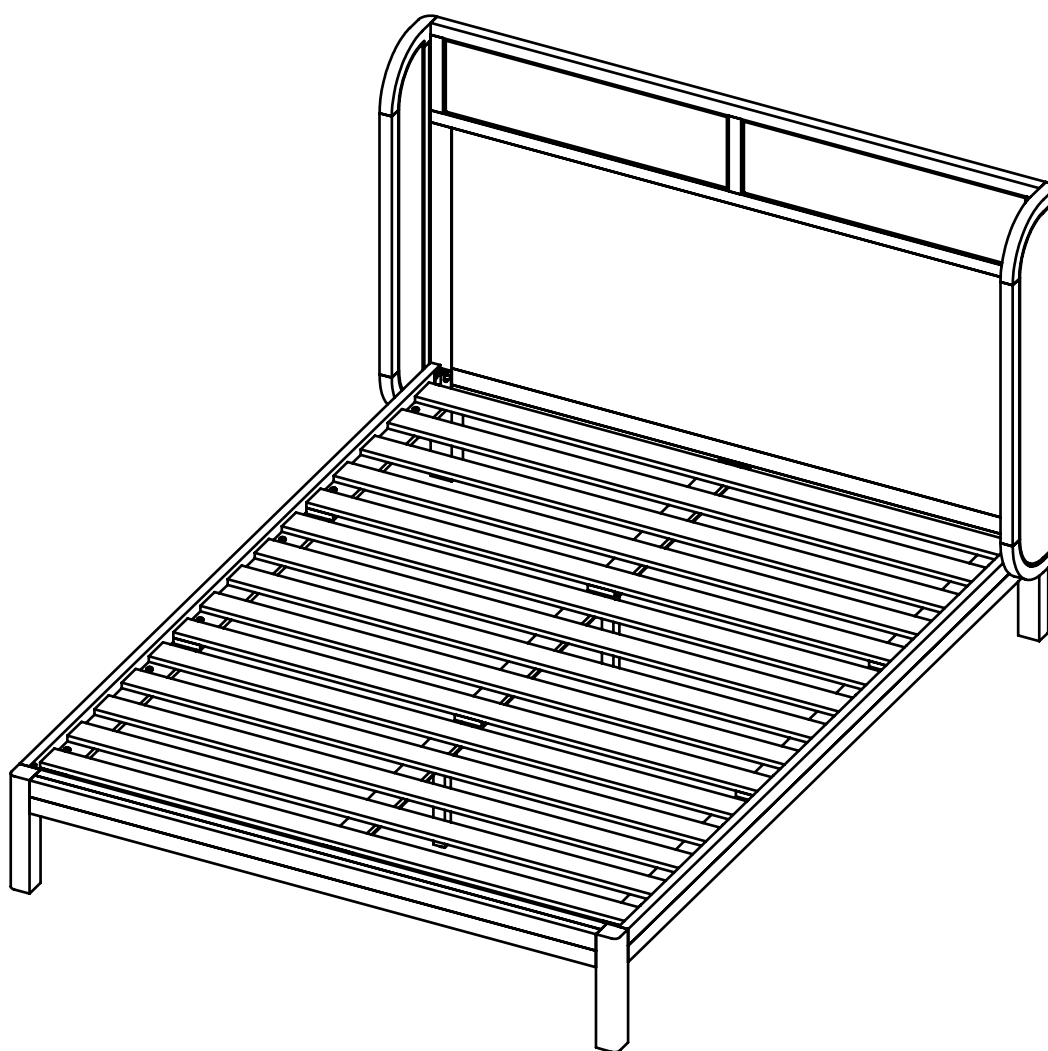

CANDRA


Bed

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email service@article.com or chat live at article.com.



Structural integrity is only guaranteed if all bolts are installed and properly tightened.



TIME



OF PEOPLE













DIFFICULTY



DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	RIGHT SIDE FRAME	1
C	LEFT SIDE FRAME	1
D	FOOTBOARD	1
E	CENTER FRAME WITH LEGS	1
F	SLATS	3

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
G	ALLEN KEY 	1
H	M8 × 30MM BOLT 	8
I	M8 LOCK WASHER 	8
J	M8 WASHER 	8
K	M6 × 40MM BOLT 	14
L	M6 × 50MM BOLT 	2
M	M6 WASHER 	14
N	M6 LOCK WASHER 	16
O	M6 NUT 	2
P	SPANNER 	1




1





! Do not fully tighten bolts. Ensure all 4 legs are tightened by 85%.





! Once all bolts are in place, fully tighten.

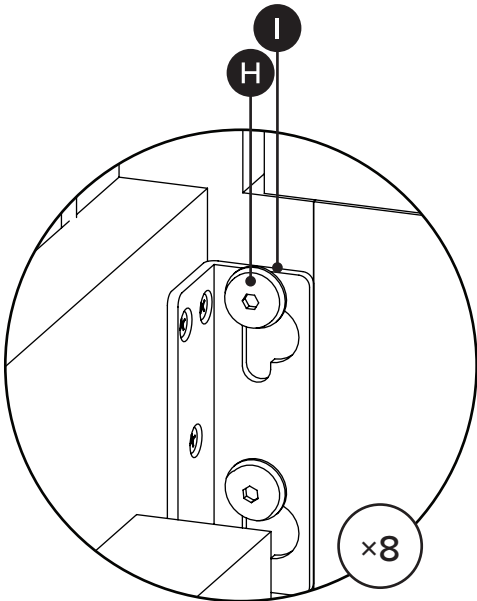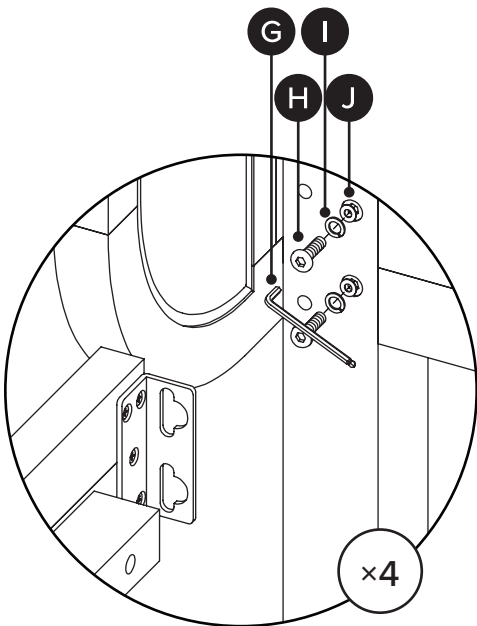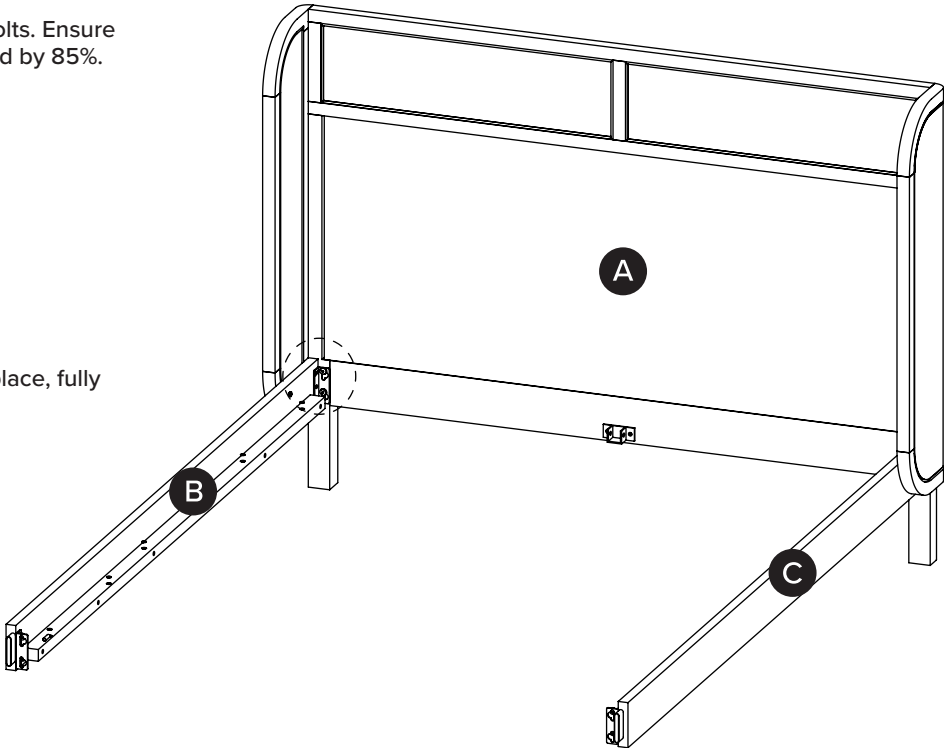


2

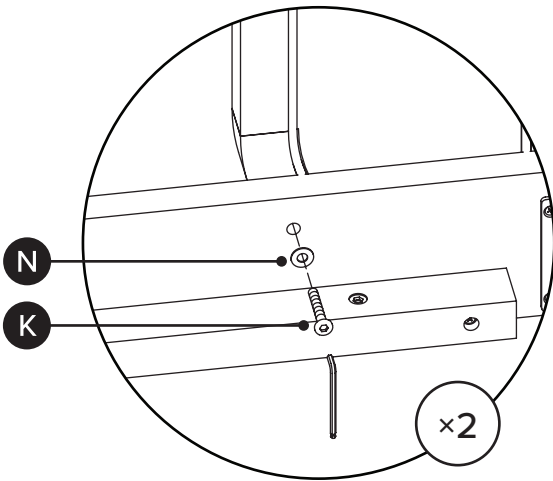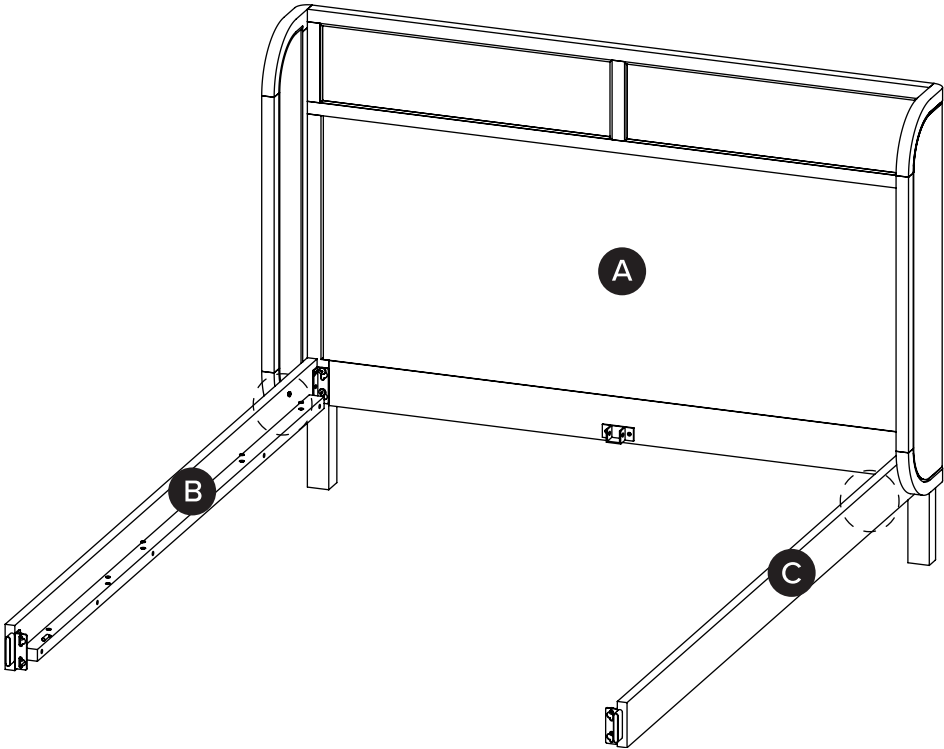

3


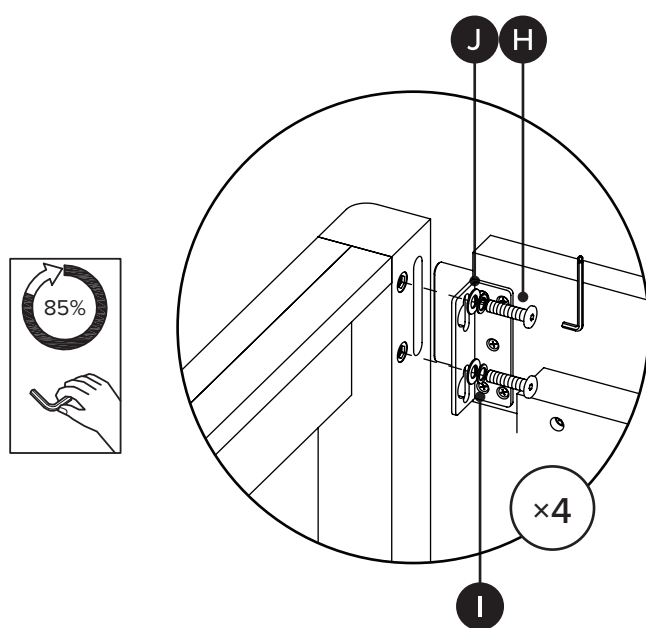
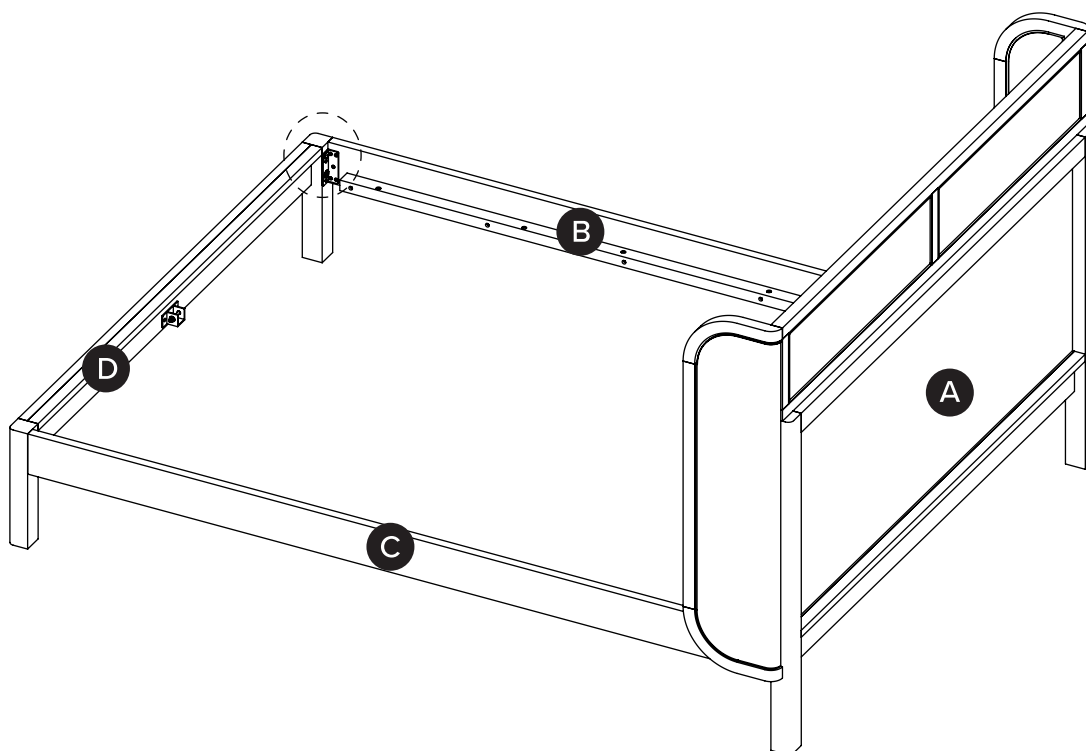


! Do not fully tighten bolts. Ensure all 4 legs are tightened by 85%.

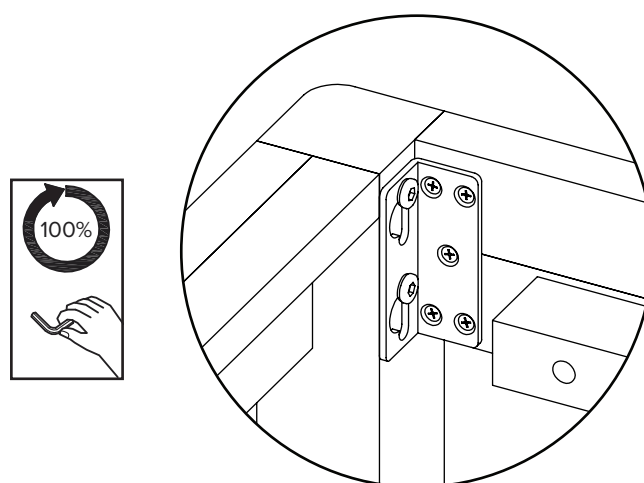


! Once all bolts are in place, fully tighten.

4

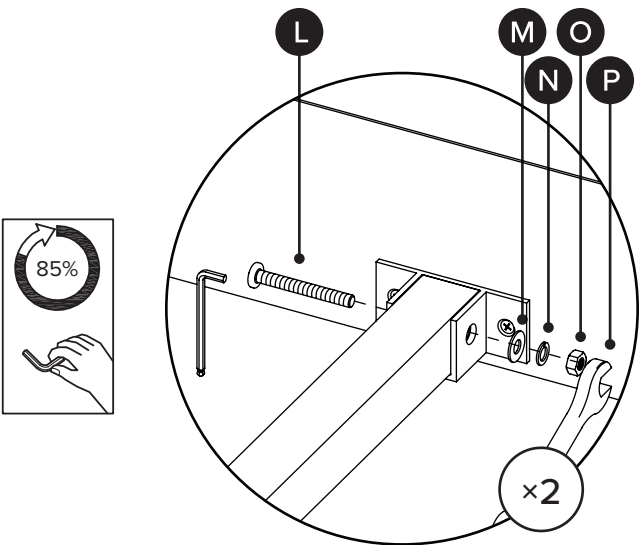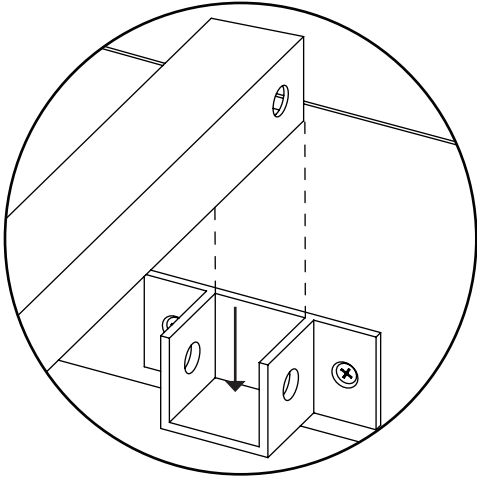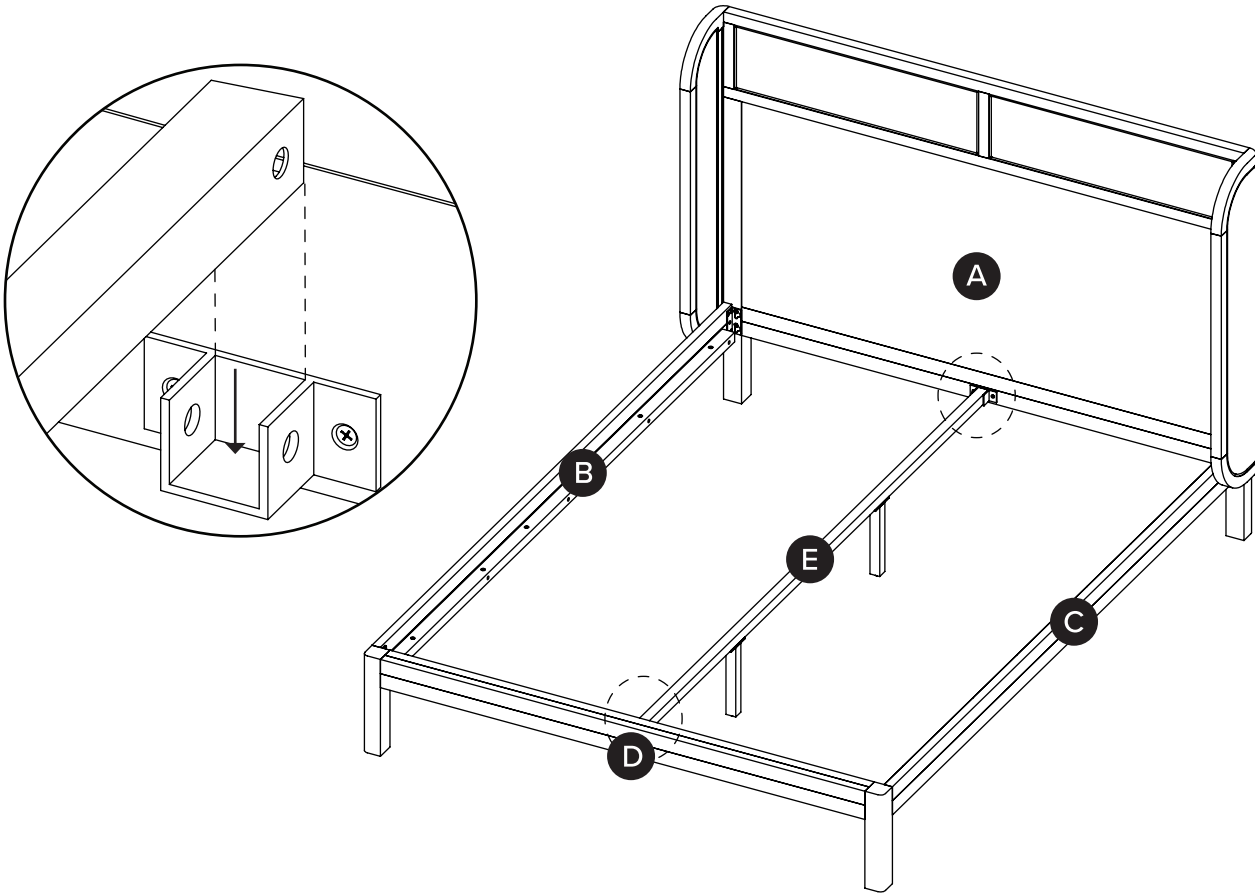


! Do not fully tighten bolts. Ensure all 4 legs are tightened by 85%.


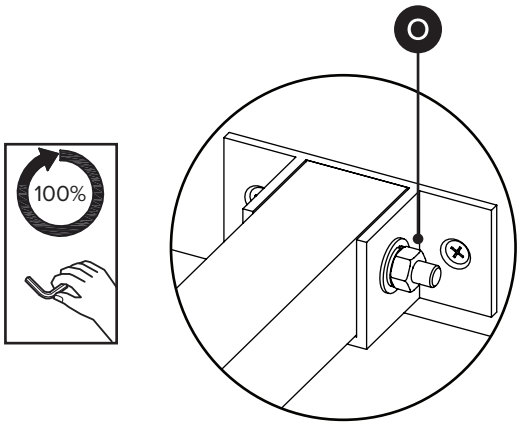


! Once all bolts are in place, fully tighten.

5

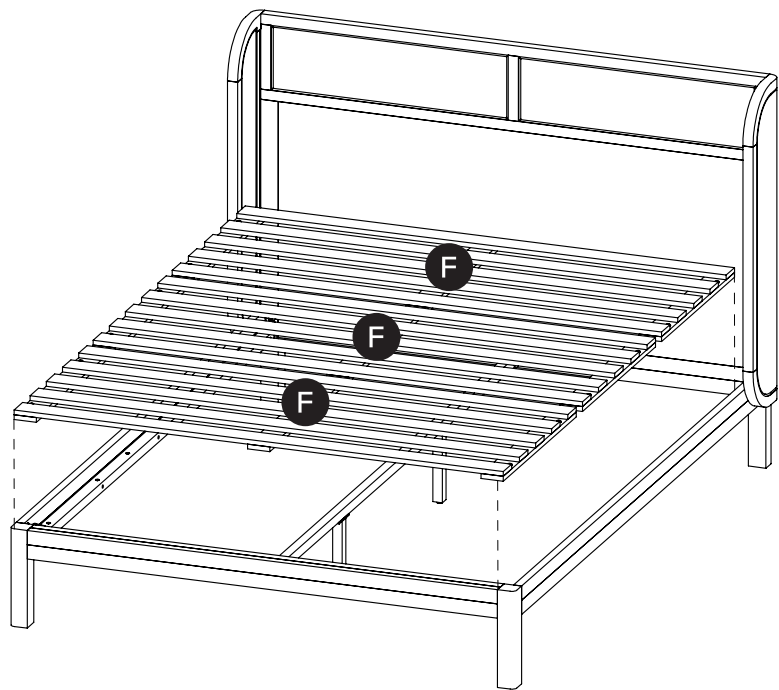

6

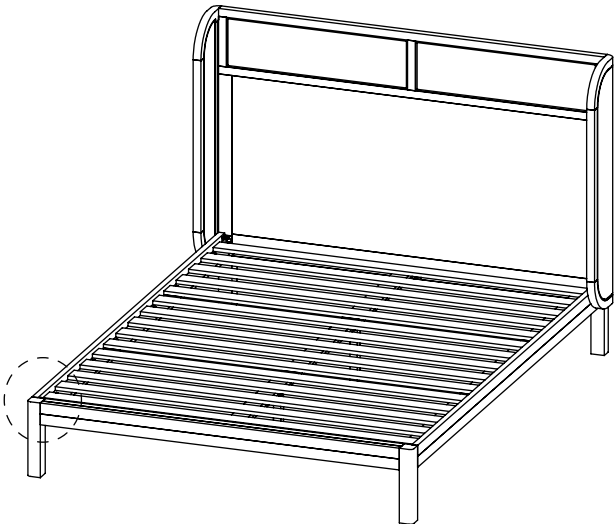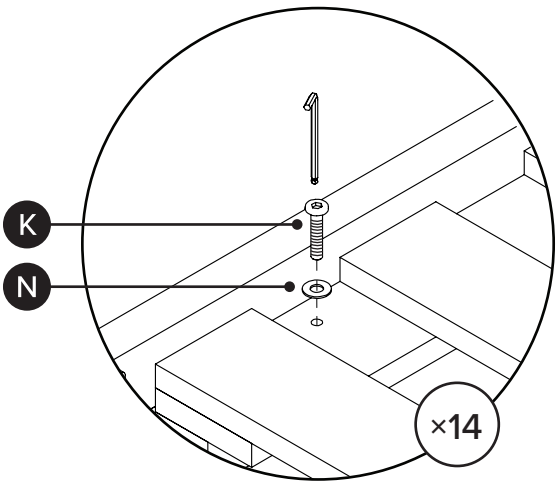

! Do not fully tighten bolts. Ensure all 4 legs are tightened by 85%.



! Once all bolts are in place, fully tighten bolts on slats.