
ARTICLE.

Assembly Instructions

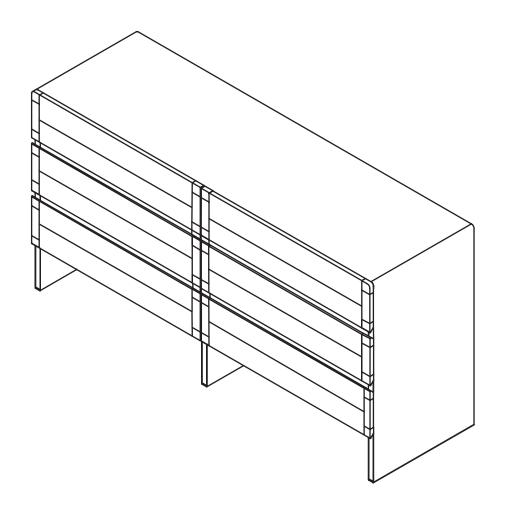

MONTEREY

6 Drawer Dresser

ARTICLE.

1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION



WARNING!

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.








TIME

OF PEOPLE

DIFFICULTY






REQUIRED TOOL REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	M8 × 38MM SCREW	(x)	4
B	M8 × 15MM SCREW		4
G	WALL BRACKET		4
D	AIRCRAFT CABLE		2
B	CLEVIS PIN	0	4
•	HAIR CLIP		4


 $(\cdot]$

Hardware (B/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

(1)

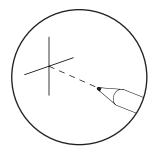

Mark on wall where brackets should be placed.

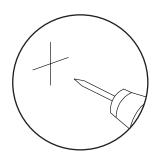

Drill hole in the wall using the drill bit.

