


ARTICLE.

Assembly Instructions



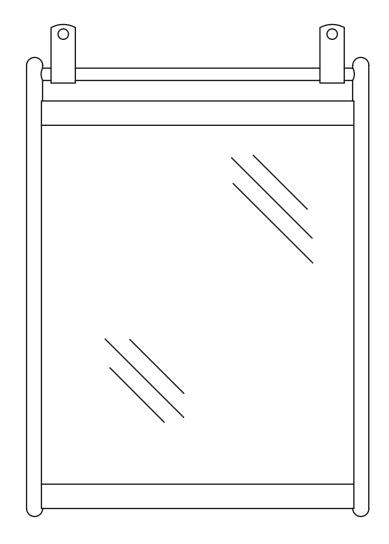

Wall Mirror

ARTICLE. 1010 Raymur Ave. Vancouver, BC V6A 3T2




ANTI-TIP RESTRAINT INSTALLATION



Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:


- Install tip-over restraint provided. •
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, • shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.



TIME

OF PEOPLE DIFFICULTY

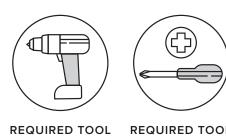

8MM / 5/16" DRILL BIT

REQUIRED TOOL

PARTS INVENTORY		
DESCRIPTION		QTY
PLUG		4
M5 × 32MM SCREW	Cumure	2
M4 × 20MM SCREW	Anna (2
METAL NUT		2
METAL SCREW		2
LEATHER STRAP	(o c)	2
	DESCRIPTION PLUG M5 × 32MM SCREW M4 × 20MM SCREW METAL NUT METAL SCREW	DESCRIPTION PLUG M5 × 32MM SCREW M4 × 20MM SCREW METAL NUT METAL SCREW

Hardware (A/B/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

