



# ANTI-TIP RESTRAINT INSTALLATION

## ! WARNING!

Children have died from furniture tipover.  
To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.




TIME




# OF PEOPLE

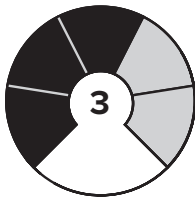






DIFFICULTY

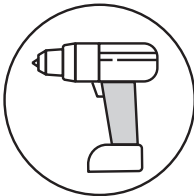

REQUIRED TOOL  
8MM / 5/16" DRILL BIT

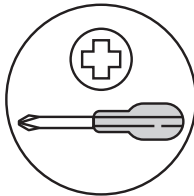


REQUIRED TOOL

| PARTS INVENTORY |                 |   |     |
|-----------------|-----------------|---|-----|
| ID              | DESCRIPTION     |   | QTY |
| A               | BRACKET         |  | 4   |
| B               | M4 × 20MM SCREW |  | 4   |
| C               | M8 × 51MM PLUG  |  | 4   |
| D               | M6 × 70MM SCREW |  | 4   |
| E               | STRAP           |  | 2   |


! Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

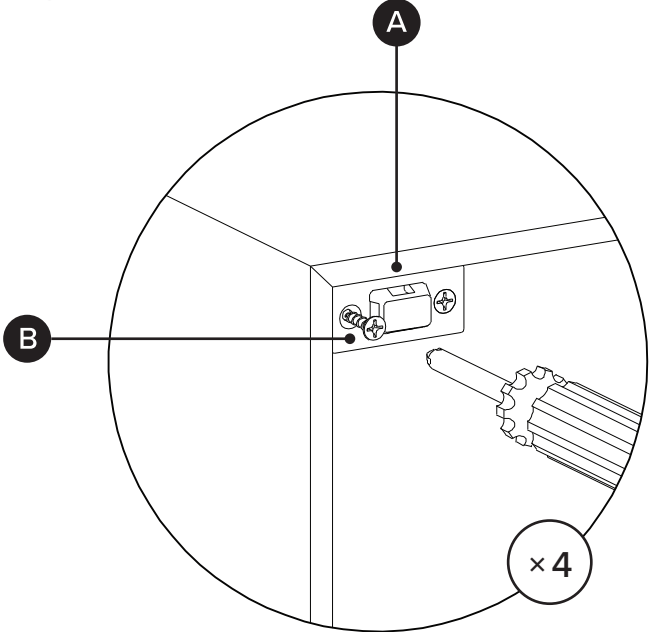


Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

2


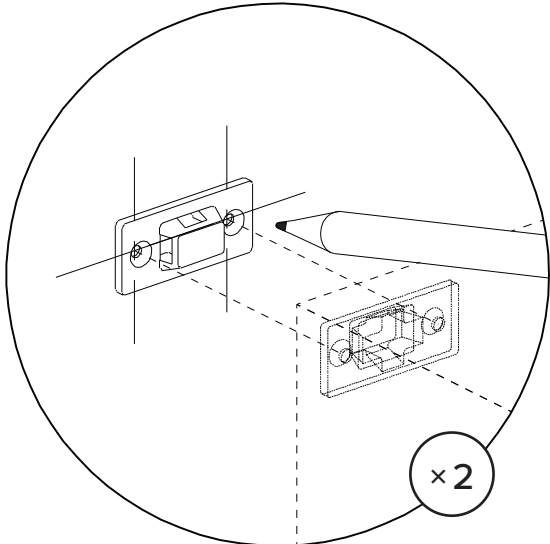


Mark on wall where second pair of brackets should be placed.

3

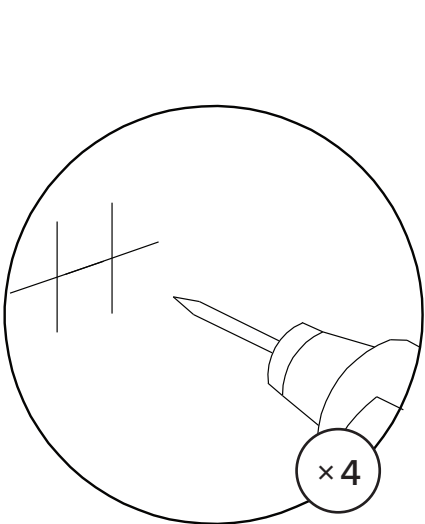


Drill holes in wall using 8mm / 5/16" drill bit.

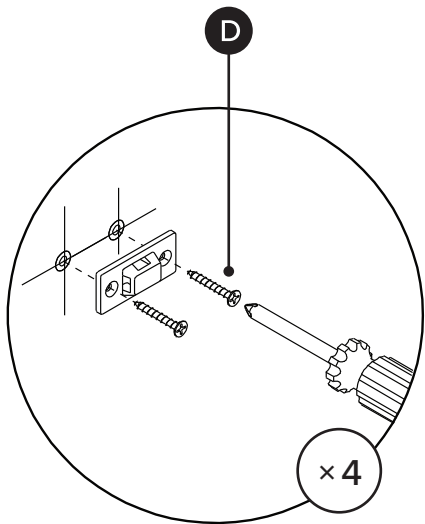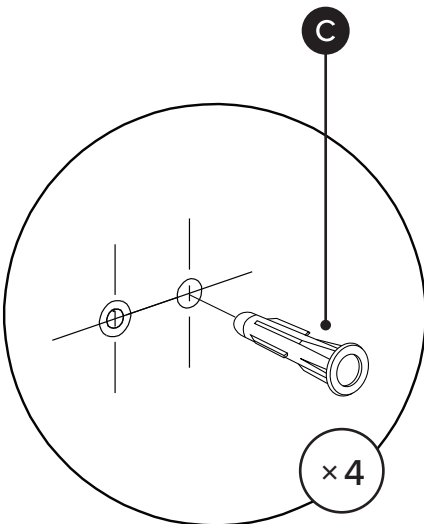


4A

Align brackets on unit  
with brackets on wall.

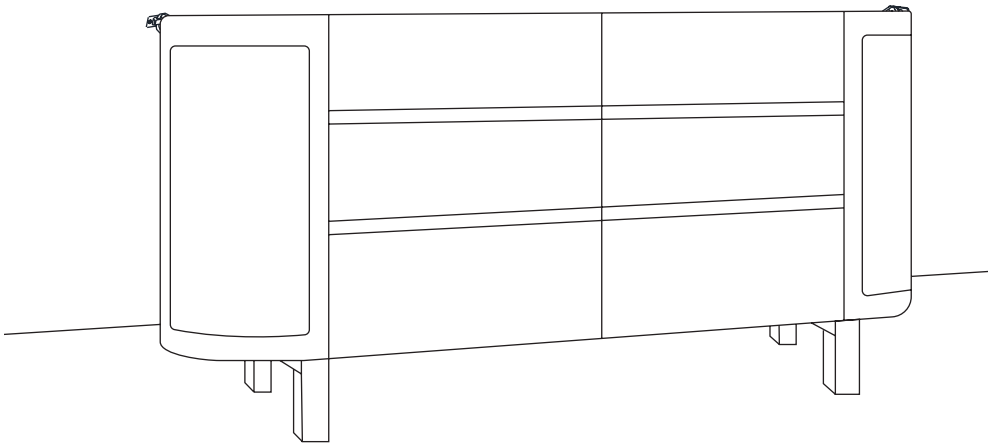

4B

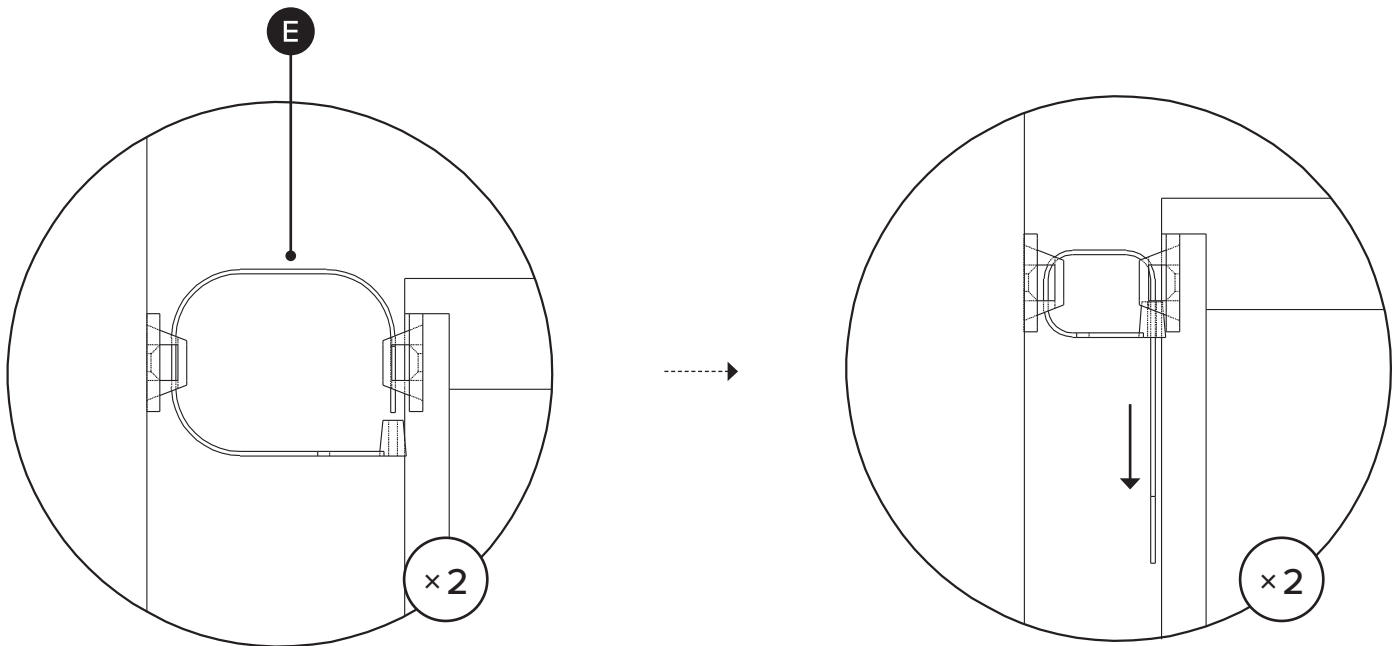

Pull strap down until it snap-locks.