


# ARTICLE.

VERSION 1.0

## Assembly Instructions

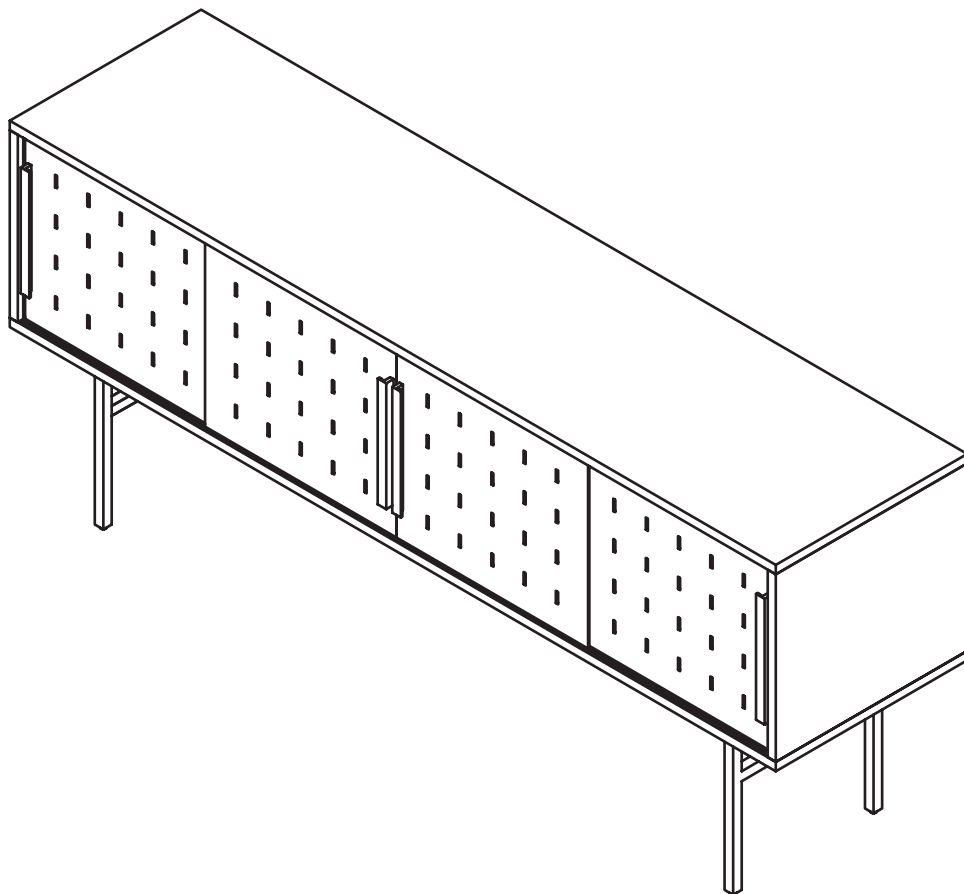

# WABASH


Sideboard

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

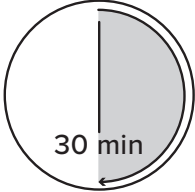


TIME




# OF PEOPLE

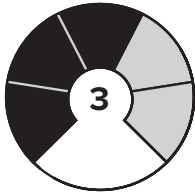

DIFFICULTY





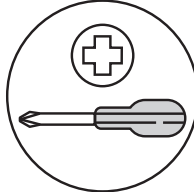


ANTI-TIP  
Installation Required




REQUIRED TOOL

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEG FRAME	2
B	CROSS BAR	1
C	DOORS	4





PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
D	ALLEN KEY 	1
E	M6 × 32MM BOLT 	4
F	M6 × 15MM ALLEN BOLT 	6
G	LOCK WASHER 	10
H	WASHER 	10

1

! Lay the top on a clean and padded surface to prevent scratches.

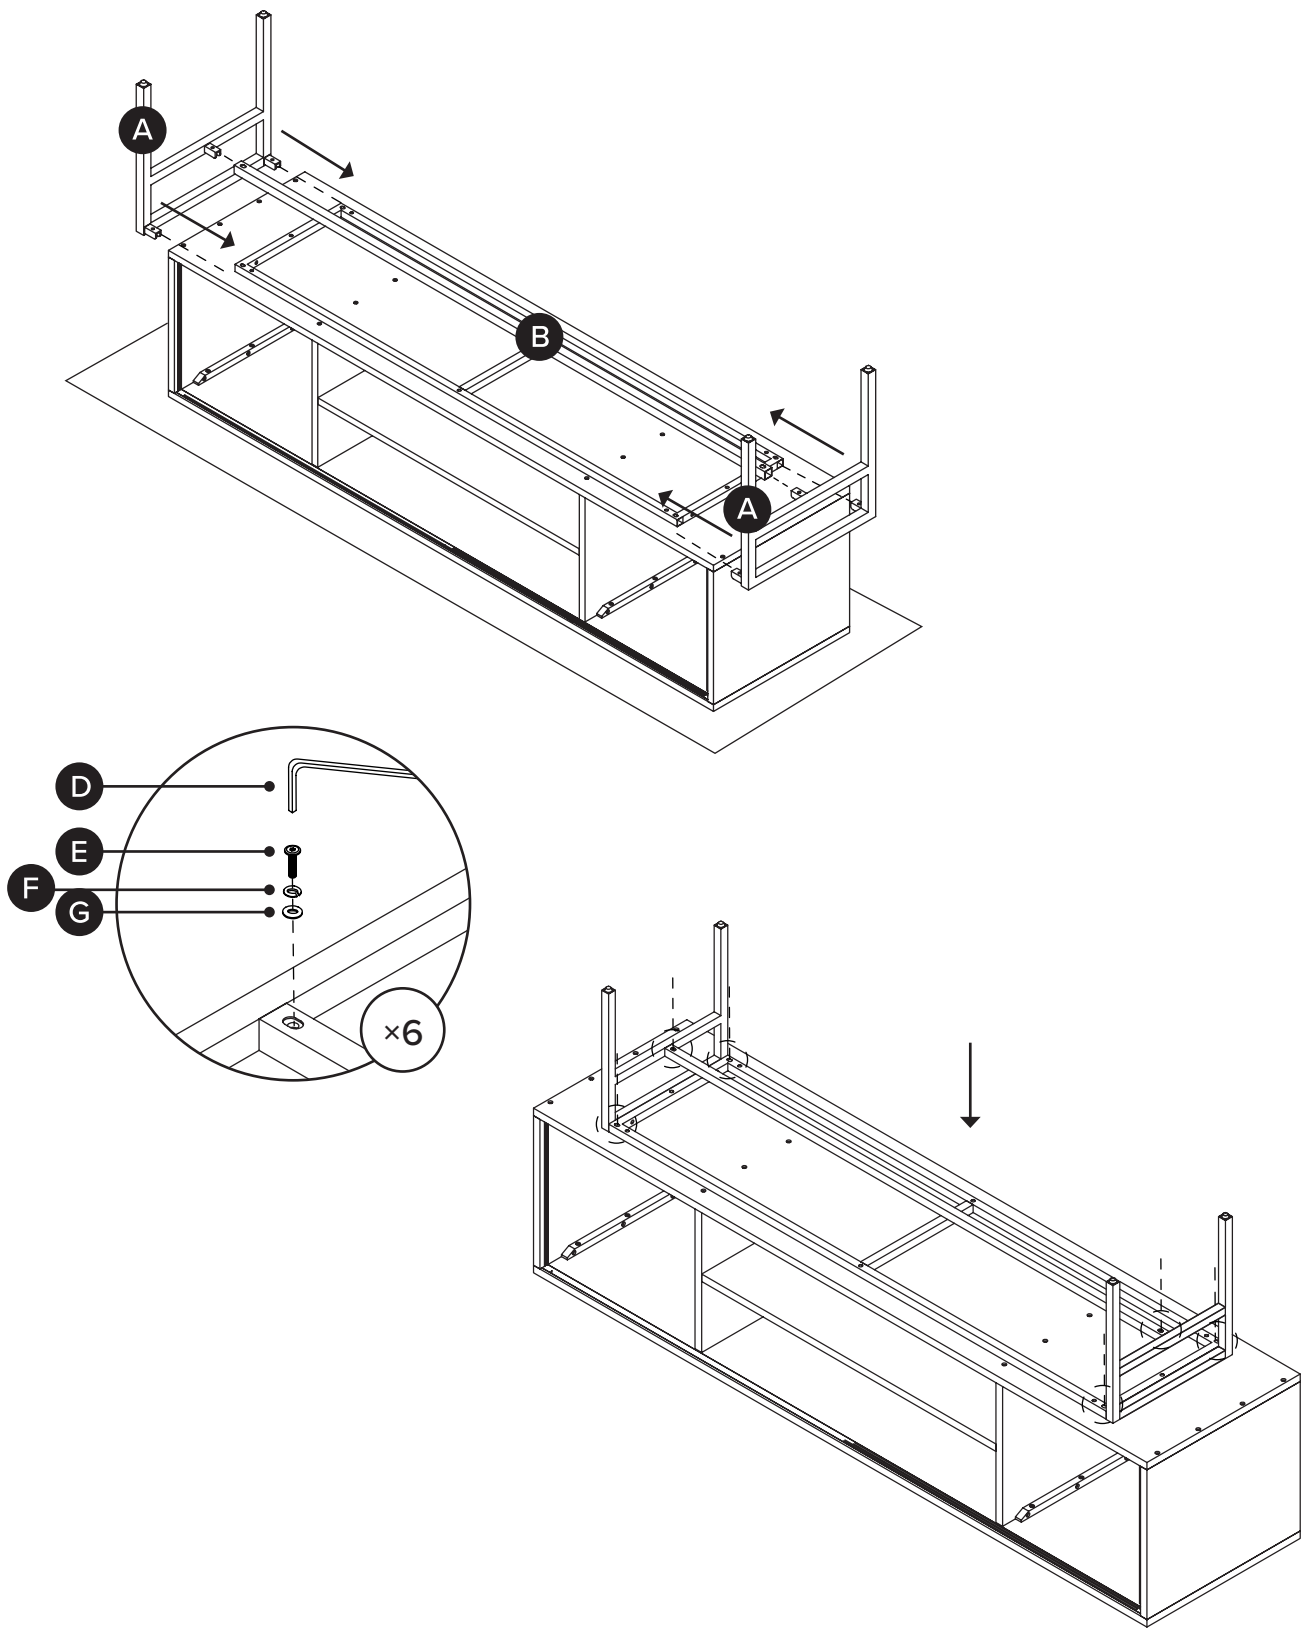


2

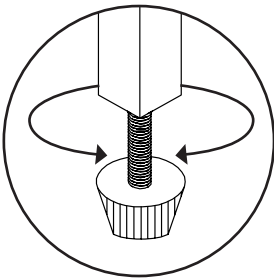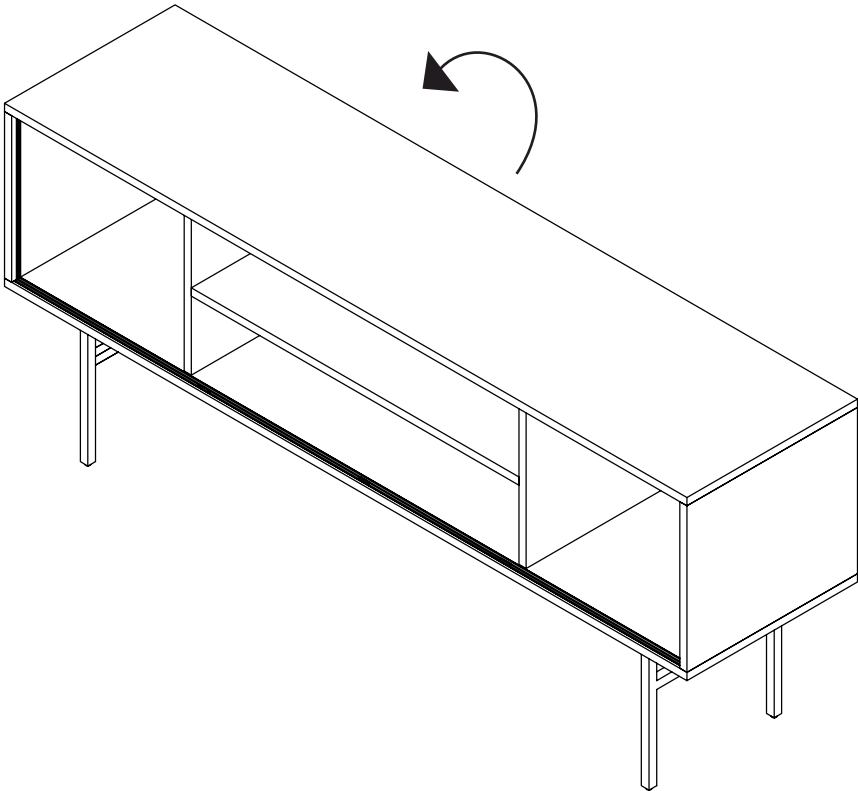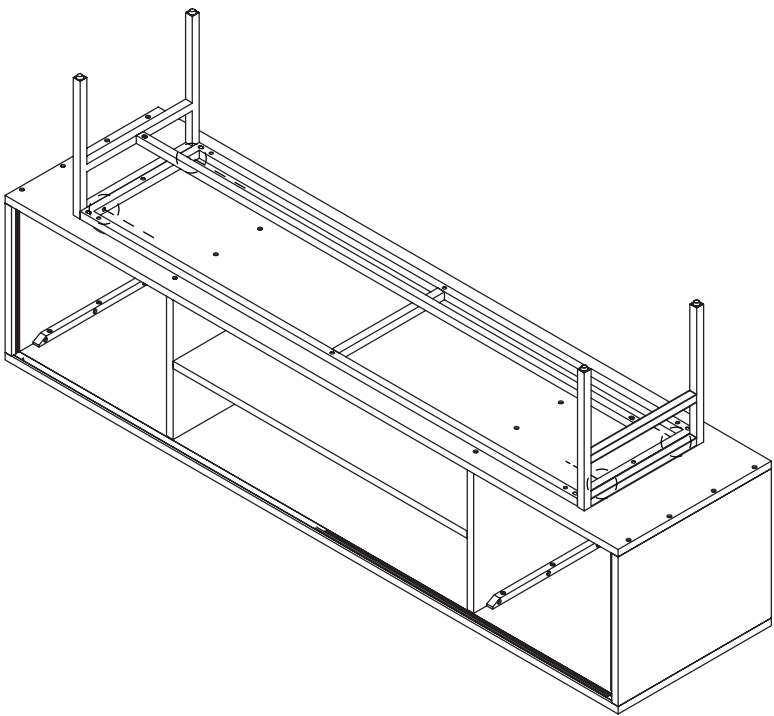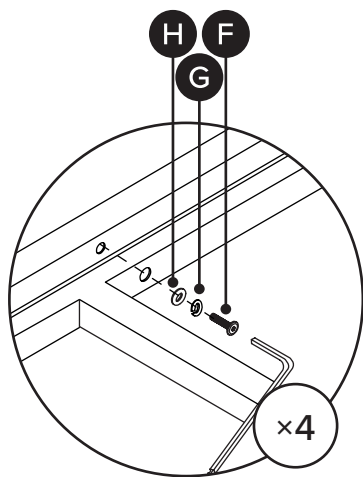

! Adjust levelers as needed.



3

! Assemble left and right (C) doors on the inside slide rail of sideboard.

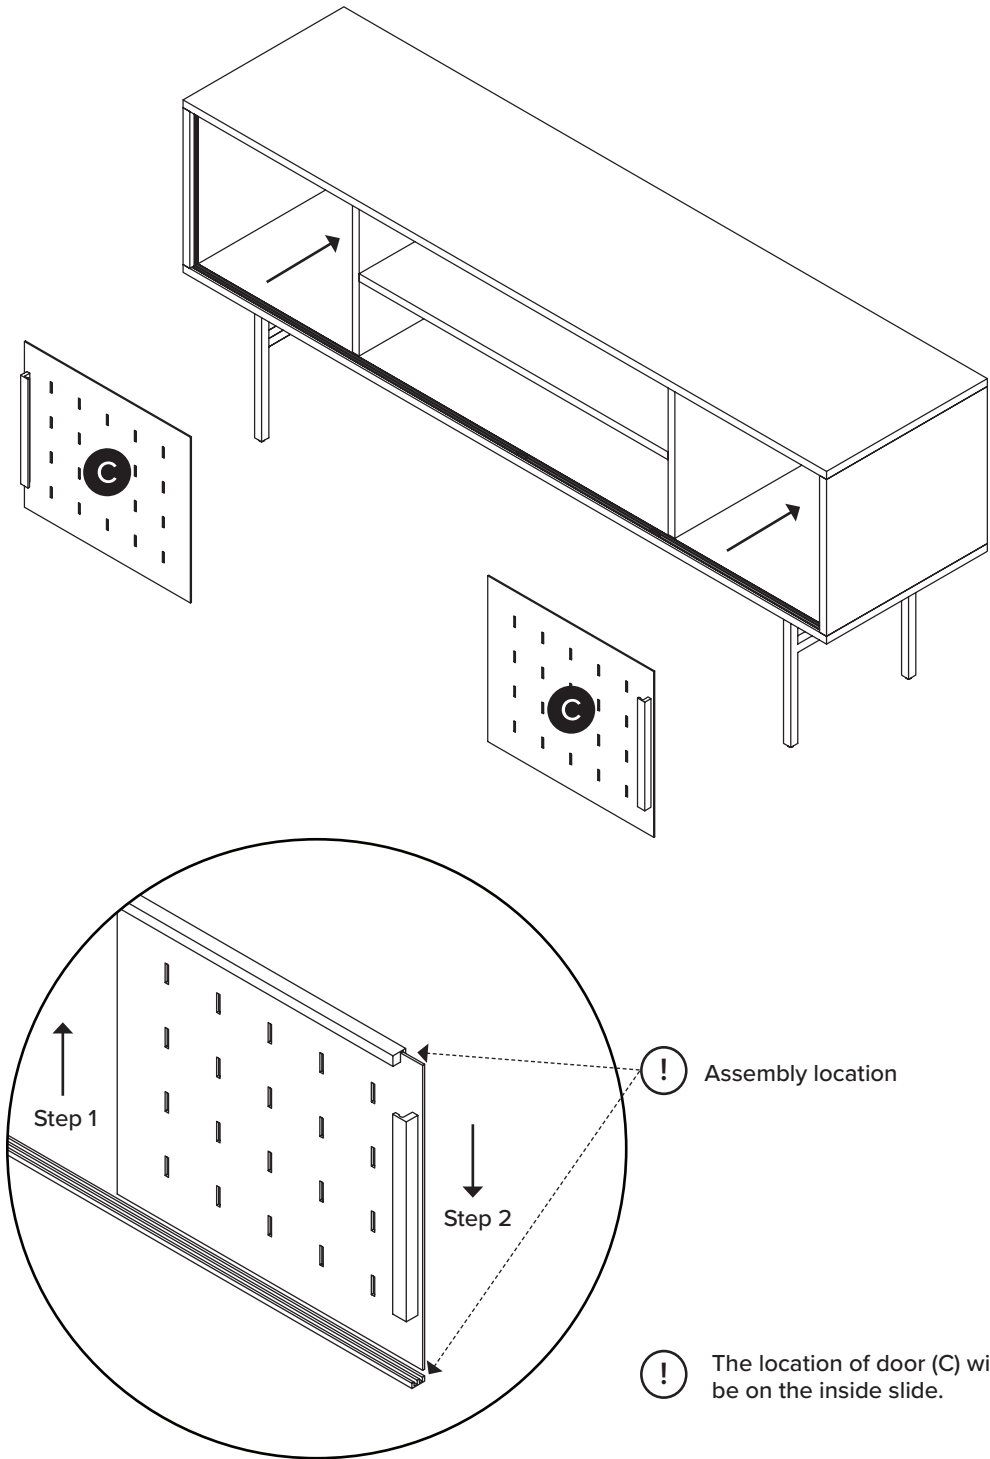

4

- ! Assemble center (C) doors on the outside slide rail of sideboard.

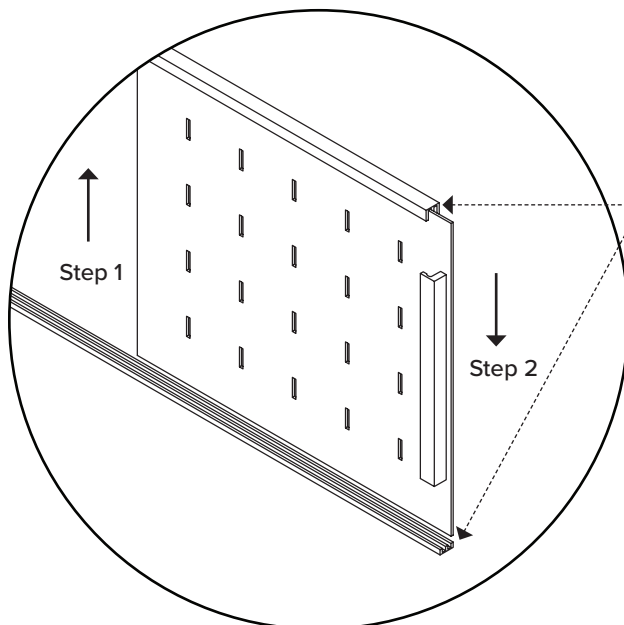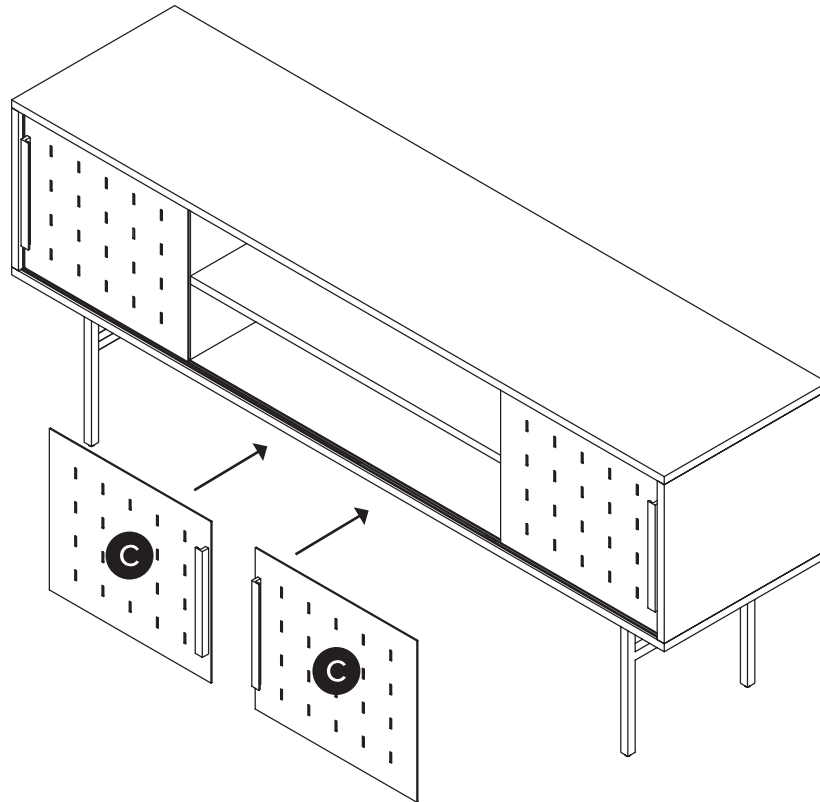

- ! Assembly location

- ! Move door (C) down on the outside slide.



ANTI-TIP RESTRAINT INSTALLATION

**! WARNING!**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.




TIME




# OF PEOPLE

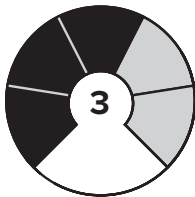






DIFFICULTY

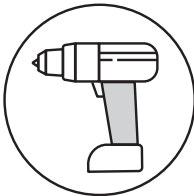


REQUIRED TOOL  
8MM / 5/16" DRILL BIT

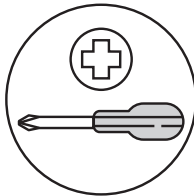

REQUIRED TOOL


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	BRACKET 	4
B	M4 × 20MM SCREW 	4
C	M8 × 51MM PLUG 	4
D	M6 × 70MM SCREW 	4
E	STRAP 	2

1

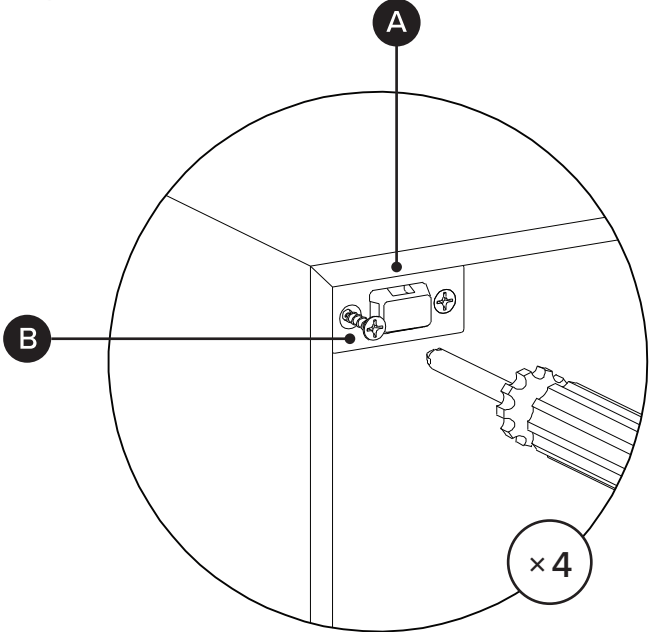


Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

2


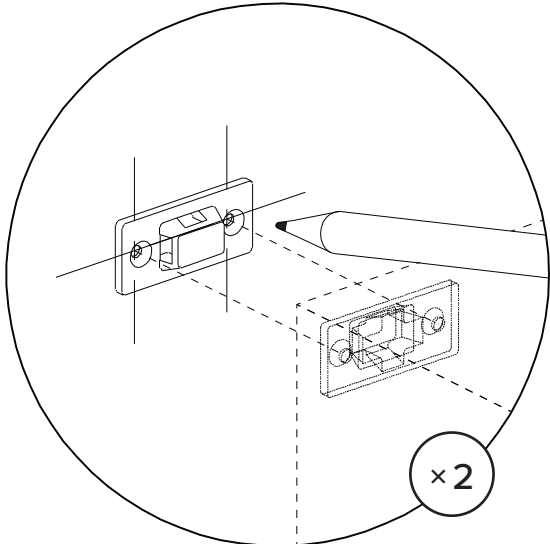


Mark on wall where second pair of brackets should be placed.

3

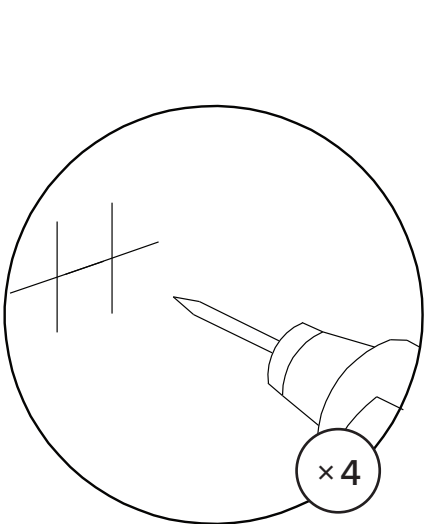


Drill holes in wall using 8mm / 5/16" drill bit.

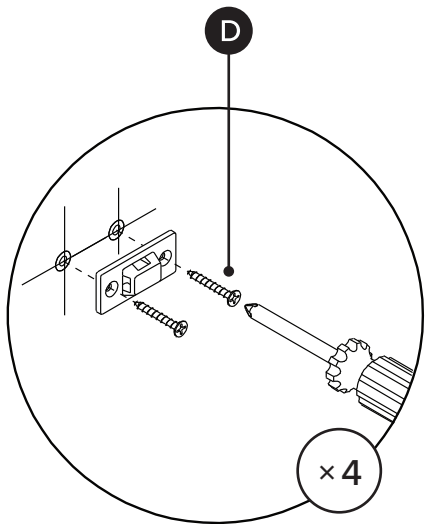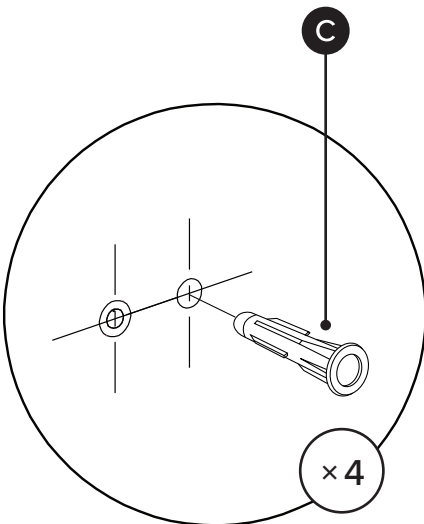




4A

Align brackets on unit  
with brackets on wall.

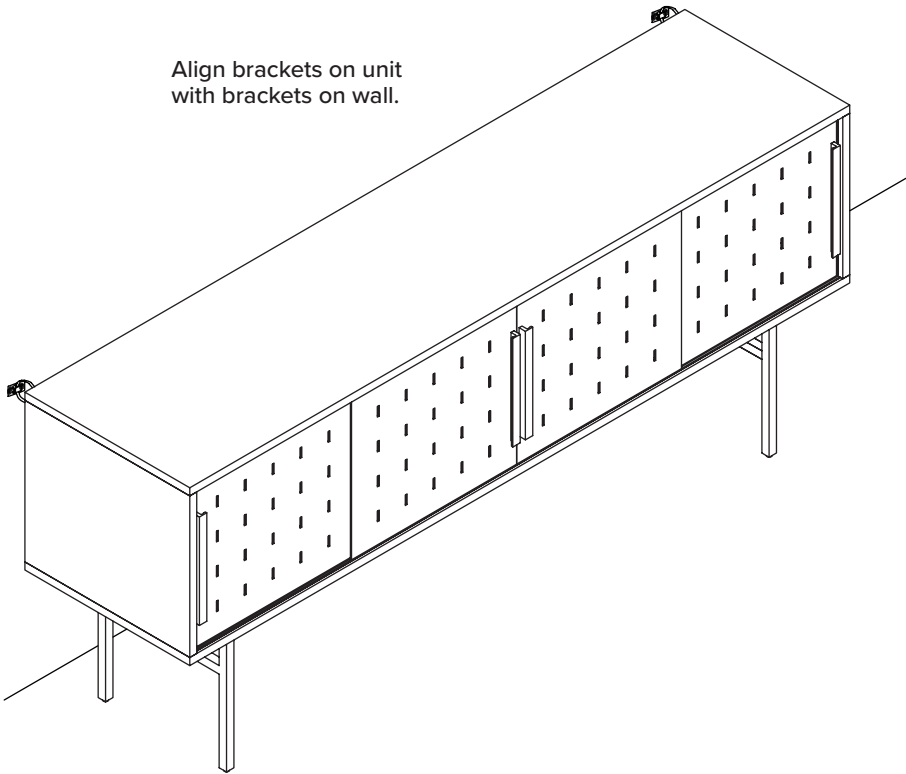

4B

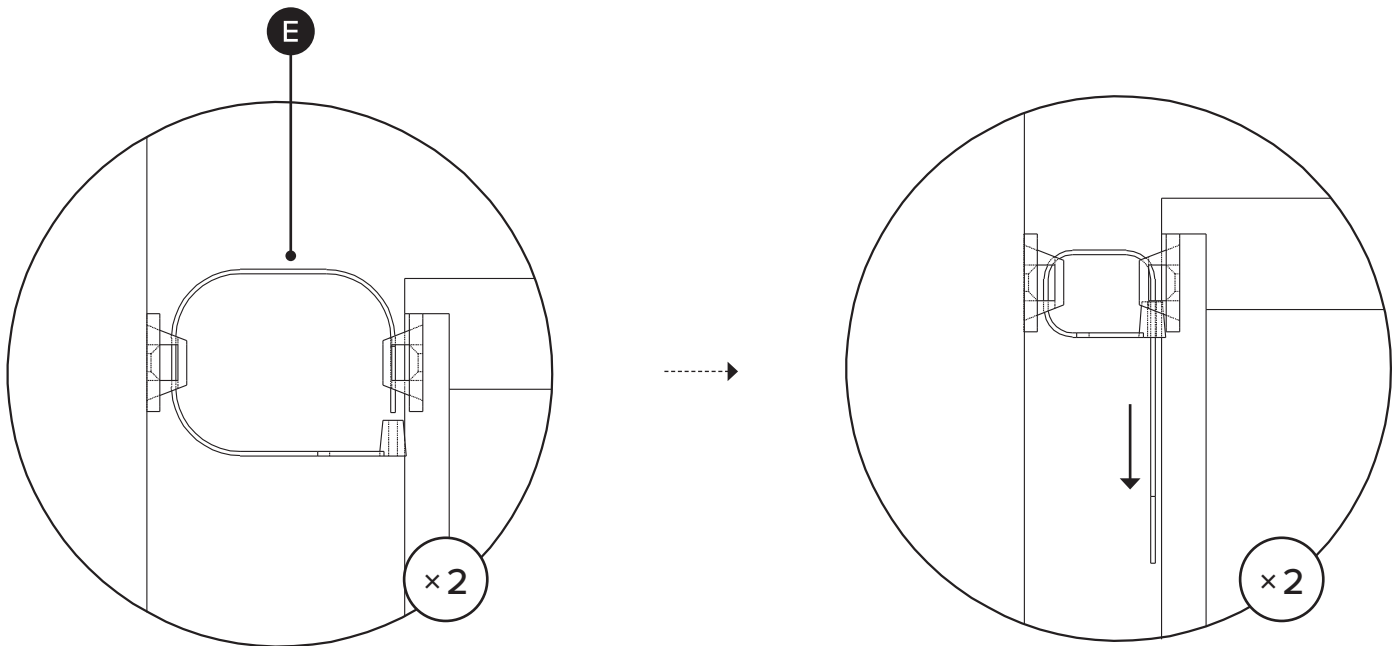

Pull strap down until it snap-locks.