


# ARTICLE.

VERSION 1.0

## Assembly Instructions

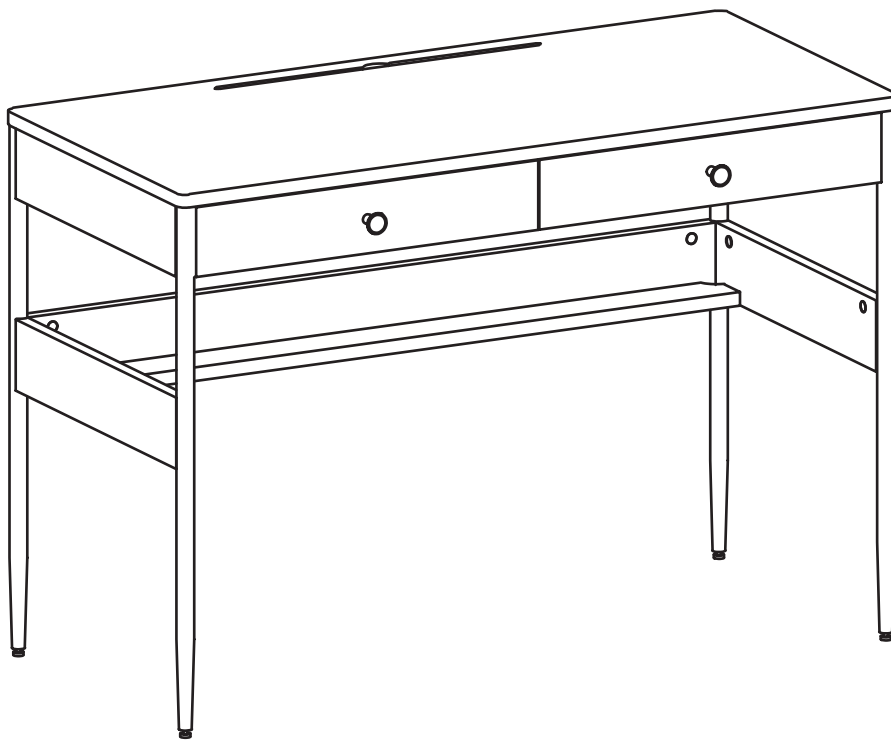

# NEWBERRY

Desk

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



TIME



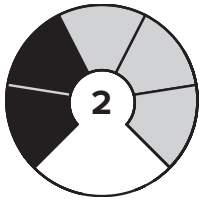









# OF PEOPLE



DIFFICULTY


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LEFT SIDE	1
B	RIGHT SIDE	1
C	TOPTABLE & DRAWER	1
D	STRETCHER	1

PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
E	CAM LOCK SCREW 	8
F	CAM LOCK NUT 	8
G	M6 X 15MM BOLT 	8
H	ALLEN KEY 	1
I	M6 X 25MM BOLT 	6
J	M6 WASHER 	6
K	HANDLE 	2
L	M4 X 40MM SCREW 	2
M	STICKERS 	6

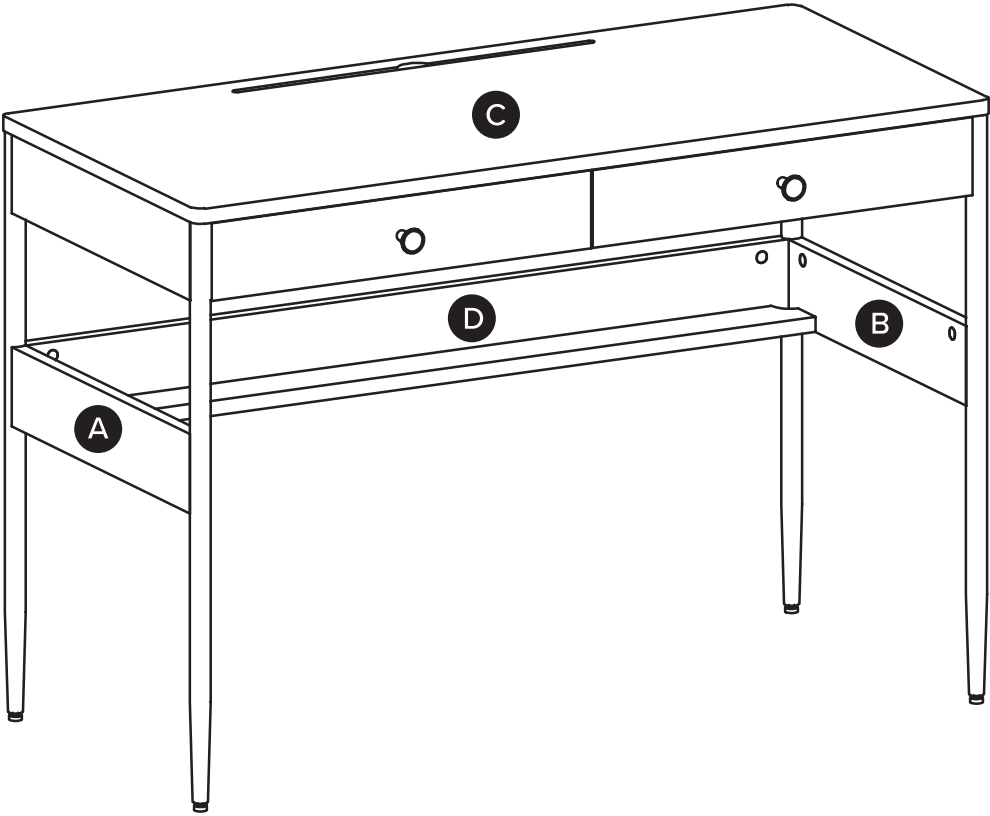


1

- ! Insert cam lock screw (E) and with screw driver.

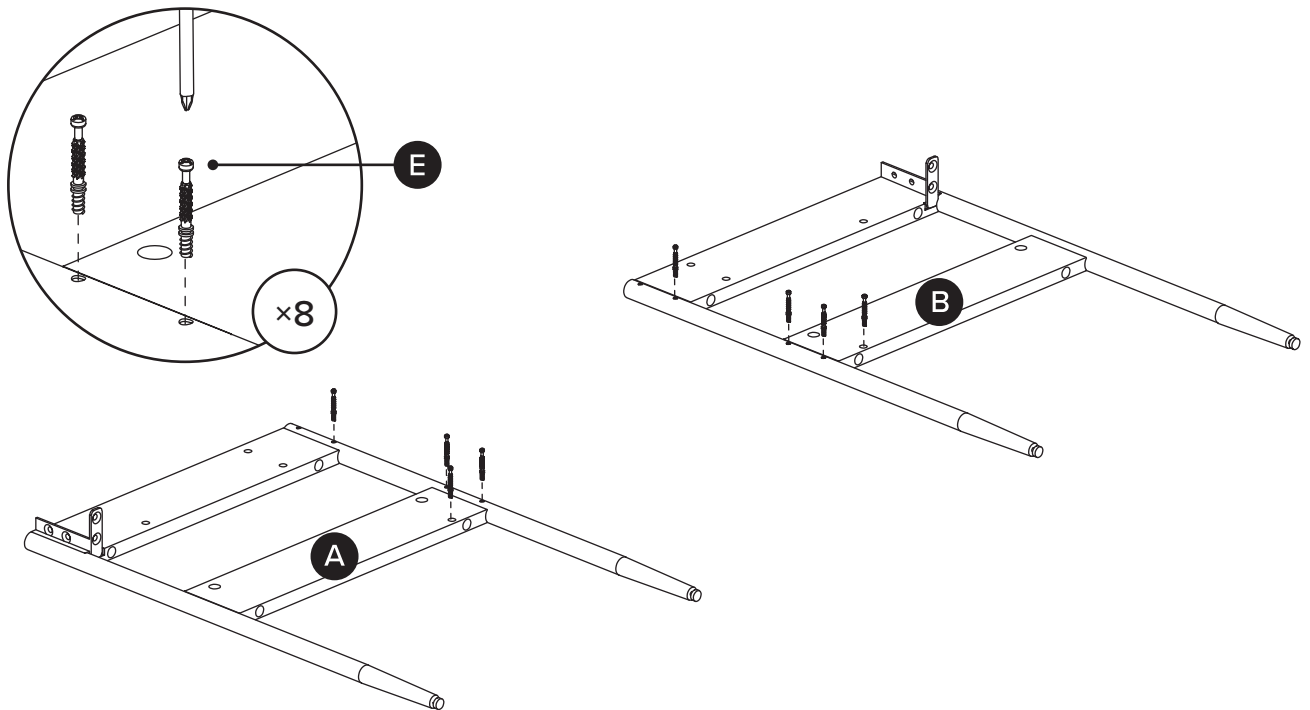


2

- ! Open the drawers.

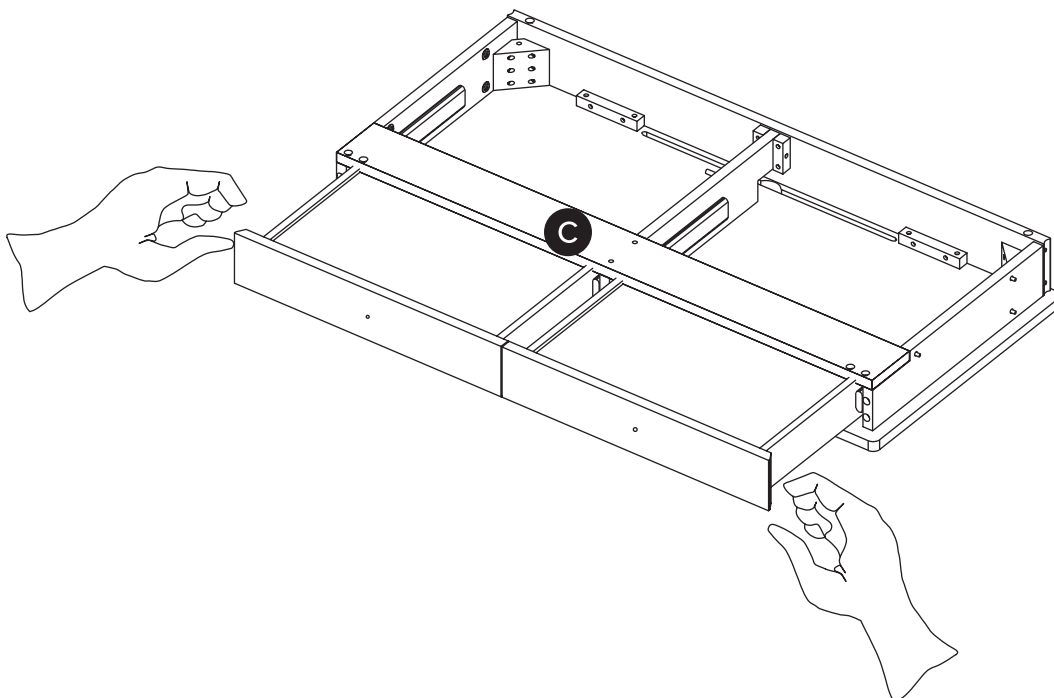



3

! Insert cam lock nut (F) and turn with allen key (H).

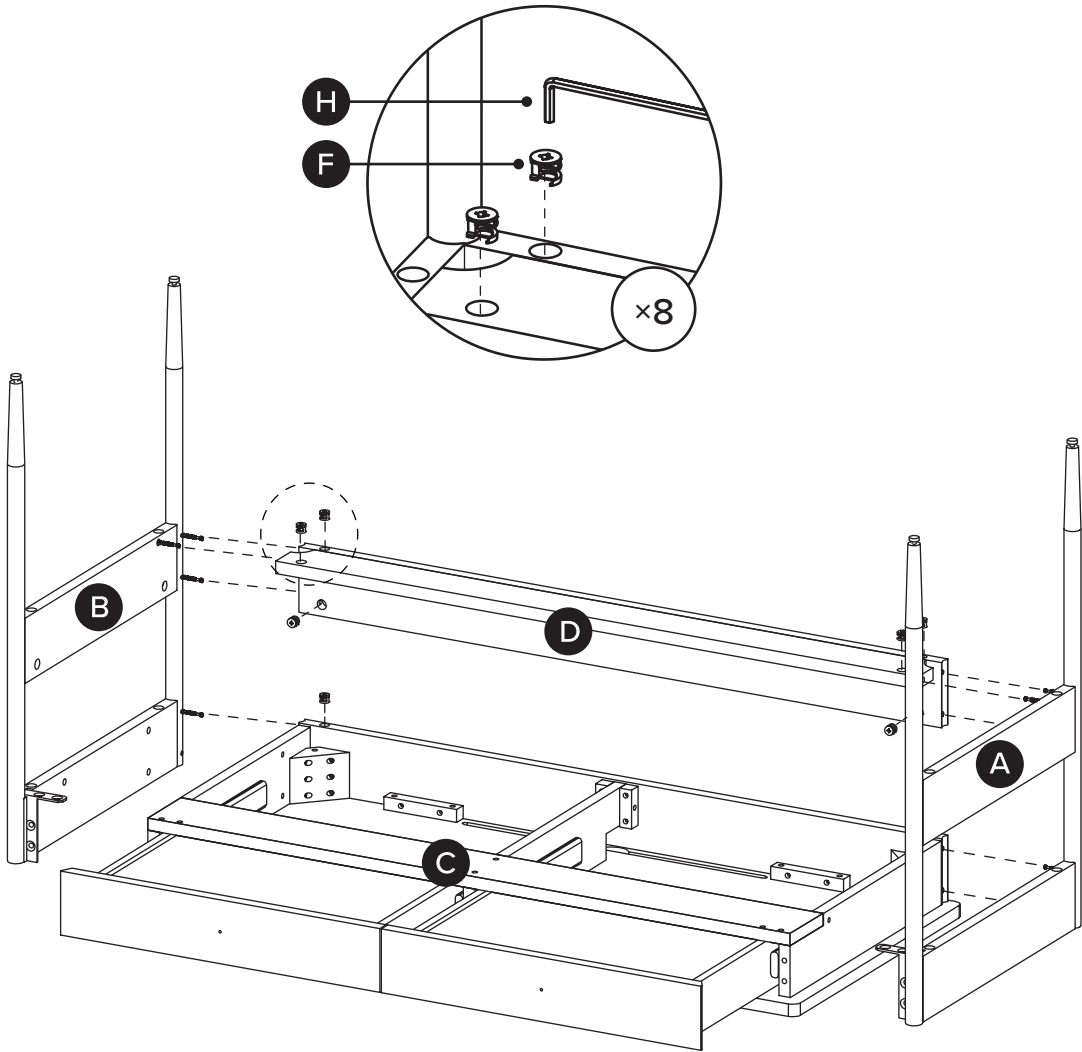


4

! Insert cam bolts (G) and turn with allen key (H).

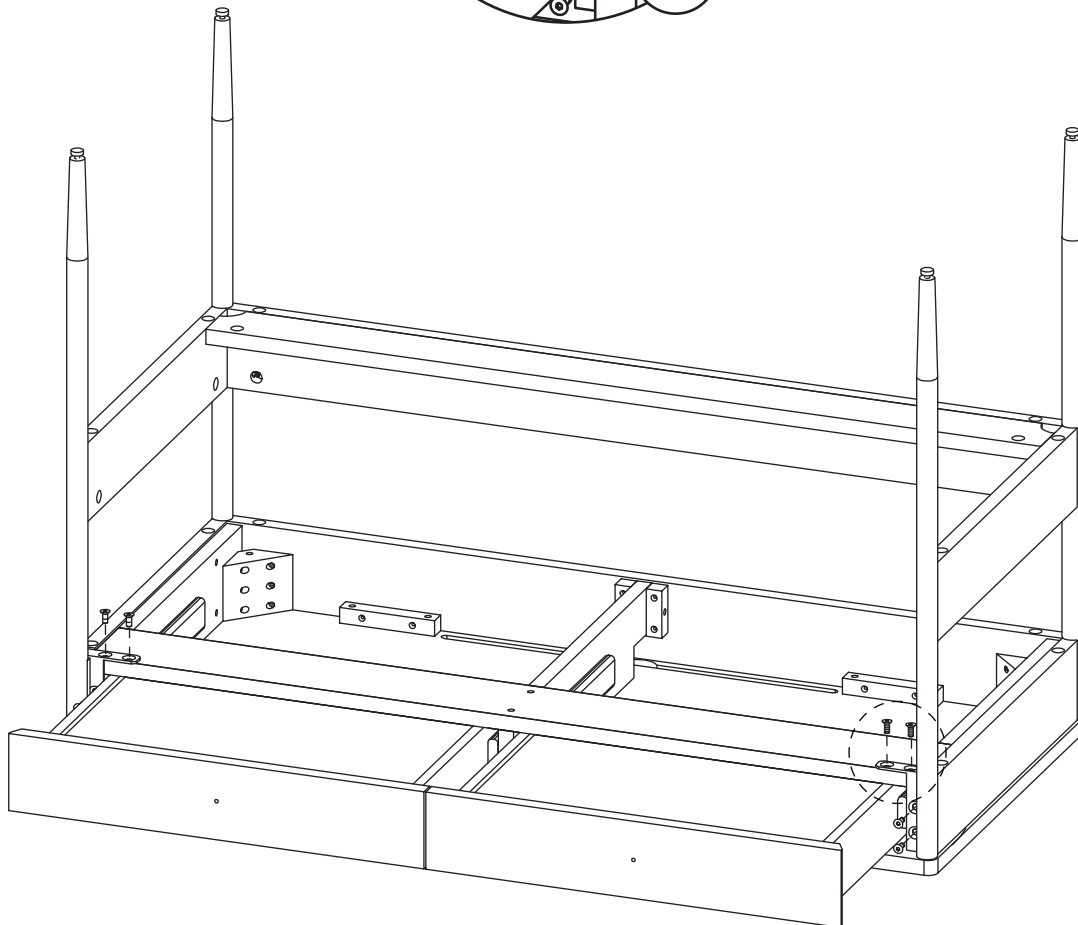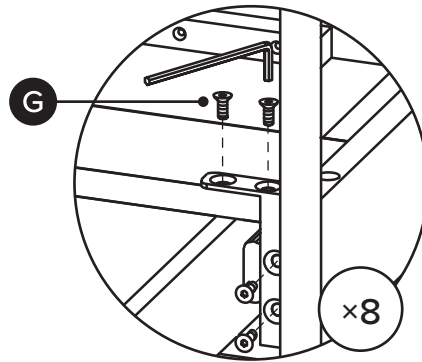



5

! Insert cam bolts (I) and turn with allen key (H).

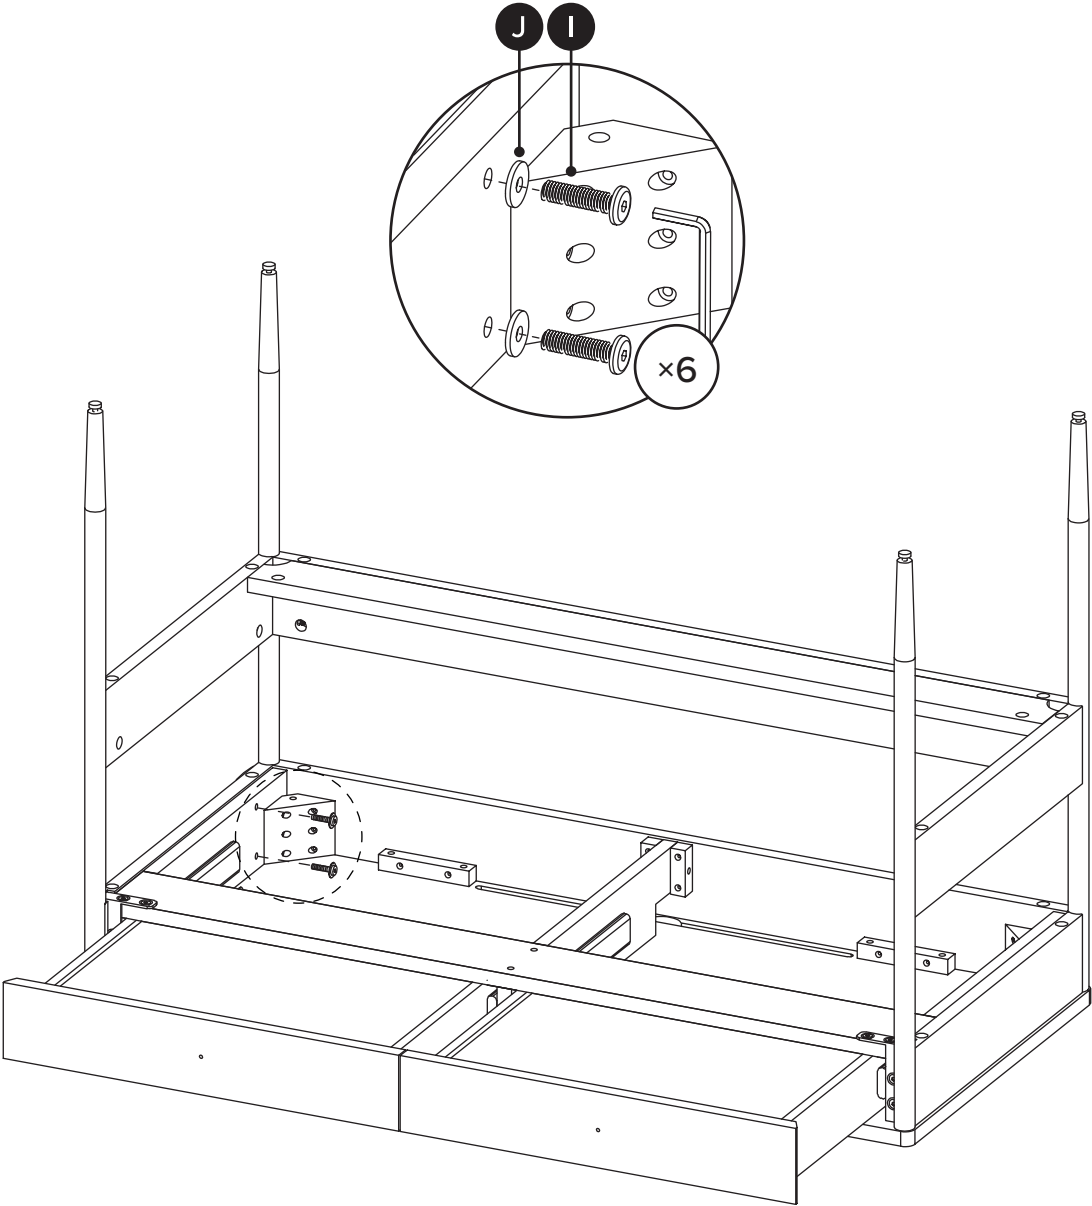

6

! Install handle (K).

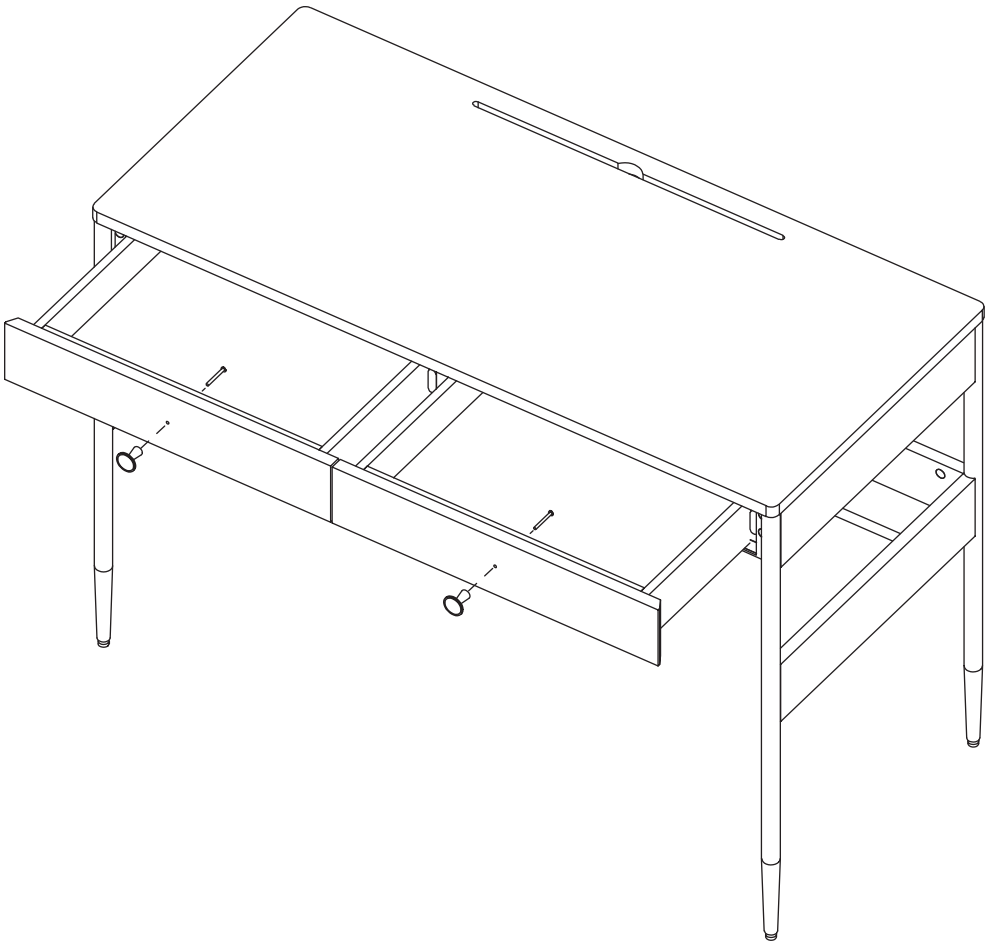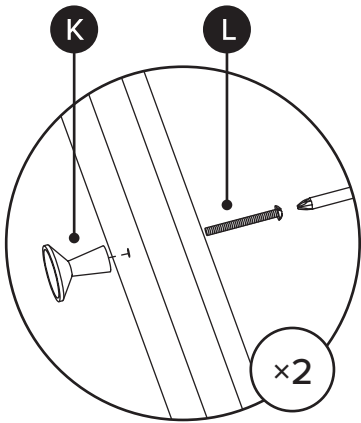



7

! Put stickers (M) on the holes.

