


# ARTICLE.

VERSION 1.1

## Assembly Instructions

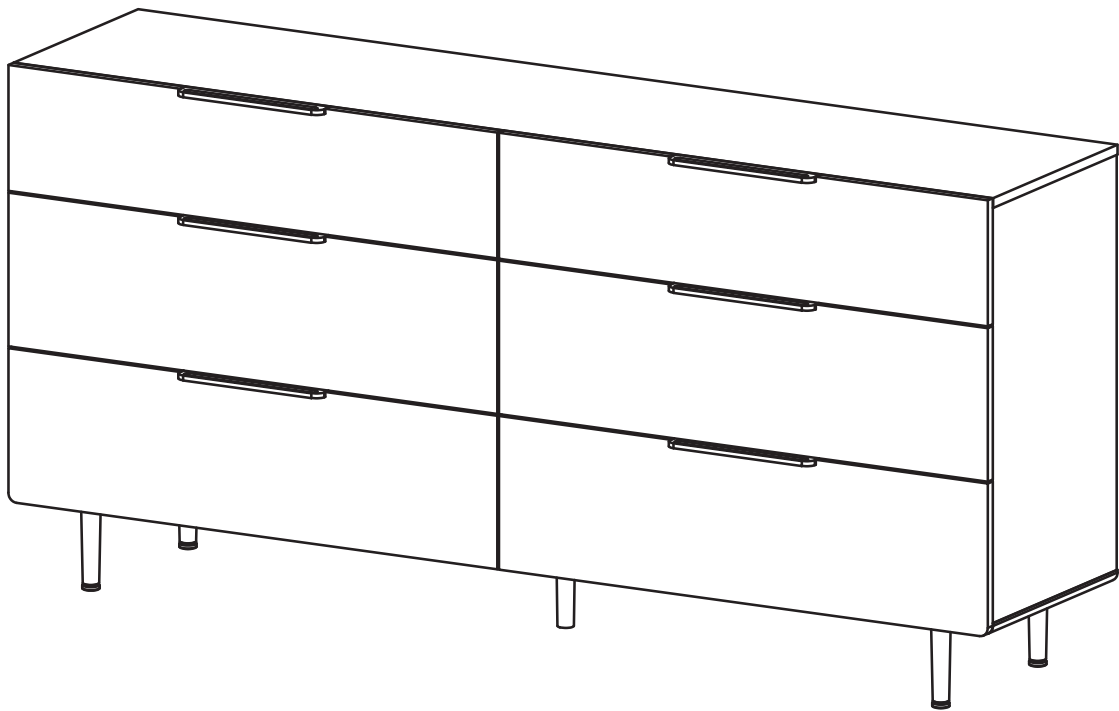

# NERA


6 Drawer Double Dresser

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

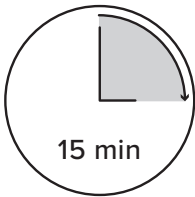

TIME



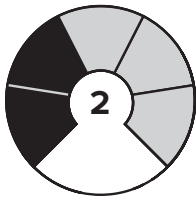

# OF PEOPLE




DIFFICULTY




ANTI-TIP  
Installation Required

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	CENTER LEG	1
B	SIDE LEG FRAME	2
C	M6 × 15MM BOLT 	12
D	ALLEN KEY 	1

1

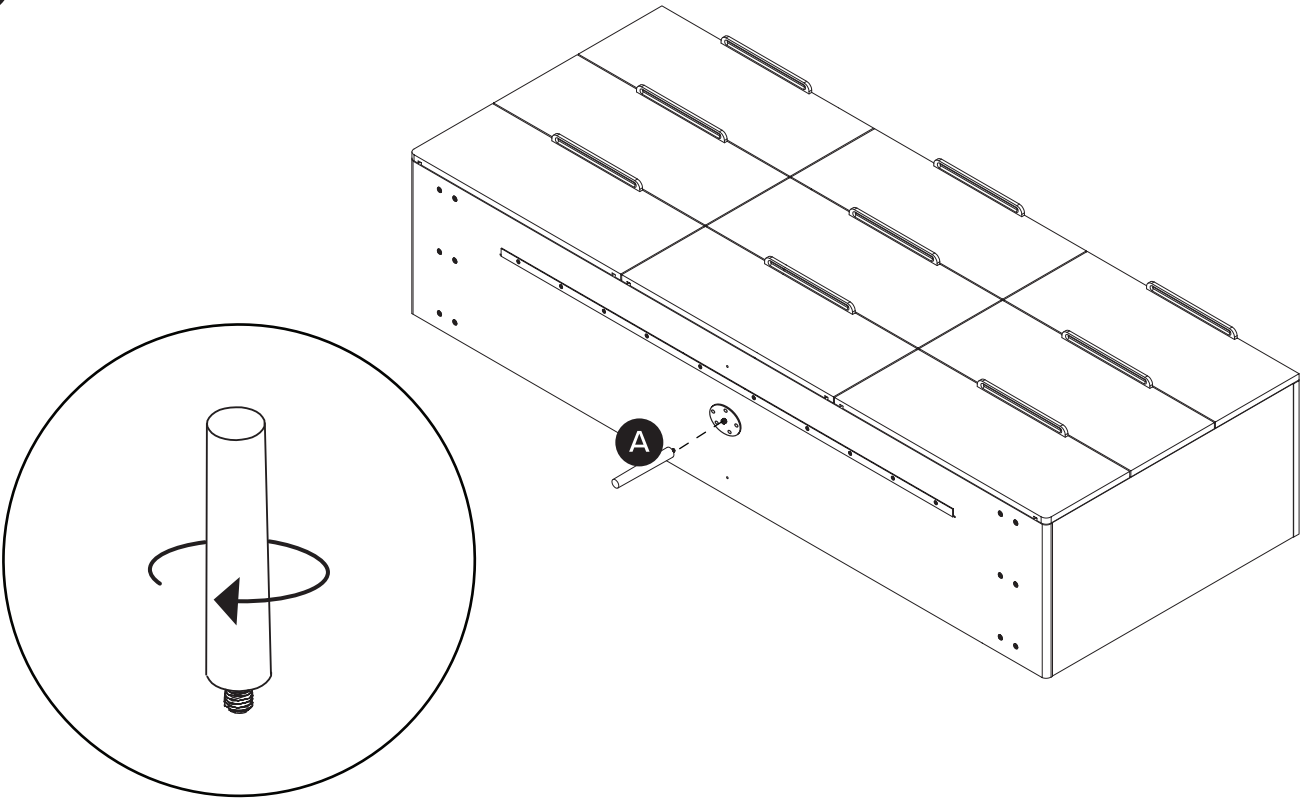

2

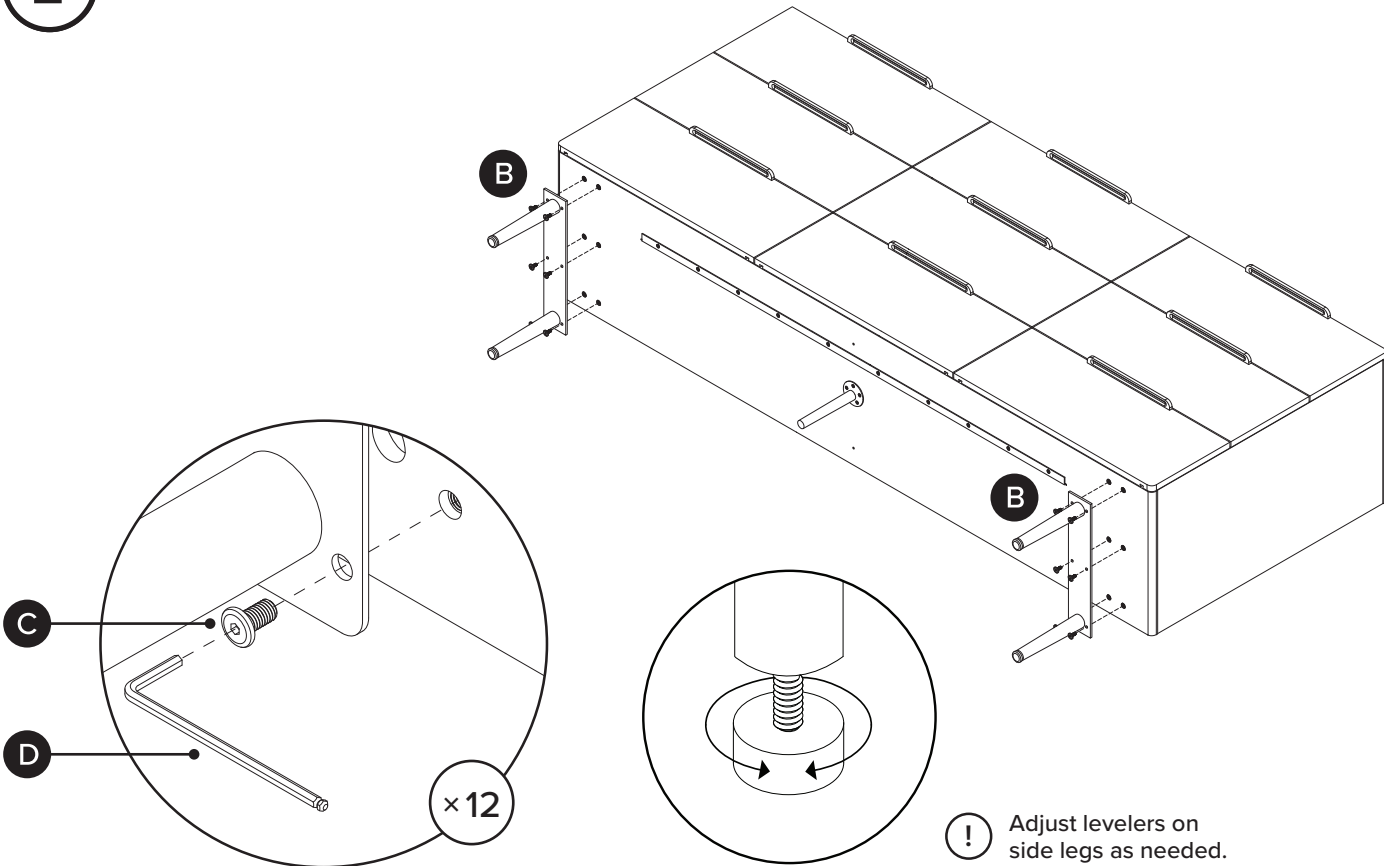




## ANTI-TIP RESTRAINT INSTALLATION

**! WARNING!**

Children have died from furniture tipover.  
To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

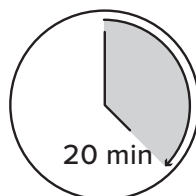



TIME








# OF PEOPLE

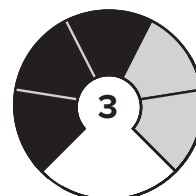


DIFFICULTY

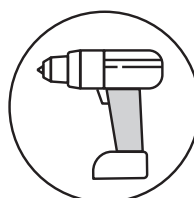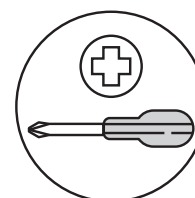**REQUIRED TOOL**  
8MM / 5/16" DRILL BIT**REQUIRED TOOL**

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

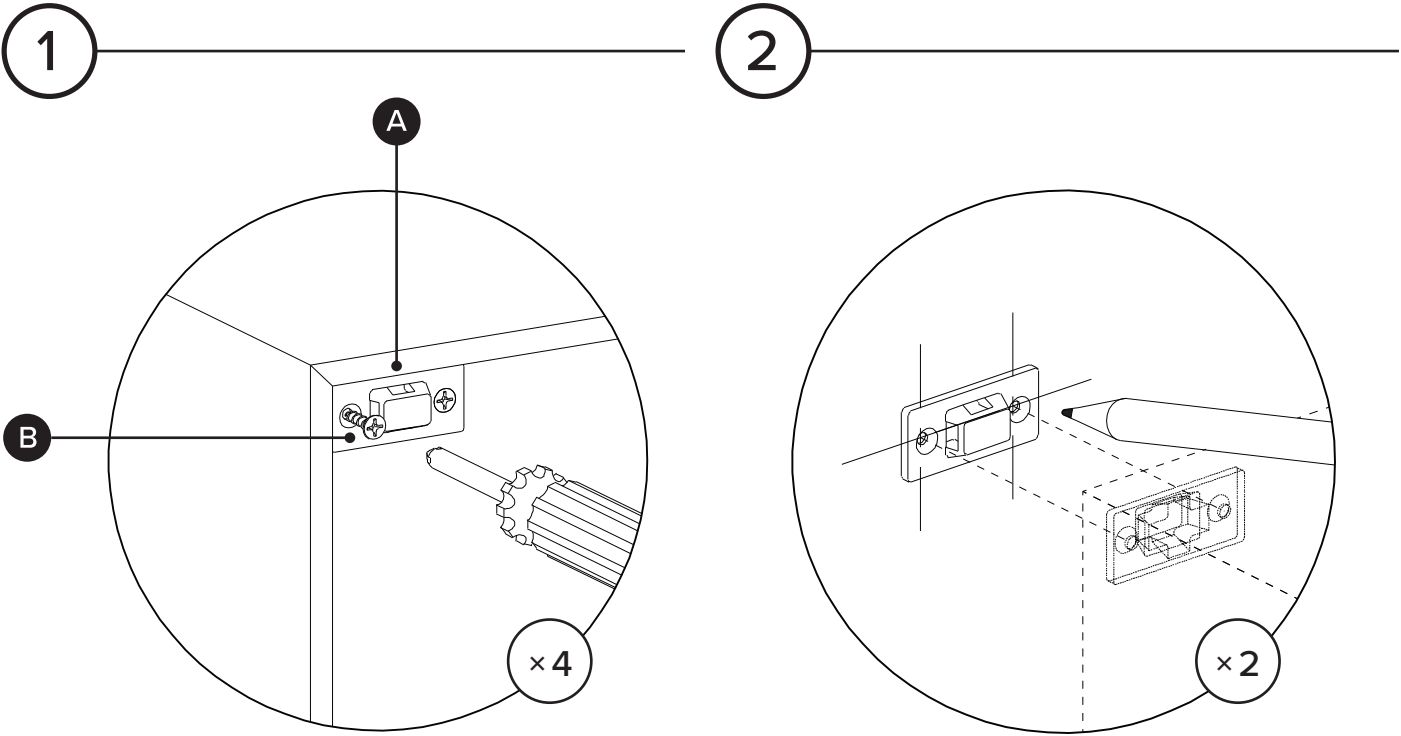

Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

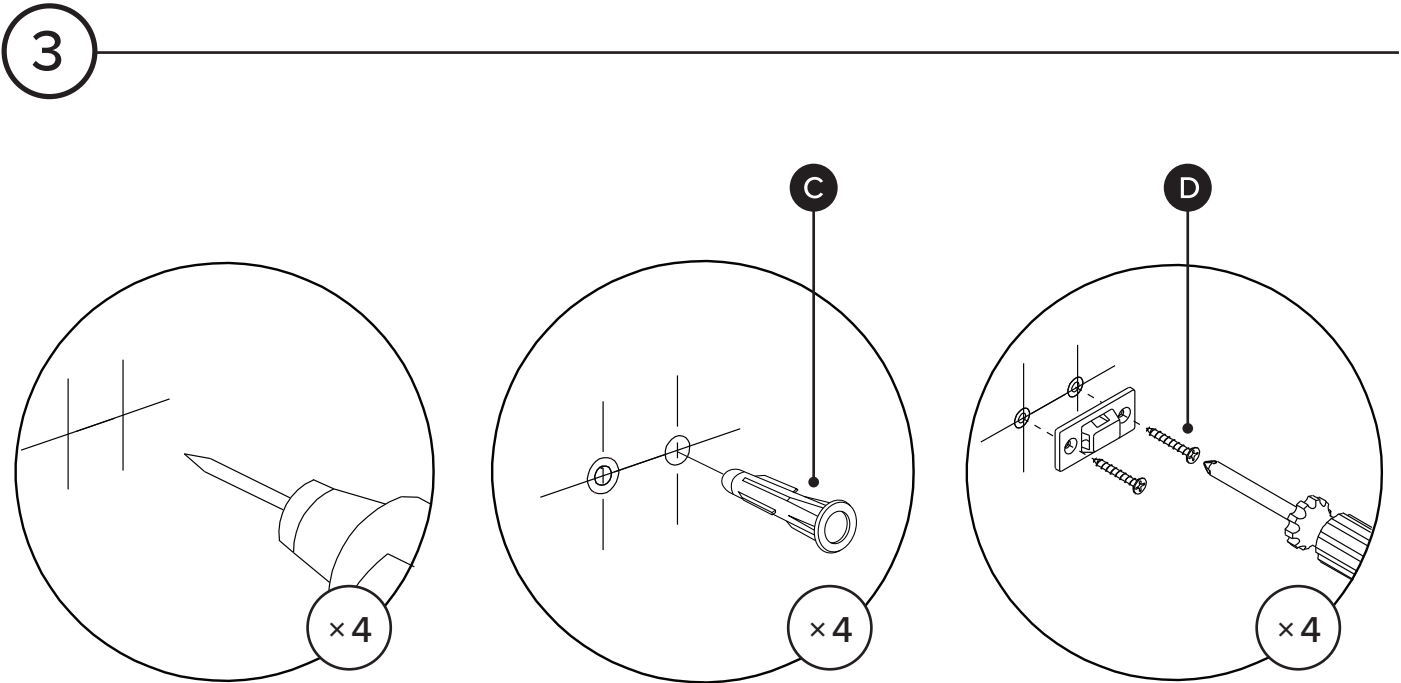


Drill holes in wall using 8mm / 5/16" drill bit.

4A

Align brackets on unit  
with brackets on wall.

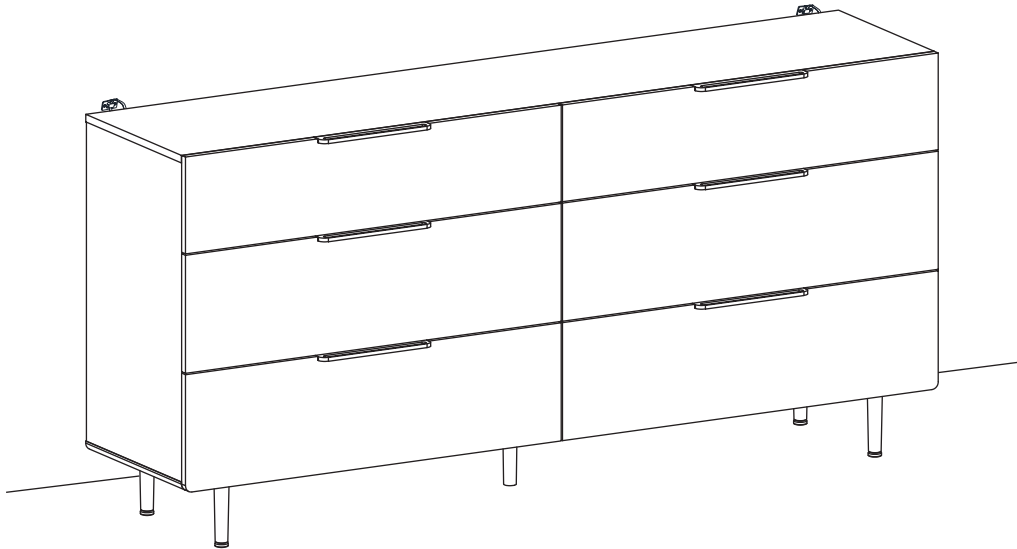

4B

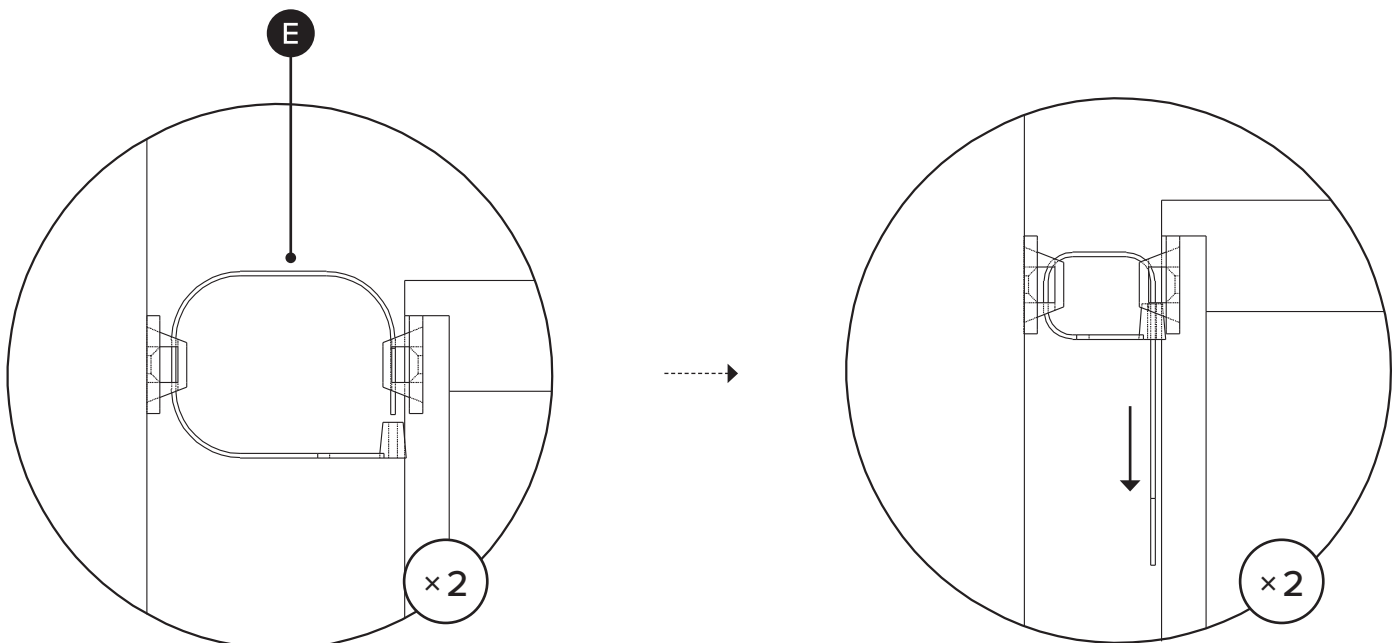

Pull strap down until it snap-locks.

## SOFT CLOSING DRAWERS


### ADJUSTMENT INSTRUCTIONS



Structural integrity is warranted only if all fasteners are properly installed & tightened, and the bed is moved only per instructions.


#### FIXED A CROOKED DRAWER

---

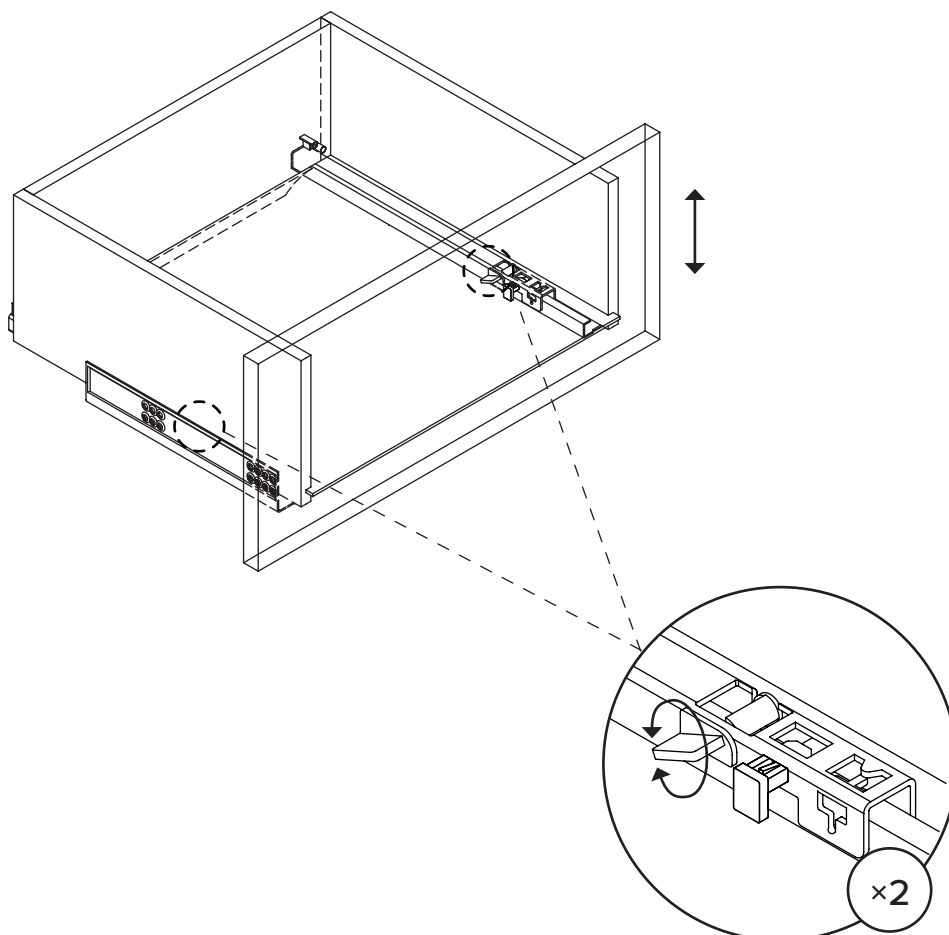


Adjust levelers on either side of drawer as needed to straighten drawer.

1 REMOVE DRAWER

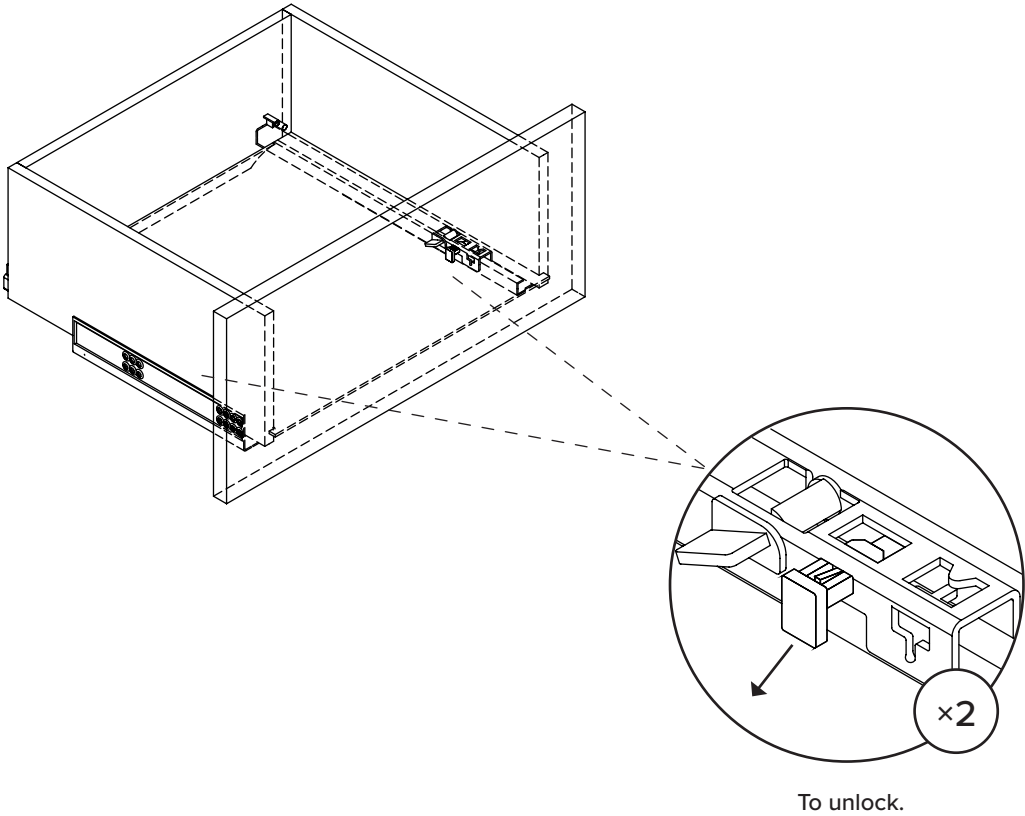


2

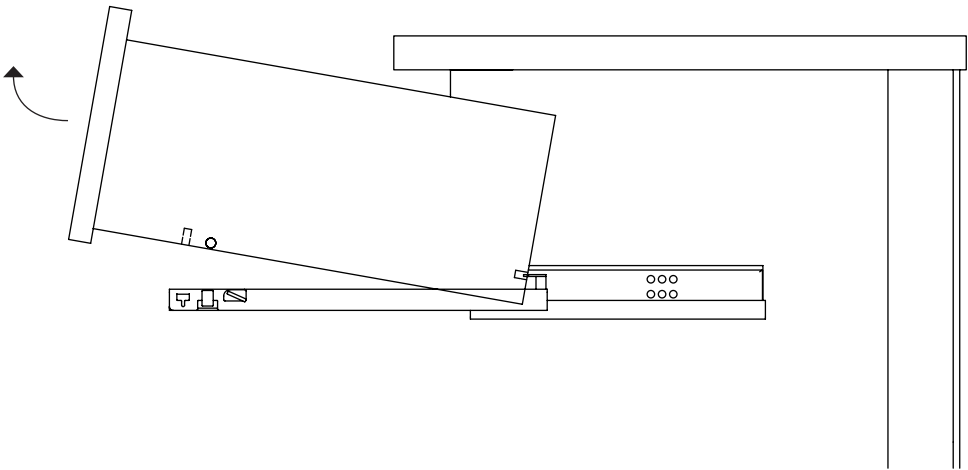



1 — INSTALL DRAWER

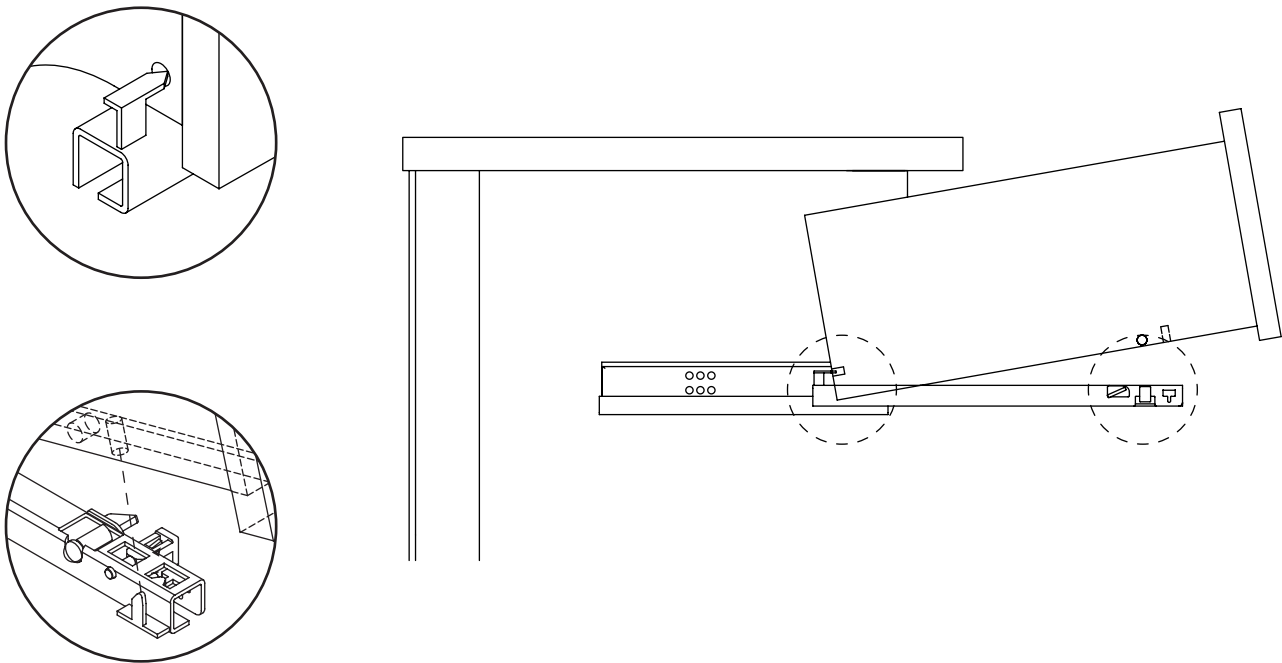

2

