


ARTICLE.

VERSION 1.0

Assembly Instructions

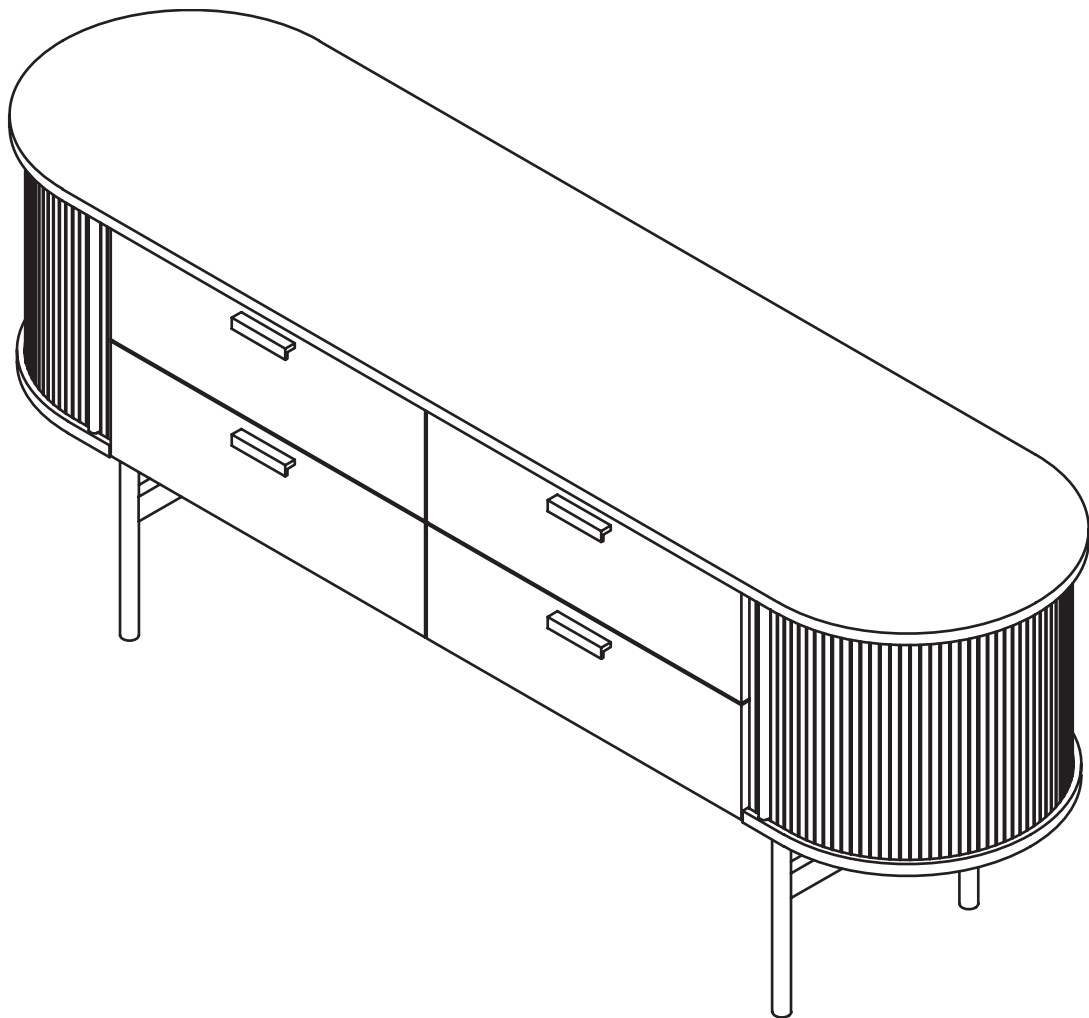

MAYA


Sideboard

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



20 min




OF PEOPLE




2

DIFFICULTY





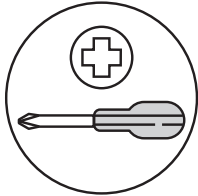


ANTI-TIP
Installation Required




REQUIRED TOOL


PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	SIDEBOARD	1
2	LEG FRAME	2
3	CROSS BAR	1

PARTS INVENTORY CONT.			
ID	DESCRIPTION		QTY
A	ALLEN KEY		1
B	M6 × 15MM BOLT		18
C	M6 × 35MM BOLT		4
D	LOCK WASHER		22
E	WASHER		22

i

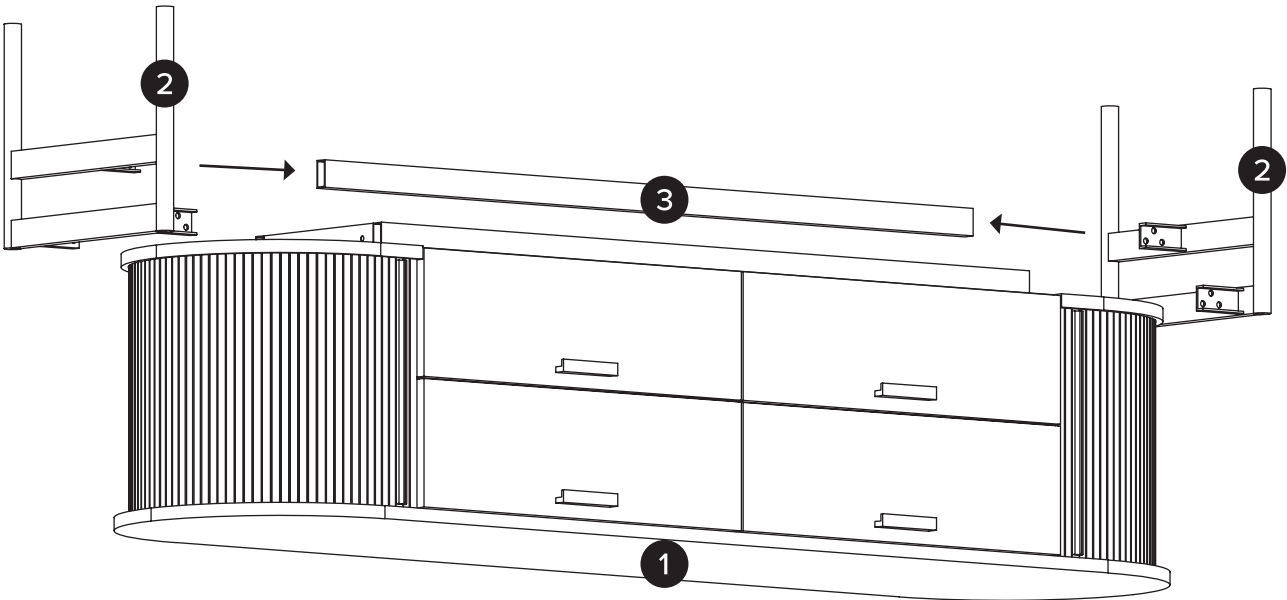


1

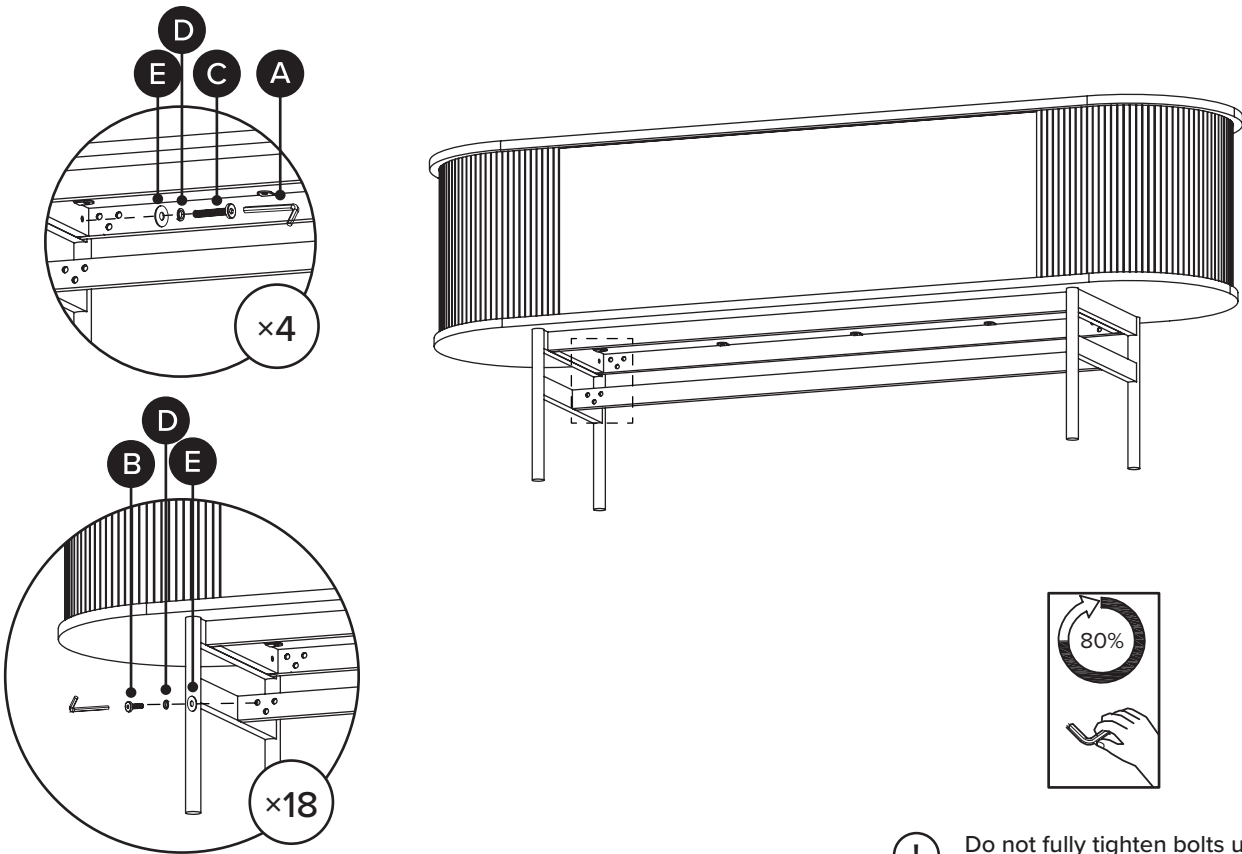


! Do not fully tighten bolts until all bolts are placed properly.

2

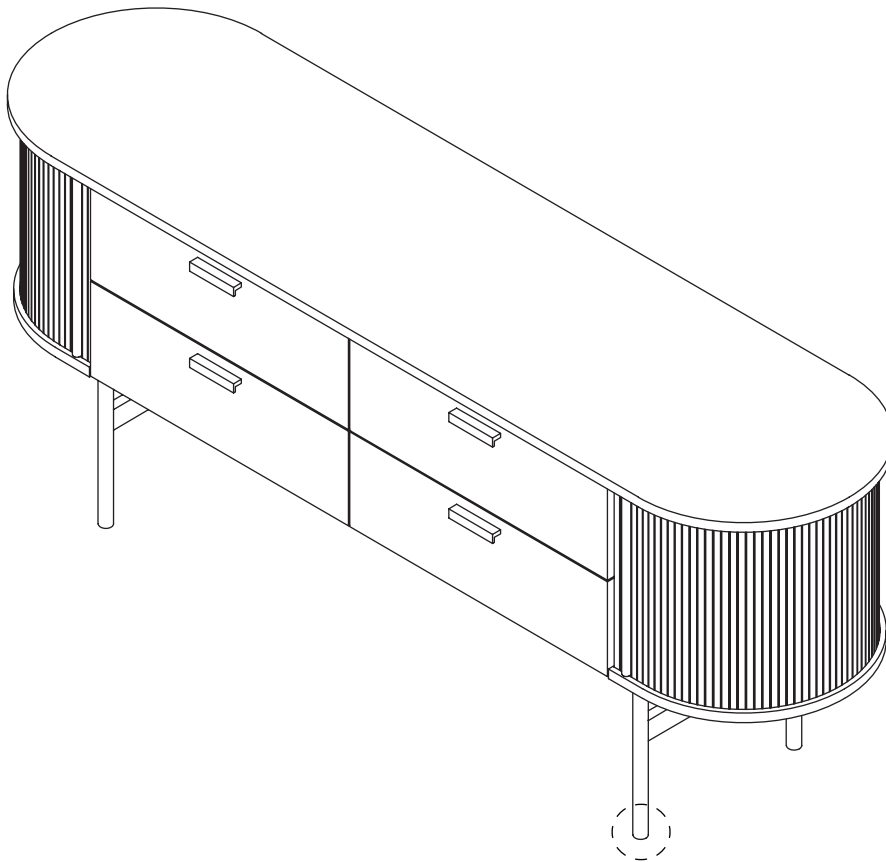

! Fully tighten bolts.

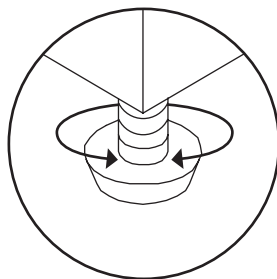

! Adjust levelers as needed.



ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.





TIME








OF PEOPLE

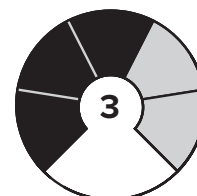

DIFFICULTY

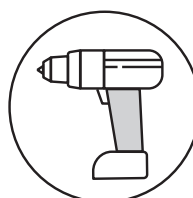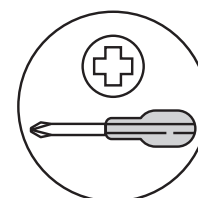REQUIRED TOOL
8MM / 5/16" DRILL BIT

REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.




During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

1

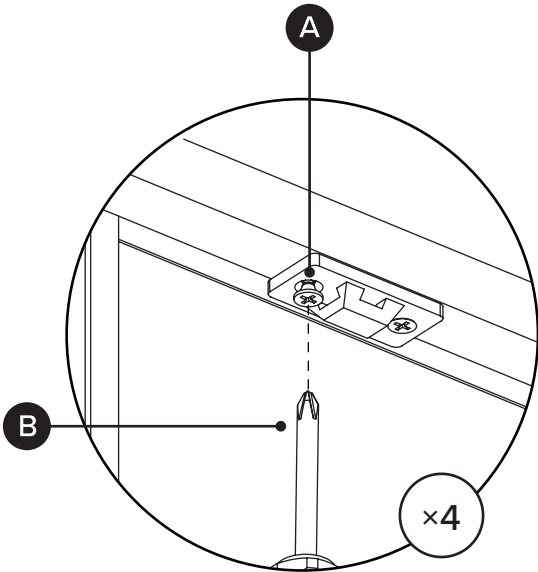


Attach pair of brackets to top corners of the back of the unit.

2


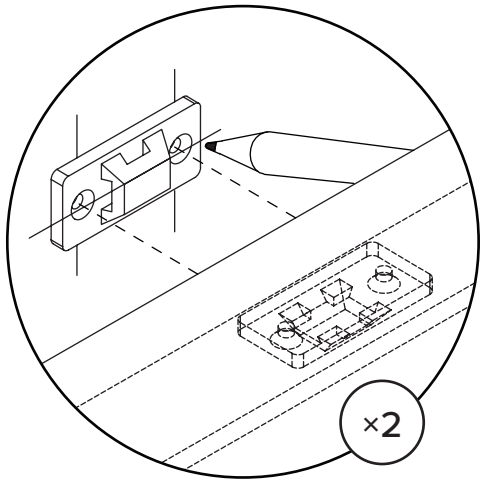


Mark on wall where second pair of brackets should be placed.

3

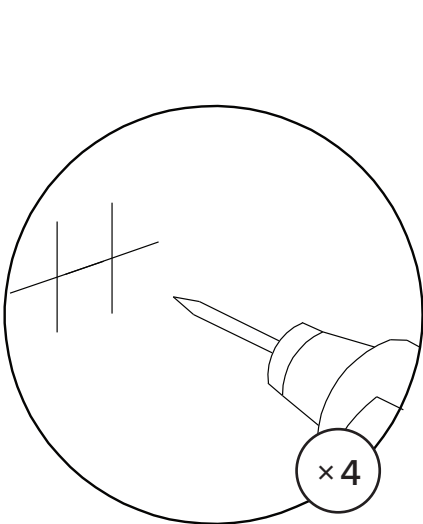


Drill holes in wall using 8mm / 5/16" drill bit.

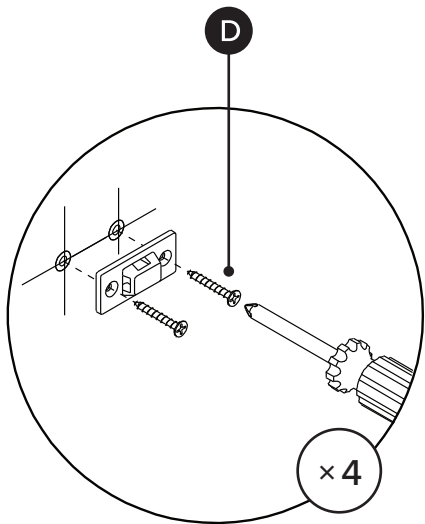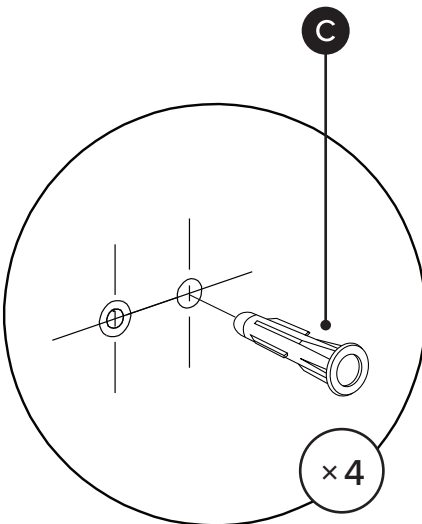


4A

Align brackets on unit
with brackets on wall.

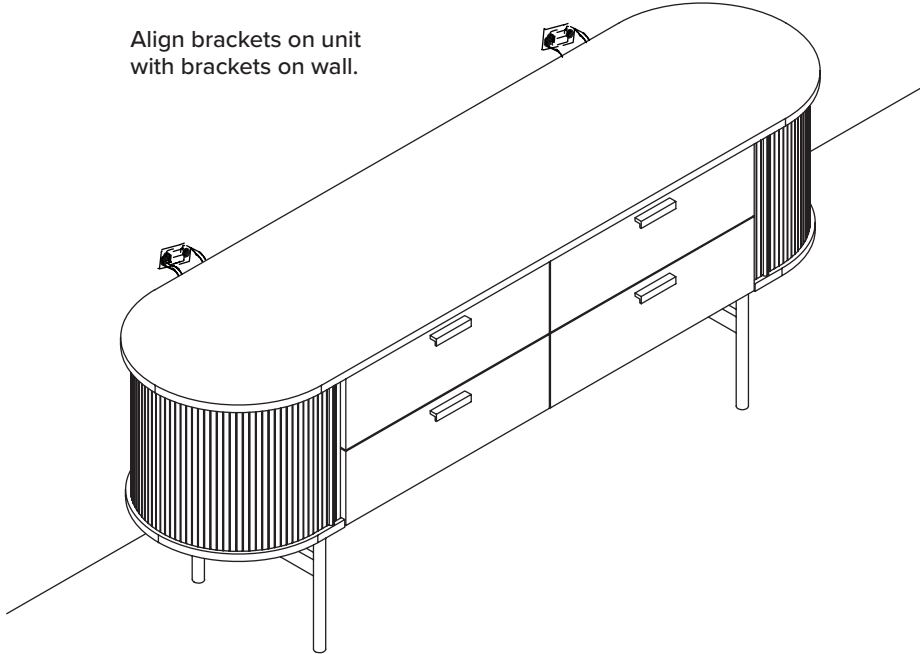

4B

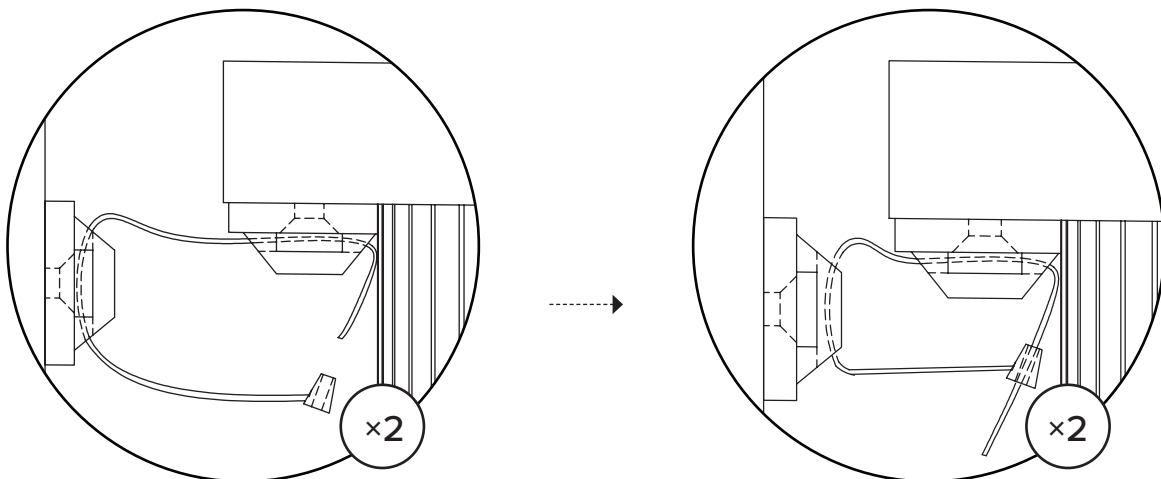

Pull strap down until it snap-locks.