



# ANTI-TIP RESTRAINT INSTALLATION

## ! WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.




TIME




# OF PEOPLE

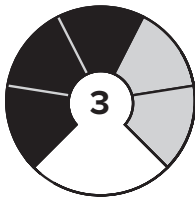






DIFFICULTY

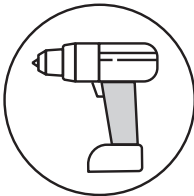

REQUIRED TOOL  
8MM / 5/16" DRILL BIT

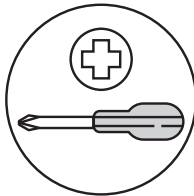


REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2

! Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


1

Align brackets on unit with brackets on wall.

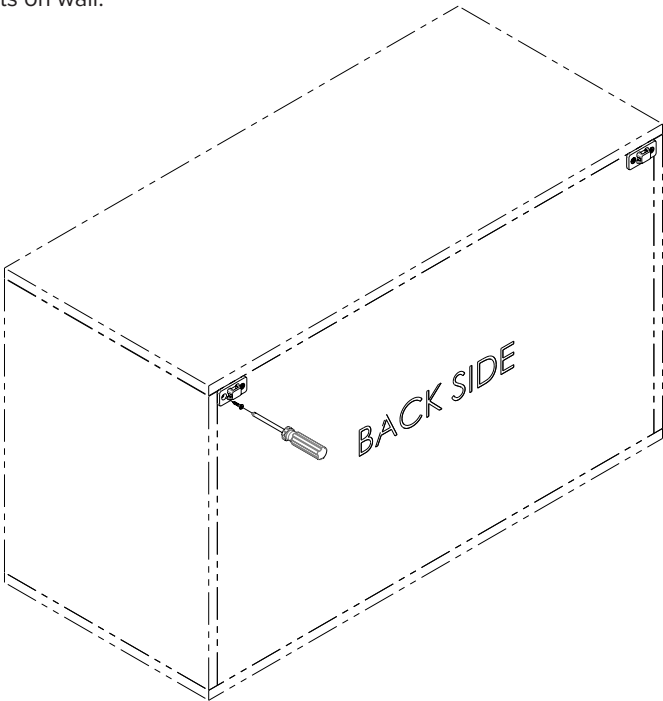


2

3

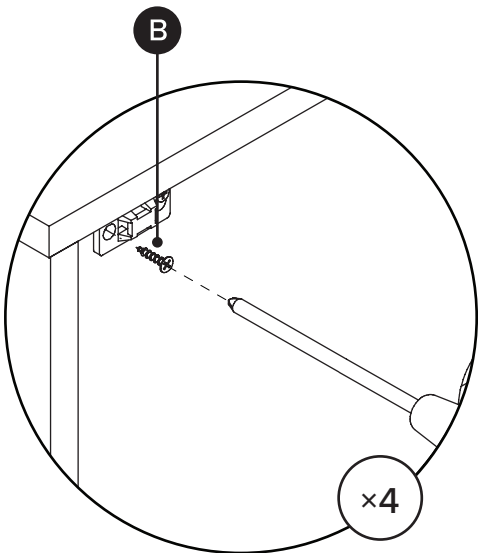


Attach pair of brackets to top corners of the back unit.

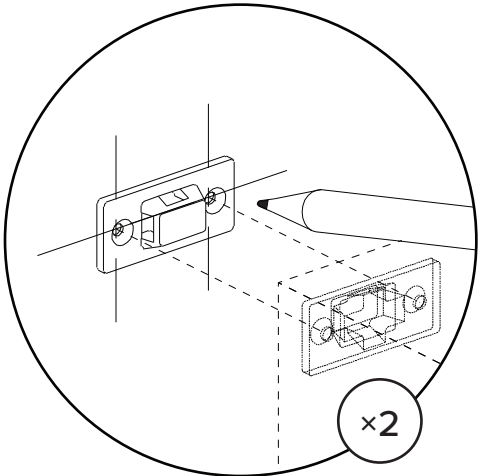

Mark on wall where second pair of brackets should be placed.


4

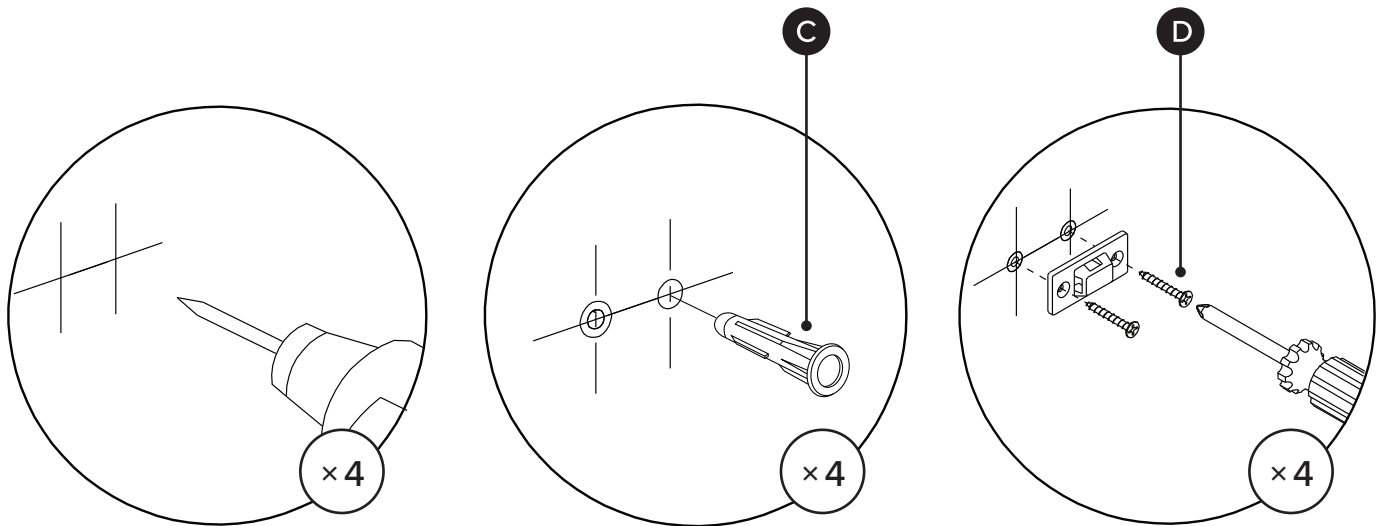


Drill holes in wall using  
8mm / 5/16" drill bit.

5A

Align brackets on unit with brackets on wall.

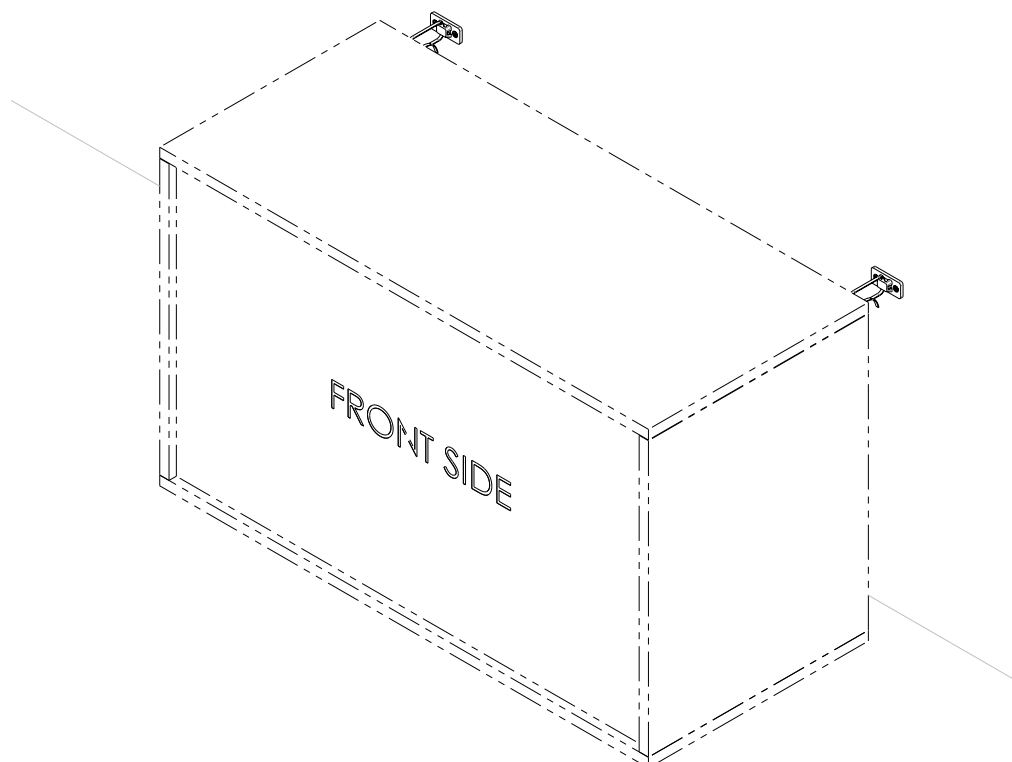

5B

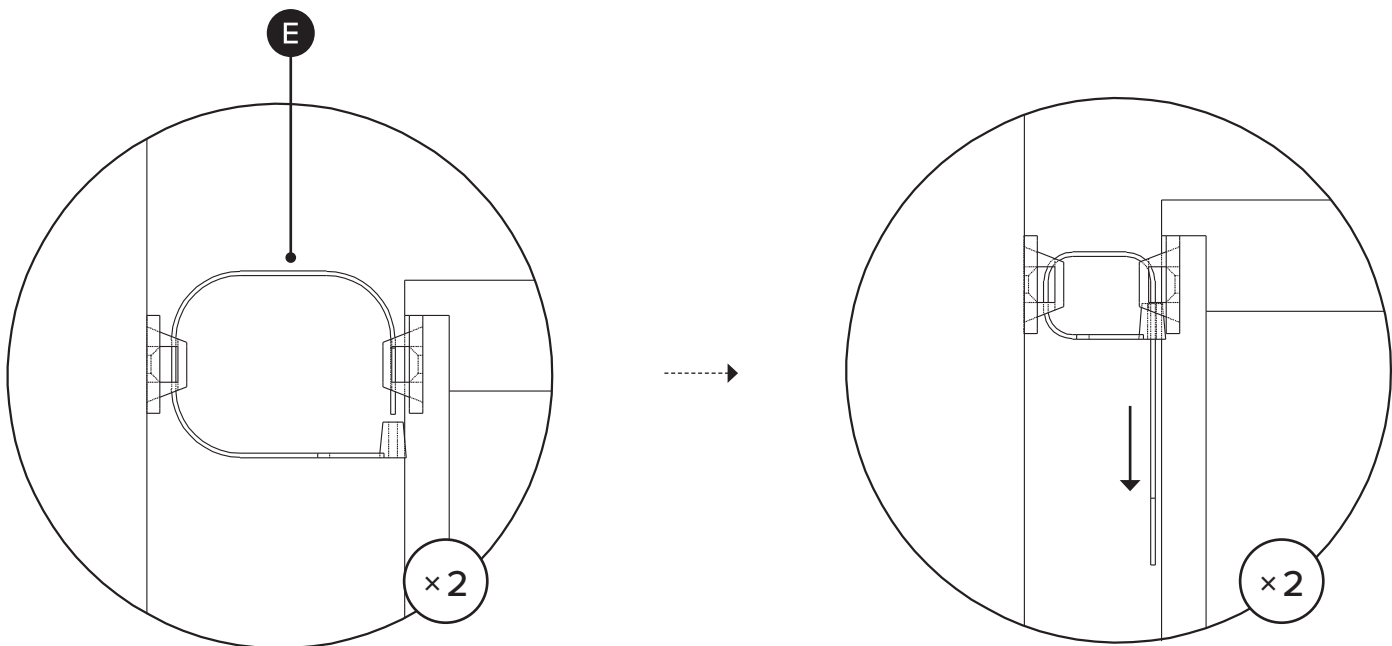

Pull strap down until it snap-locks.