


ARTICLE.

VERSION 1.1

Assembly Instructions

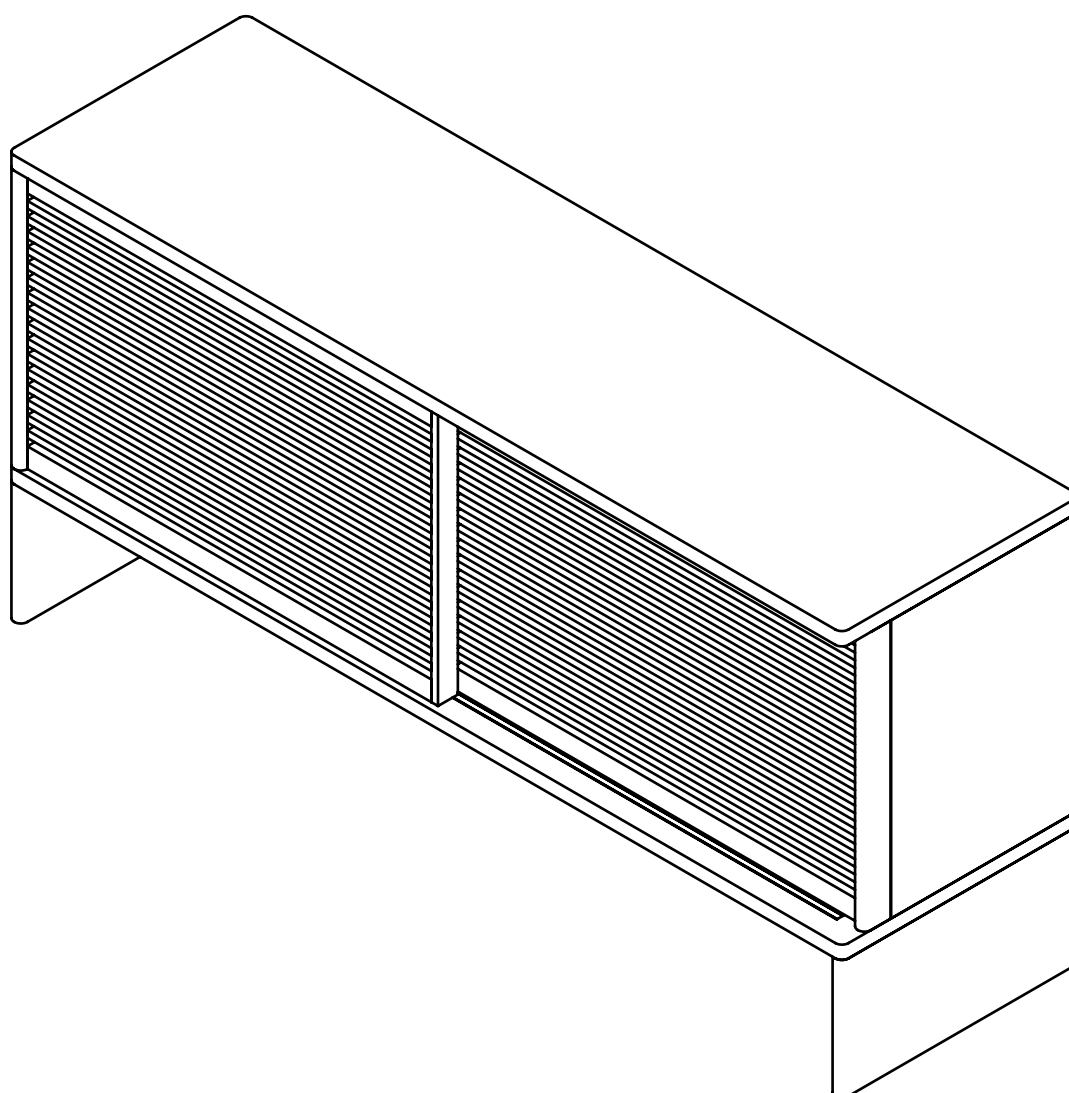

SALINAS

Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



TIME




OF PEOPLE

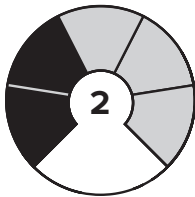


DIFFICULTY





ANTI-TIP
Installation Required

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	CABINET FRAME	1
B	SLIDING DOOR 1	1
C	SLIDING DOOR 2	1
D	SHELF	2
E	SHELF PIN 	8

1


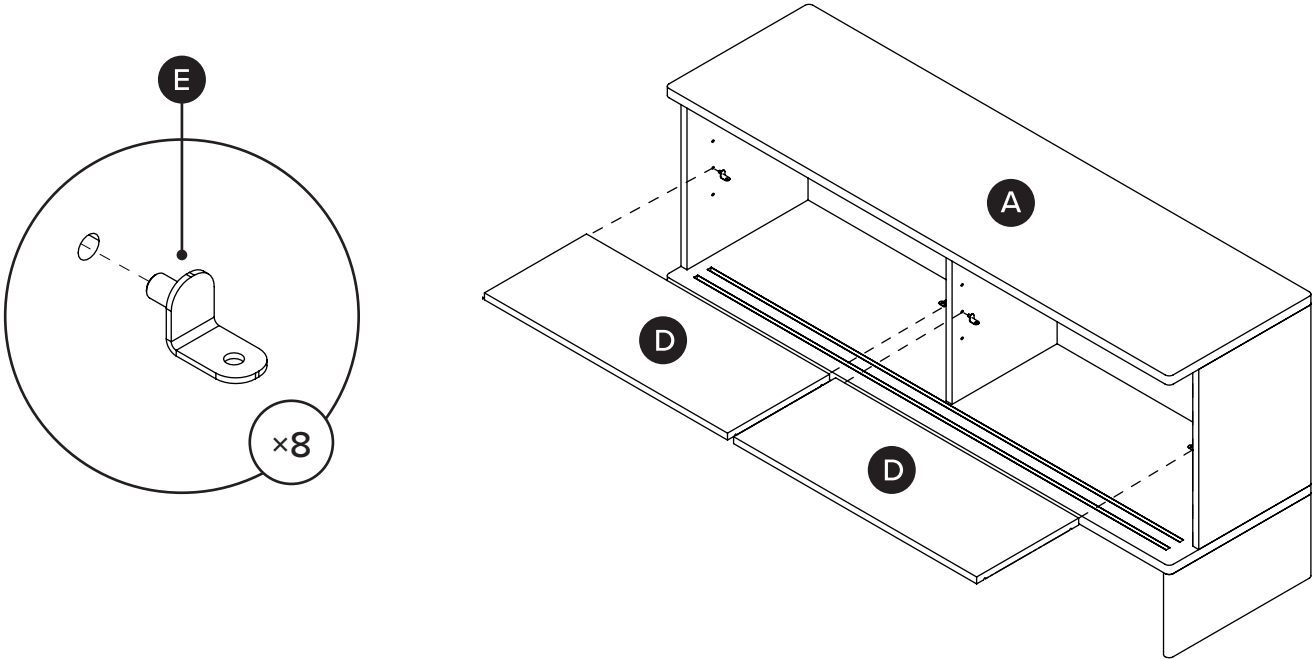


2

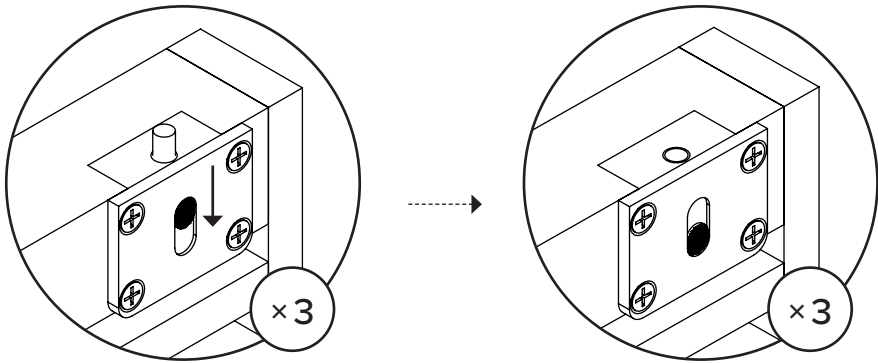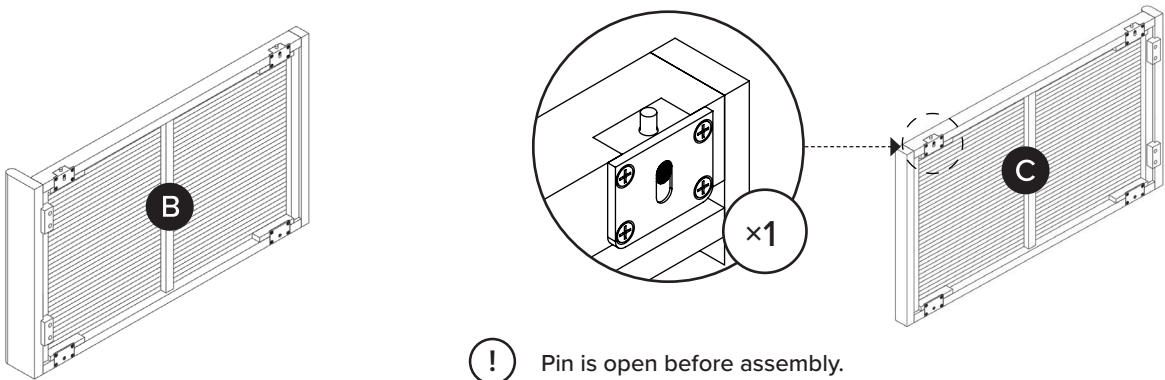


! Pull down to unlock.

3

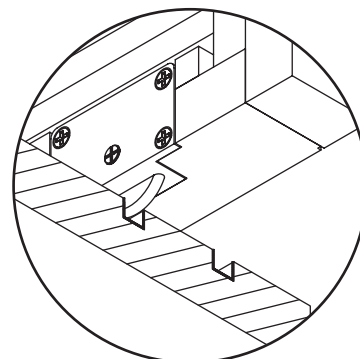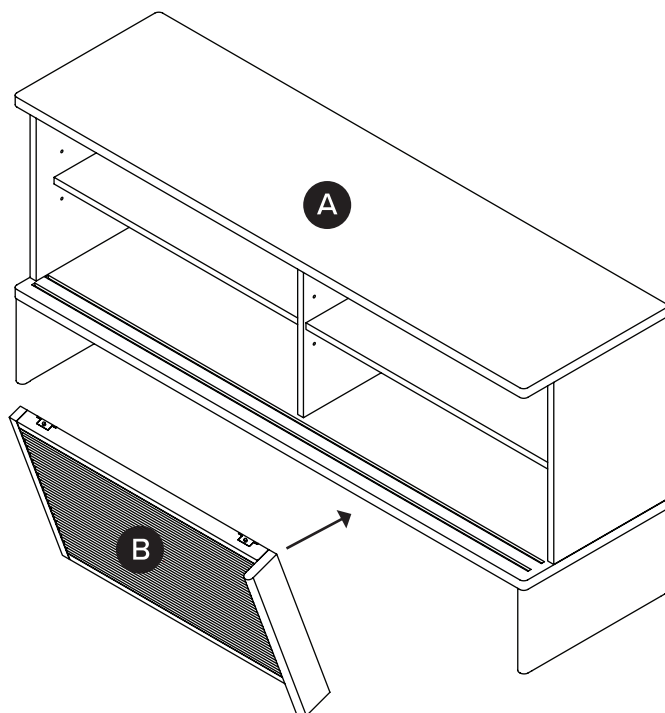


! Place the wheels at the bottom of the door into the inner groove.

4

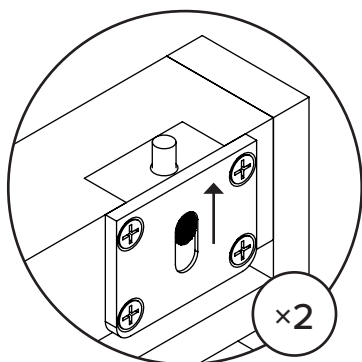


! Press button to lock.

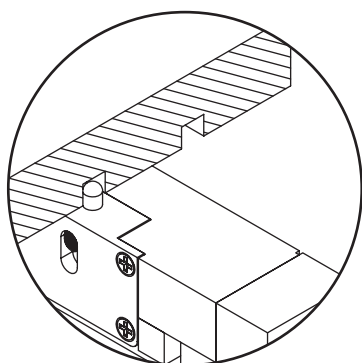


! Lock in the inner groove.



! The door should come over the edge 100mm at least before locked.

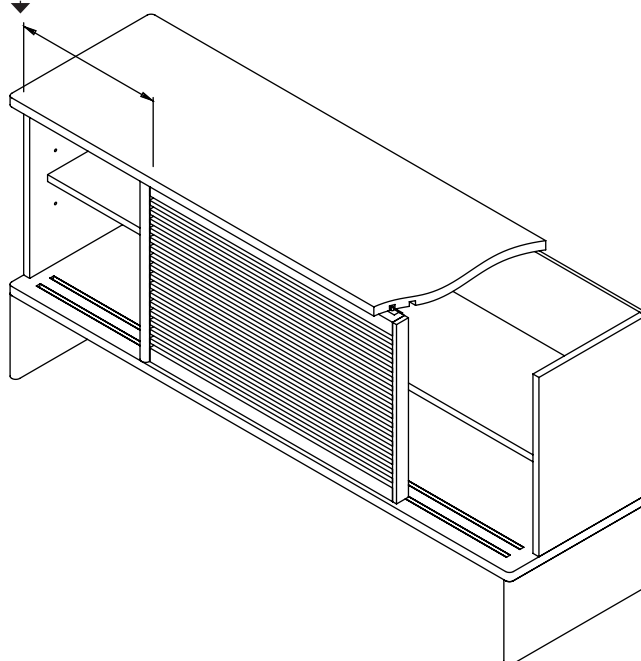

5

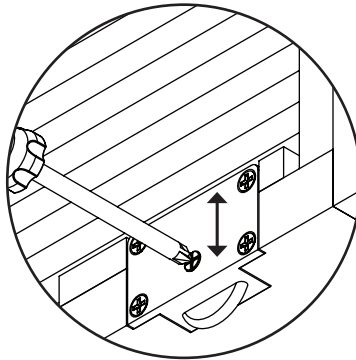


! Adjust the wheel at the bottom of doors by screwing in or out if the door is not straight.

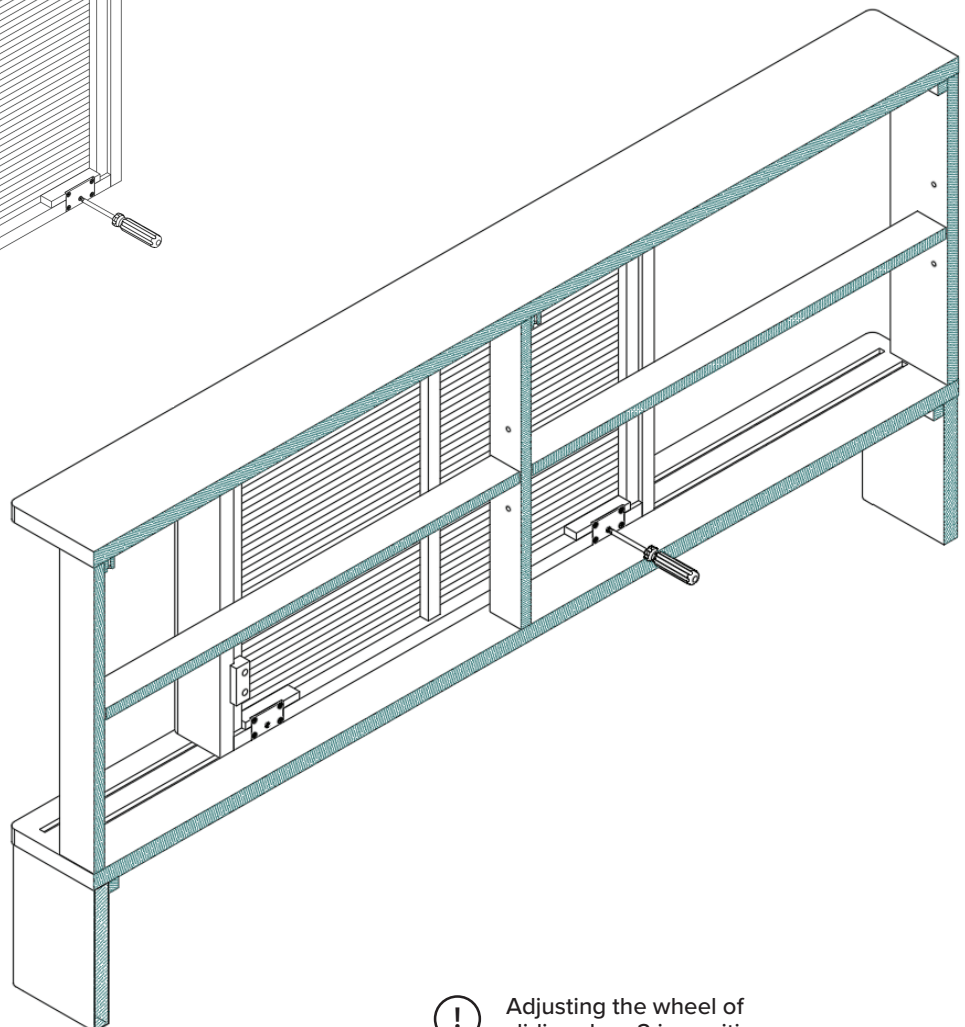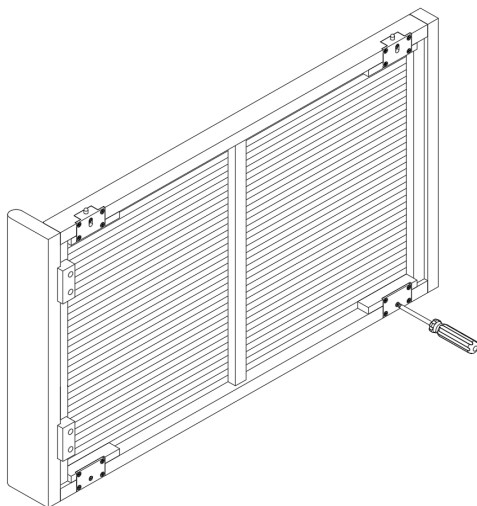


! Adjusting the wheel of sliding door 2 in position.

6

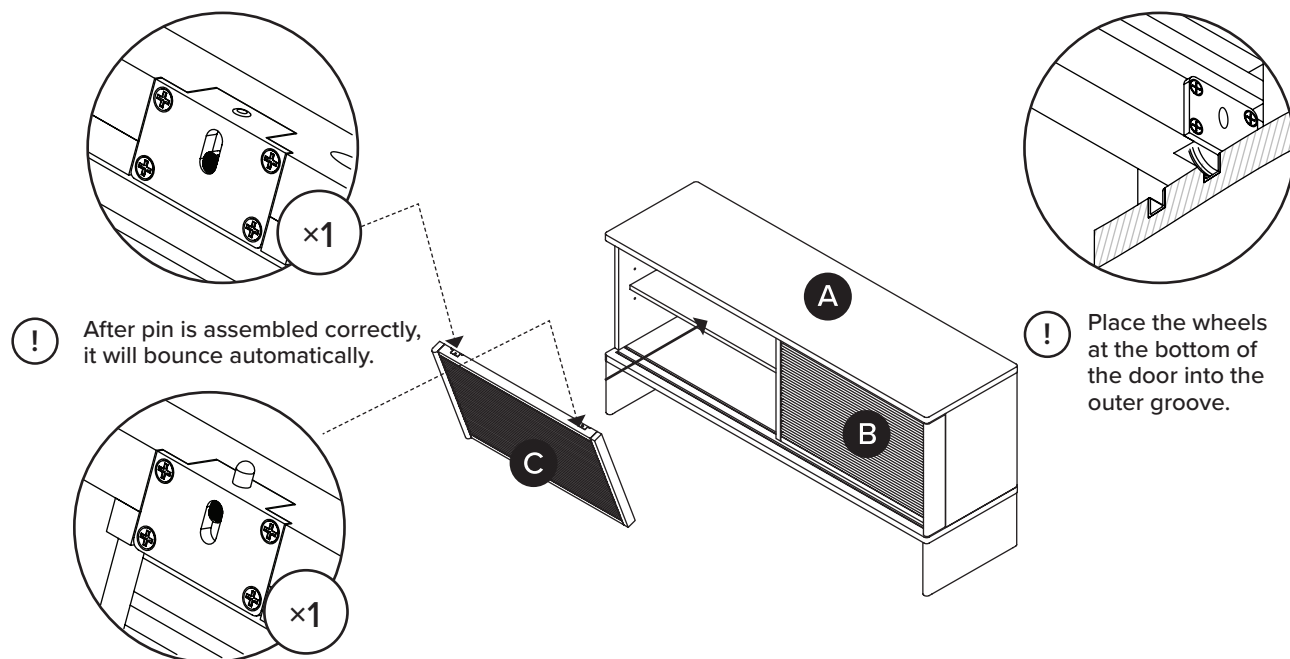


7


! Press the pin on the incomplete closed position.

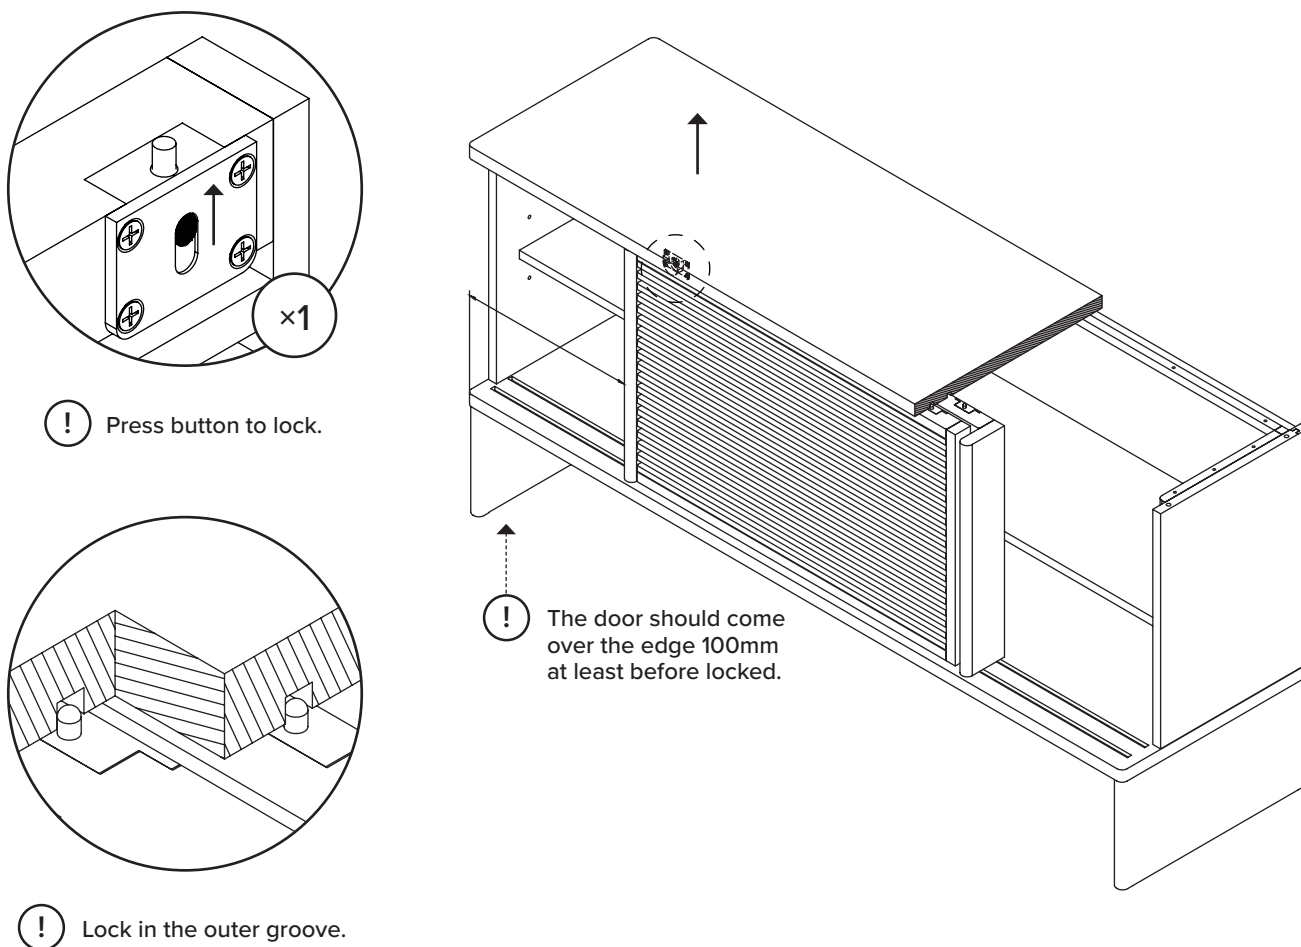

8

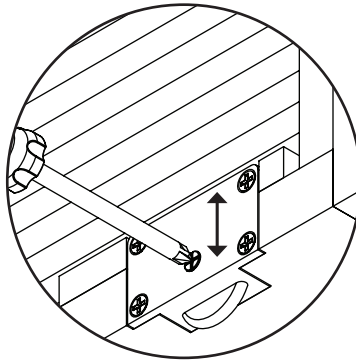

! Adjust the wheel at the bottom of doors by screwing in or out if the door is not straight.

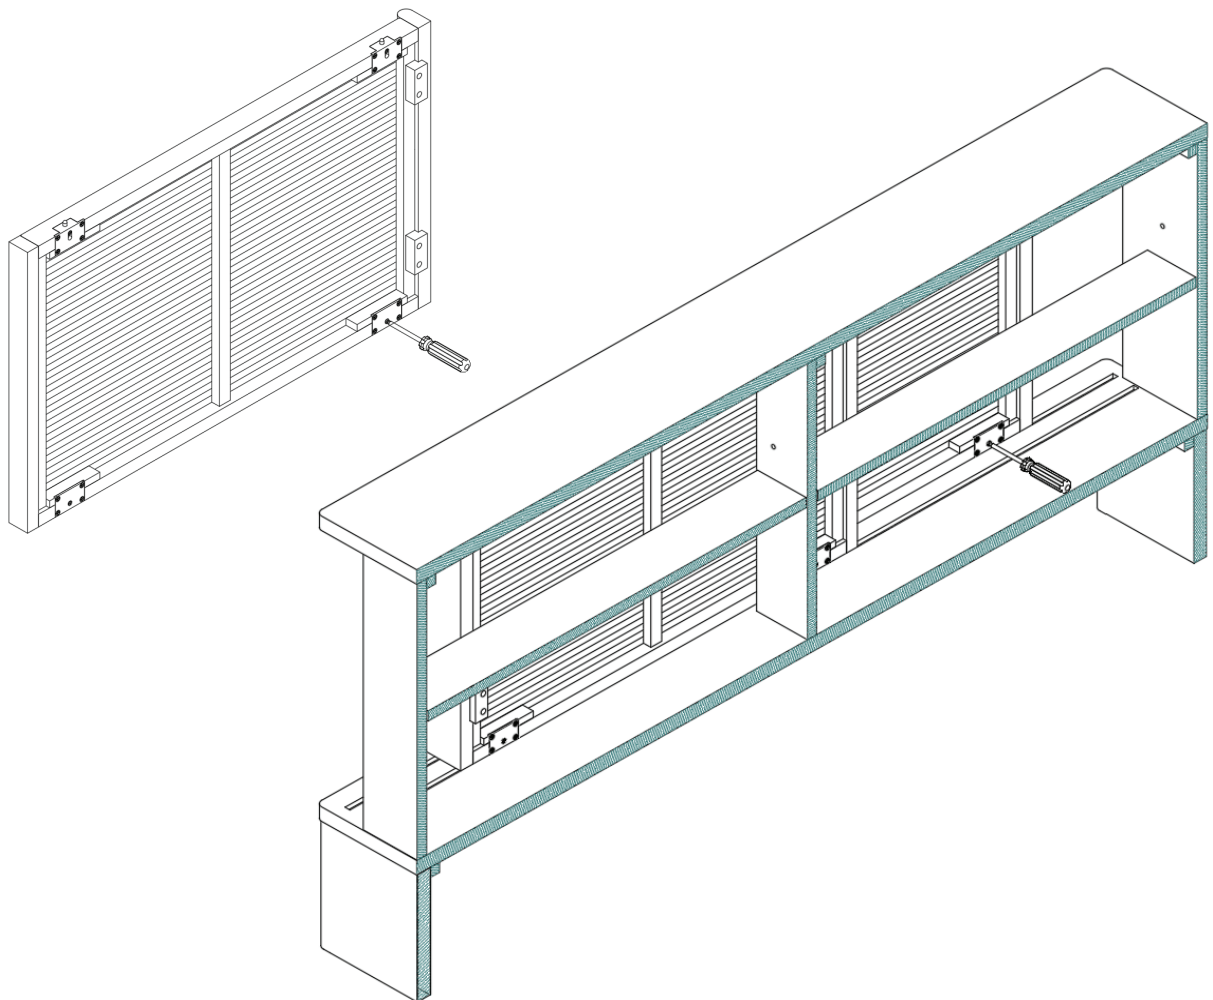

! Adjusting the wheel of sliding door 1 in position.




ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

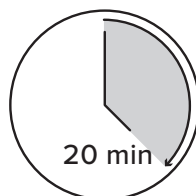


20 min



TIME








OF PEOPLE

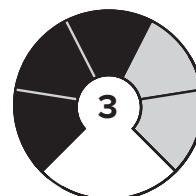

DIFFICULTY

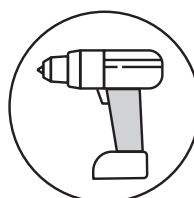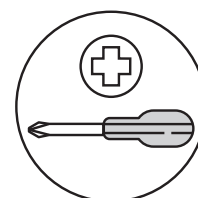REQUIRED TOOL
8MM / 5/16" DRILL BIT

REQUIRED TOOL


PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

Align brackets on unit with brackets on wall.

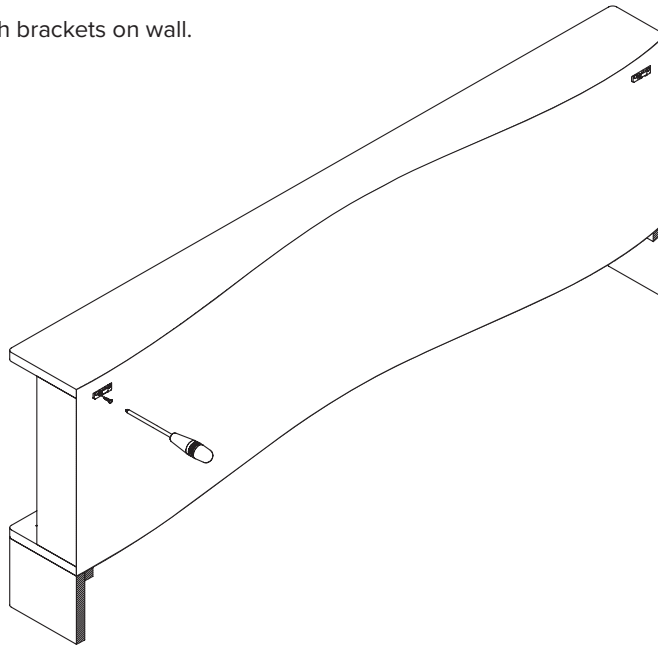


2

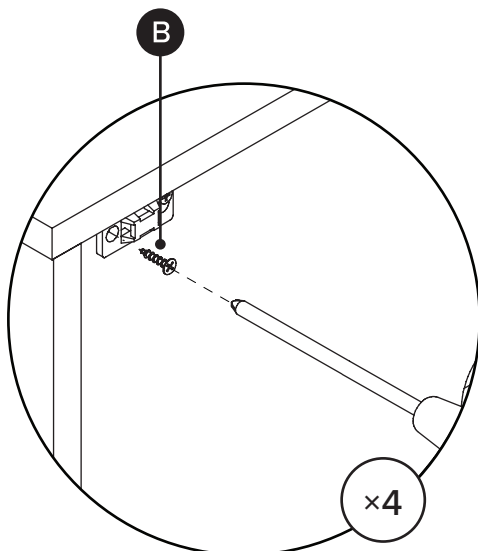


Attach pair of brackets to top corners of the back unit.

3

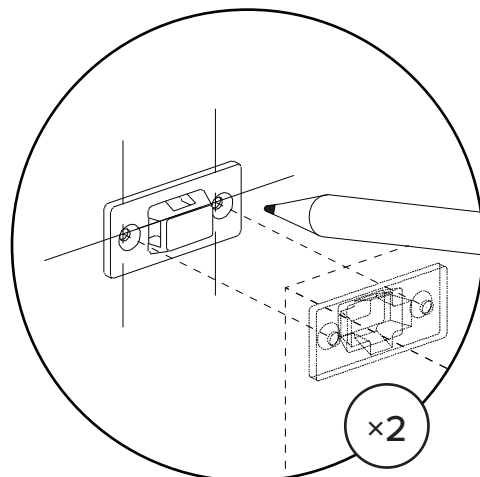

Mark on wall where second pair of brackets should be placed.


4

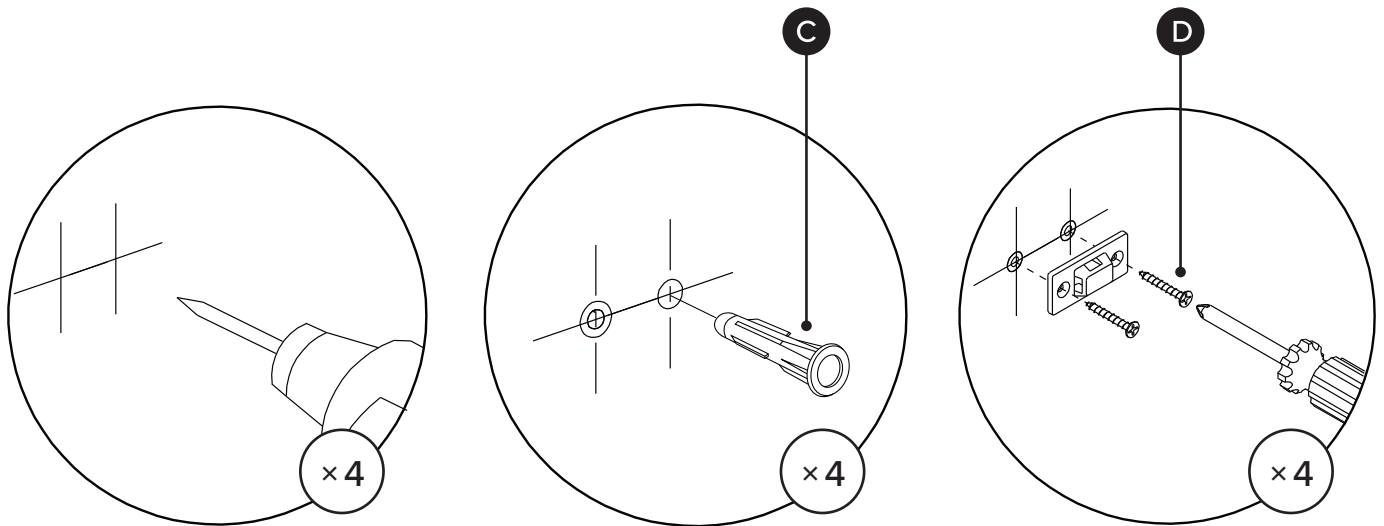



Drill holes in wall using
8mm / 5/16" drill bit.

5A

Align brackets on unit with brackets on wall.

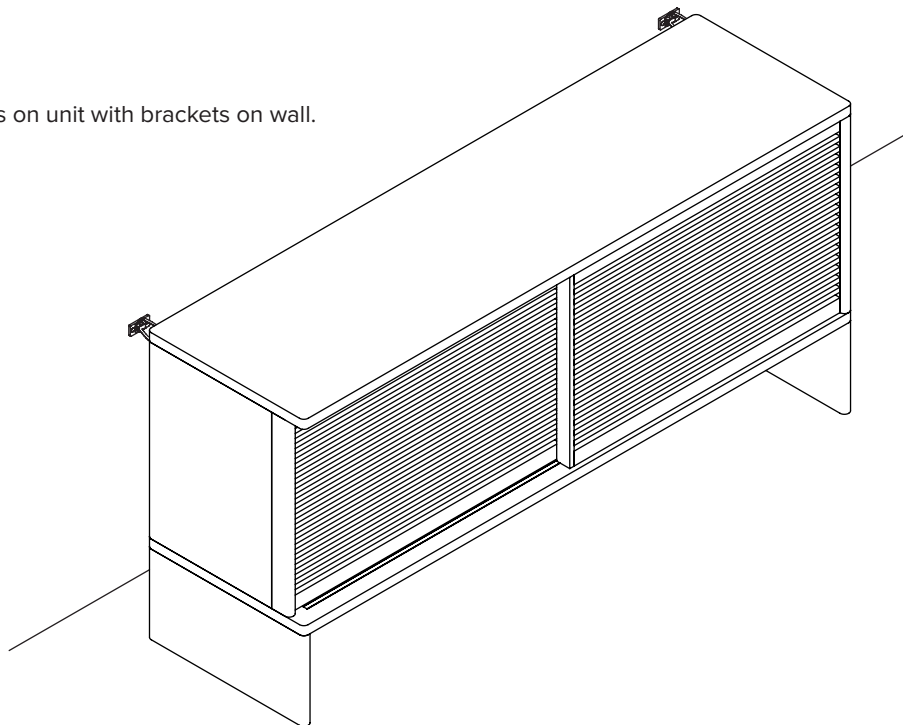

5B

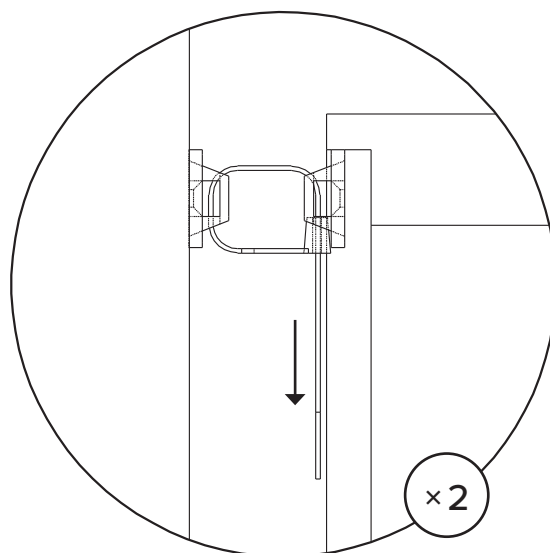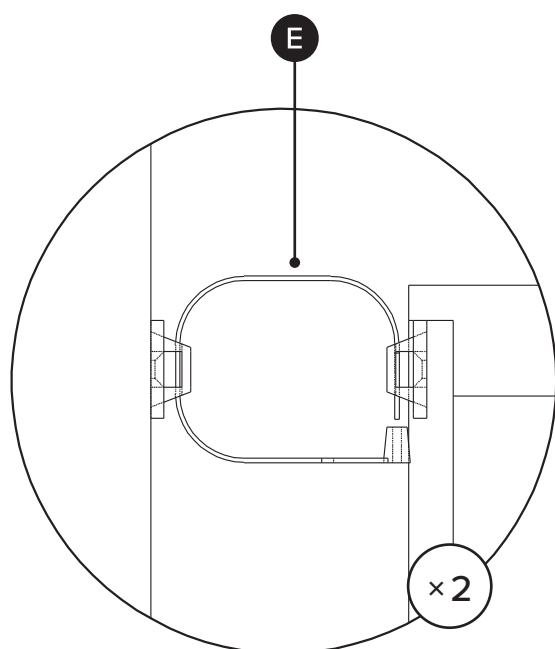

Pull strap down until it snap-locks.