
VERSION 1.0

ARTICLE.

Assembly Instructions

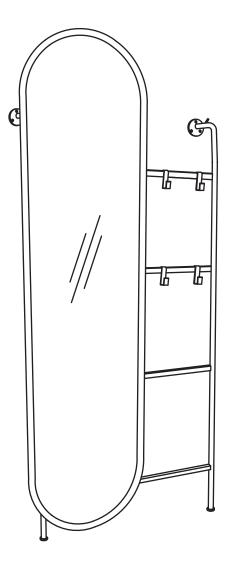

HAMN

Wall Mirror

1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION



WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.







REQUIRED TOOL 8MM / 5/16" DRILL BIT


REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	MIRROR		1
B	LADDER FRAME		1
G	MODULAR HOOK		4
D	SHORT PLUG	111111111111111111111111111111111111111	6
(3)	SHORT SCREW	()	6
6	LONG PLUG	anna anna	4
G	LONG SCREW	0	4

(!

Hardware (A/B) and (C/D) to attach to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.




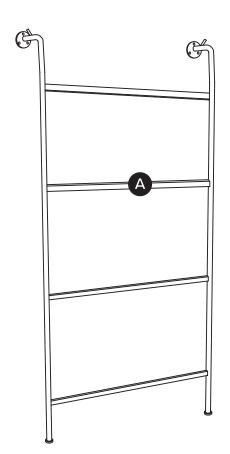



ARTICLE. HAMN Wall Mirror Page 4 of 4




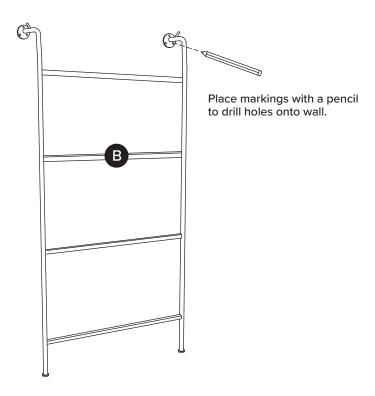




(2B)

OPTION 1 - METAL RACK INSTALLATION







If you want to hang mirror on the wall, please drill additional holes according to where the positioning of holes and hardware.

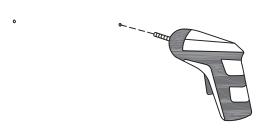

•

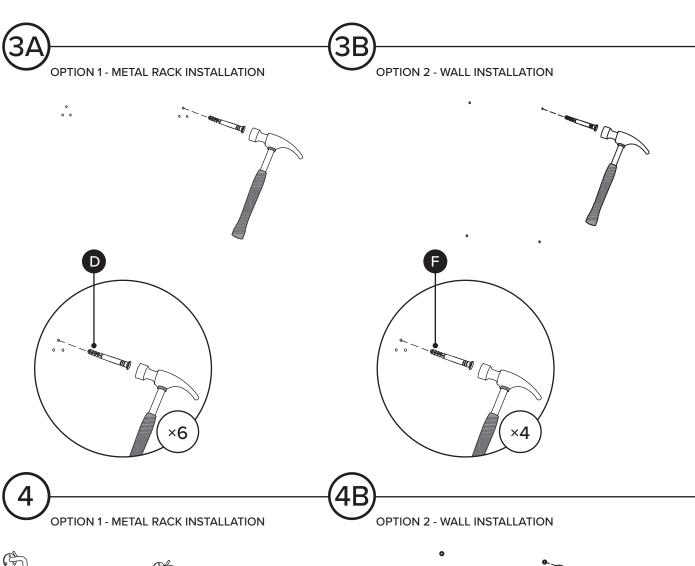


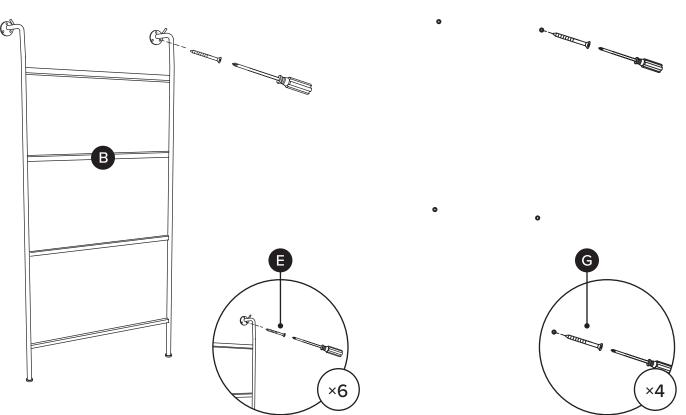



OPTION 1

! Hang the mirror on the metal rack.

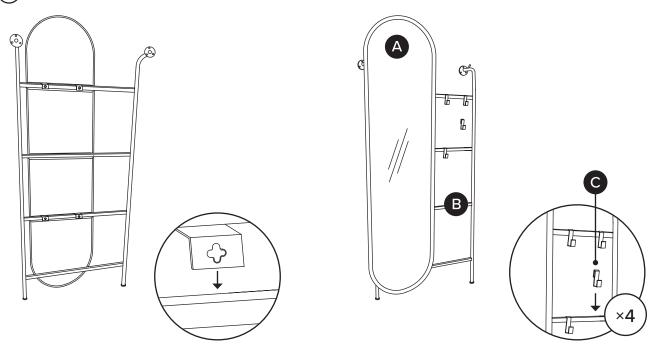

(5B)

OPTION 2

(!) Hang the mirror on the wall.

