
# ARTICLE.

## Assembly Instructions

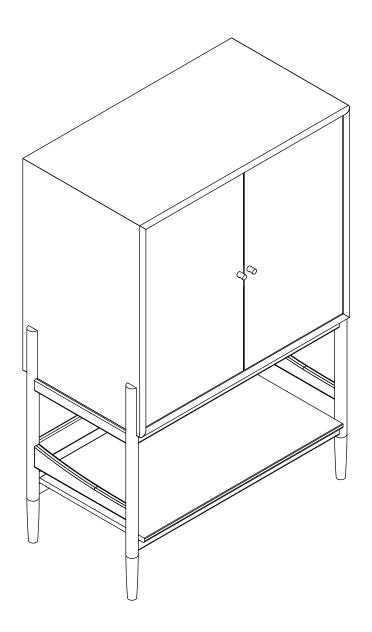

COTU

**Bar Cabinet** 


ARTICLE. COTU Bar Cabinet Page 2 of 12


#### **ASSEMBLY INSTRUCTIONS**

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

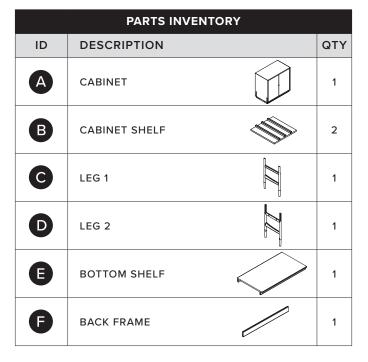


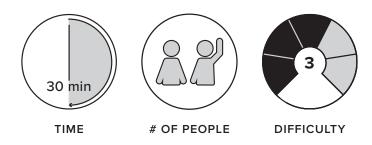


PARTS INVENTORY CONT.				
ID	DESCRIPTION		QTY	
G	ALLEN KEY		1	
•	M6 × 45MM BOLT		14	
0	CRESCENT WASHER		10	
0	M6 LOCK	0	4	
K	M6 WASHER		4	
0	SHELF PIN		8	
M	M4 × 20MM BOLT		2	
N	HANDLE	9	2	

ARTICLE. COTU Bar Cabinet Page 3 of 12




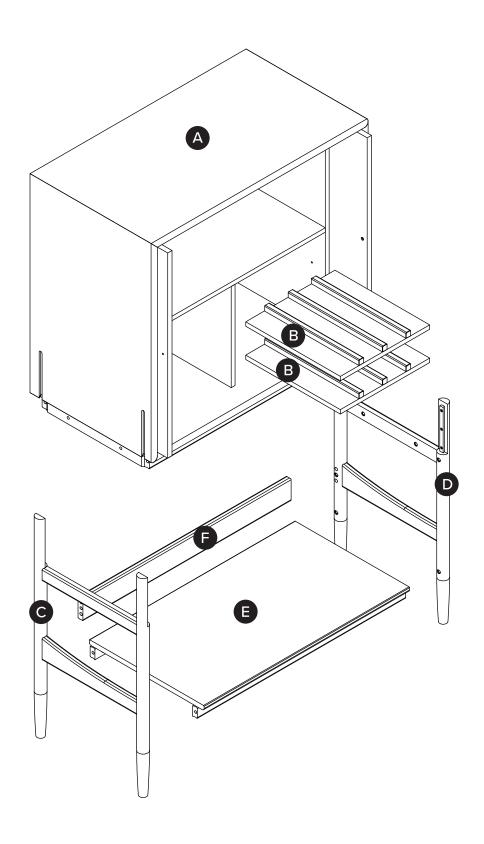


COTU Bar Cabinet

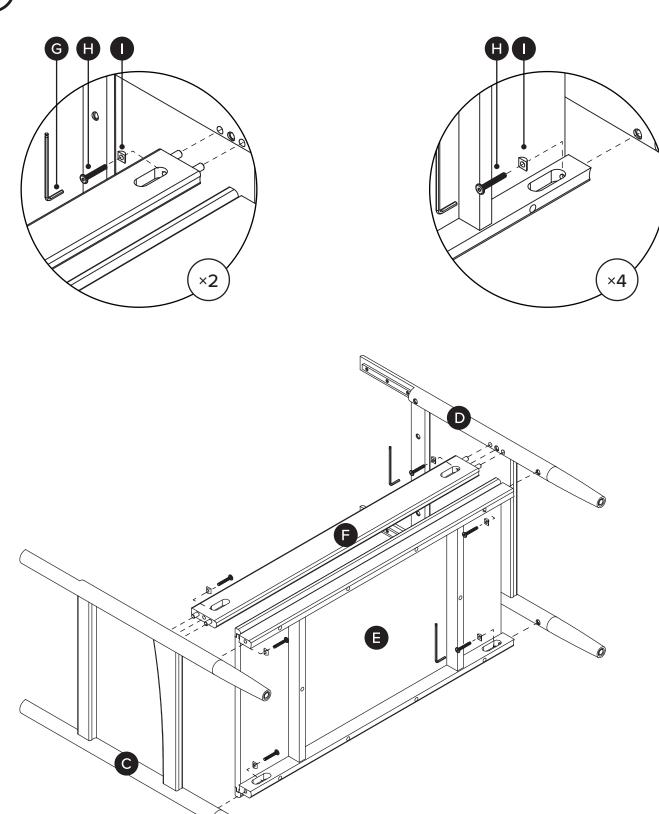



(2)

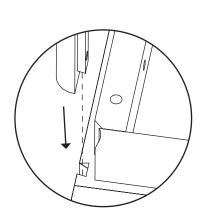


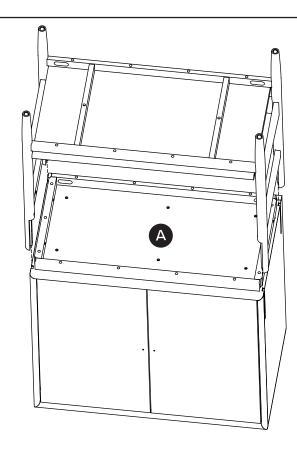


(3)

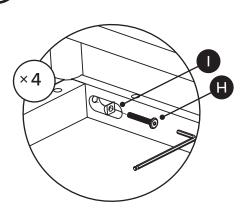

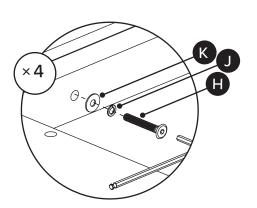


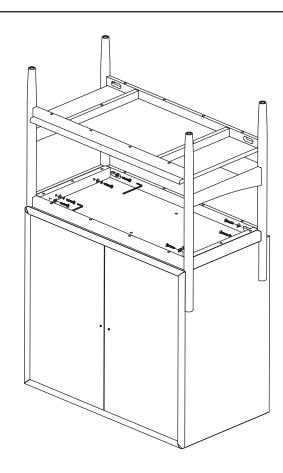




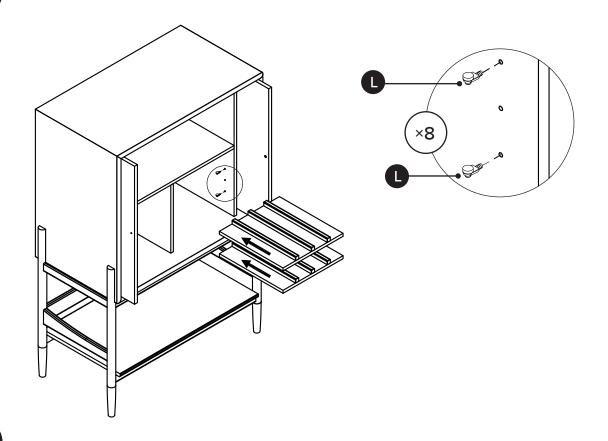




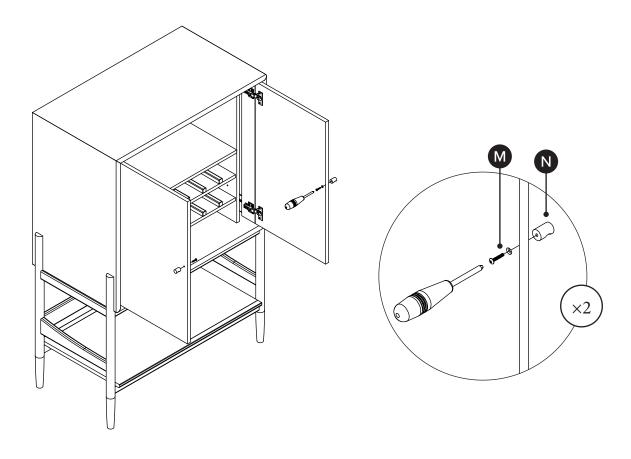




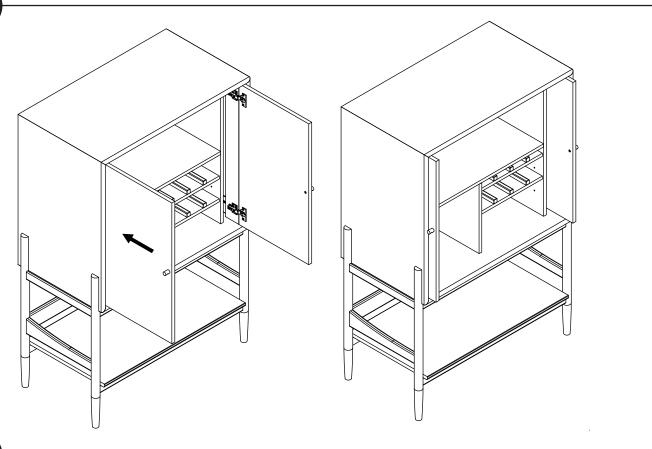



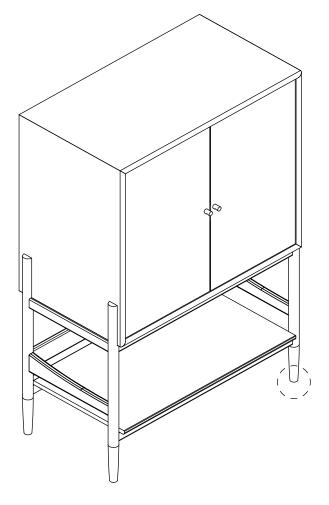

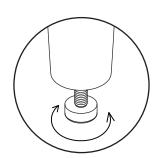

! Adjust levelers as needed.

1010 Raymur Ave. Vancouver, BC V6A 3T2



## ANTI-TIP RESTRAINT INSTALLATION



#### **WARNING!**


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.








REQUIRED TOOL 8MM / 5/16" DRILL BIT

**REQUIRED TOOL** 


PARTS INVENTORY				
ID	DESCRIPTION		QTY	
A	BRACKET		4	
B	M4 × 20MM SCREW	Din	4	
G	M8 × 51MM PLUG		4	
D	M6 × 70MM SCREW	annang	4	
•	STRAP	Ö	2	

Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



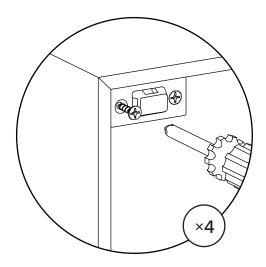


Attach pair of brackets to top corners of the back of the unit.

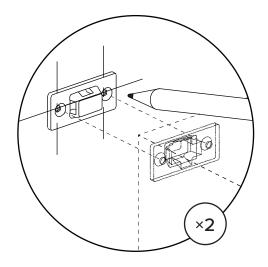



Mark on wall where second pair of brackets should be placed.

(2


Drill holes into drywall, in wall using 8mm 5/16" drill bit.

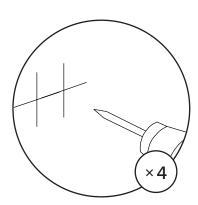

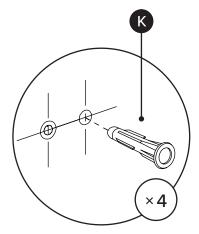

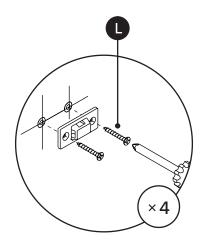




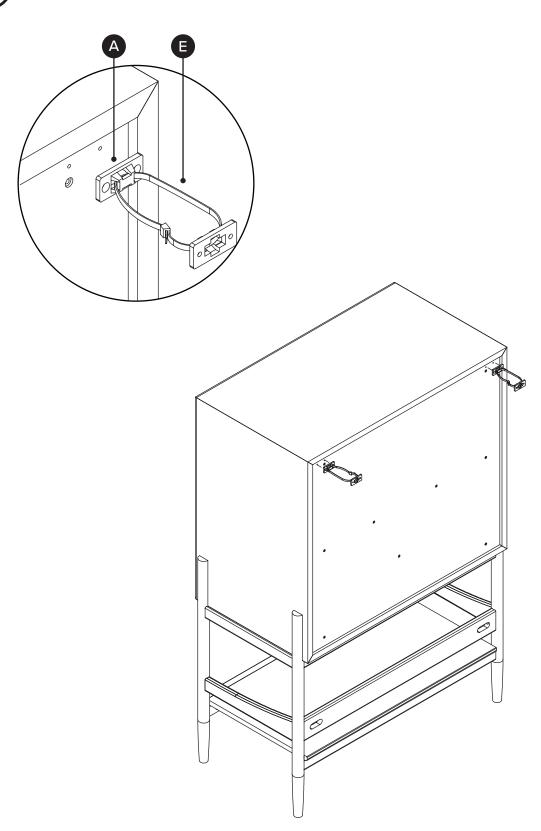

ARTICLE. CABINET Door Adjustment Page 11 of 12


### DOOR ADJUSTMENT INSTRUCTIONS


During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.



**REQUIRED TOOL** 




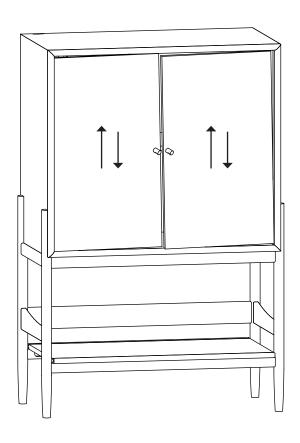


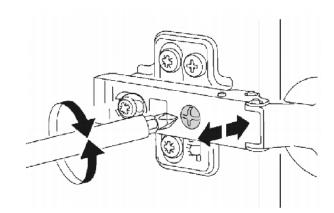

OTU Bar Cabinet Page 12 of 12

(2

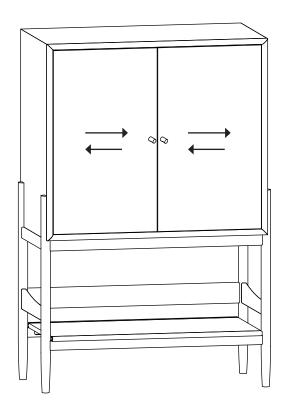

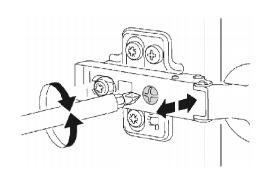

3

