


ARTICLE.

VERSION 1.4

Assembly Instructions

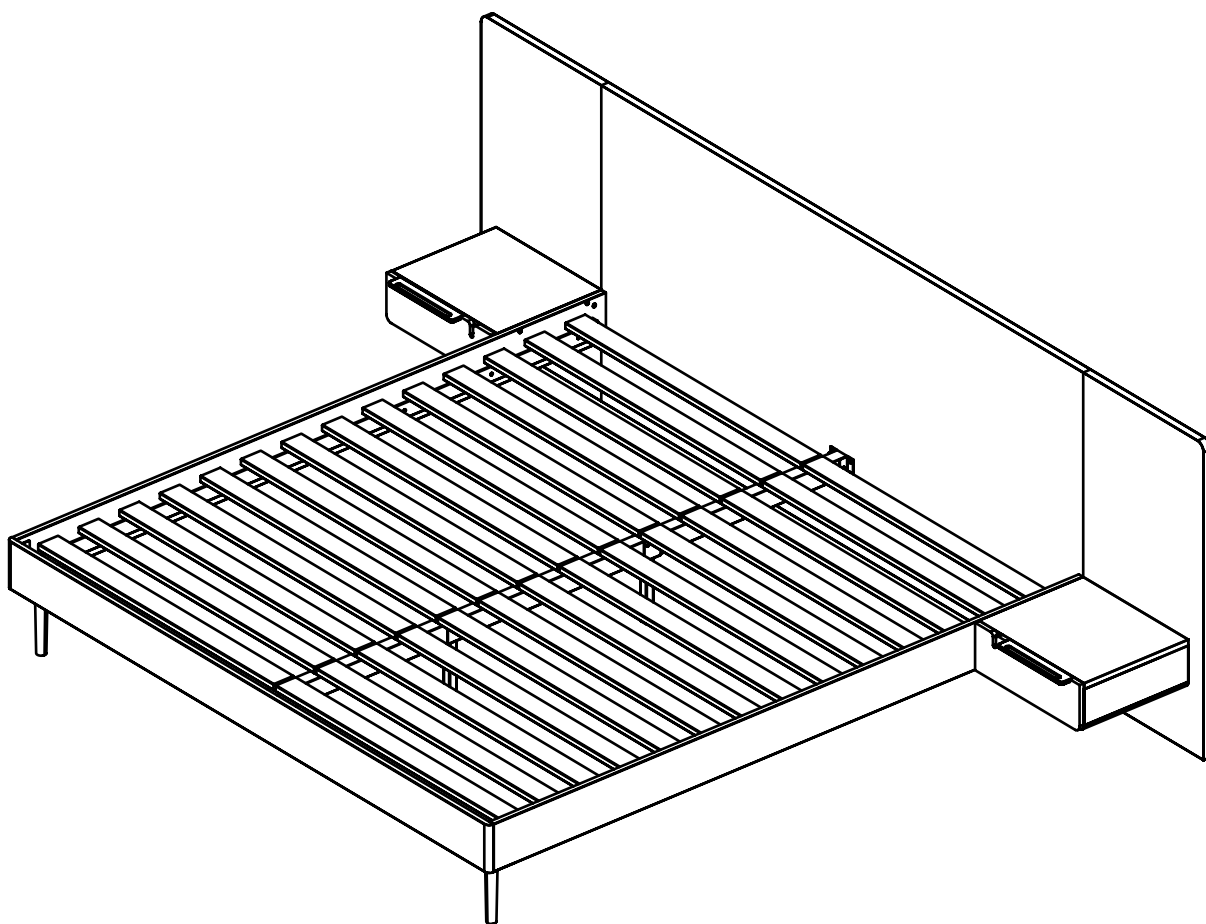

NERA

Bed with Nightstands

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




TIME




OF PEOPLE







DIFFICULTY

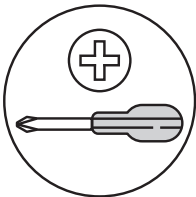


REQUIRED TOOL
Phillips screwdriver

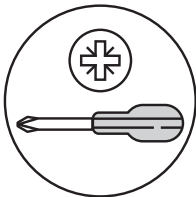



REQUIRED TOOL
Pozidriv screwdriver

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	LEFT SIDE HEADBOARD	1
C	RIGHT SIDE HEADBOARD	1
D	FOOTBOARD	1
E	CENTER BEAM BRACKET 	2
F	LEFT SIDE RAIL	1
G	RIGHT SIDE RAIL	1
H	LEFT CORNER PIECE 	1
I	RIGHT CORNER PIECE 	1
J	LEG 	2


PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
K	CENTER BEAM	1
L	CENTER LEG 	2
M	LEFT NIGHTSTAND	1
N	RIGHT NIGHTSTAND	1
O	SLAT	4



Structural integrity is warranted only if all fasteners are properly installed & tightened, and the bed is moved only per instructions.



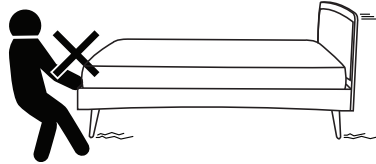
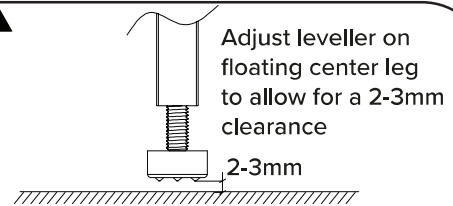



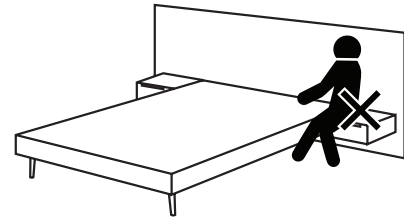



DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING










DO NOT SIT OR STAND ON NIGHTSTAND
MAY CAUSE INJURY AND/OR STRUCTURAL DAMAGE

HARDWARE / TOOLS INVENTORY



ID	DESCRIPTION	QTY
1	WOOD DOWEL 	10
2	WOOD DOWEL 	4
3	M11 × 5MM SCREW 	32
4	ALLEN KEY 	8
5	M6 × 110MM SCREW 	12
6	M6 × 50MM BOLT 	2
7	THIN ALLEN KEY 	14
8	SHAFT NUT 	4
9	CAM LOCK SCREW 	6

HARDWARE / TOOLS INVENTORY CONT.



ID	DESCRIPTION	QTY
10	M4 × 70MM SCREW 	8
11	CAM LOCK 	6
12	SPANNER 	1
13	ALLEN KEY 	1
14	SLIDER 	2
15	SLIDER 	2

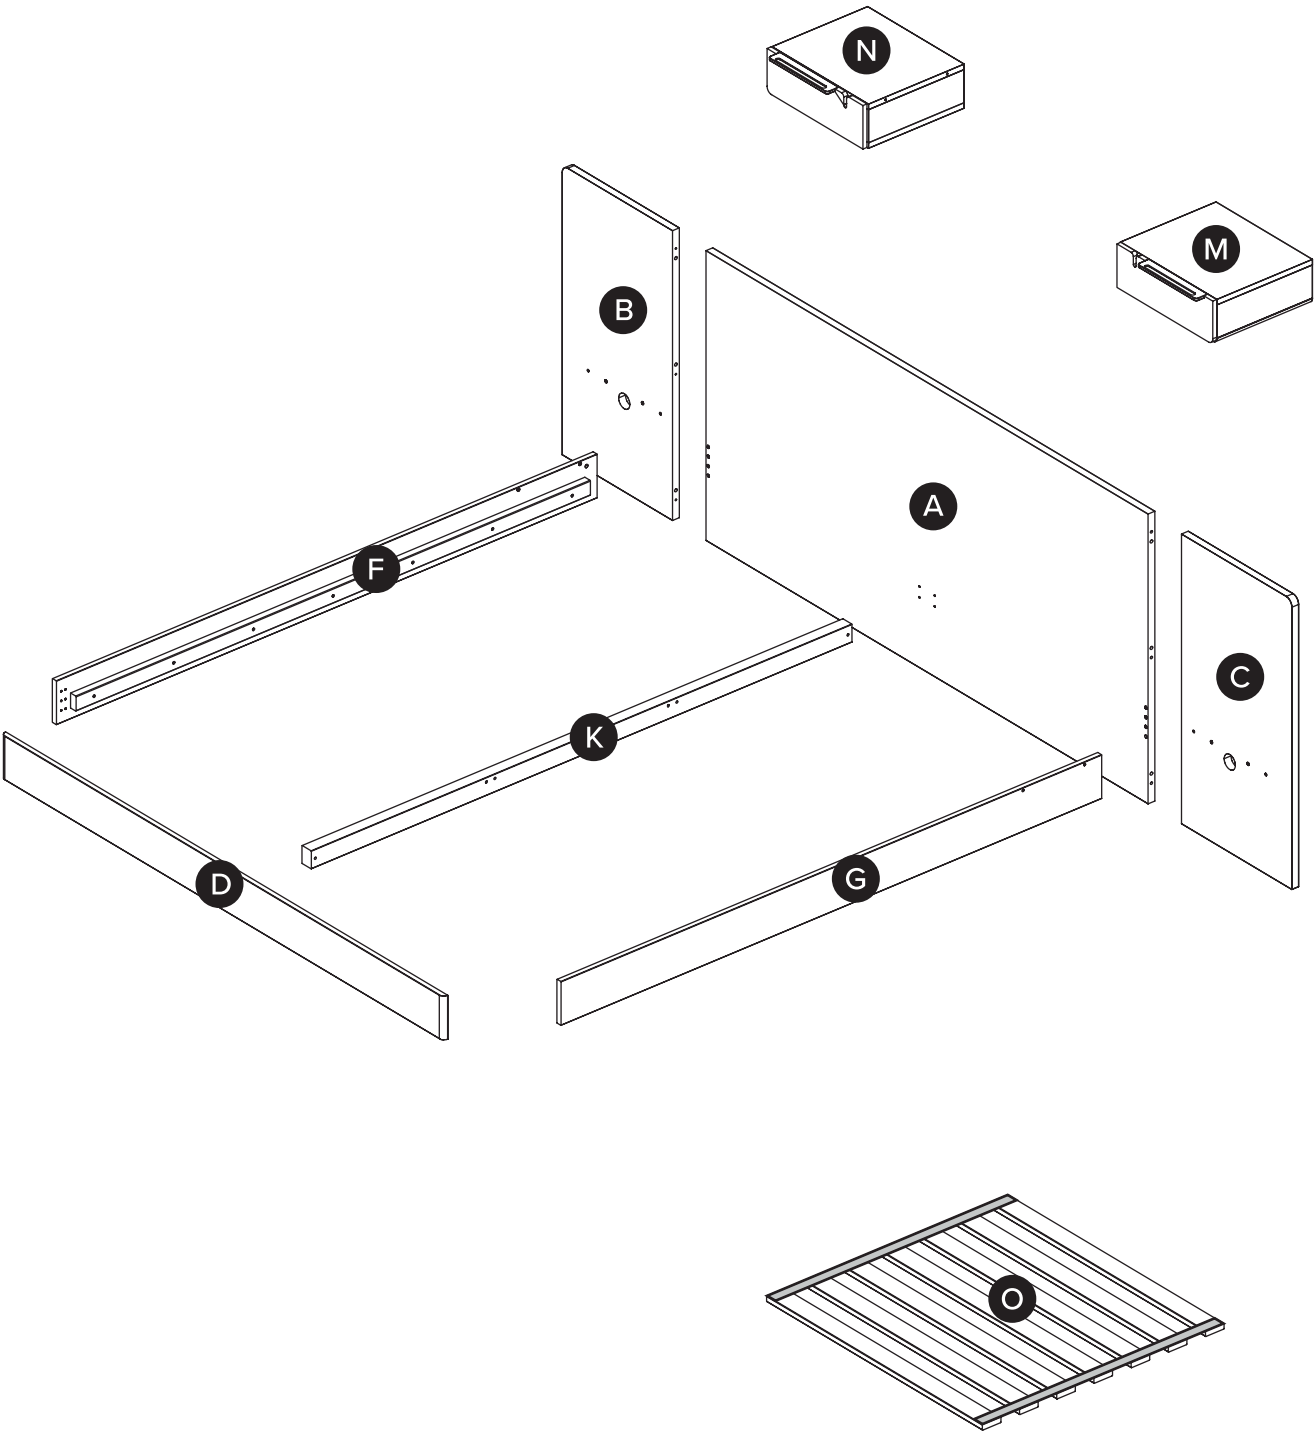


1

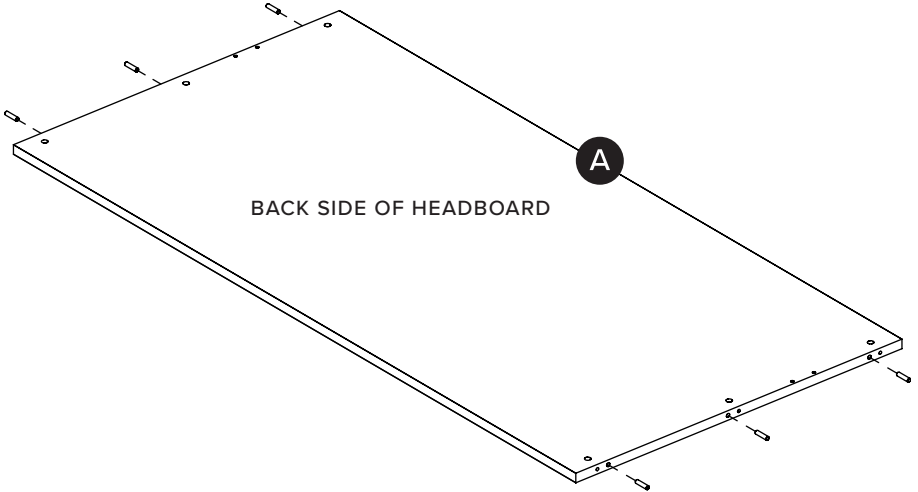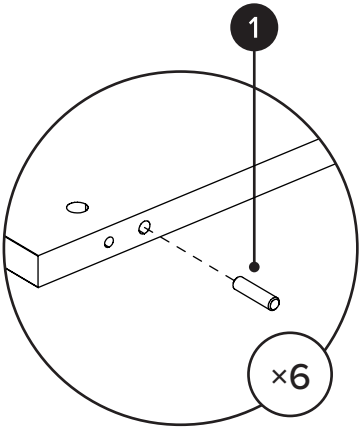


2

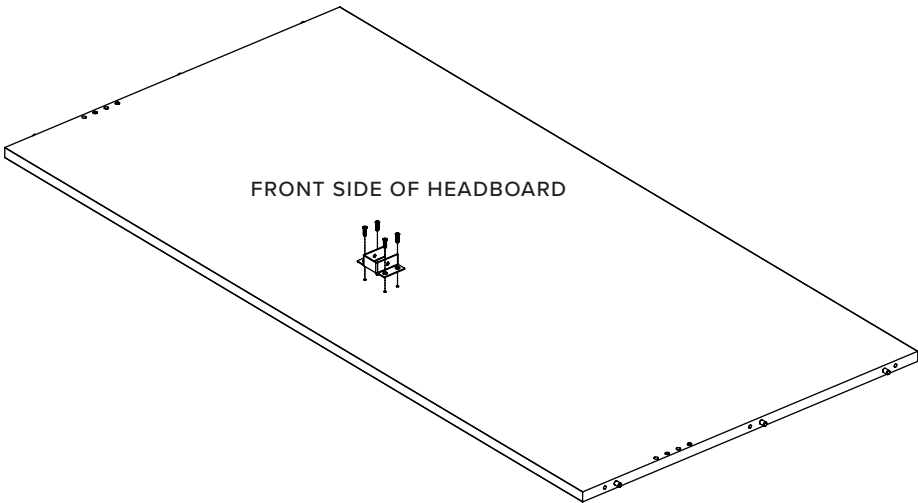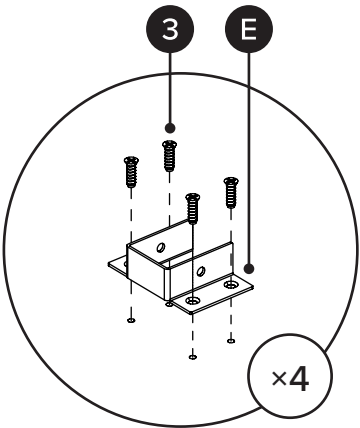


3

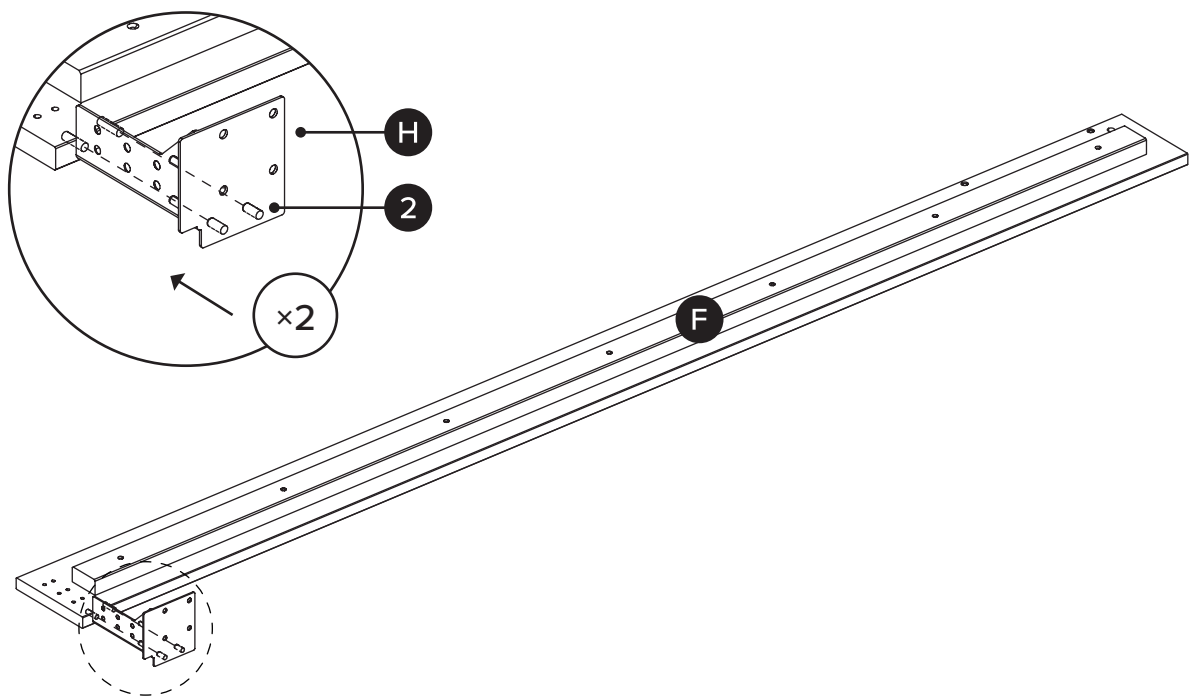


4

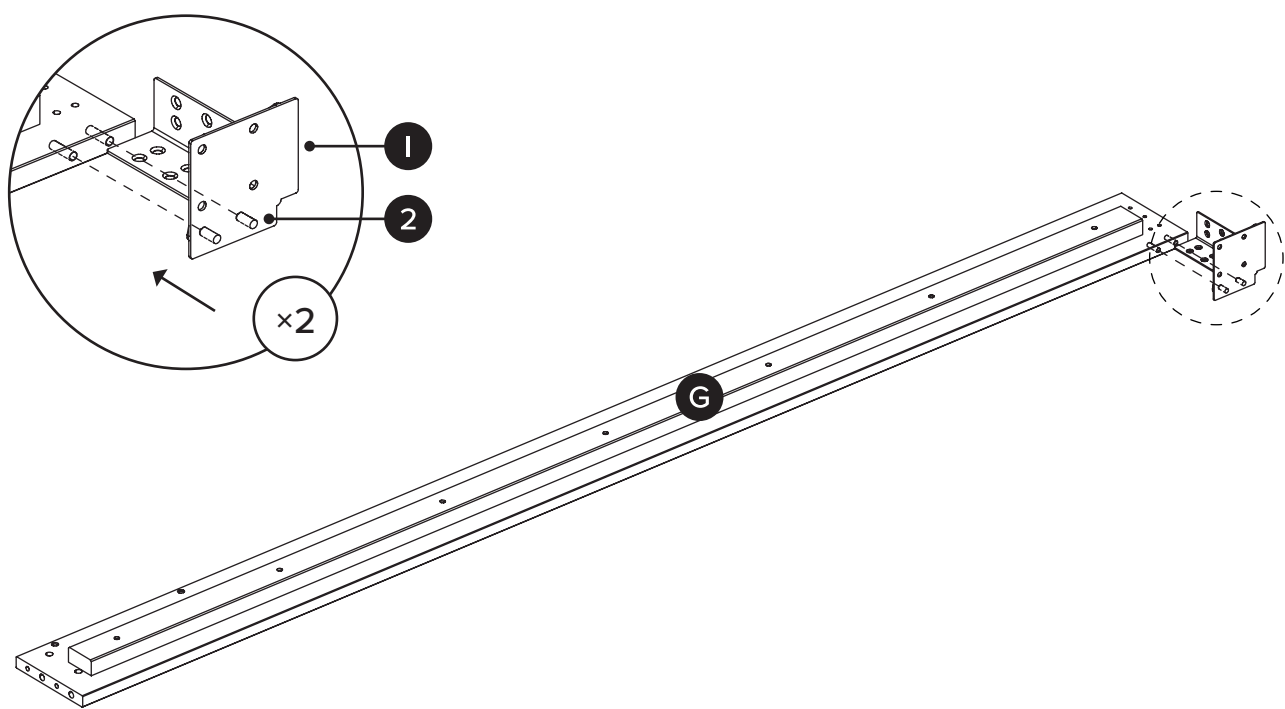



5

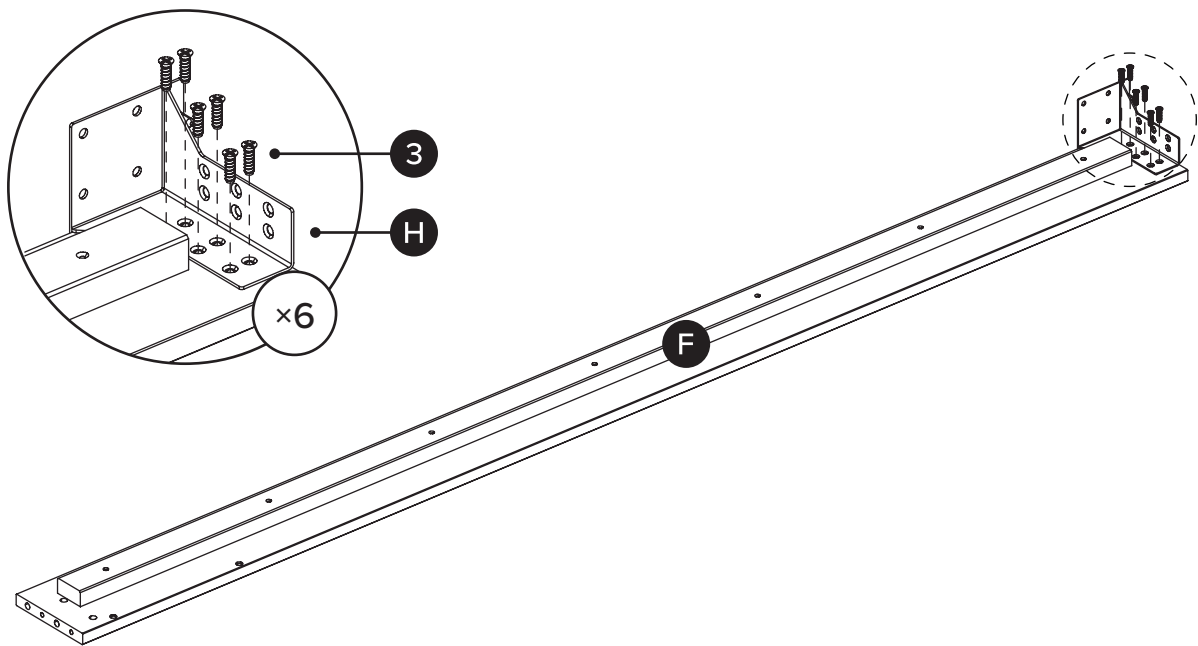



6

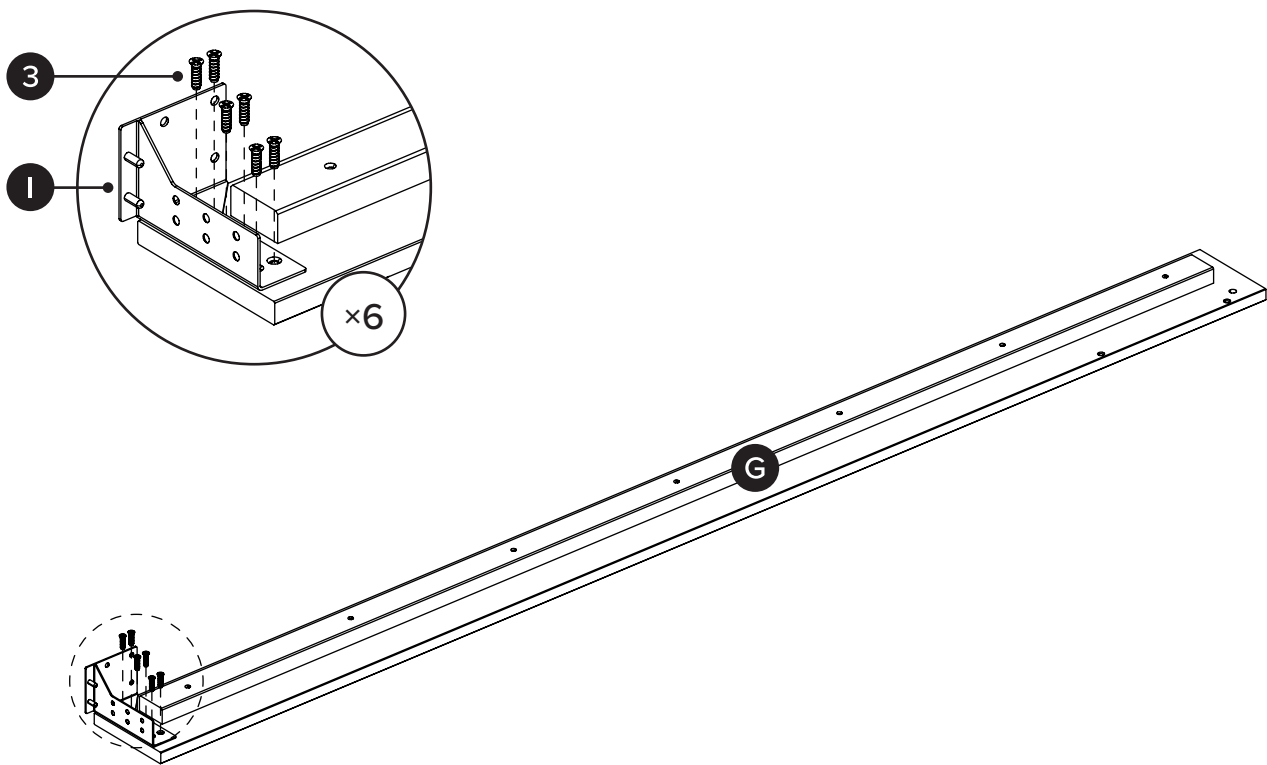


7

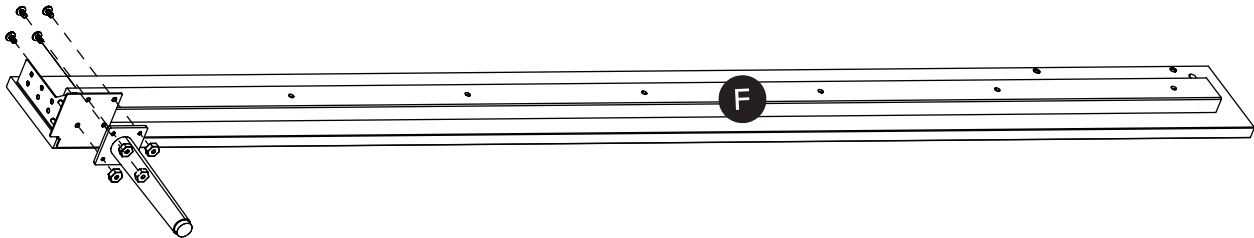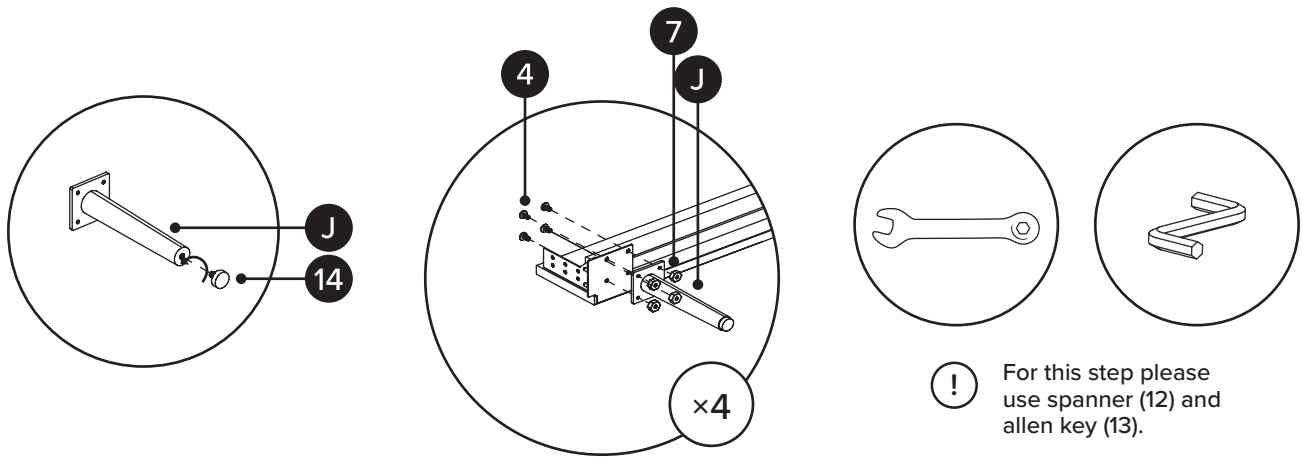


8

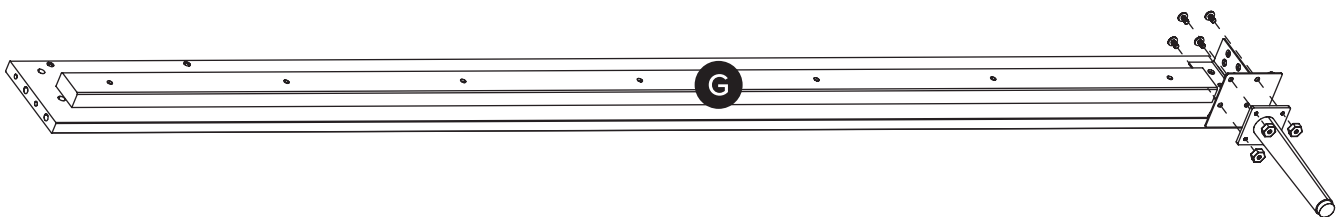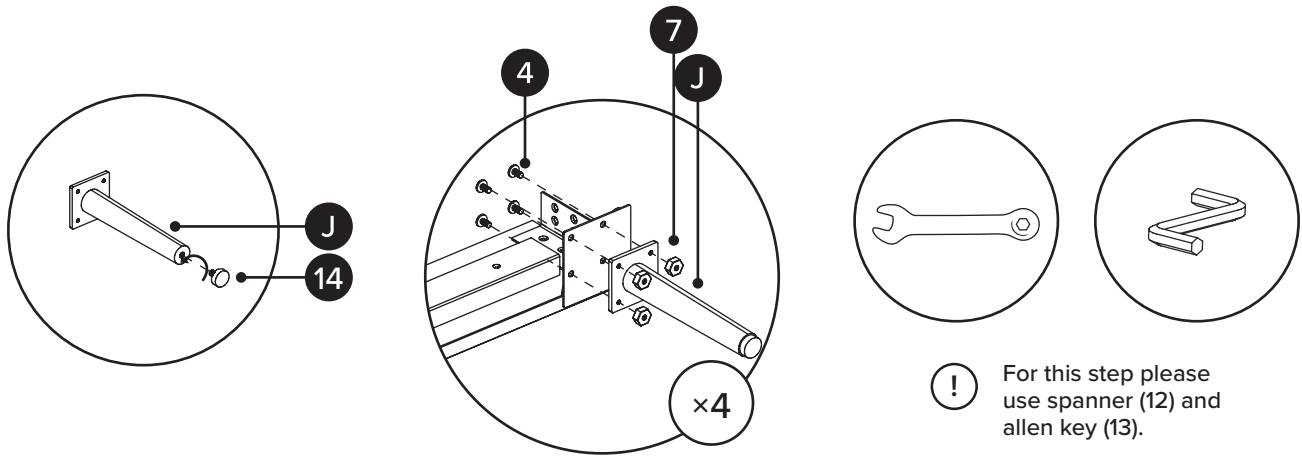


9

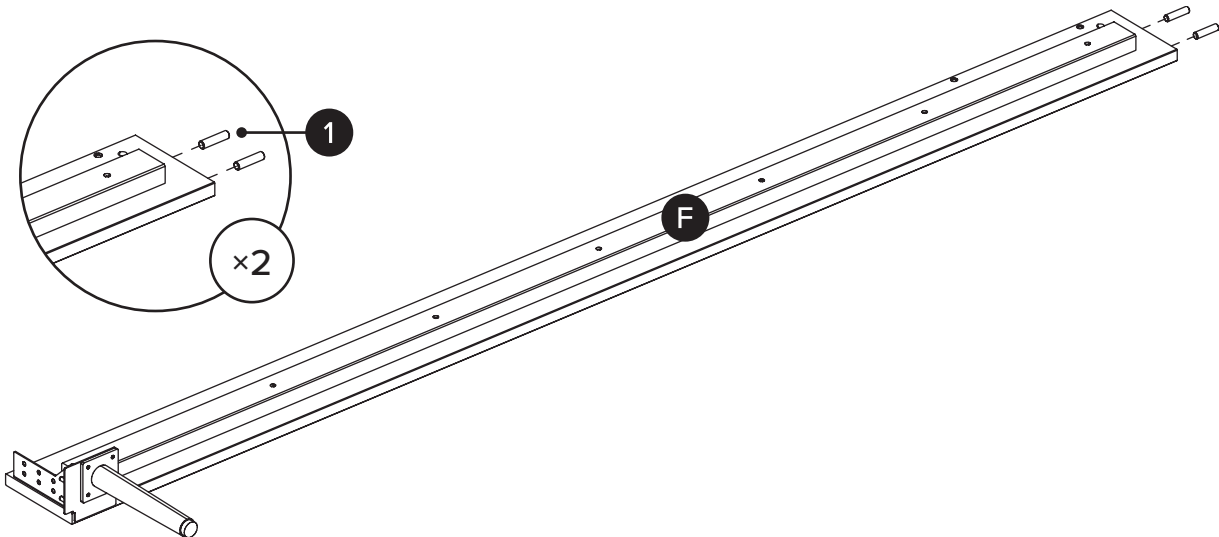


10

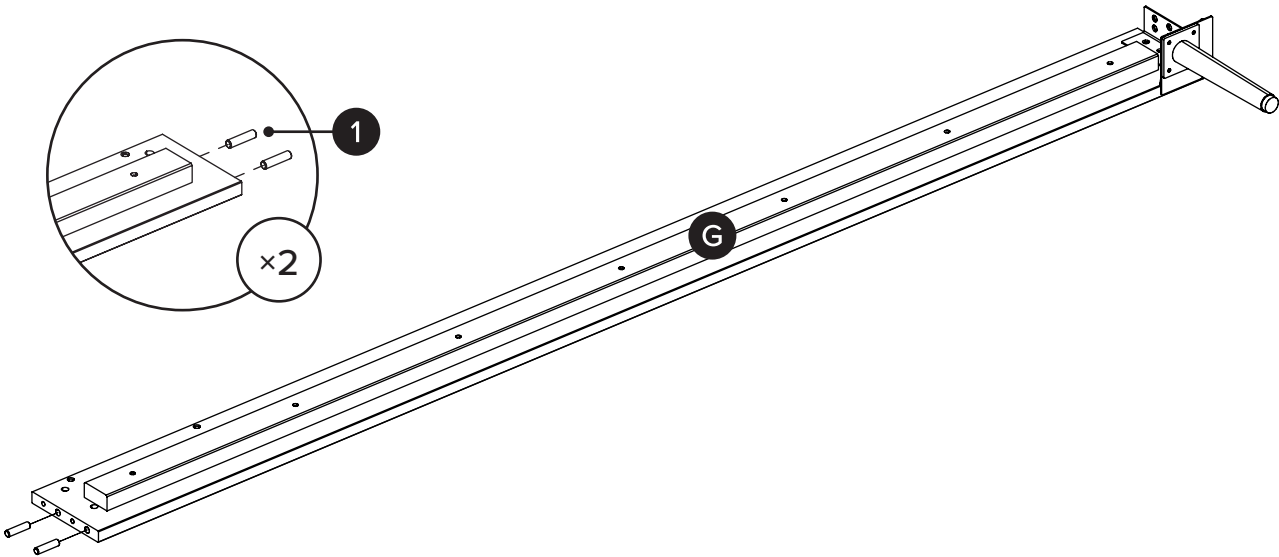


11

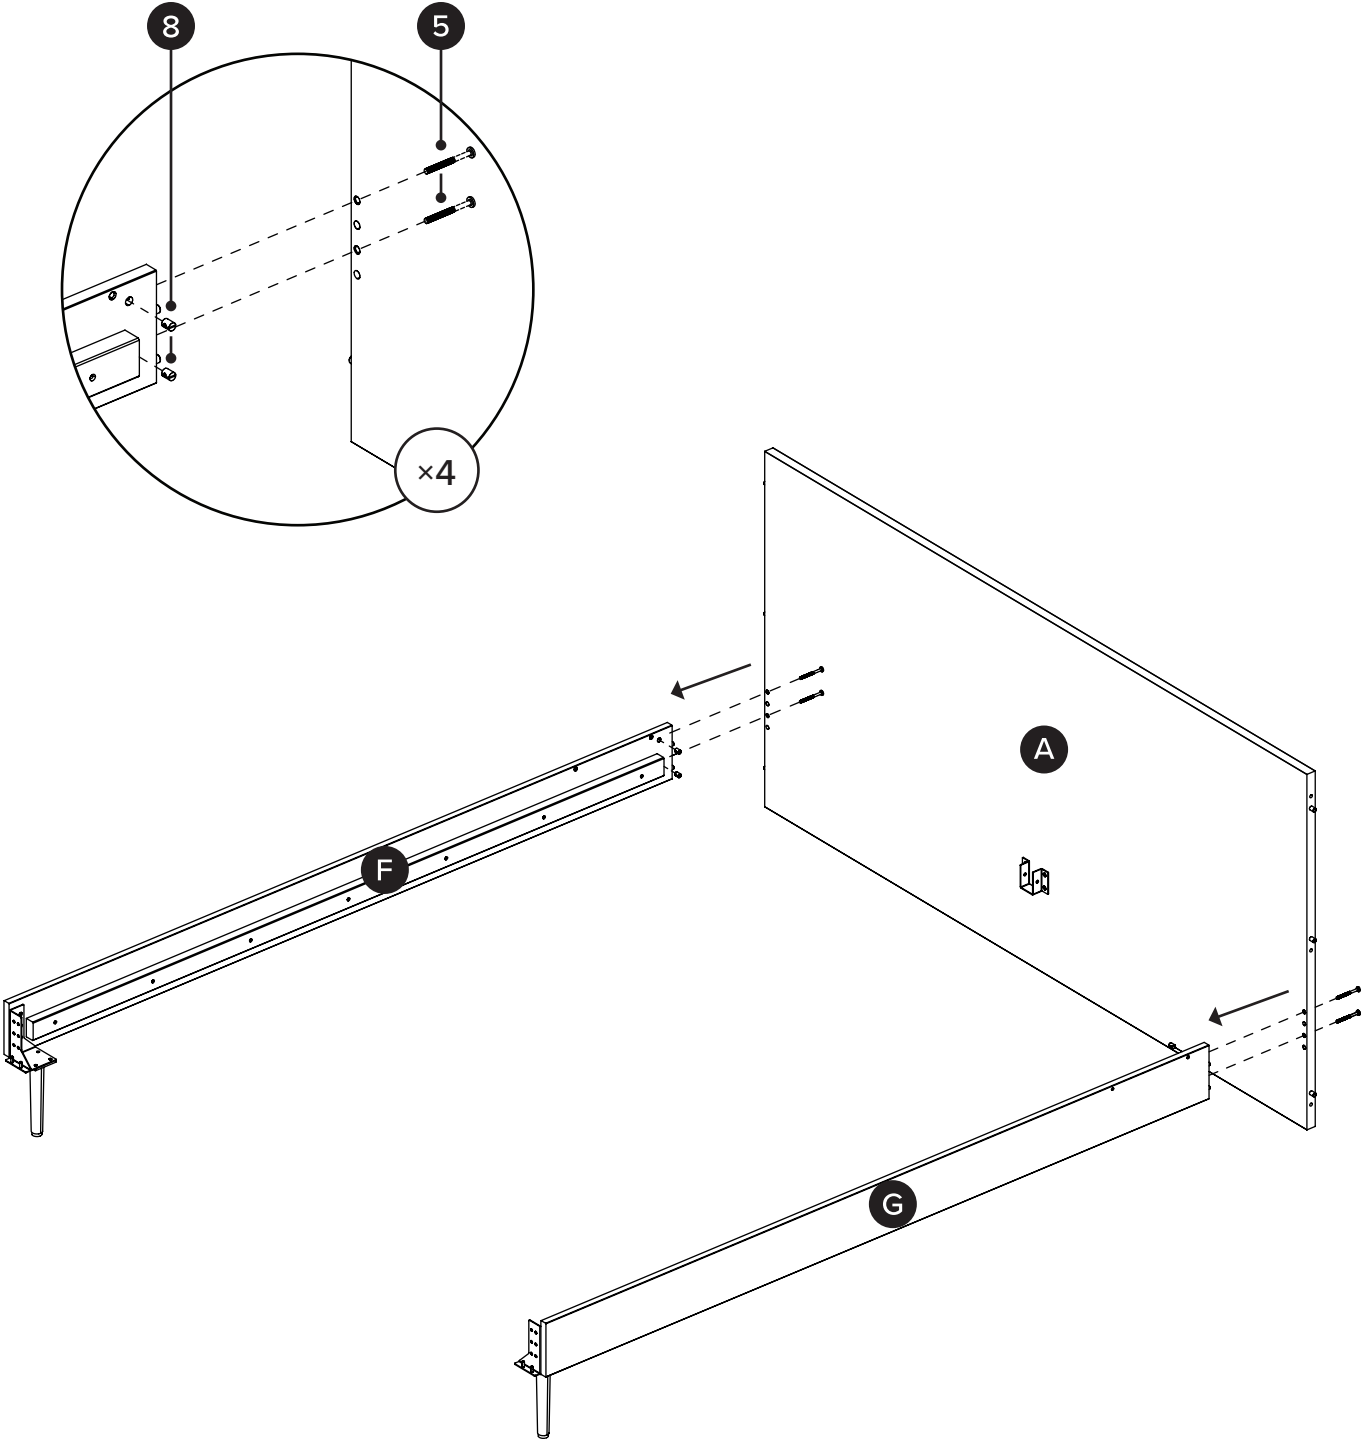


12

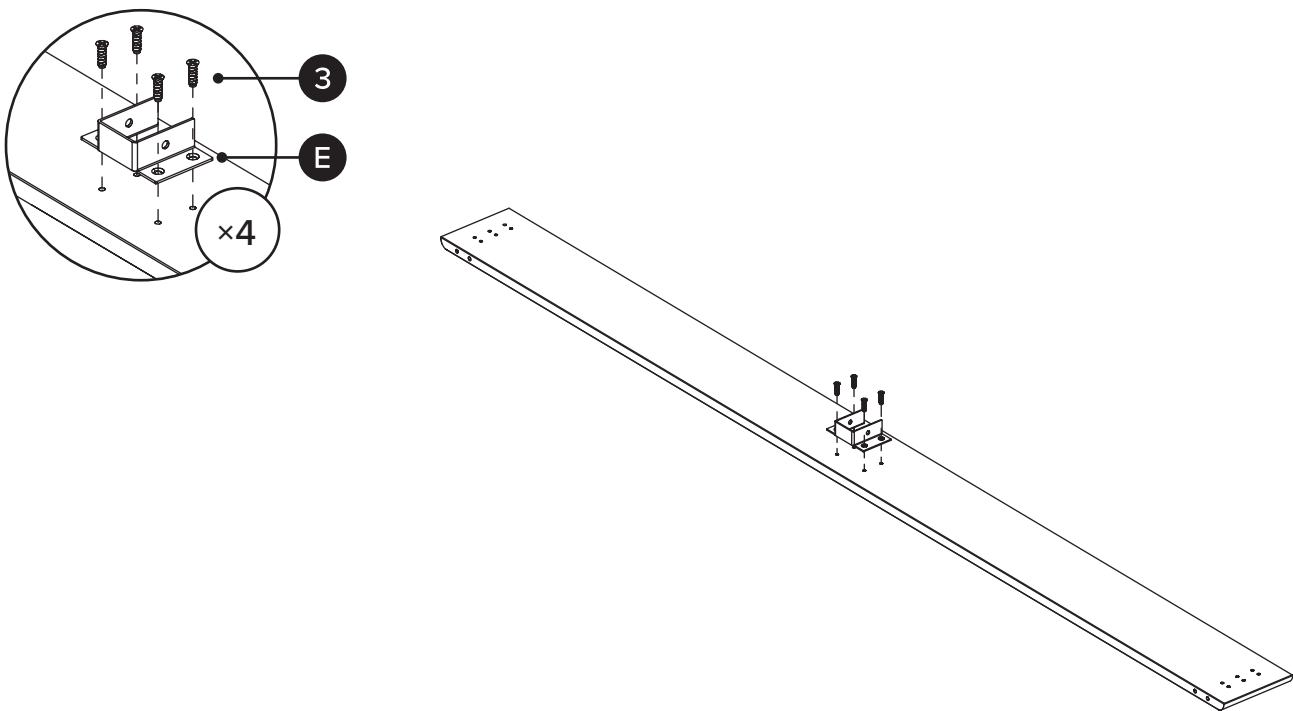


13

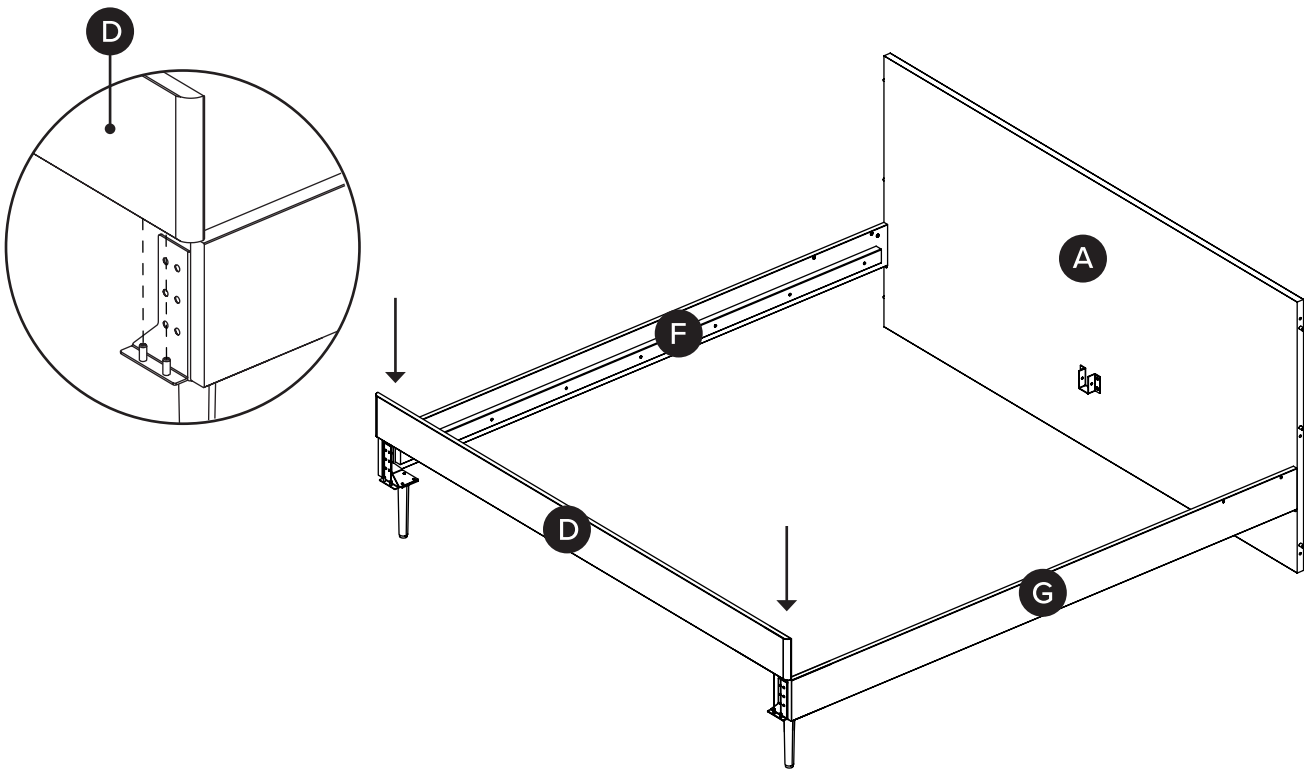


14

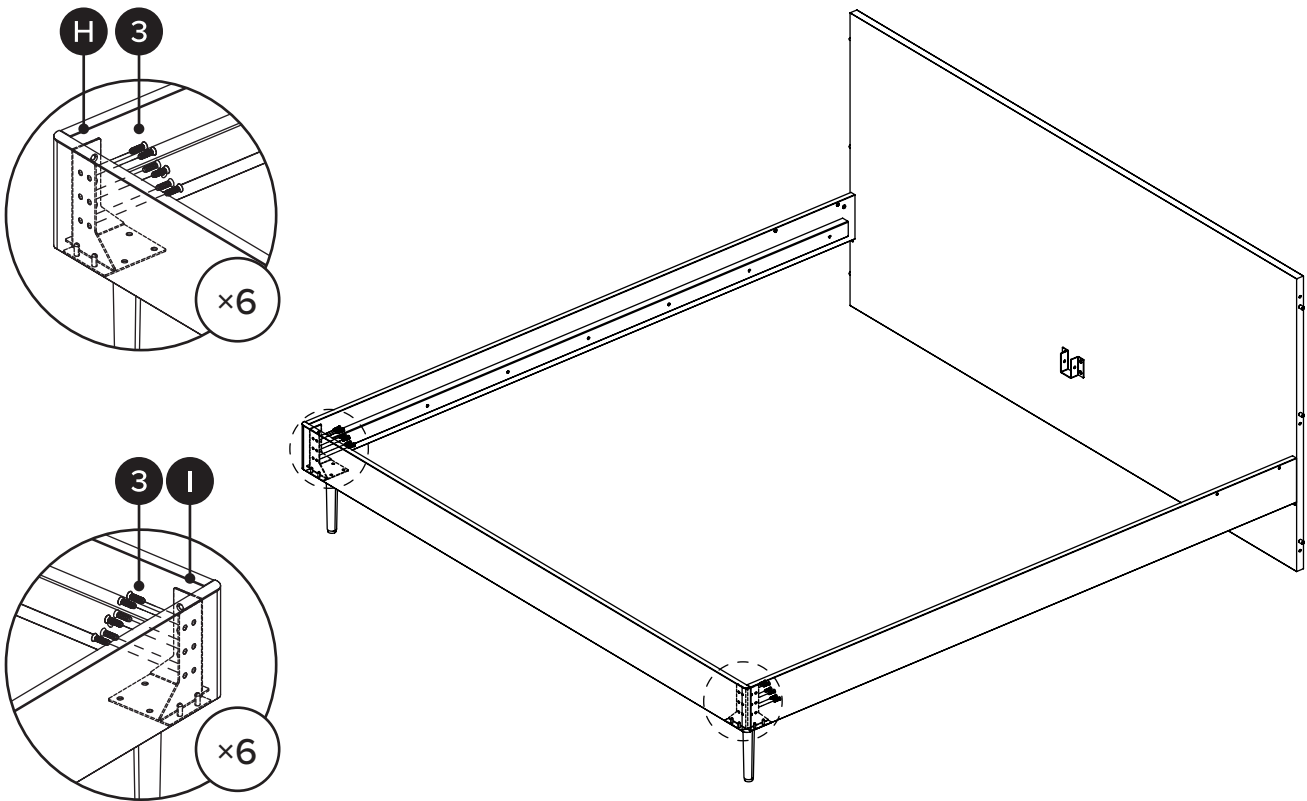


15

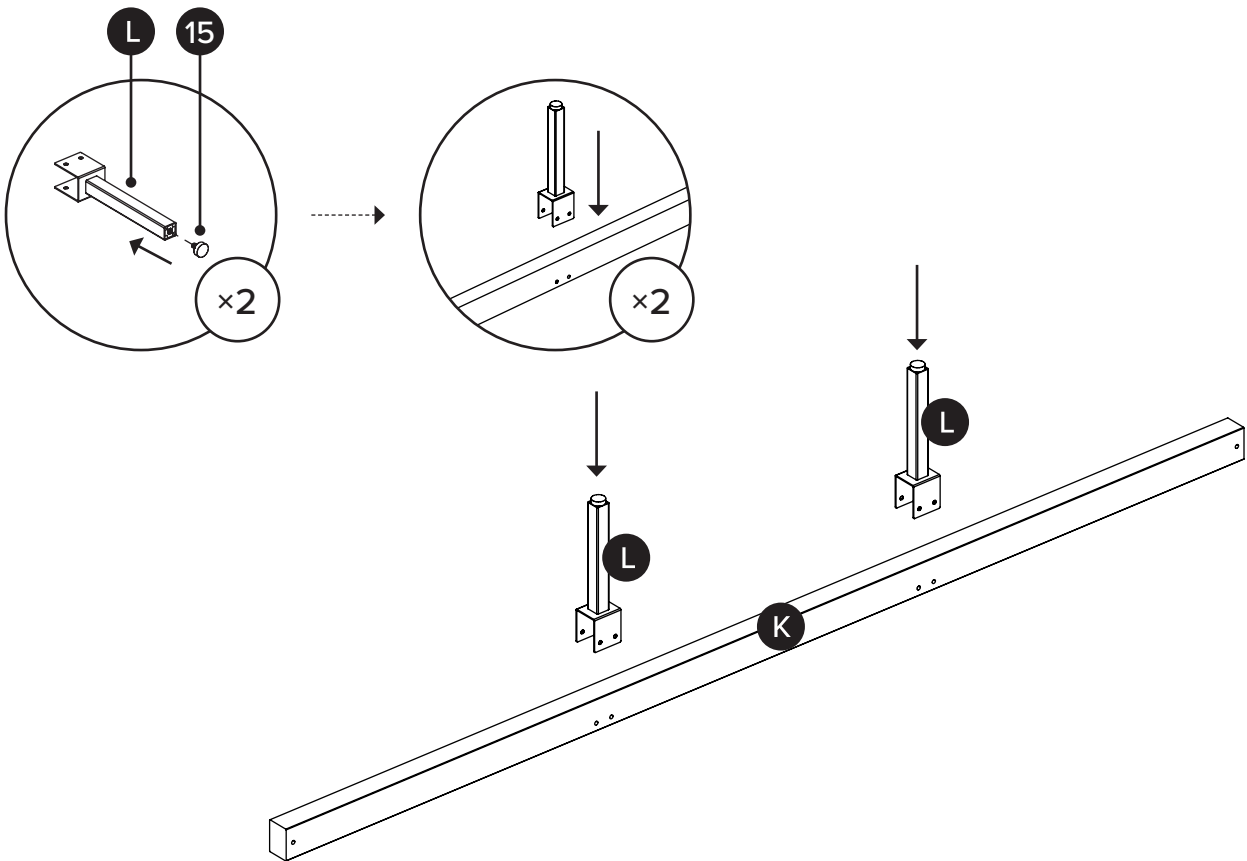



16

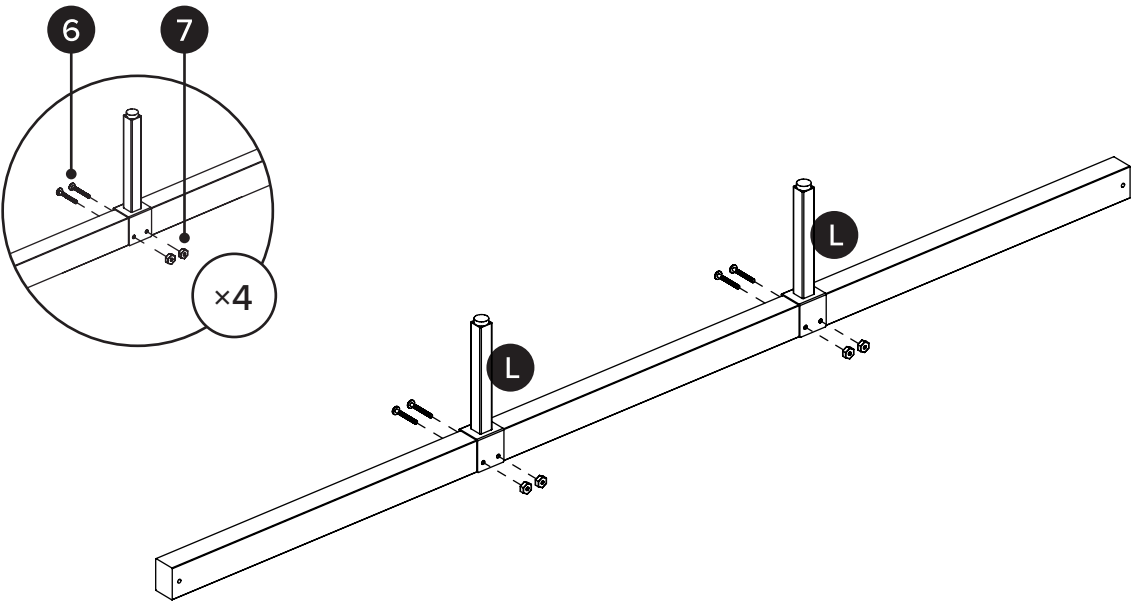



17

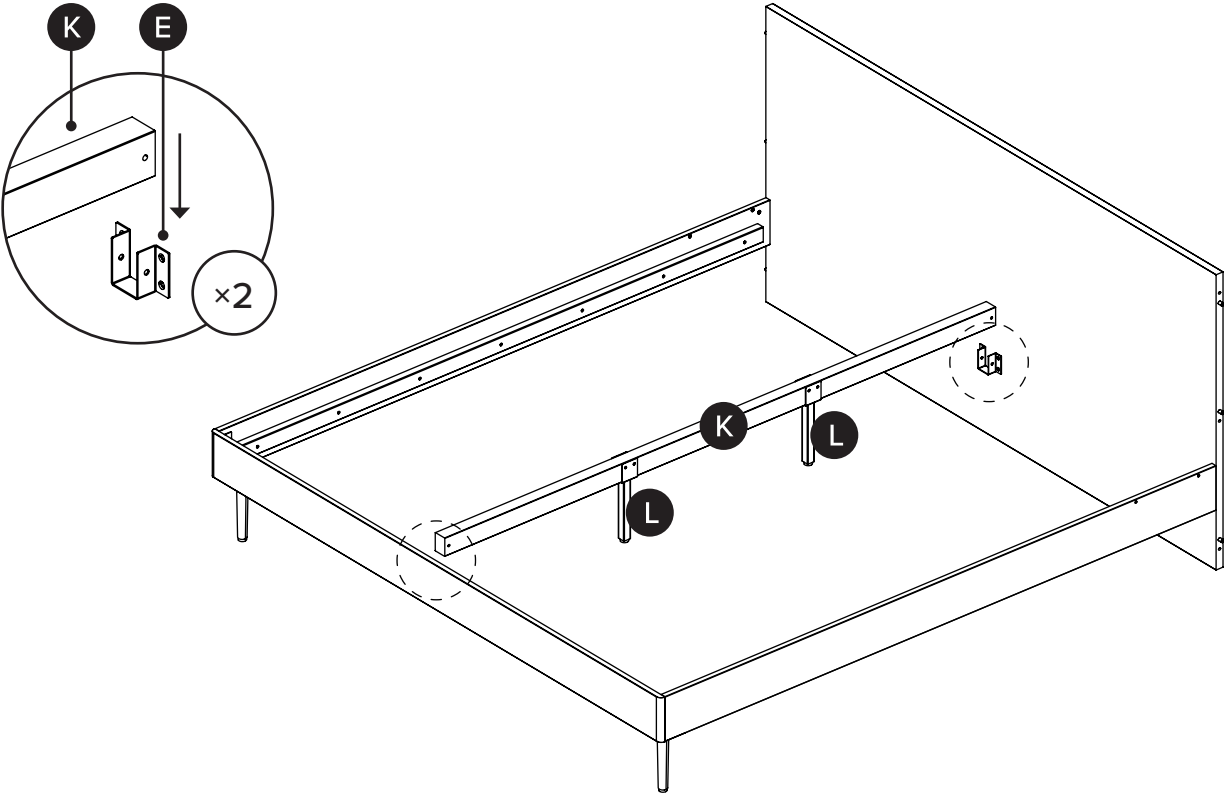




18

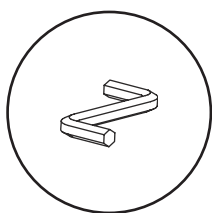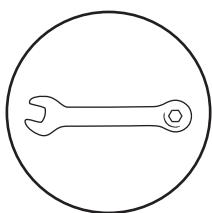


! For this step please use spanner (12) and allen key (13).

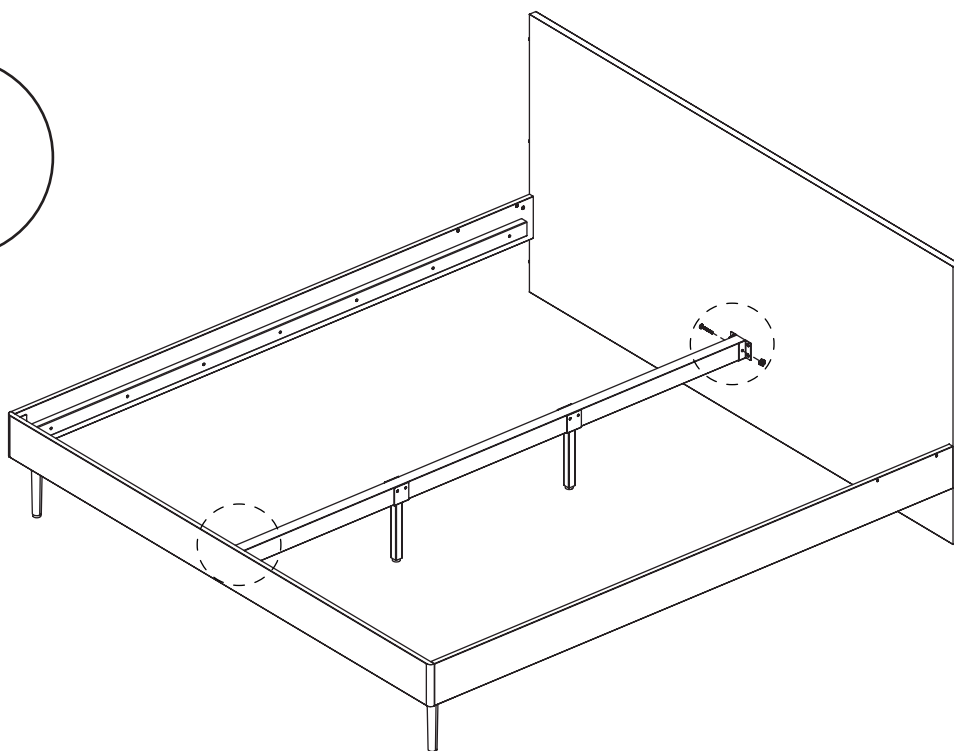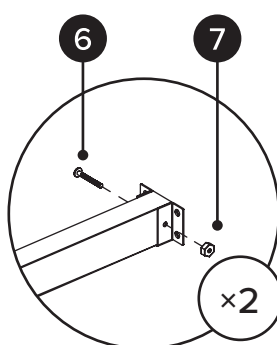



19

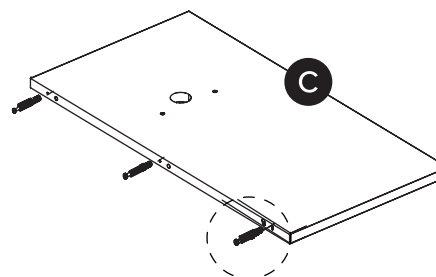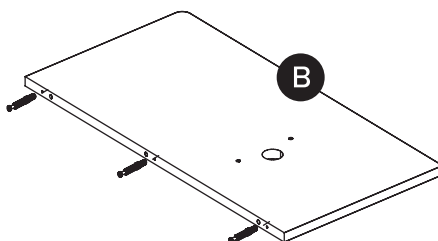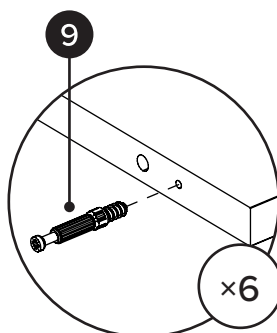


20

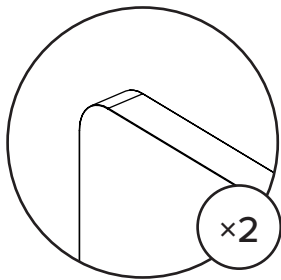


- ! Align corner of headboards (B) and (C) to the correct holes to attach to headboard (A).

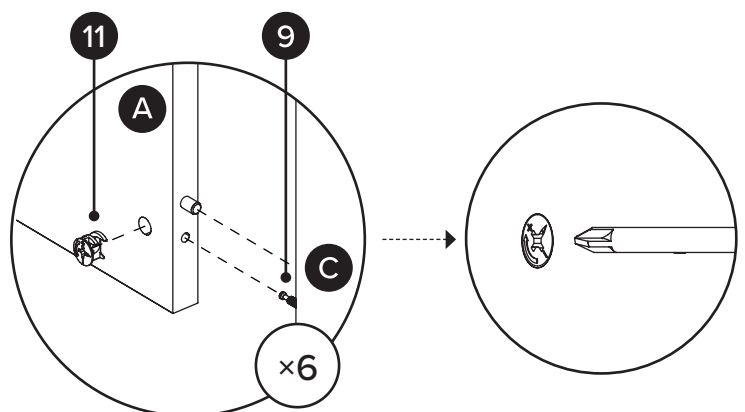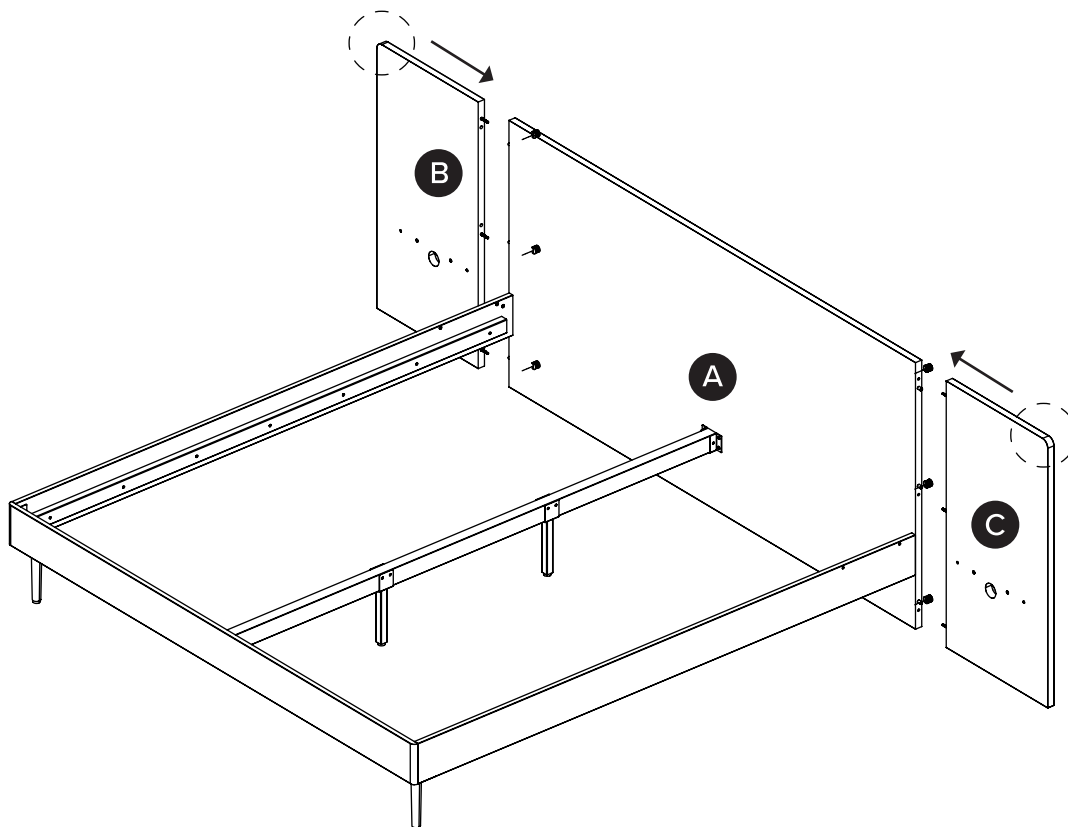





21

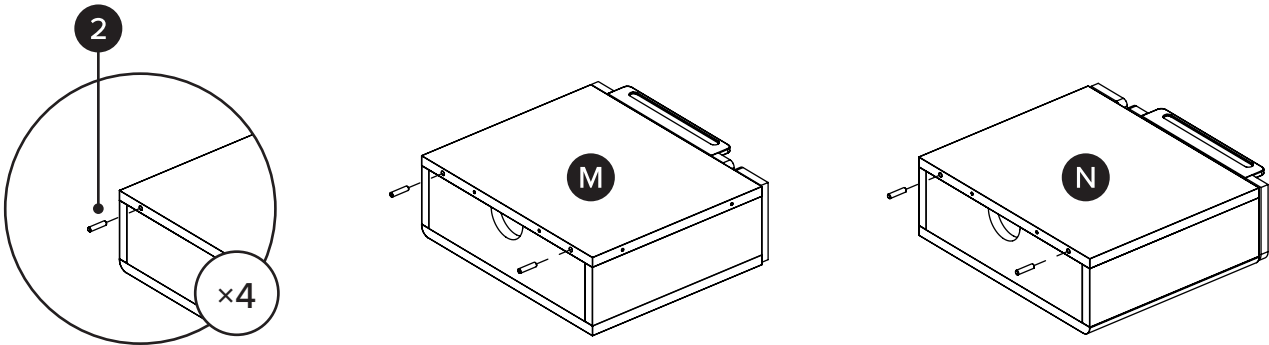

22

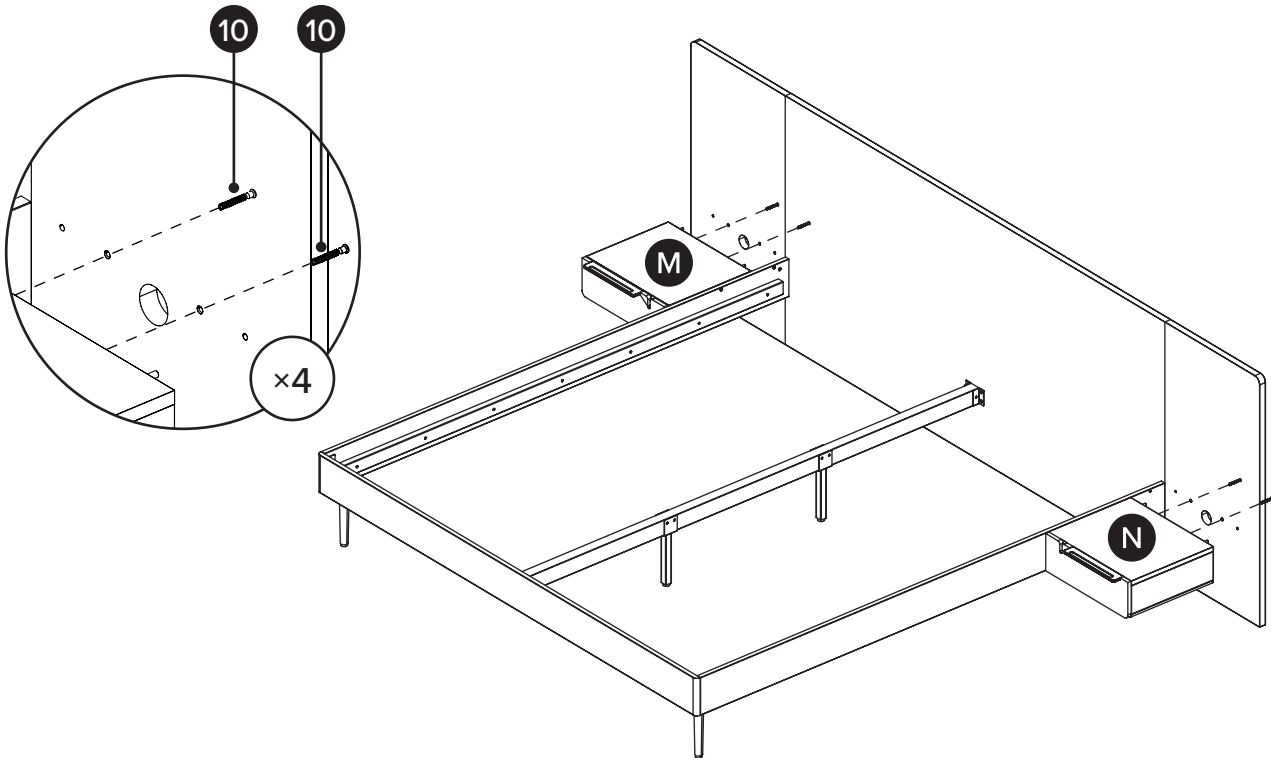

23

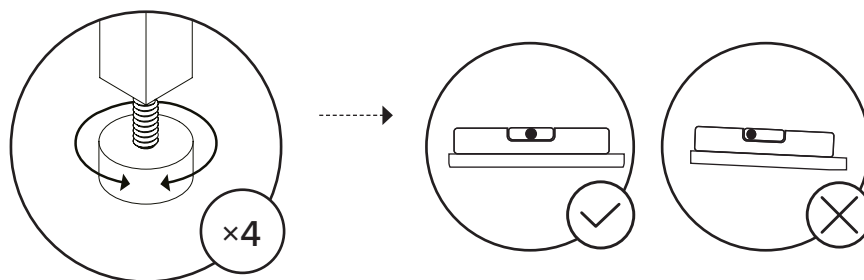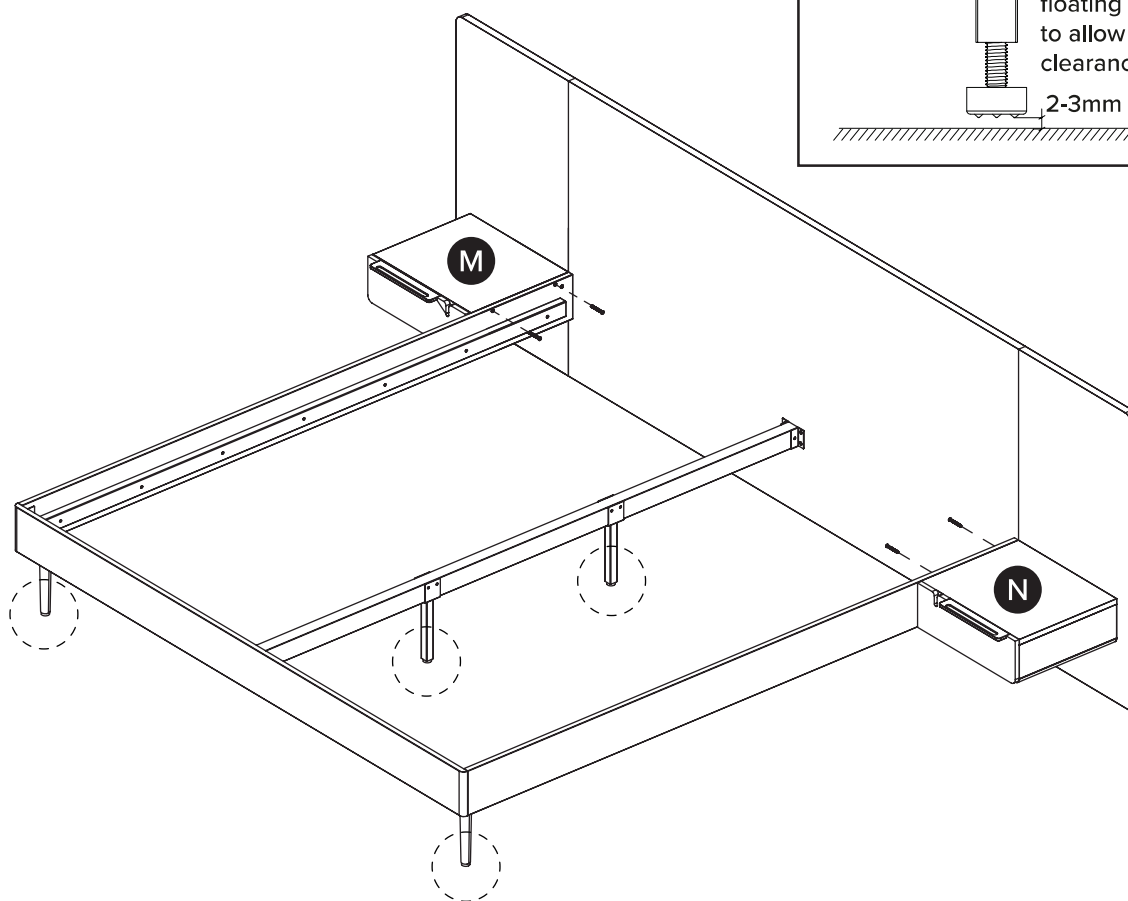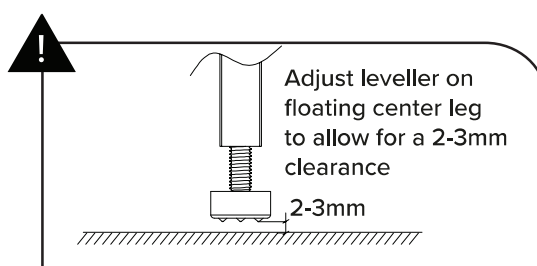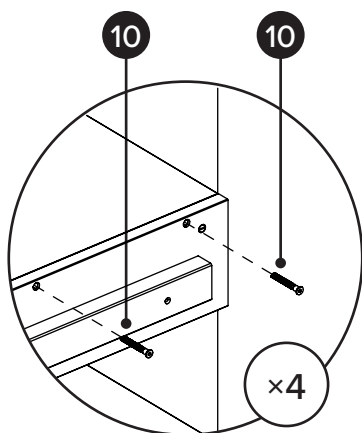

! Adjust levelers as needed.

24

