
Assembly Instructions

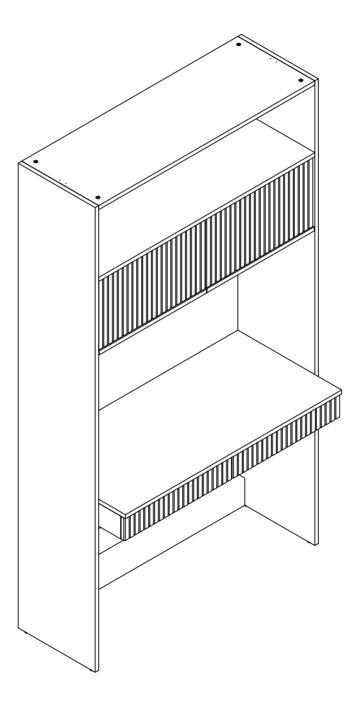

KOUVA

Modular Wall Desk


VERSION 1.0


ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.





TIME

OF PEOPLE

DIFFICULTY









| ANTI-TIP | |
|----------------------|---|
| Installation Require | d |


| PARTS INVENTORY | | | | |
|-----------------|------------------|-----|--|--|
| ID | DESCRIPTION | QTY | | |
| A | TOP PANEL | 1 | | |
| B | TOP STORAGE | 1 | | |
| С | DESK TOP | 1 | | |
| D | BACK PANEL | 1 | | |
| e | BOTTOM STRETCHER | 1 | | |
| E | LEFT SIDE PANEL | 1 | | |
| FR | RIGHT SIDE PANEL | 1 | | |

| PARTS INVENTORY | | | | |
|-----------------|------------------|--------|-----|--|
| ID | DESCRIPTION | | QTY | |
| G | ALLEN KEY | | 2 | |
| Ð | M6 x 30MM BOLT | 0 | 24 | |
| 0 | M6 x 50MM BOLT | (+) | 4 | |
| J | M6 LOCK WASHER | Q | 28 | |
| K | M6 WASHER | 6 | 24 | |
| C | HALF MOON WASHER | BOP | 4 | |
| M | CAM LOCK | | 6 | |
| N | CAM BOLT | ()—)mm | 6 | |

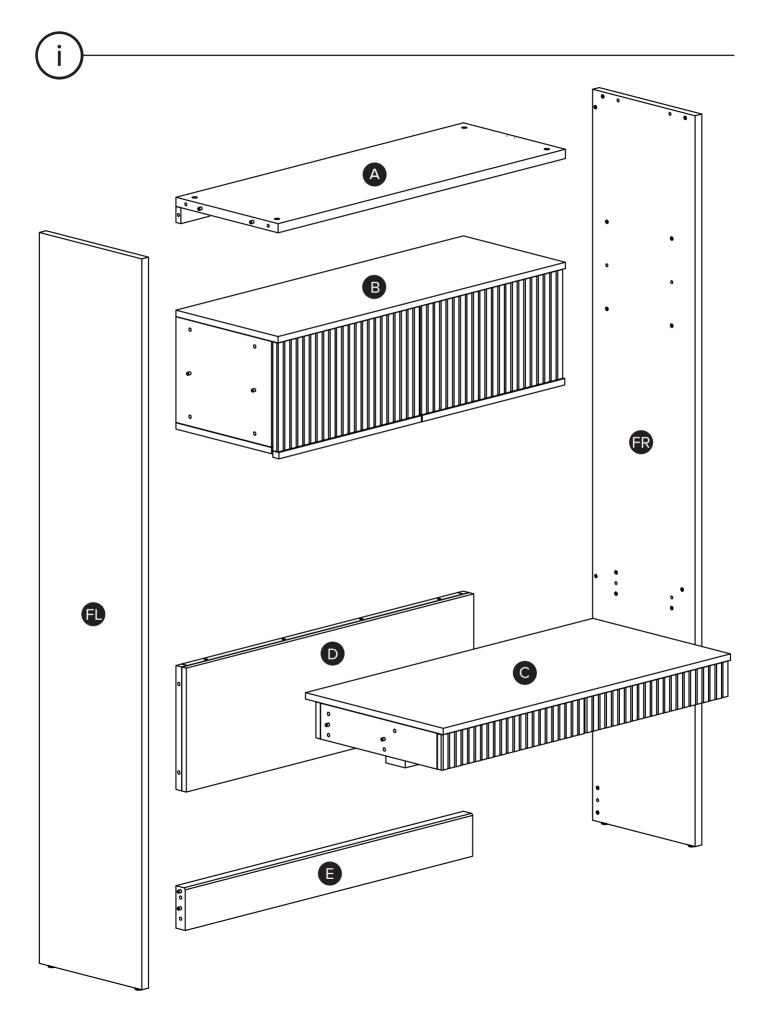


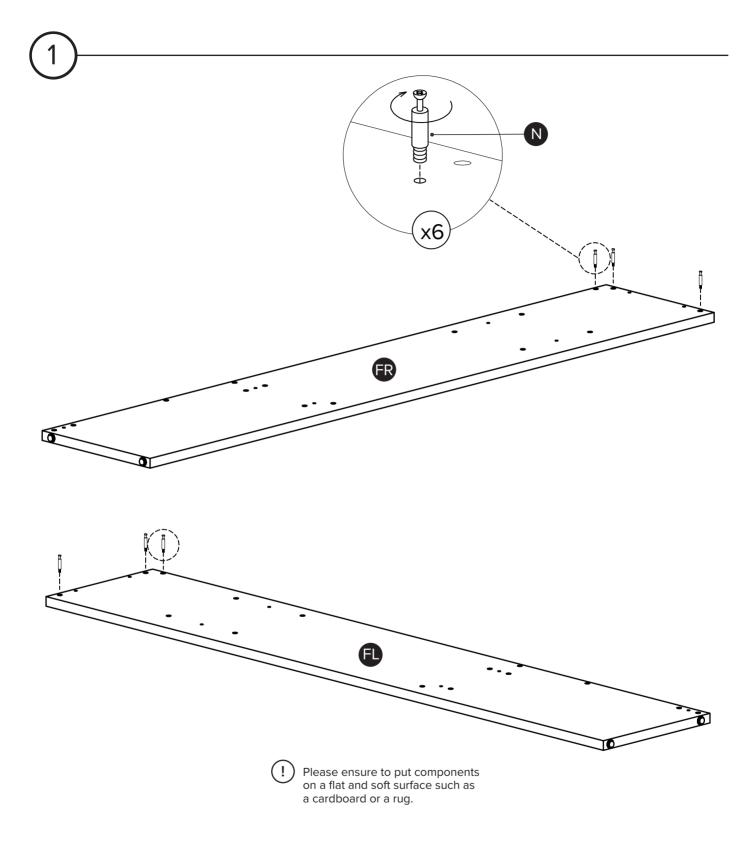




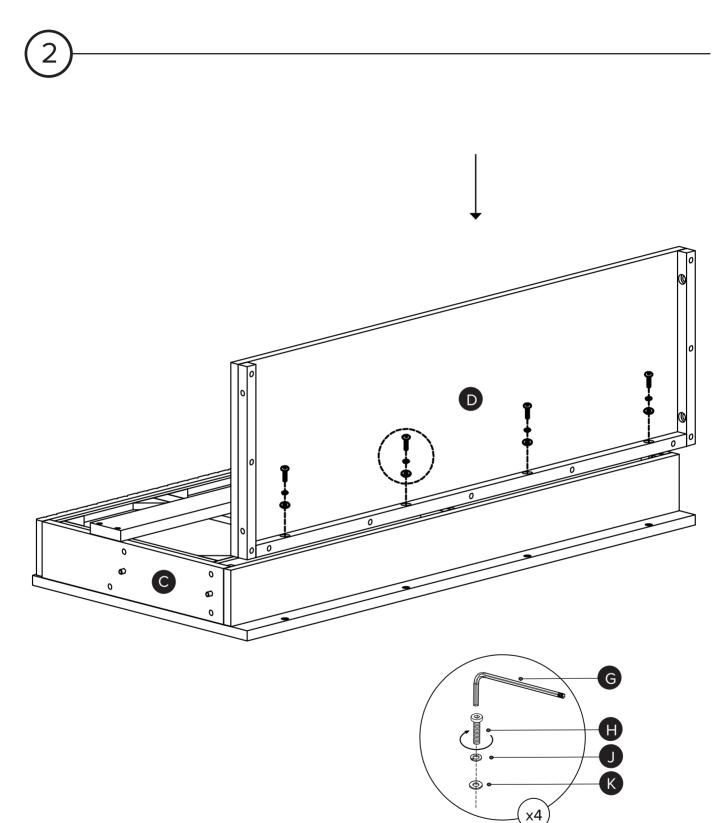




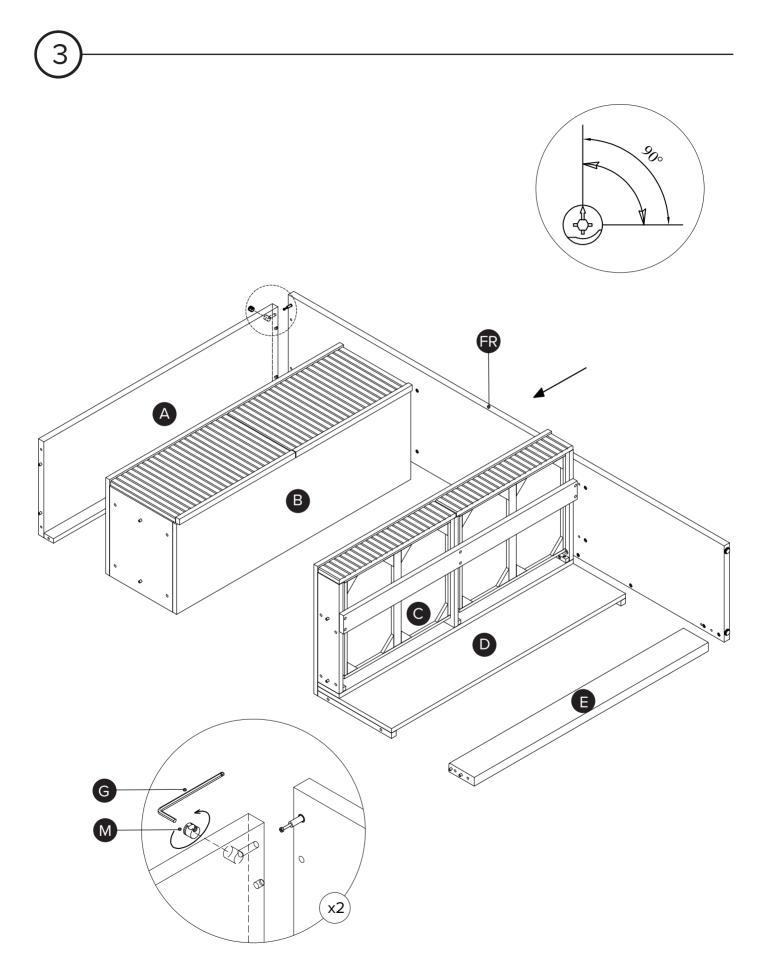


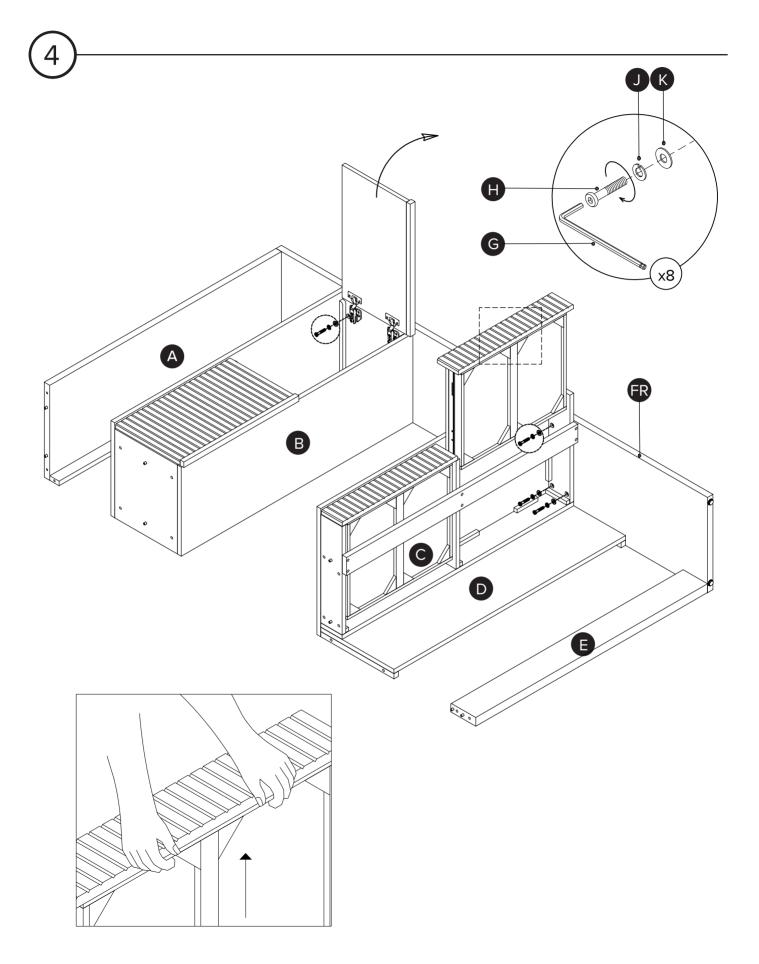



KOUVA Modular Wall Desk Page 8 of 11

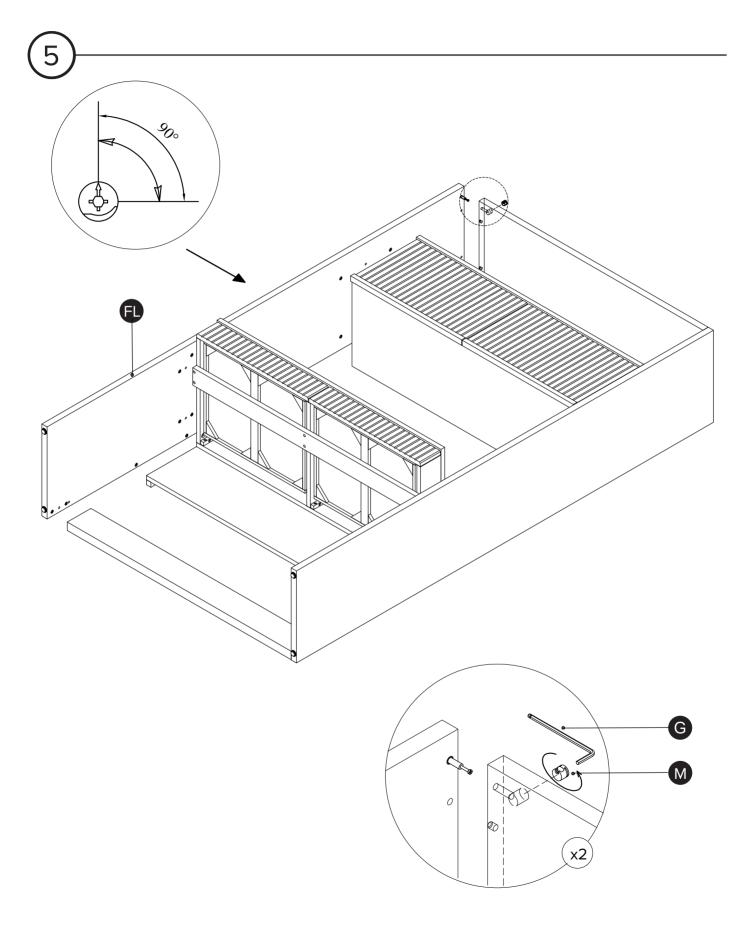

KOUVA Modular Wall Desk Page 9 of 11

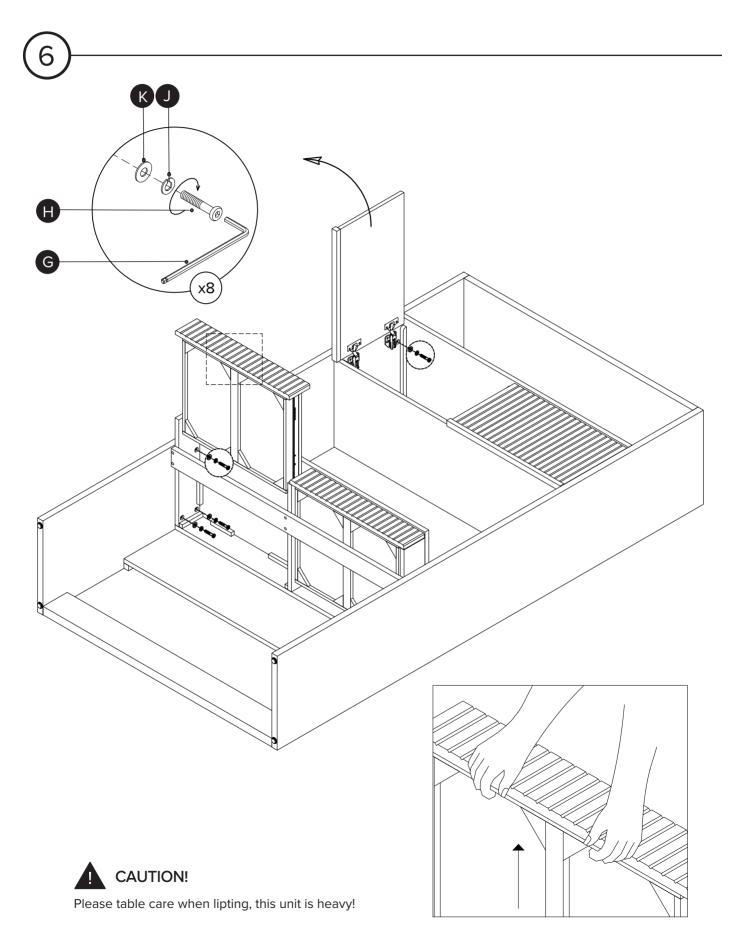

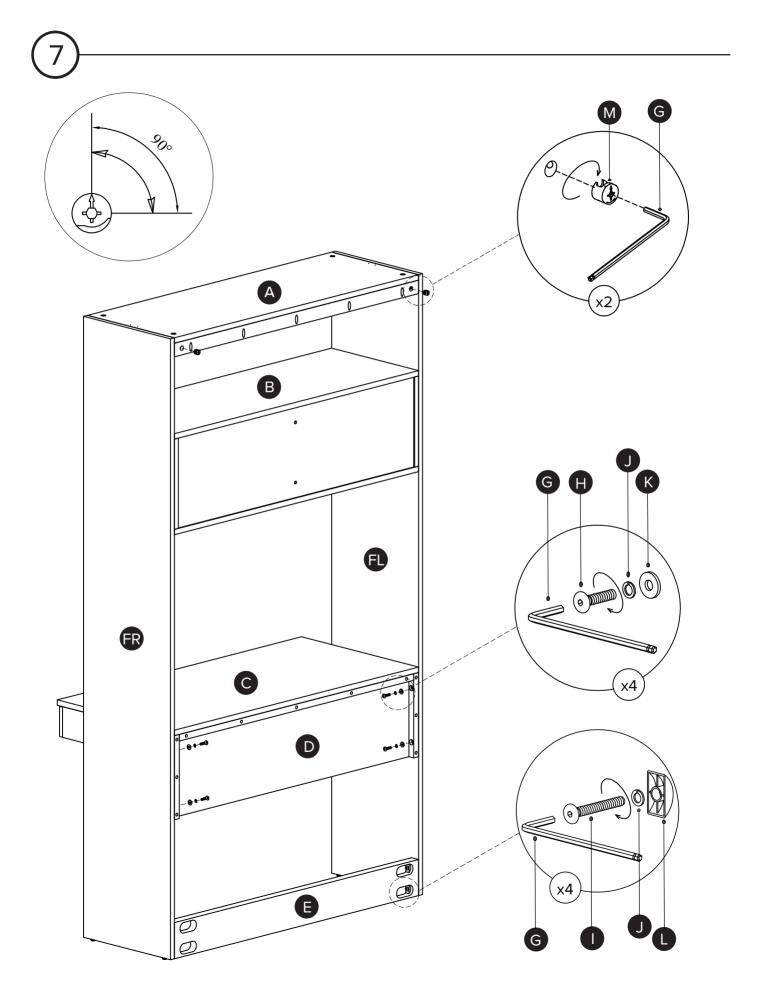

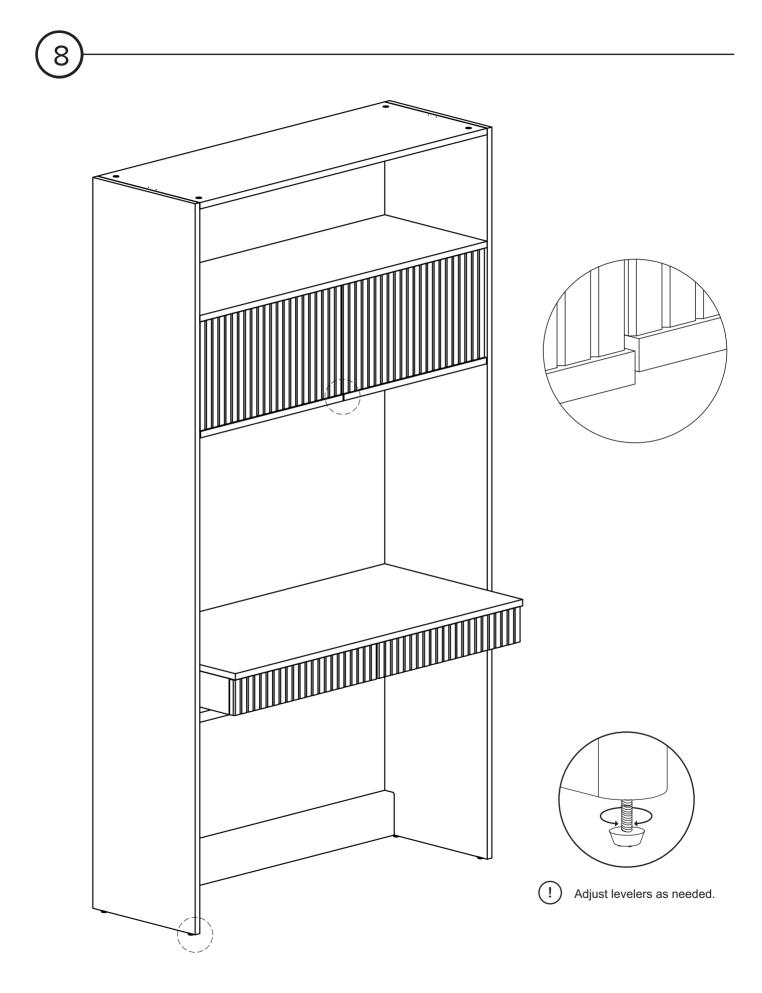


DOOR ADJUSTMENT INSTRUCTIONS

During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




!) If the door is crooked, adjust hinge(s) up or down:

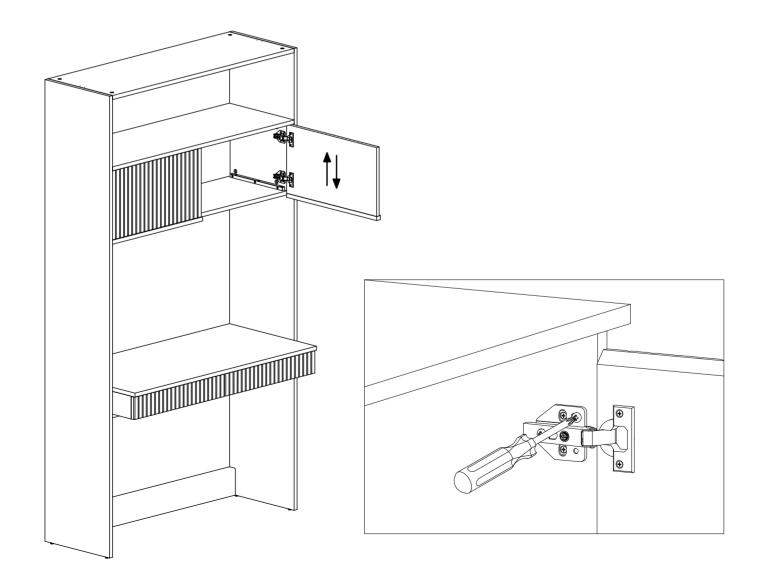


2

DOOR ADJUSTMENT INSTRUCTIONS

During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




(!) If the door needs adjustment side to side:

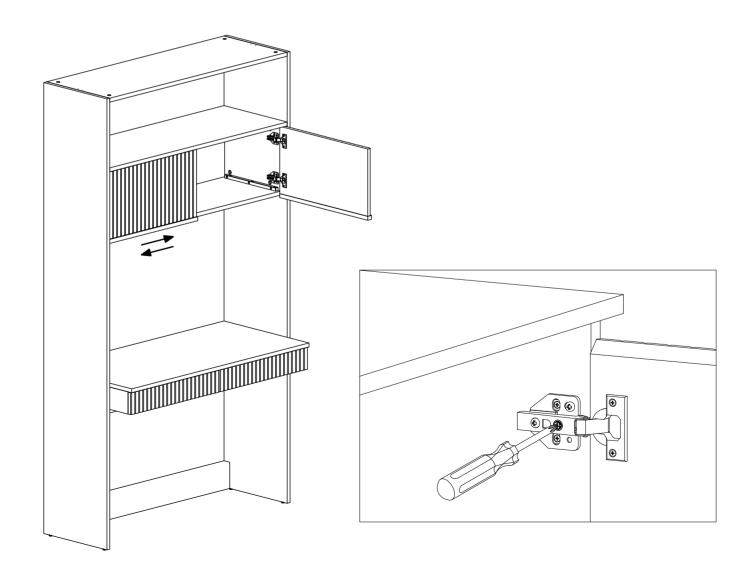


DOOR ADJUSTMENT INSTRUCTIONS

During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.



(!) If the door needs adjustment forward or backward:

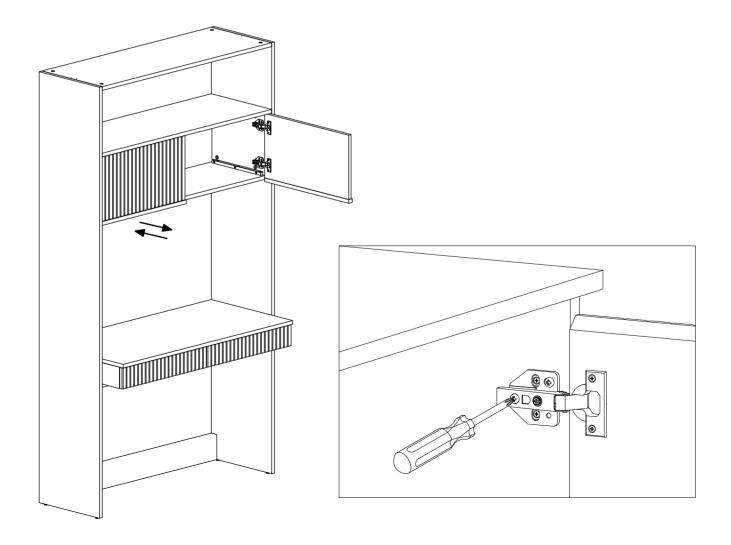

ARTICLE. 1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION



Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided. •
- Do not set heavy objects on top of this product, • unless the product is specifically designed to accomodate them.
- Never allow children to climb or hang on mirrors, . shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.






DIFFICULTY

TIME

OF PEOPLE

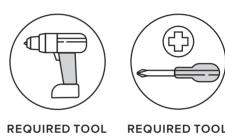


8MM / 5/16" DRILL BIT

REQUIRED TOOL

| ID | DESCRIPTION | | QTY |
|----|----------------------|---|-----|
| 0 | BRACKET | | 2 |
| P | M4 × 15MM SCREW | | 2 |
| Q | M8 × 51MM PLUG | | 2 |
| R | ۲ M6 × 70MM SCREW | | 2 |
| S | WASHER | 0 | 2 |

Hardware (Q/R) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

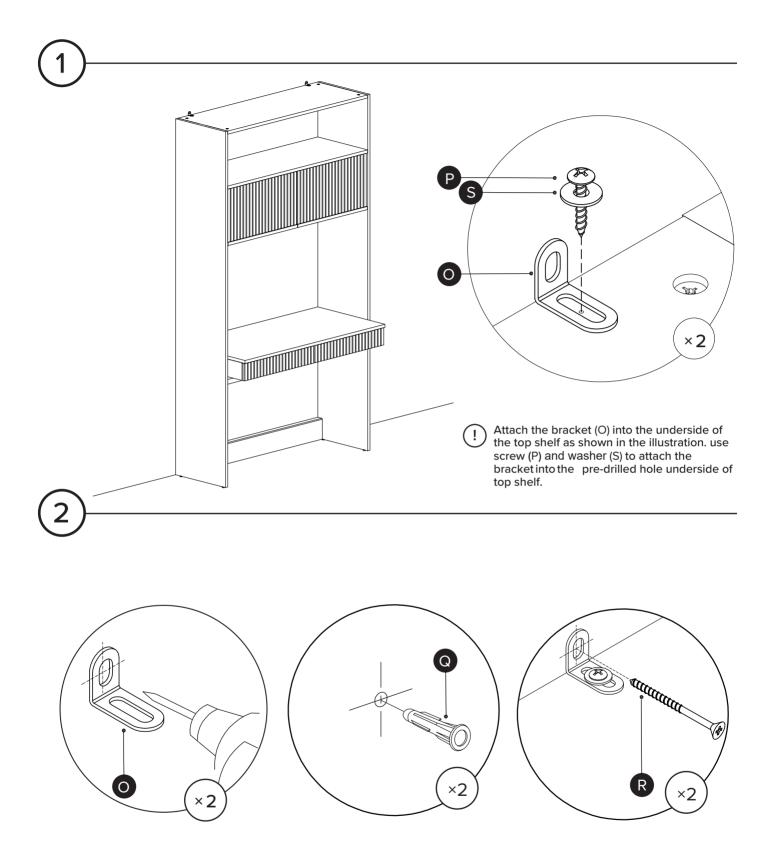

Place unit in desired location and mark on wall where holes should be drilled. Drill holes in wall using 8mm / 5/16" drill bit. Drill holes into drywall, and attach unit to wall with appropriate hardware.