
## ARTICLE.

## **Assembly Instructions**

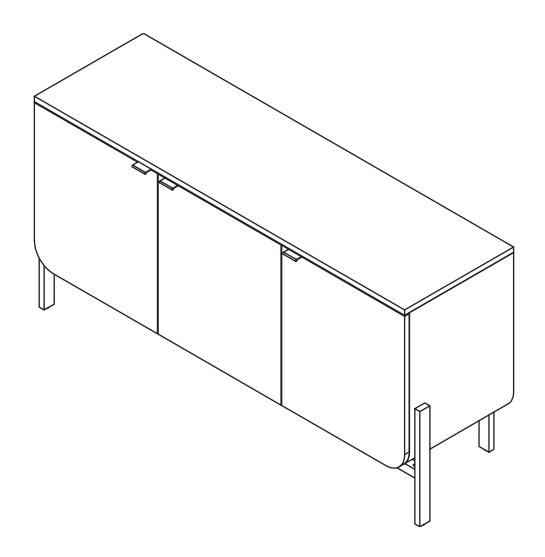

# **SEGATA**

Sideboard

ARTICLE. SEGATA Sideboard Page 2 of 6

#### **ASSEMBLY INSTRUCTIONS**

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.







PARTS INVENTORY				
ID	DESCRIPTION	QTY		
A	SIDEBOARD	1		
B	FRONT LEG FRAME	2		
G	BACK LEG FRAME	2		
D	RIGHT / LEFT SHELF	2		
•	CENTER SHELF	1		

PARTS INVENTORY					
ID	DESCRIPTION		QTY		
<b>6</b>	M6 × 32MM BOLT	0	6		
G	M6 × 19MM BOLT	0	4		
•	M6 WASHER		4		
0	M6 LOCK WASHER		4		
0	ALLEN KEY		1		




Remove shelves.

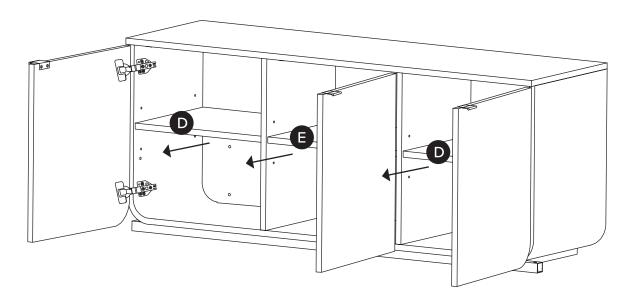


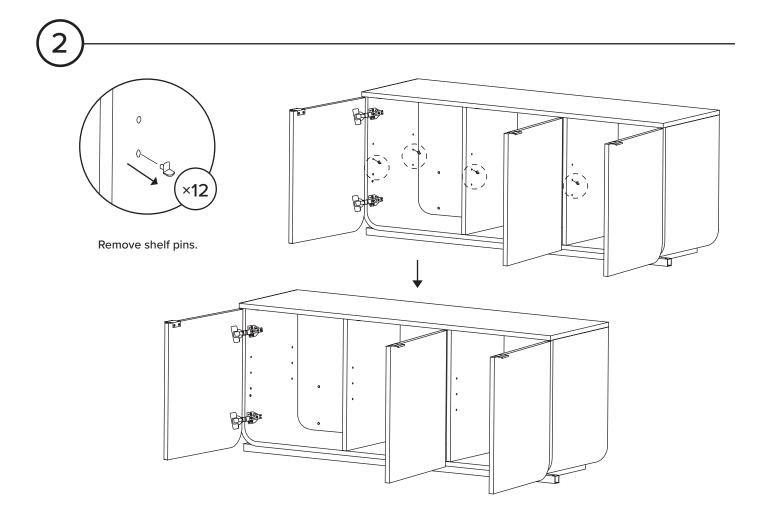




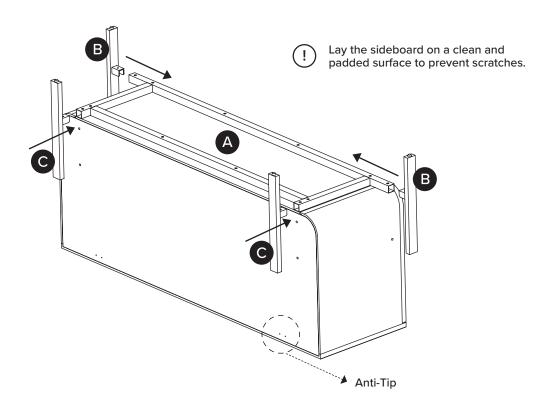




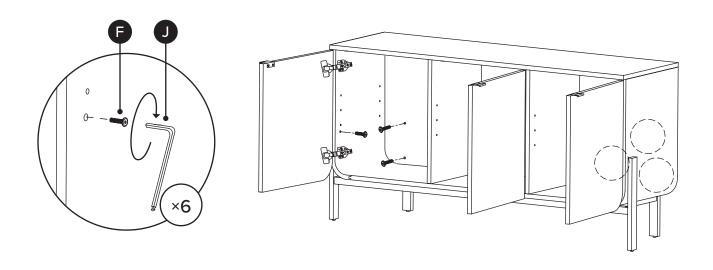




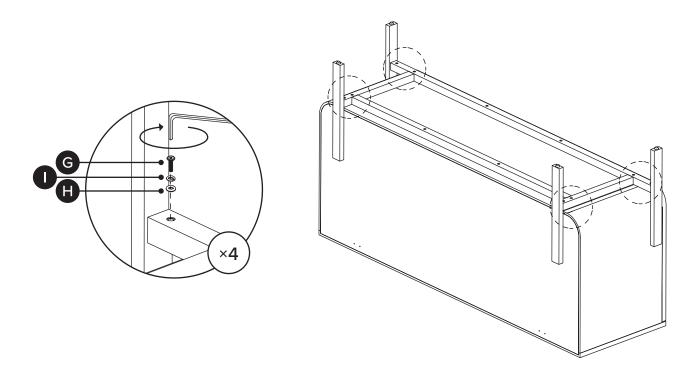




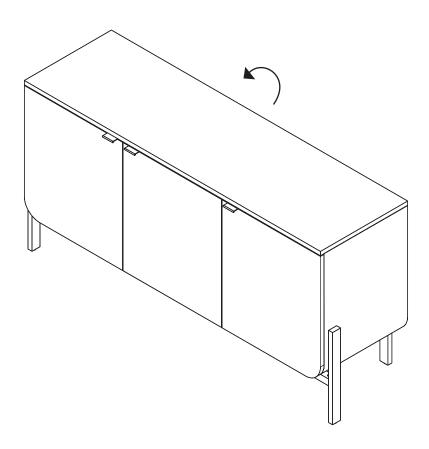



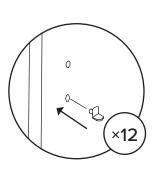


! Insert shelf pins at desired height.

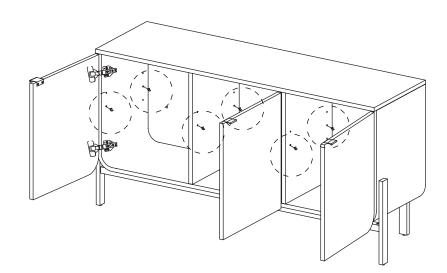

(8)

! Once shelf pins are in place, insert shelves back.

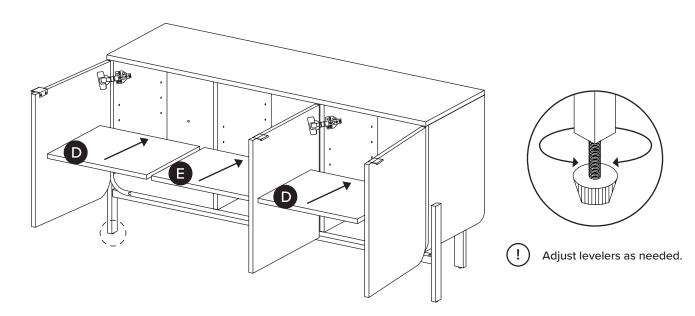

1010 Raymur Ave. Vancouver, BC V6A 3T2



### ANTI-TIP RESTRAINT INSTALLATION



#### **WARNING!**


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.








REQUIRED TOOL 8MM / 5/16" DRILL BIT

**REQUIRED TOOL** 


PARTS INVENTORY					
ID	DESCRIPTION		QTY		
A	BRACKET		4		
B	M8 × 51MM PLUG		4		
G	M6 × 70MM SCREW	annan B	4		
D	M4 × 20MM SCREW		4		
<b>(</b>	STRAP		2		

Hardware (B/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



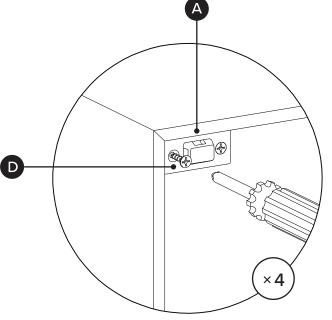


Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.

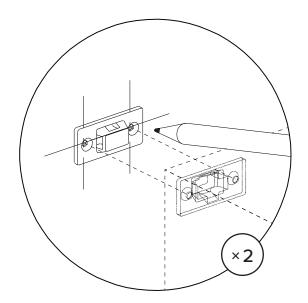


Mark on wall where second pair of brackets should be placed.



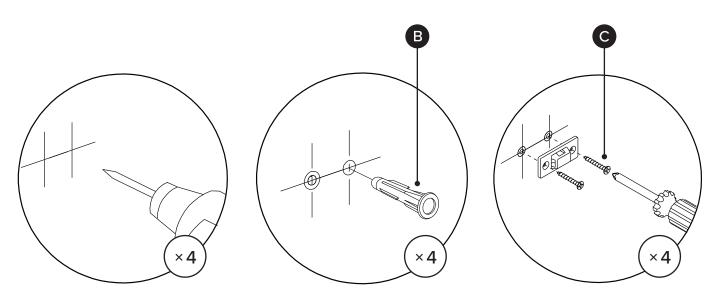


Drill holes in wall using 8mm / 5/16" drill bit.



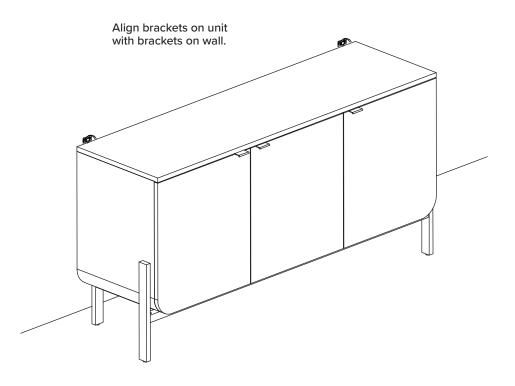



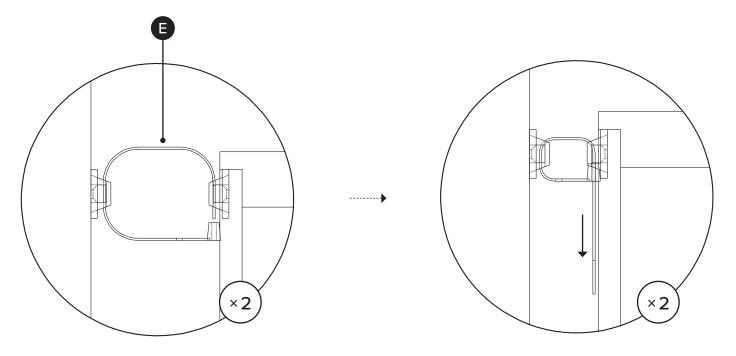


Pull strap down until it snap-locks.

### DOOR ADJUSTMENT INSTRUCTIONS

!


During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




**REQUIRED TOOL** 




If the door needs adjustment forward or backward:

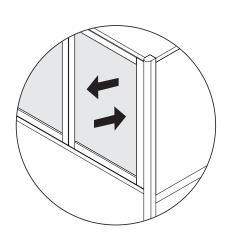


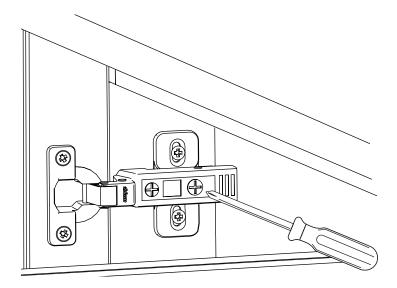



If the door needs adjustment side to side:

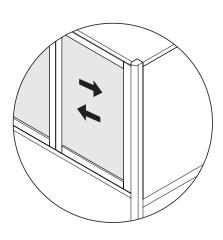

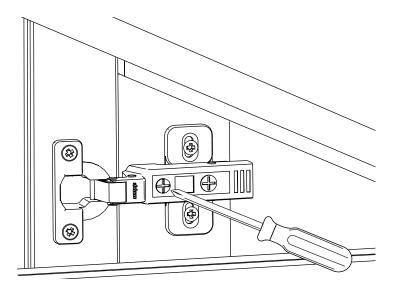



If the door is crooked, adjust hinge(s) up or down:

