


ARTICLE.

VERSION 1.0

Assembly Instructions

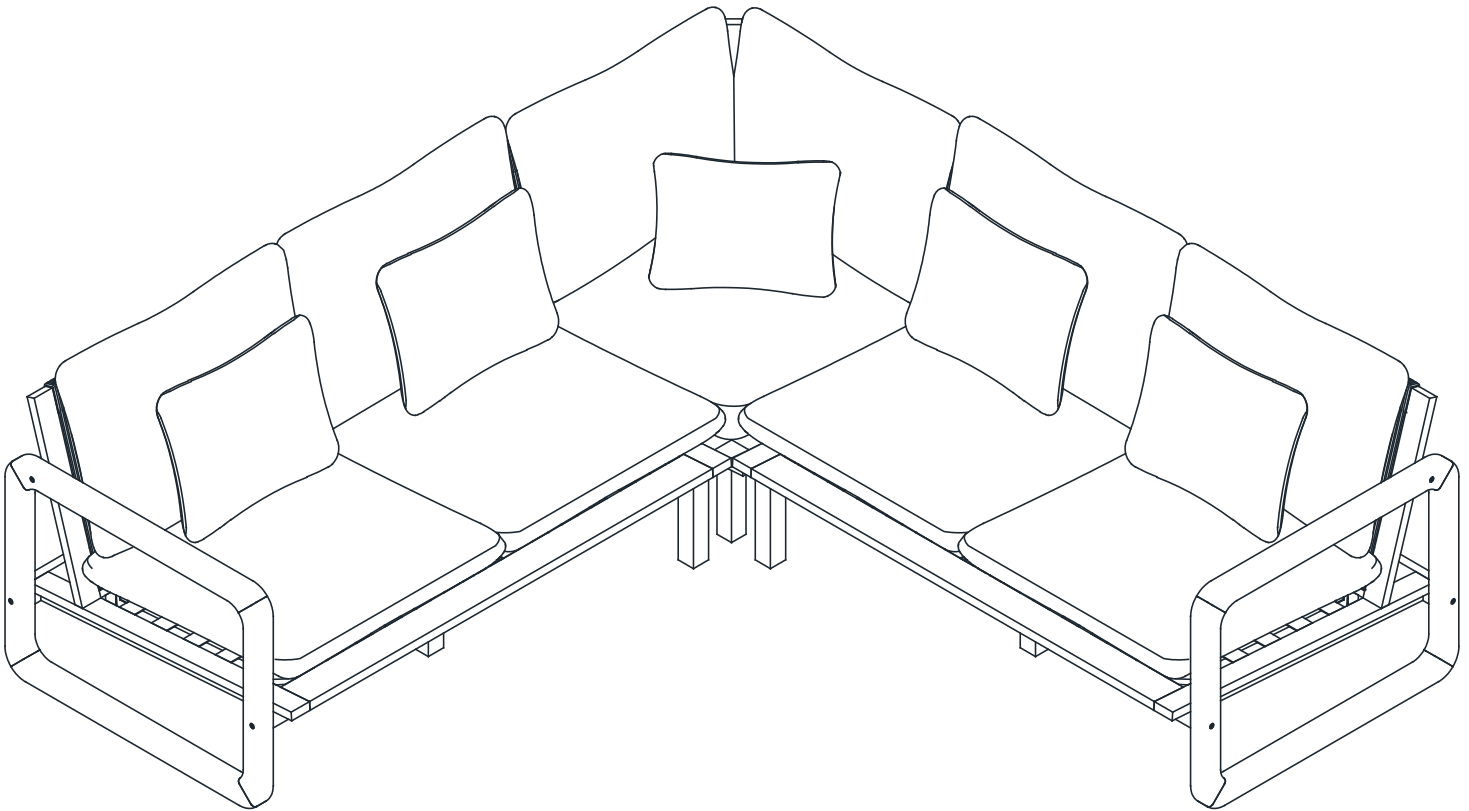


LAHOLM

Corner Sectional

ARTICLE.

VERSION 1.0

Assembly Instructions

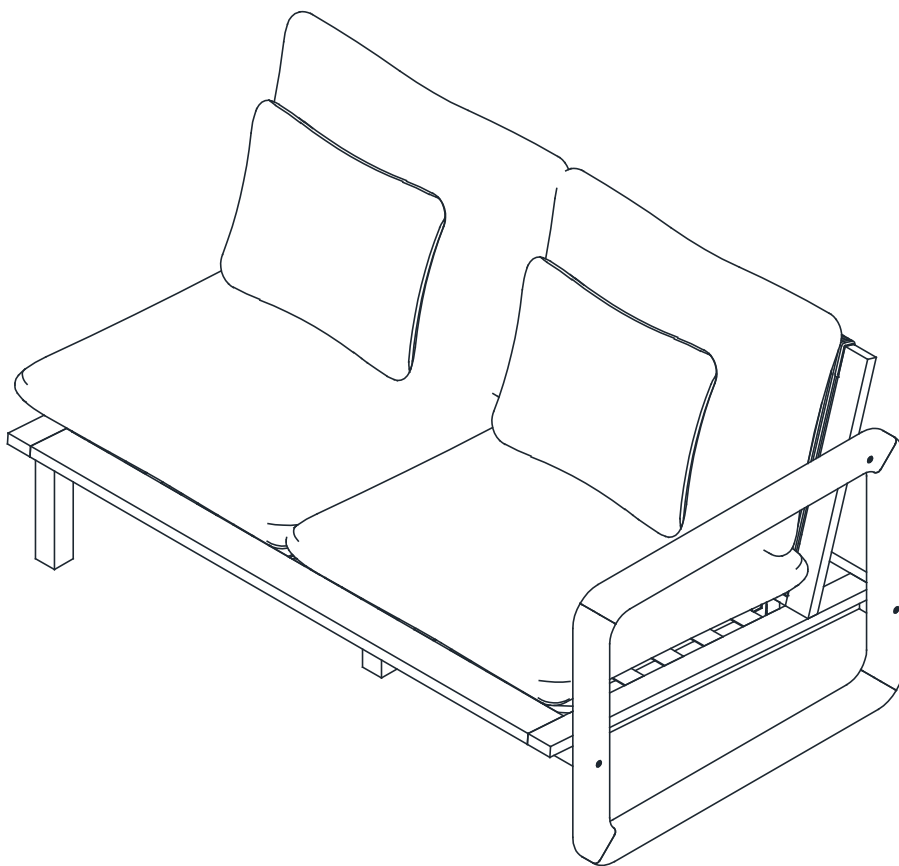

LAHOLM


Right Arm Section

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.

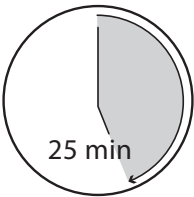

TIME



DIFFICULTY

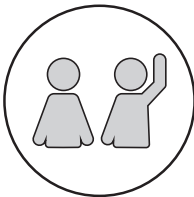

2 PEOPLE


PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	RIGHT ARM		1
C	SEAT FRAME		1
D	BACK REST FRAME		1
E	CENTER LEG		1
F	FRONT LEG		1
G	BACK LEG		1
H	SEAT CUSHION		2
I	BACK CUSHION		2
J	BACK PILLOW		2

TOOLS INVENTORY		
ID	DESCRIPTION	QTY
K	ALLEN KEY	1
N1	BOLT GALVANIZED M6 x 70MM	1

HARDWARE INVENTORY		
ID	DESCRIPTION	QTY
L	BOLT M6 x 40MM	5
M	BOLT M6 x 50MM	1
N	BOLT M6 x 70MM	1
O	BOLT M6 x 90MM	6
P	NUTT	4
Q	WASHER M6x18x2MM	1


1

Assemble Seat Frame to Back Rest Frame.

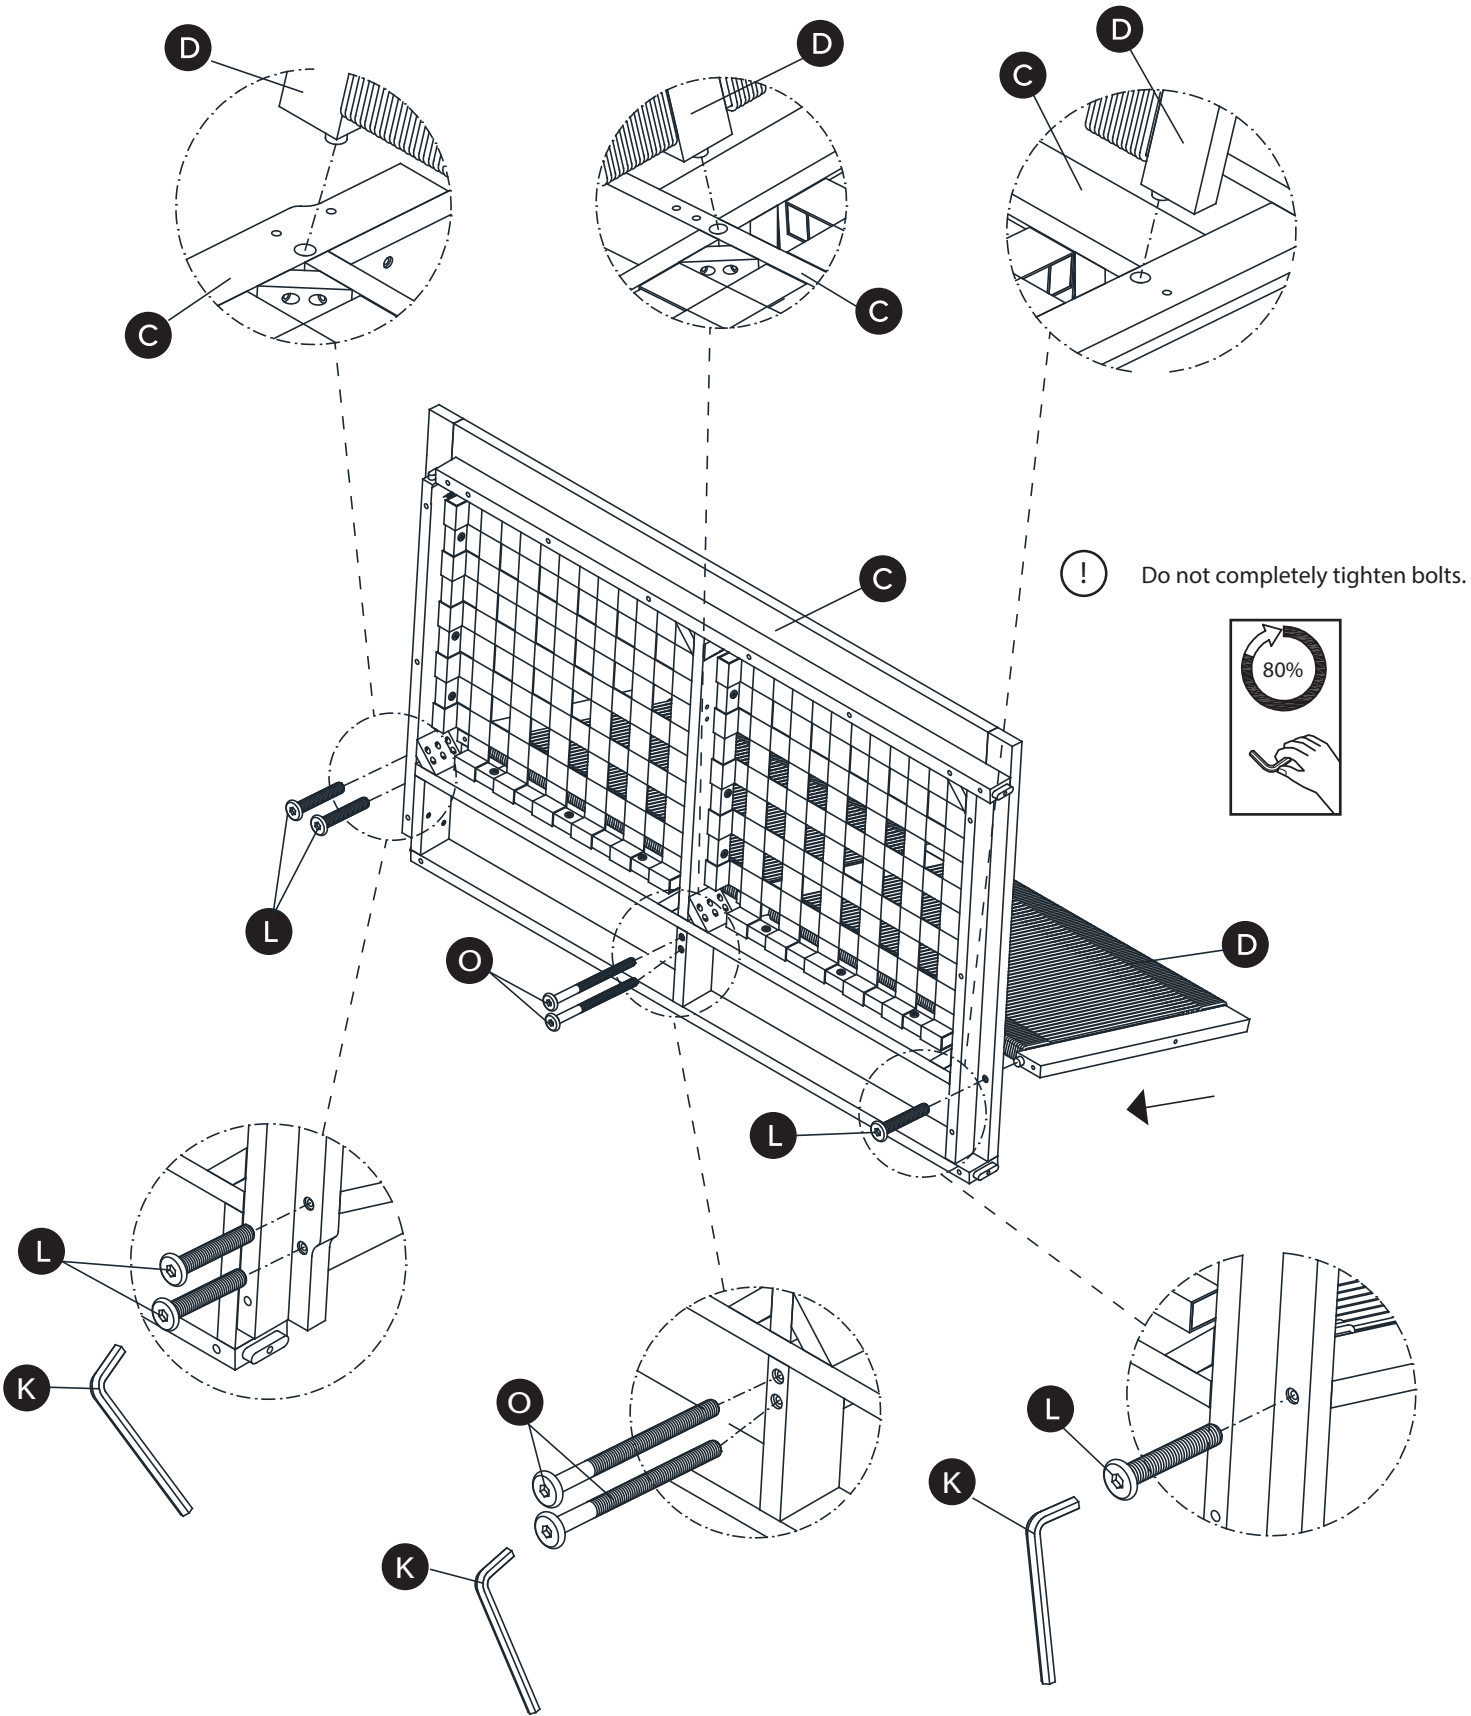


2

Assemble Center Leg.



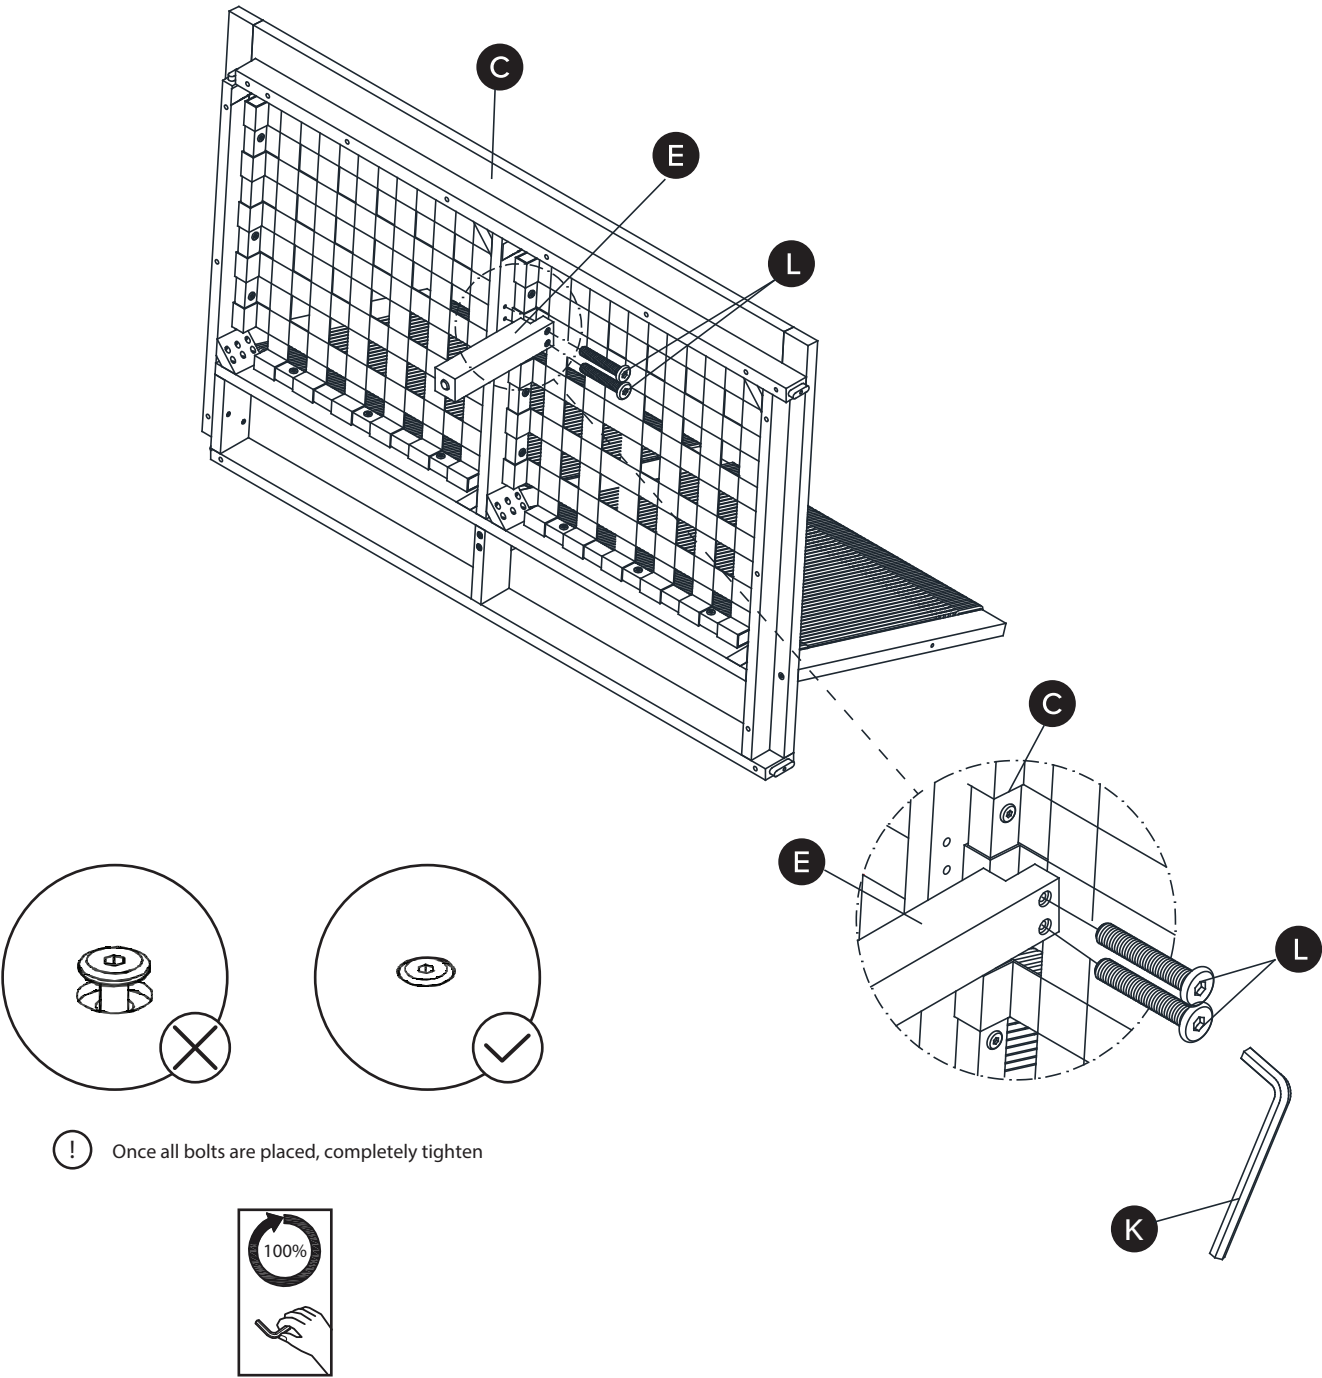


3


Assemble Front Leg.

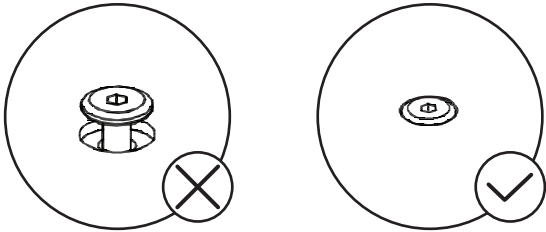


! Once all bolts are placed, completely tighten

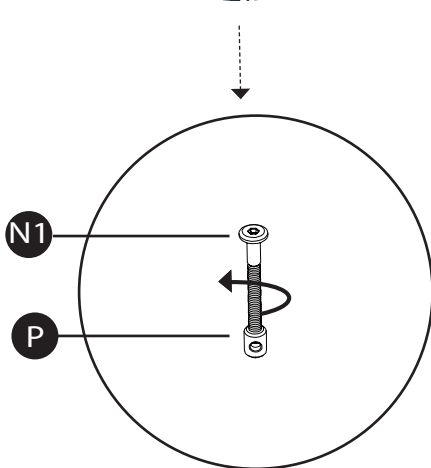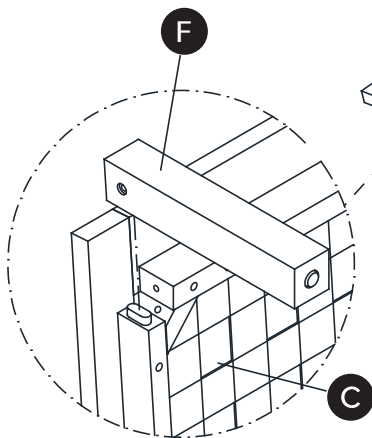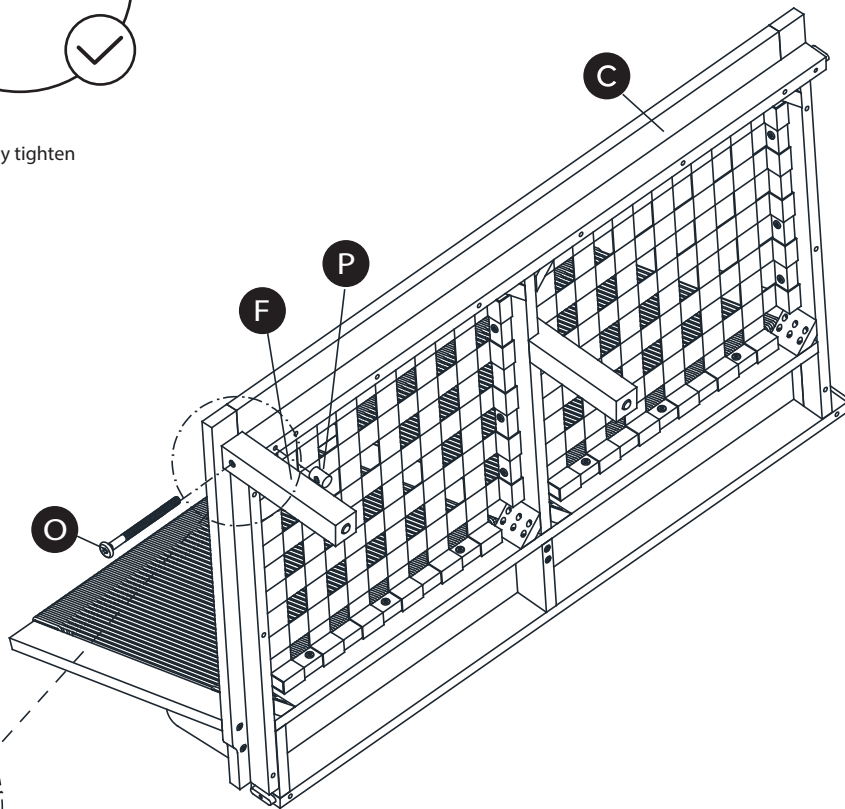

! Note: use bolt (N1) as a tool to insert temporarily and hold nut (P) to holes underneath the seat, while connecting bolt (O) to nut (P).


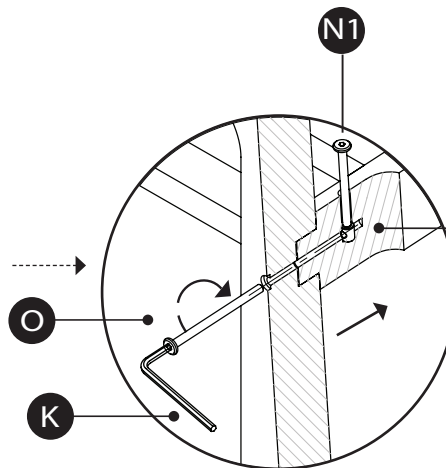


Nut (P) has to turn toward the right direction to connect with bolt (O).

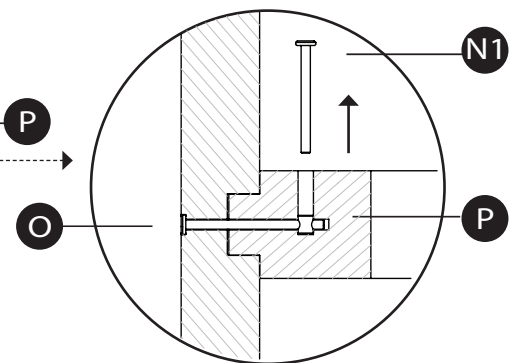

Remove bolt (N1) after nut (P) is completely attached to bolt (O).

4

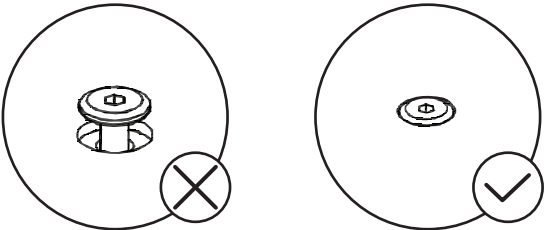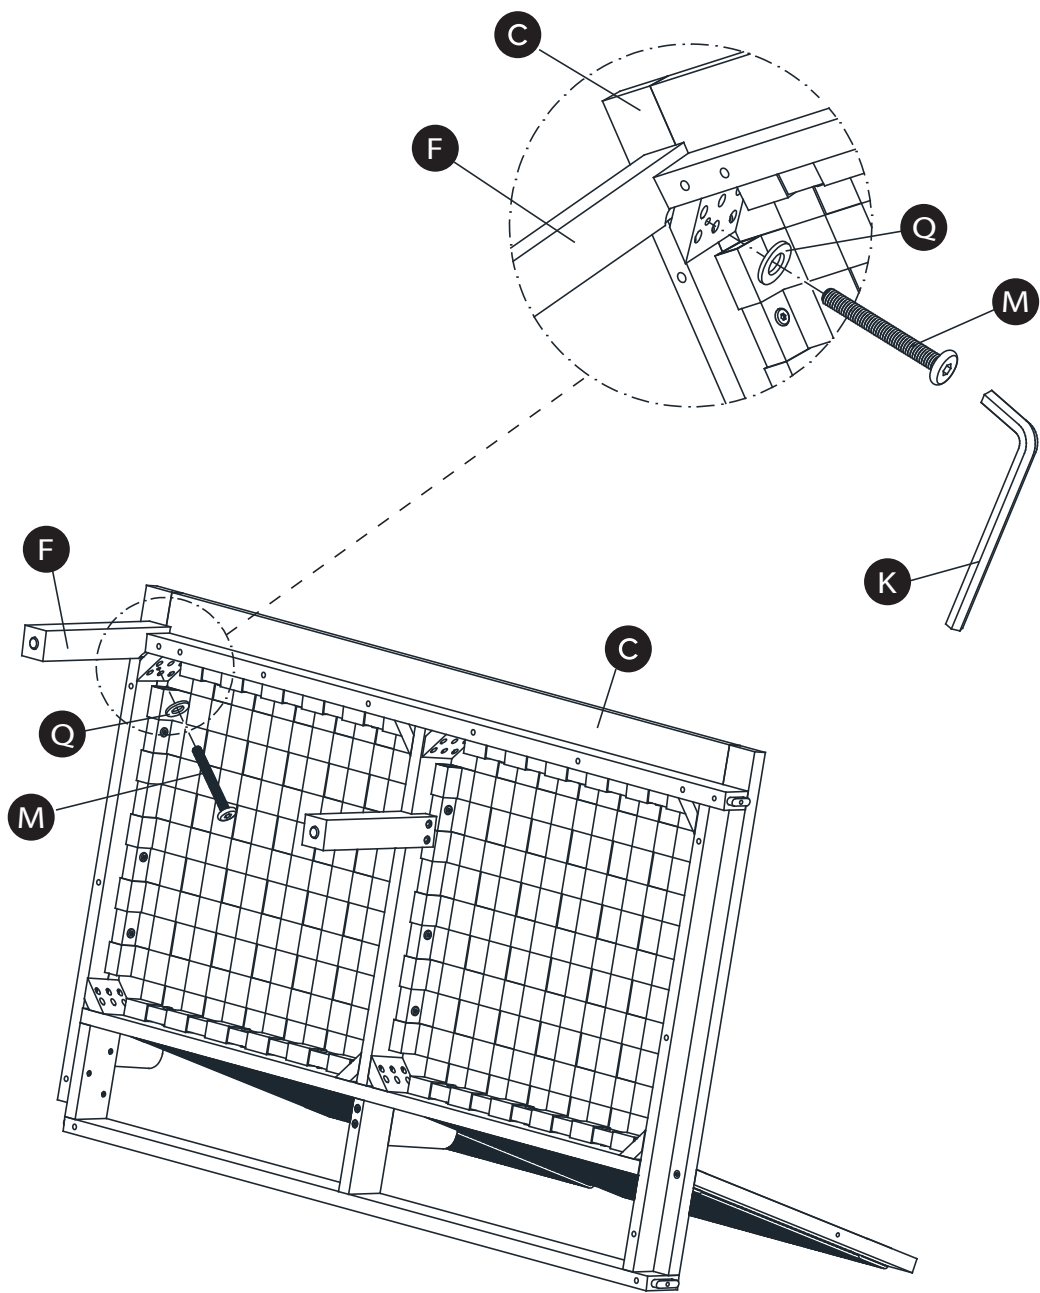


! Once all bolts are placed, completely tighten



5

Assemble Right Arm.


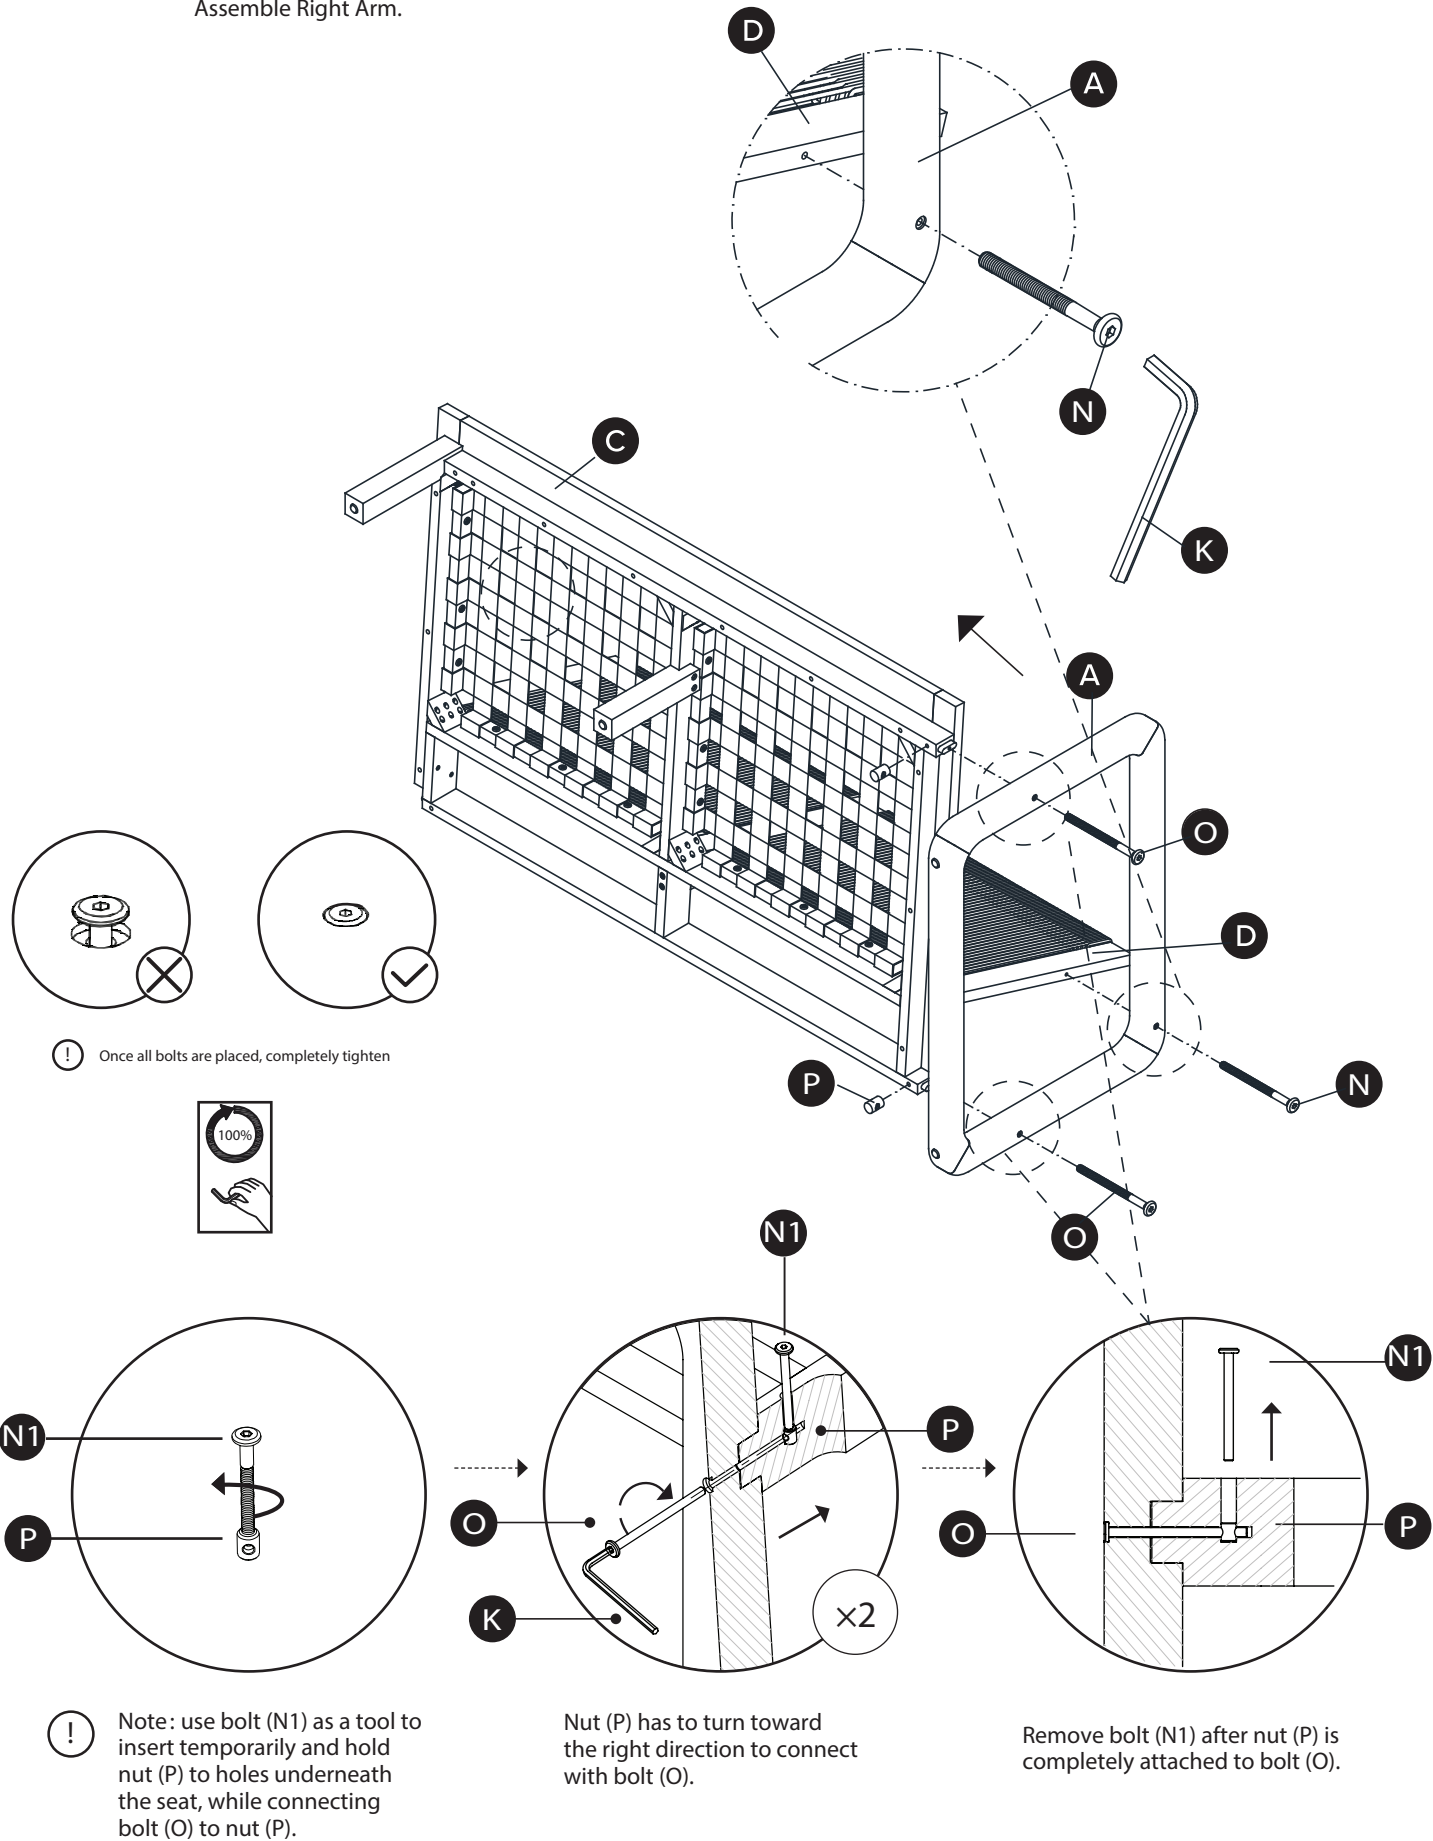


6

Assemble Back Leg.

STEP 1


Mount the screw head on the Leg (G) to the key hole bracket on the Back Rest (D).

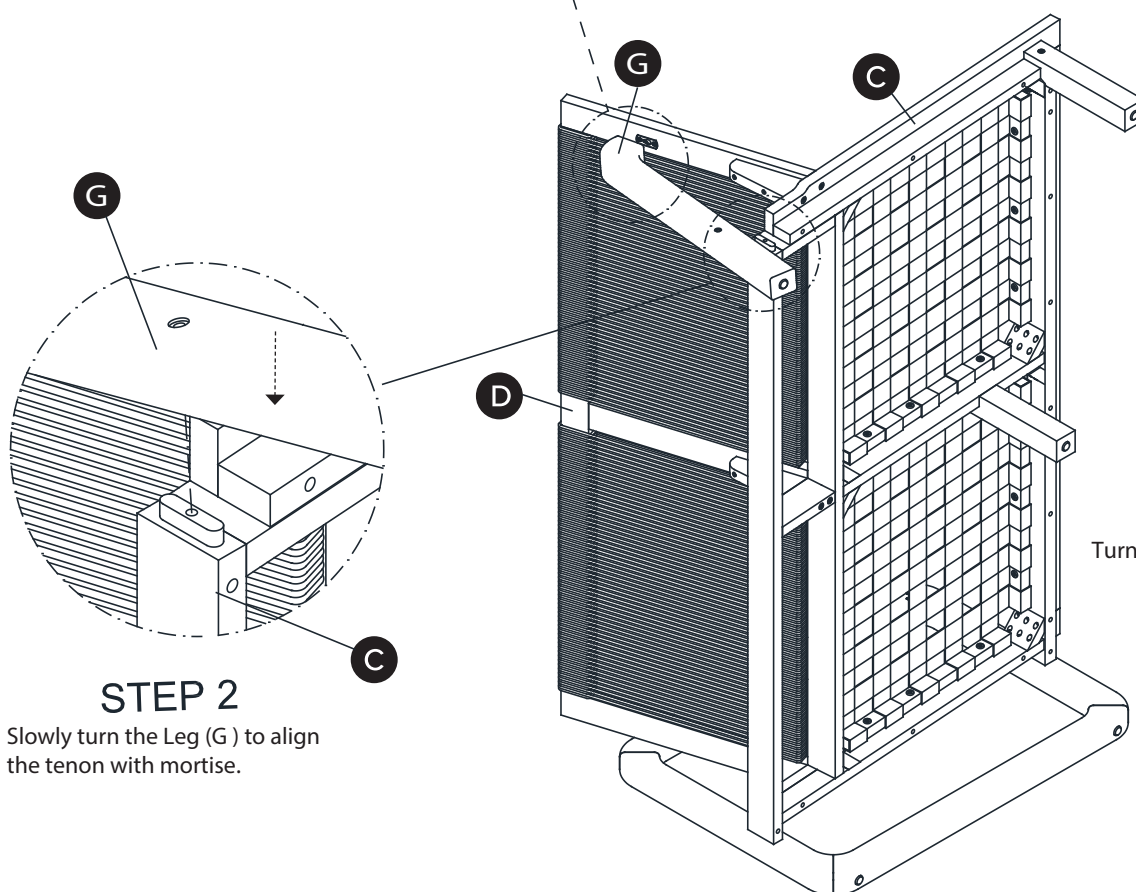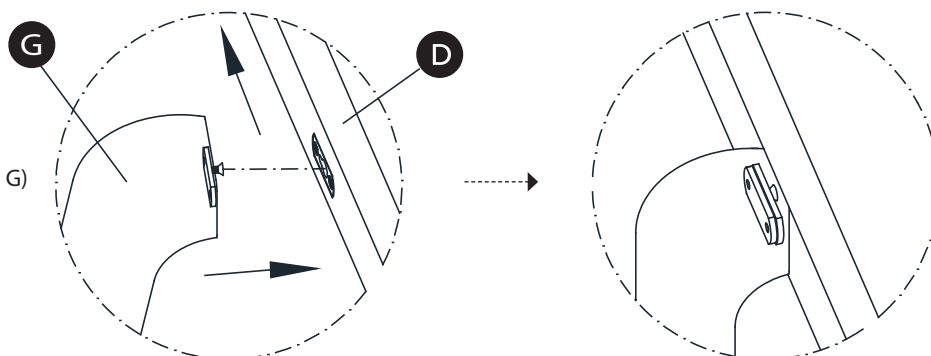

STEP 2

Slowly turn the Leg (G) to align the tenon with mortise.



7

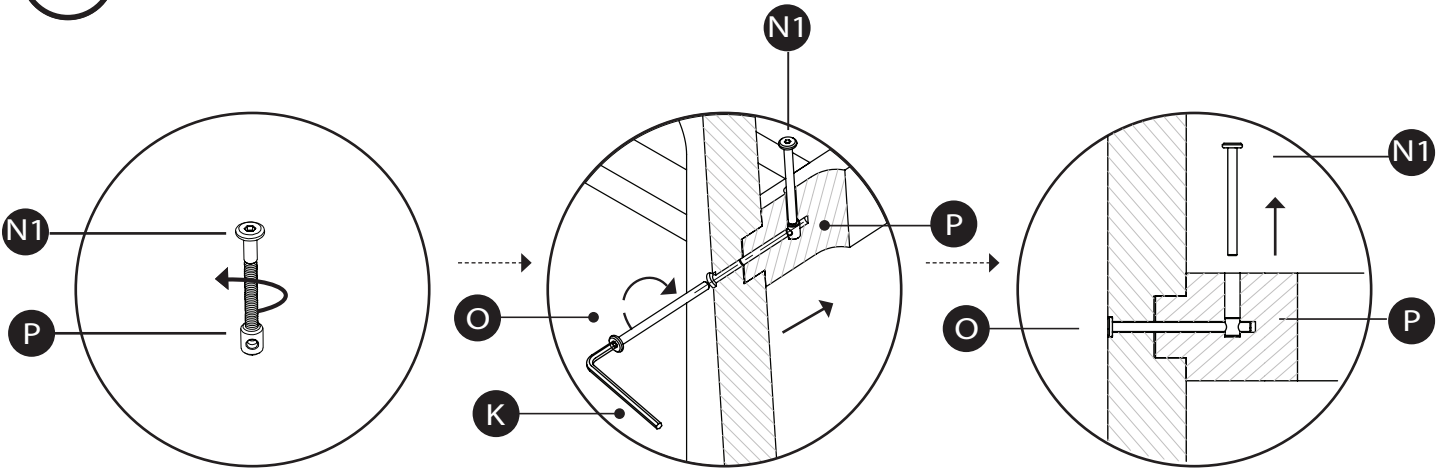

! Note: use bolt (N1) as a tool to insert temporarily and hold nut (P) to holes underneath the seat, while connecting bolt (O) to nut (P).

Nut (P) has to turn toward the right direction to connect with bolt (O).


Remove bolt (N1) after nut (P) is completely attached to bolt (O).

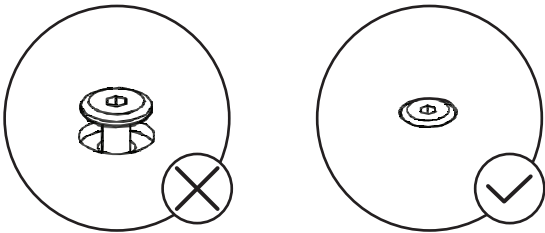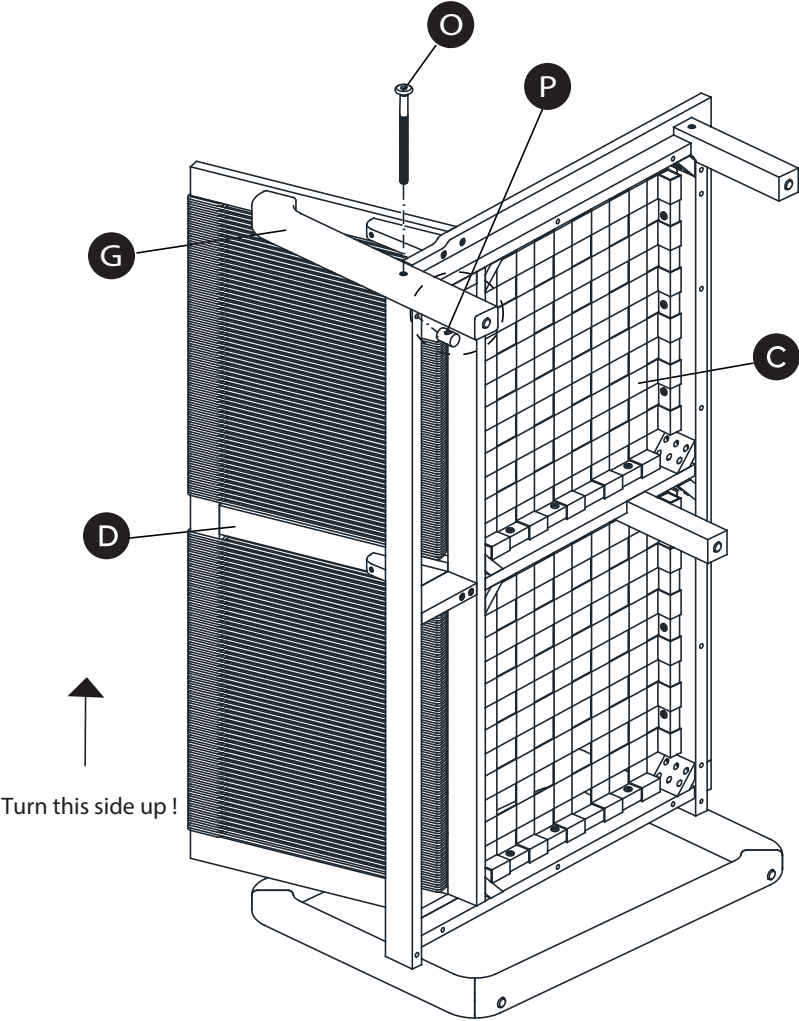

! Once all bolts are placed, completely tighten




8

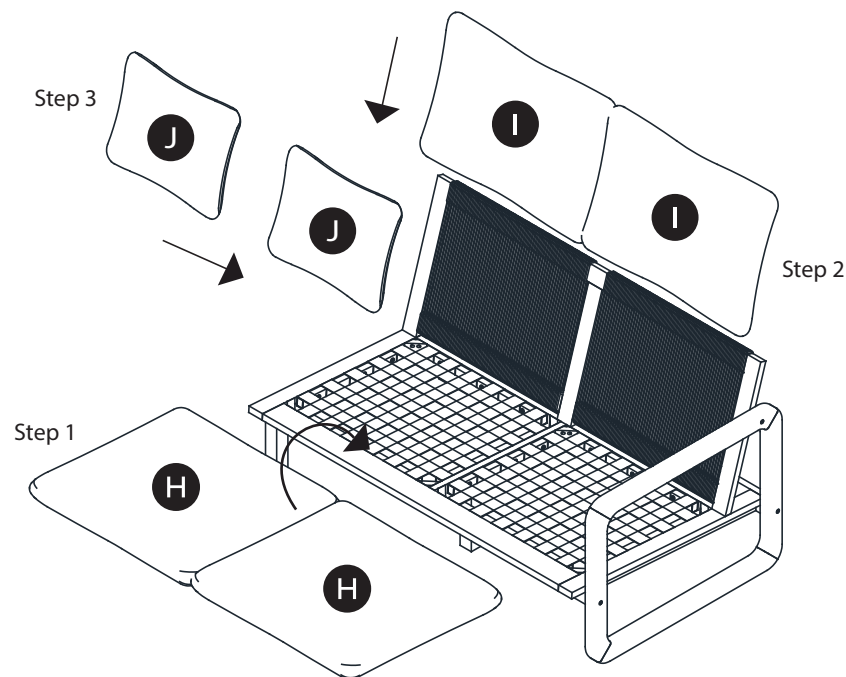

9

Tight cushion (H) ropes directly to the slat support bar underneath the Chair (C) .

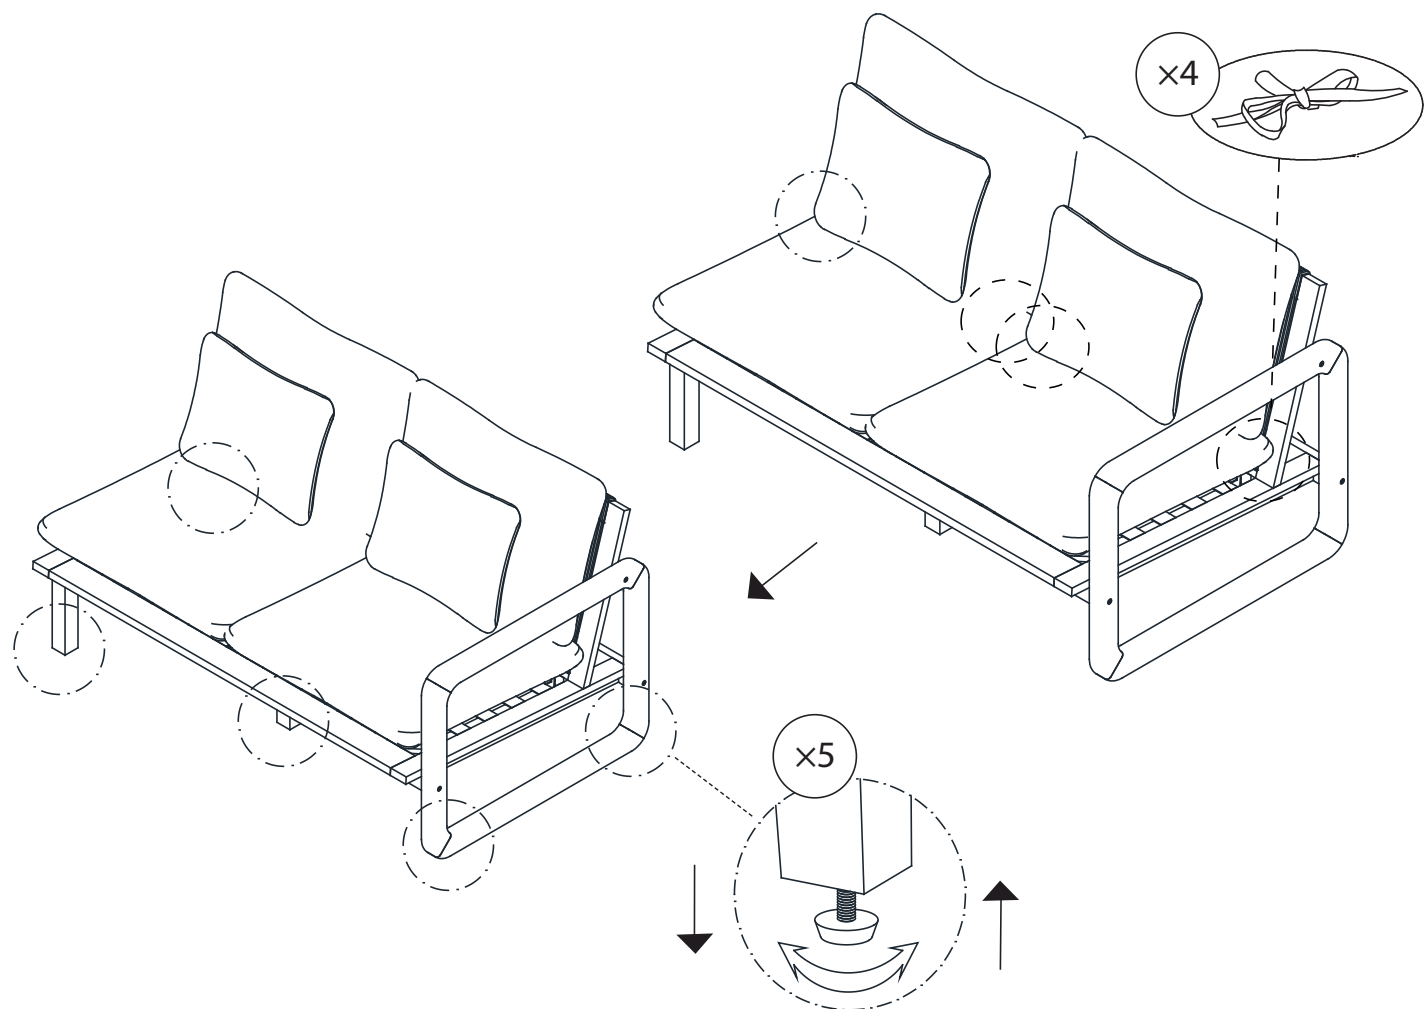


Turn the Sectional upright and adjust the levelers at the bottom of the legs (if needed) to balance the Sectional.

ARTICLE.

VERSION 1.0

Assembly Instructions

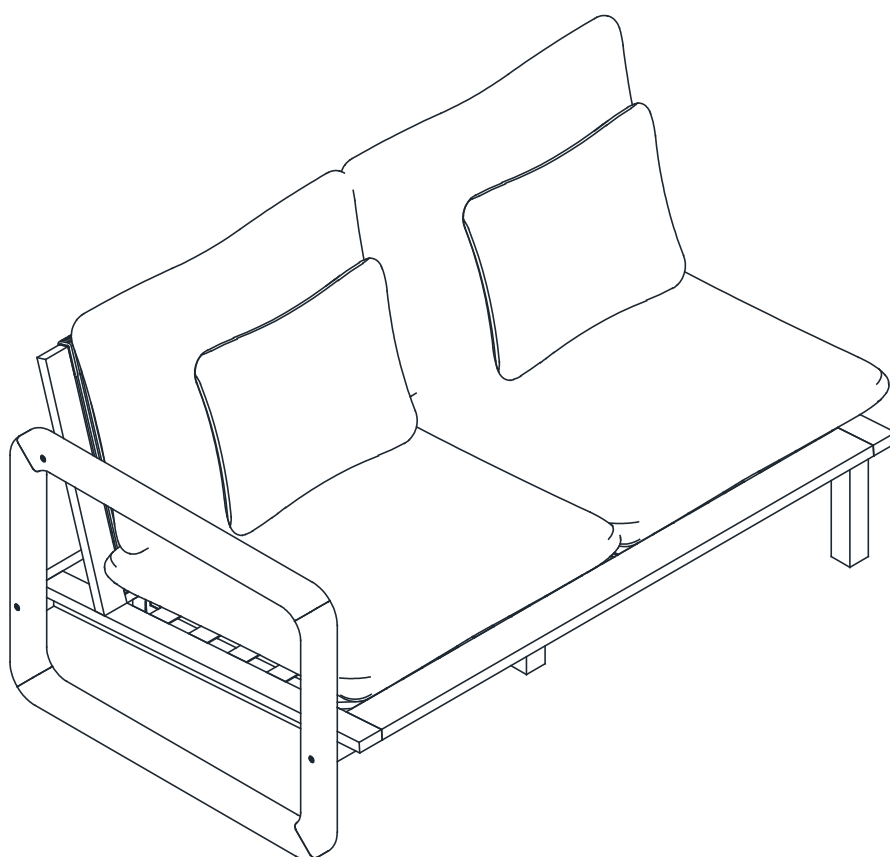

LAHOLM


Left Arm Section

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.

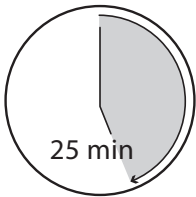








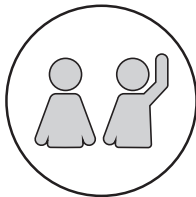

TIME











DIFFICULTY



2 PEOPLE


PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	LEFT ARM		1
C	SEAT FRAME		1
D	BACK REST FRAME		1
E	CENTER LEG		1
F	FRONT LEG		1
G	BACK LEG		1
H	SEAT CUSHION		2
I	BACK CUSHION		2
J	BACK PILLOW		2

TOOLS INVENTORY		
ID	DESCRIPTION	QTY
K	ALLEN KEY 	1
N1	BOLT GALVANIZED M6 x 70MM 	1

HARDWARE INVENTORY		
ID	DESCRIPTION	QTY
L	BOLT M6 x 40MM 	5
M	BOLT M6 x 50MM 	1
N	BOLT M6 x 70MM 	1
O	BOLT M6 x 90MM 	6
P	NUTT 	4
Q	WASHER M6x18x2MM 	1



1

Assemble Seat Frame to Back Rest Frame.

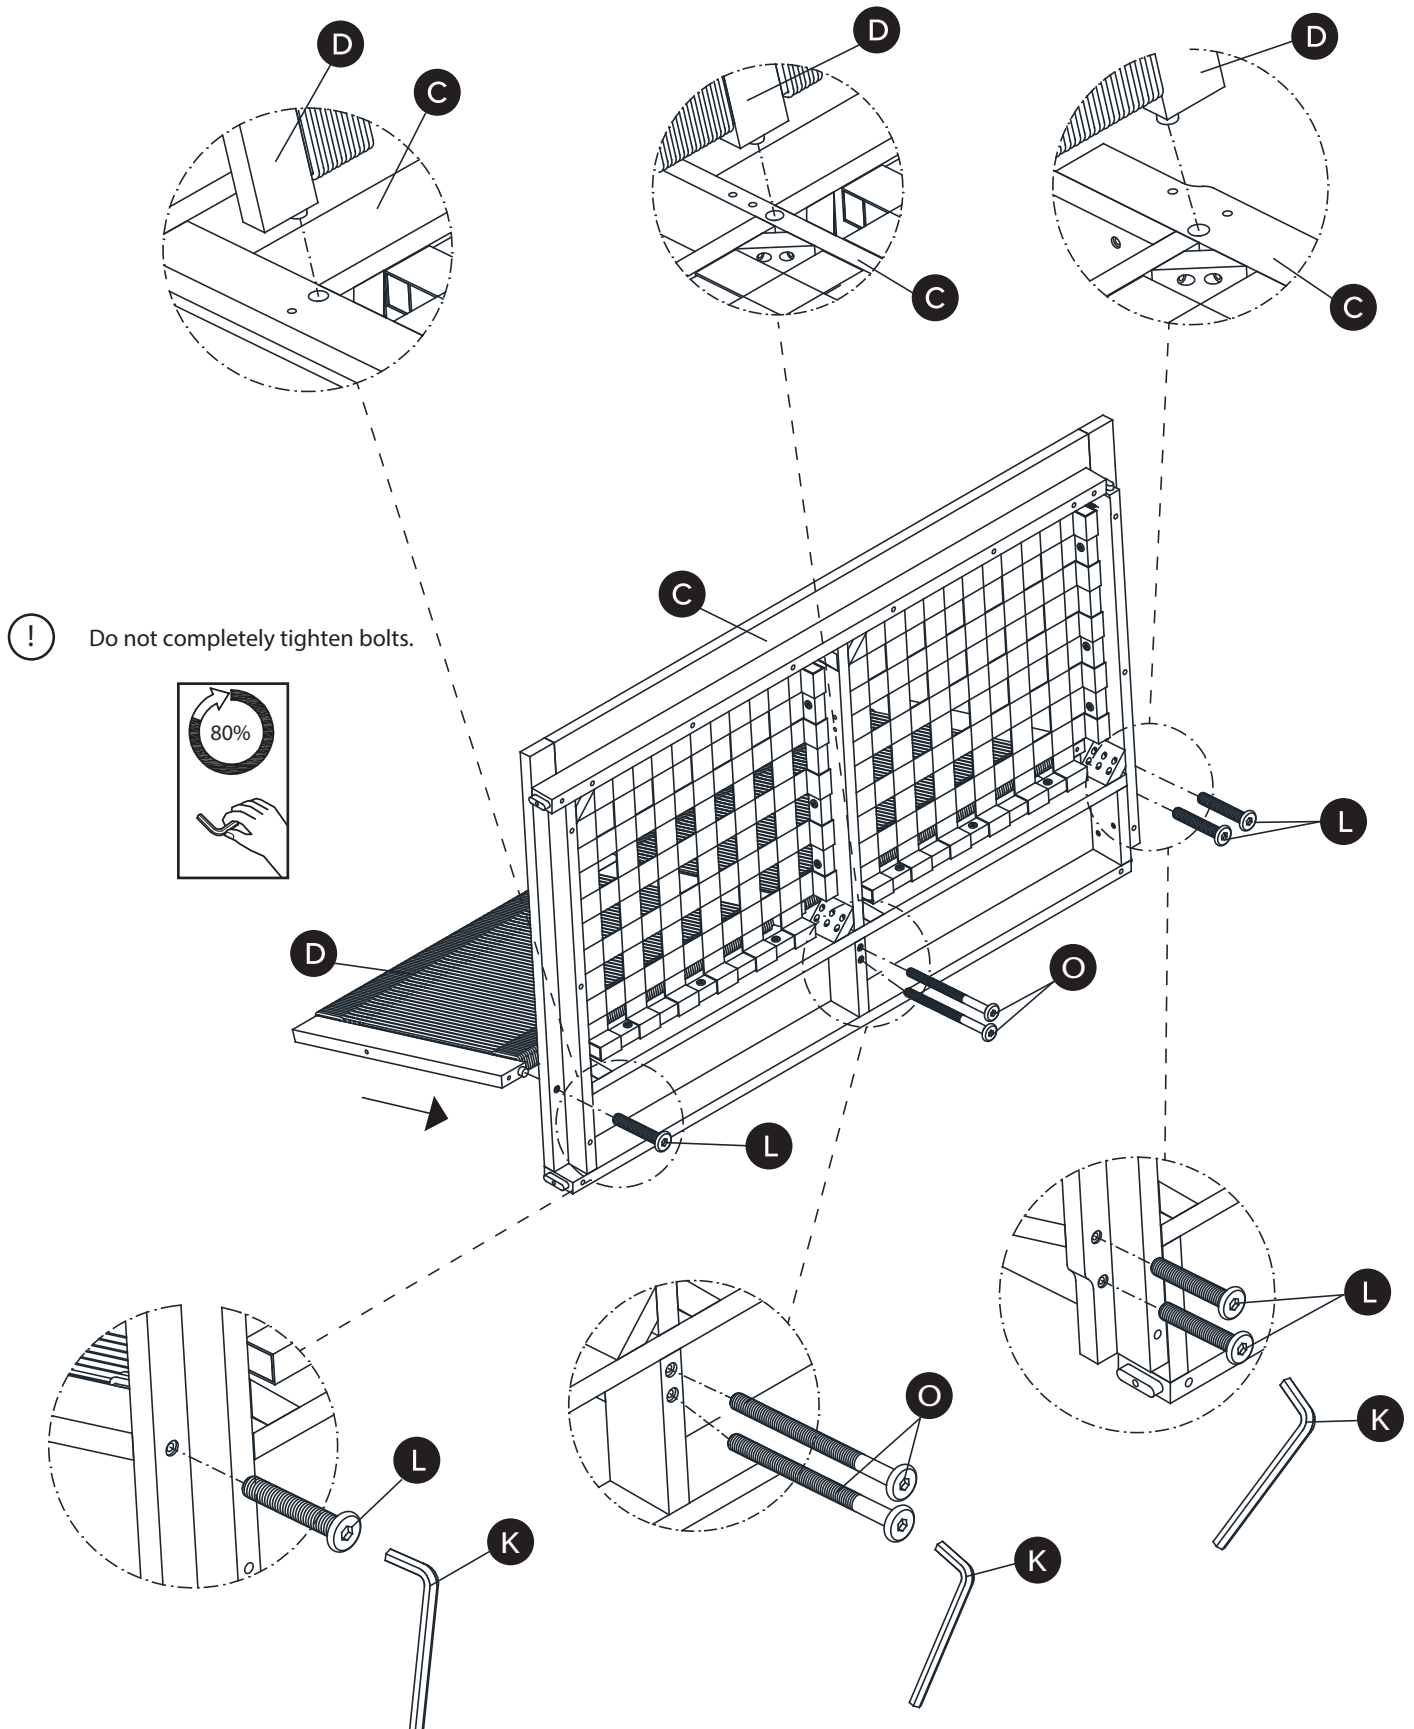

2

Assemble Center Leg.

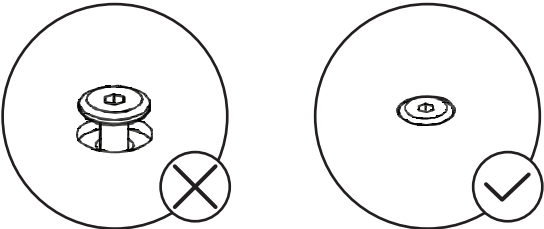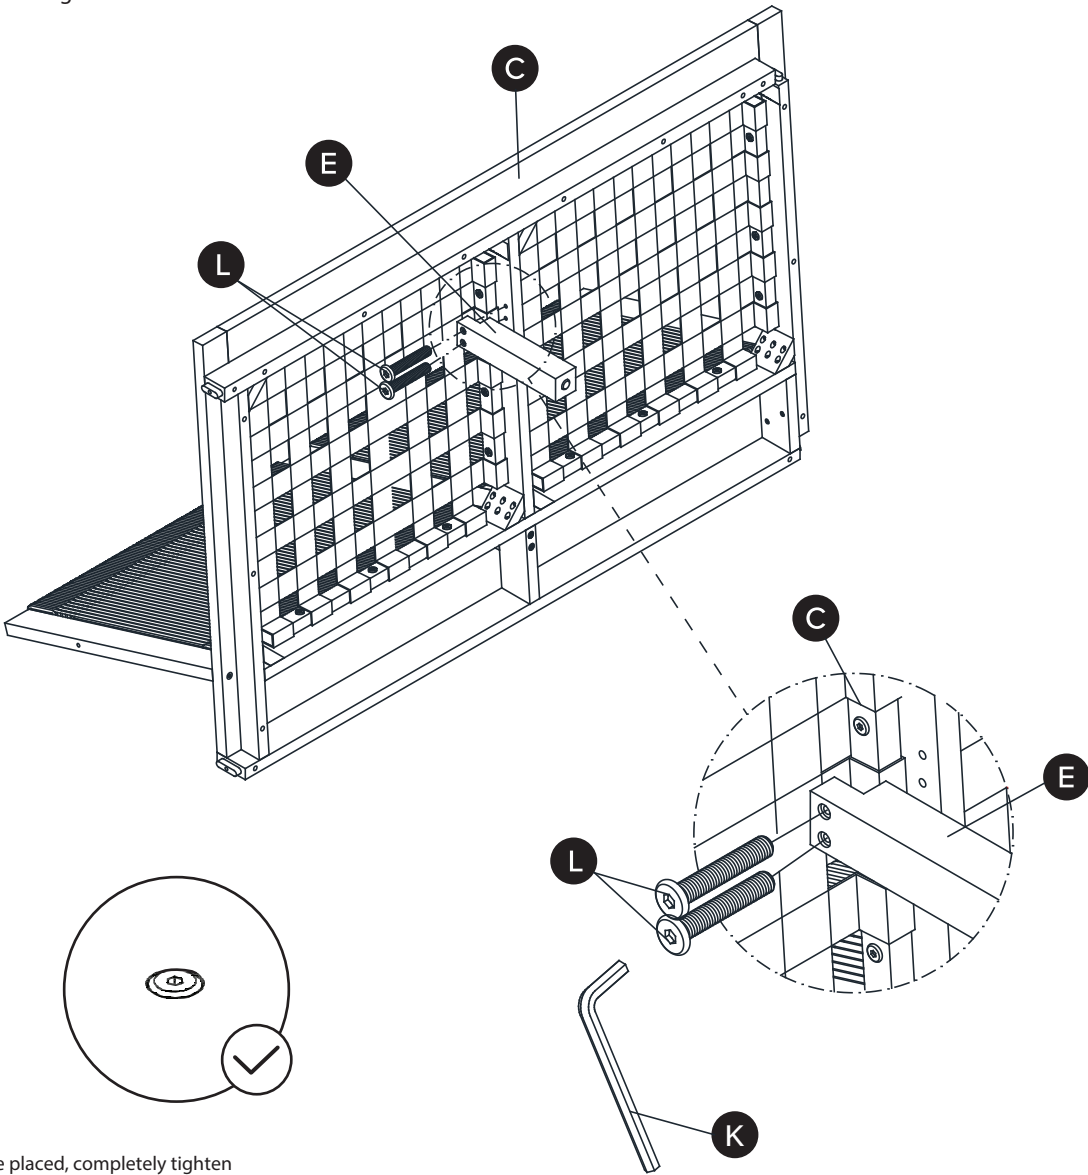


! Once all bolts are placed, completely tighten






3


Assemble Front Leg.

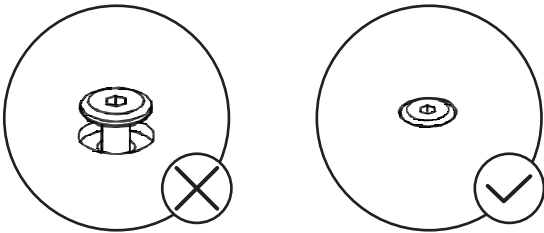


! Once all bolts are placed, completely tighten

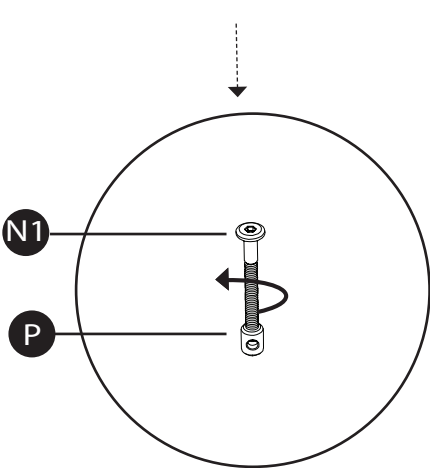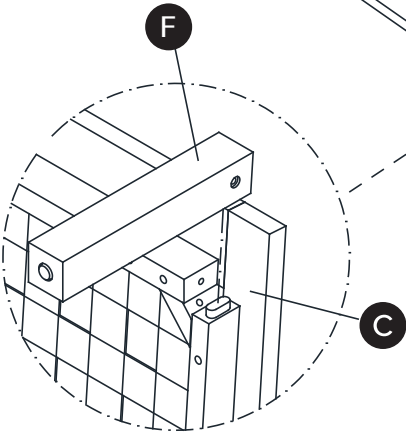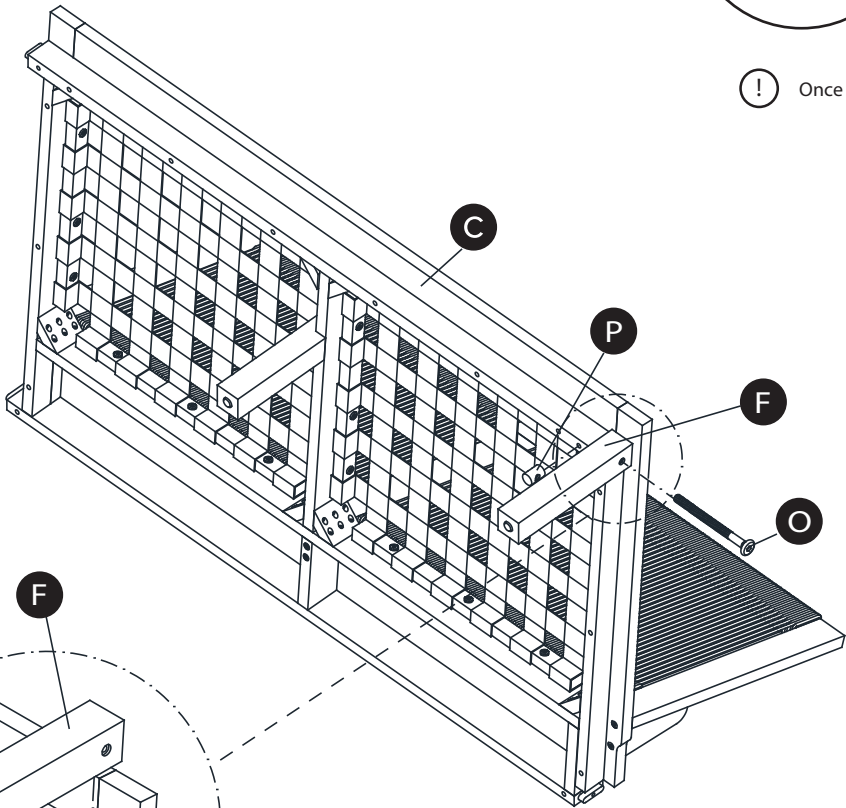

! Note: use bolt (N1) as a tool to insert temporarily and hold nut (P) to holes underneath the seat, while connecting bolt (O) to nut (P).

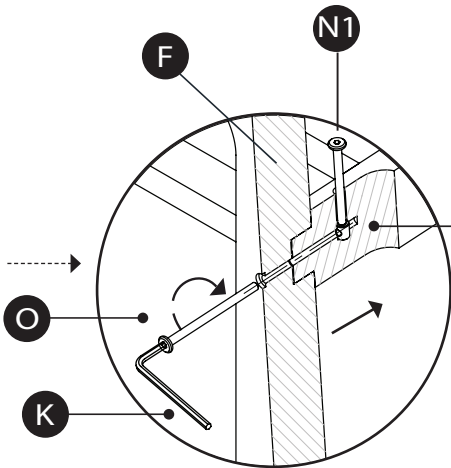


Nut (P) has to turn toward the right direction to connect with bolt (O).

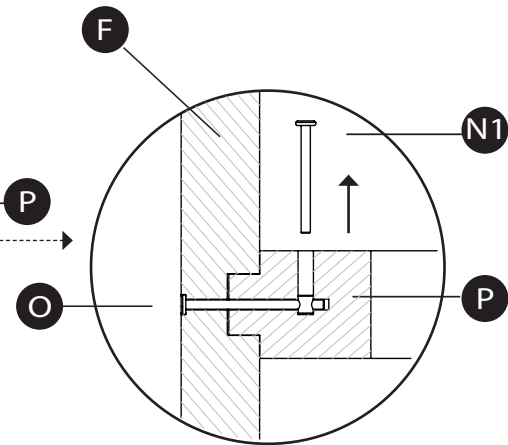

Remove bolt (N1) after nut (P) is completely attached to bolt (O).

4

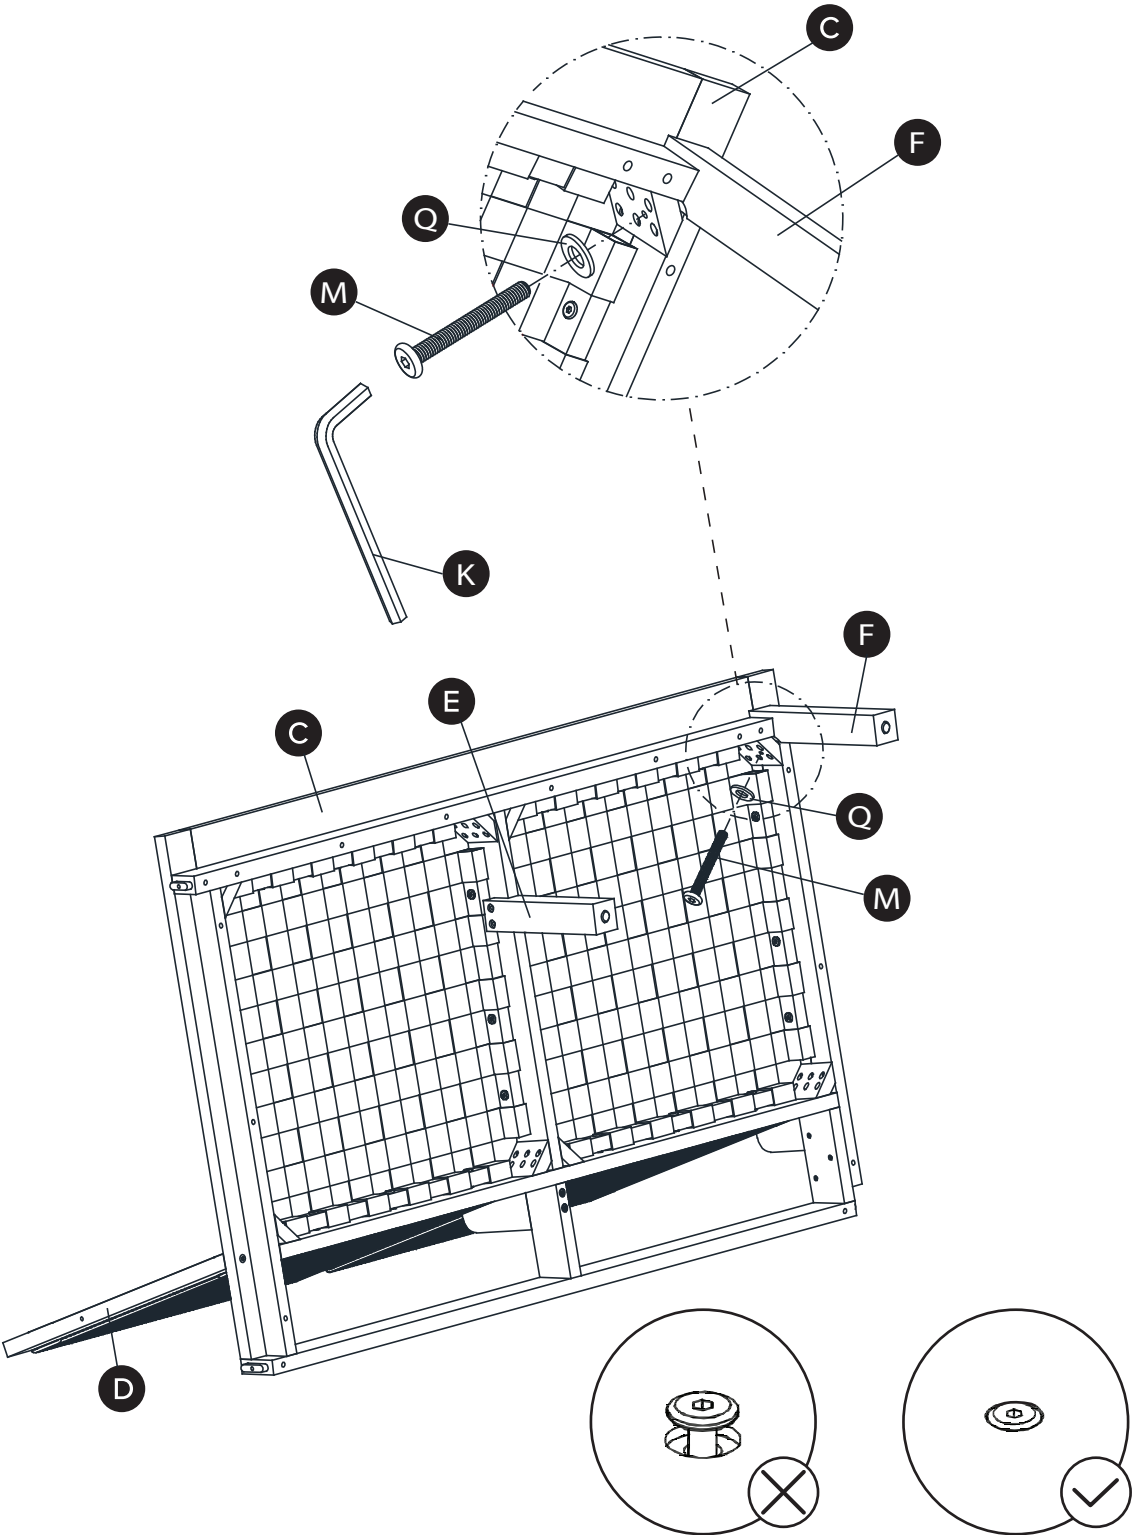


! Once all bolts are placed, completely tighten



5

Assemble Left Arm.


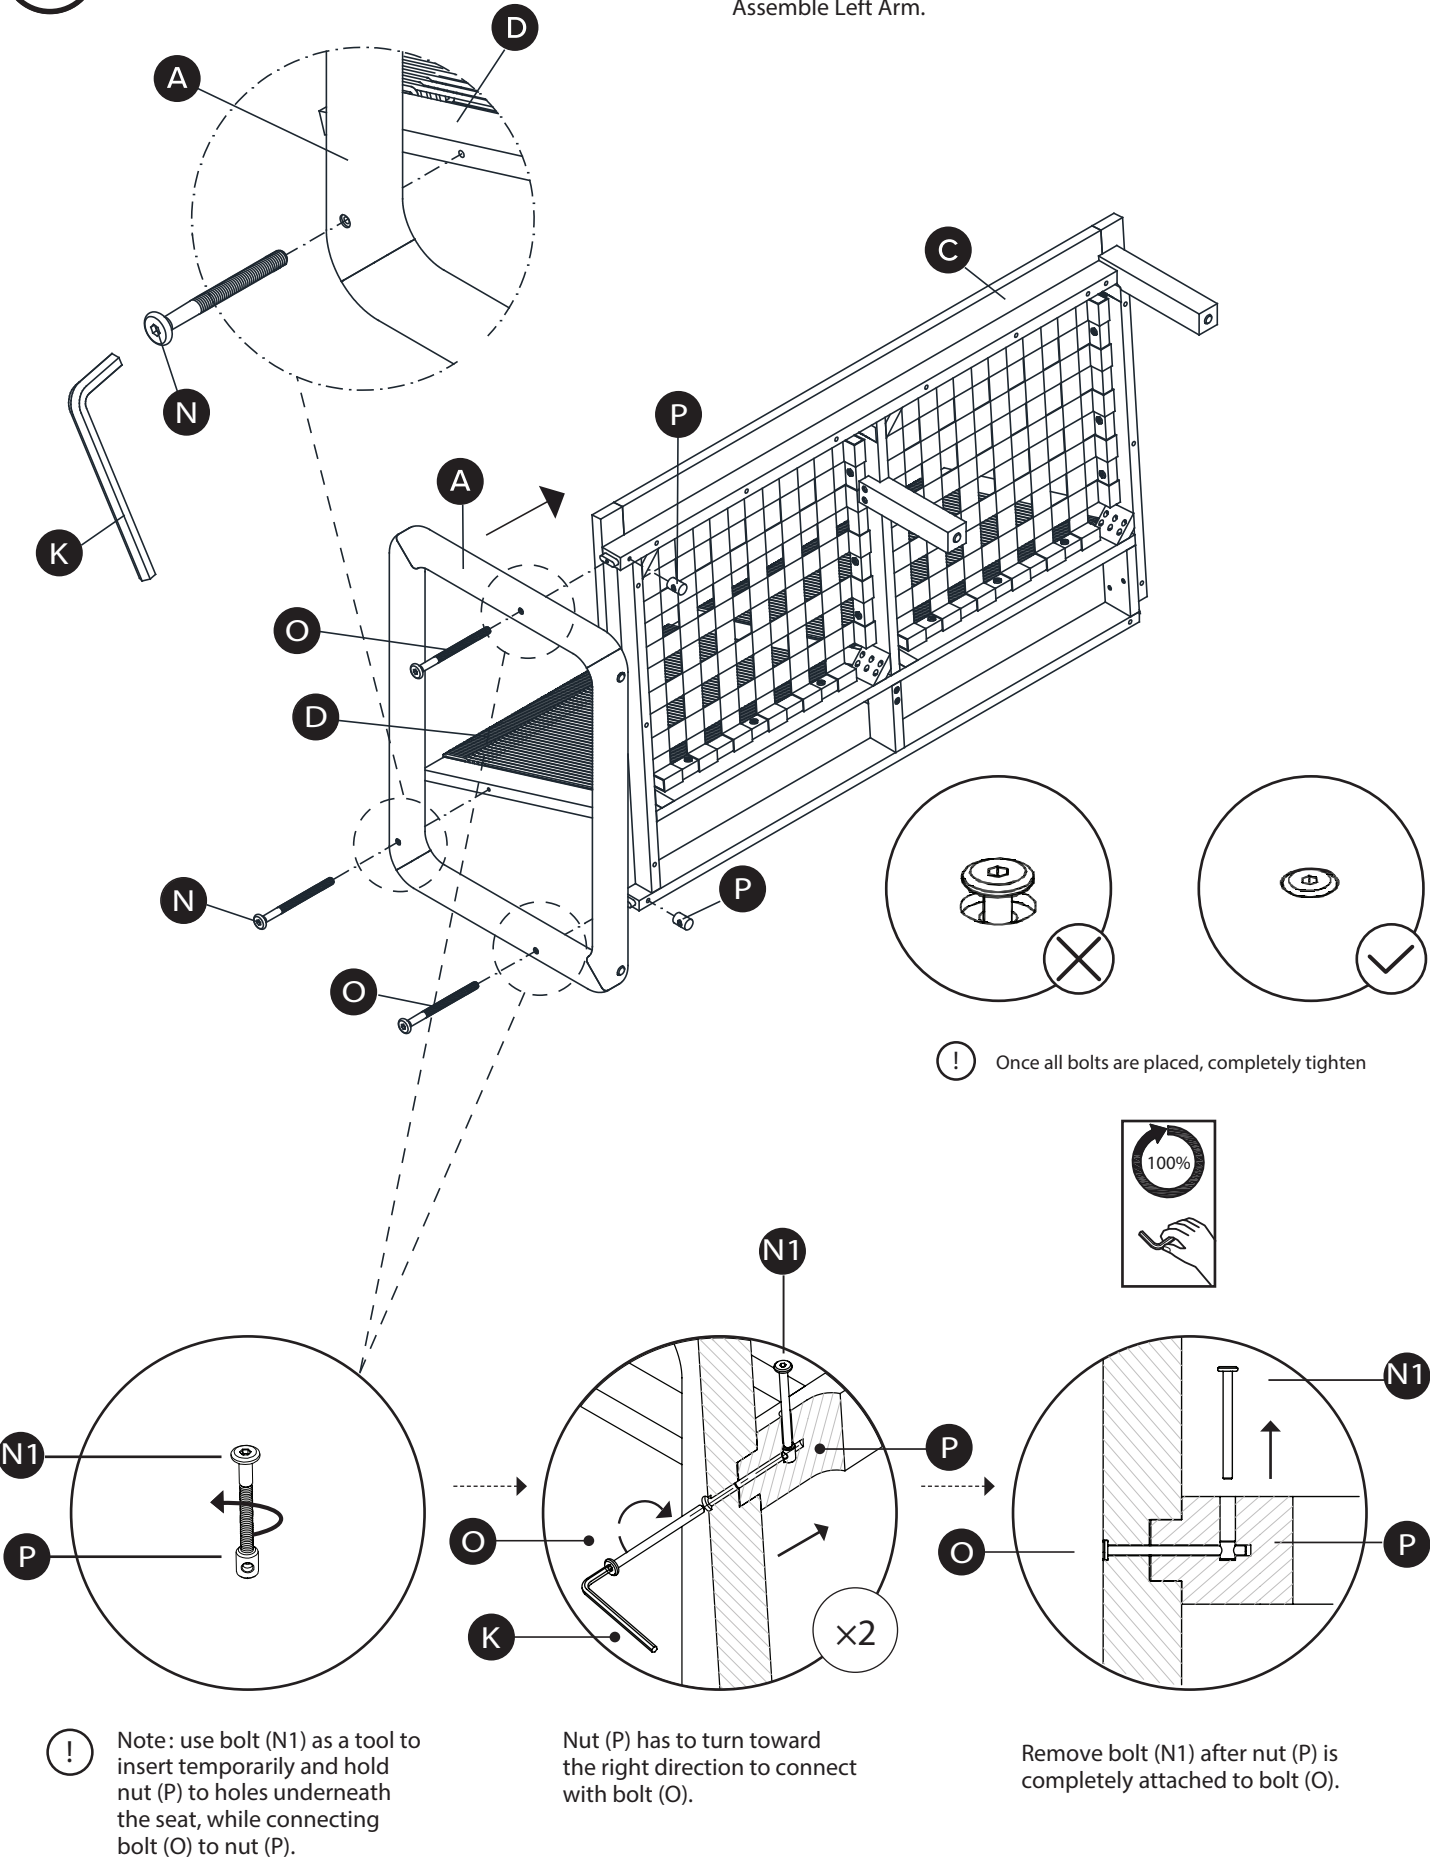


6

Assemble Back Leg.


STEP 1

Mount the screw head on the Leg (G)
to the key hole bracket on the
Back Rest (D).

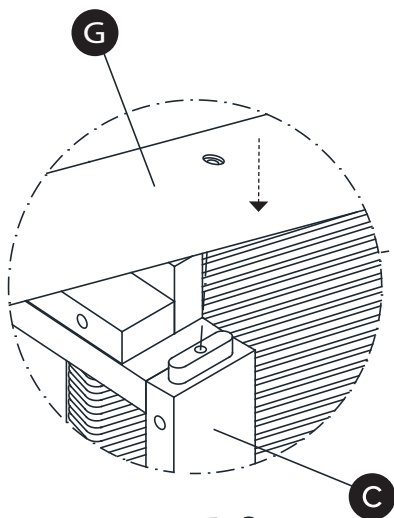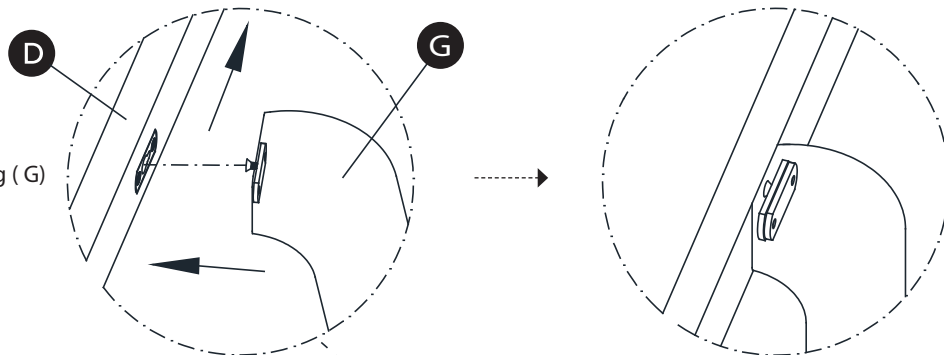


STEP 2

Slowly turn the Leg (G) to align
the tenon with mortise.

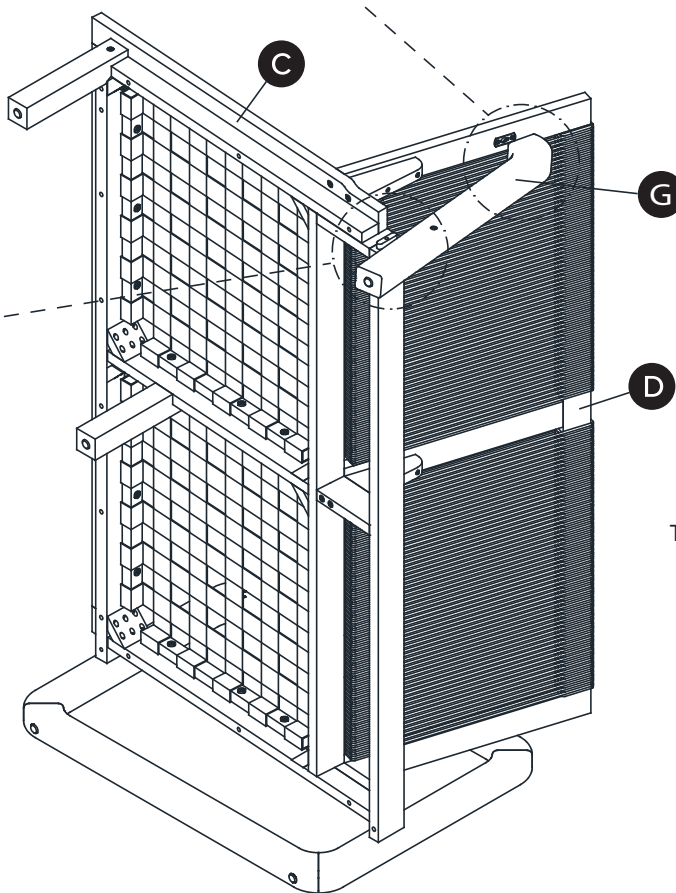




7

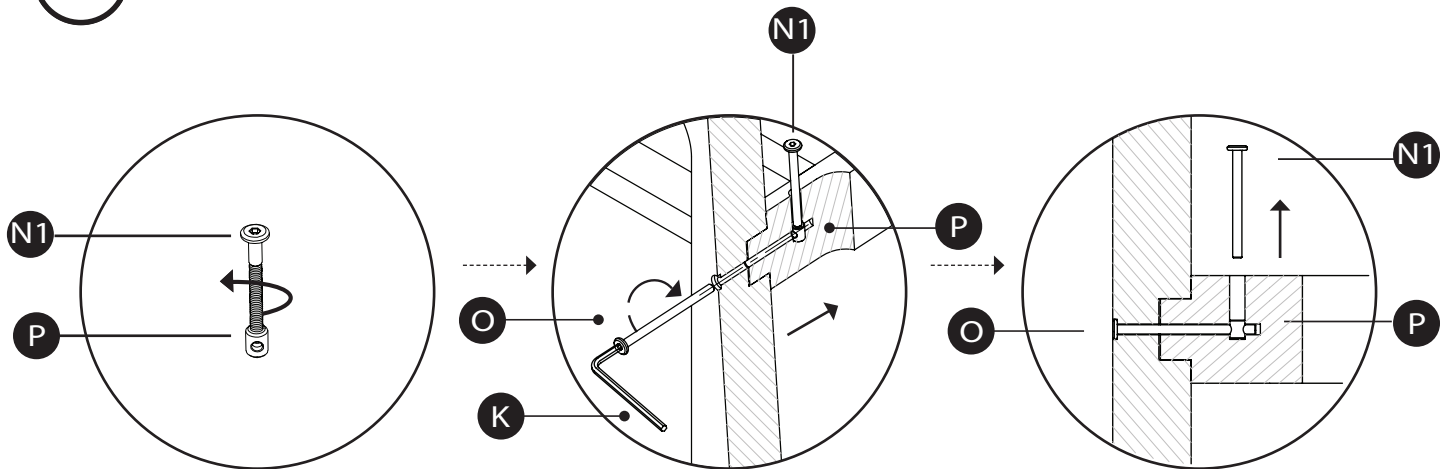

Note: use bolt (N1) as a tool to insert temporarily and hold nut (P) to holes underneath the seat, while connecting bolt (O) to nut (P).

Nut (P) has to turn toward the right direction to connect with bolt (O).

Remove bolt (N1) after nut (P) is completely attached to bolt (O).

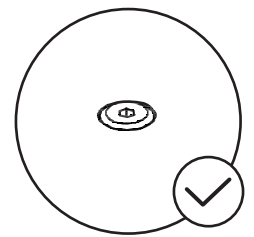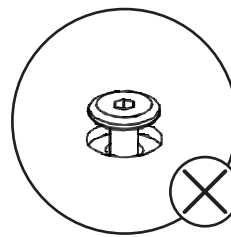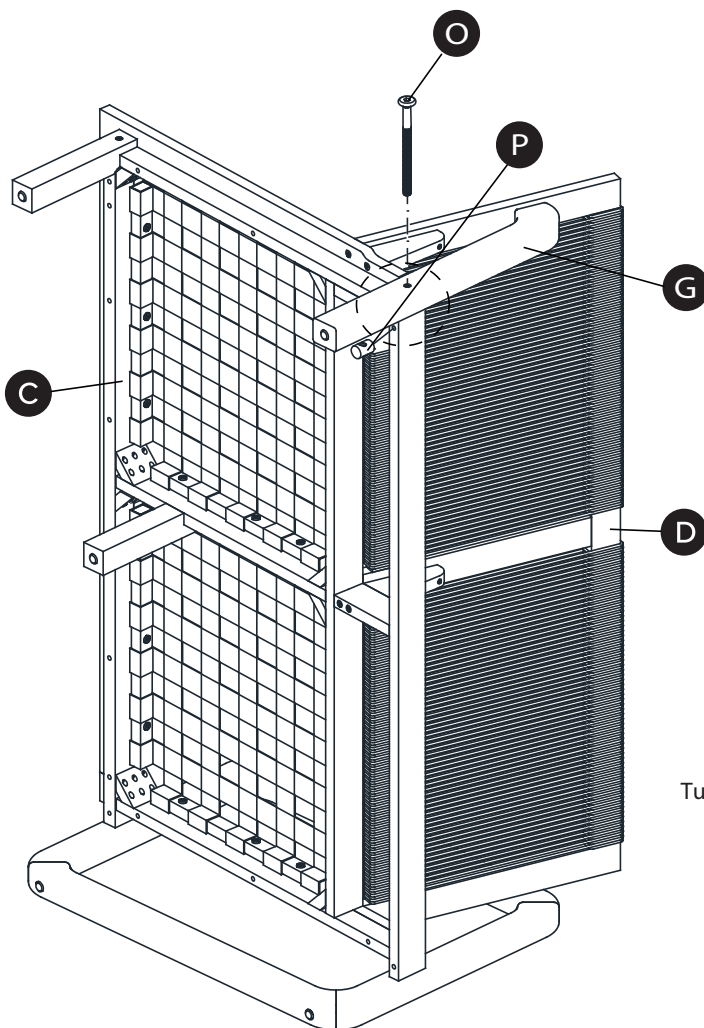


Once all bolts are placed, completely tighten




Turn this side up !

8

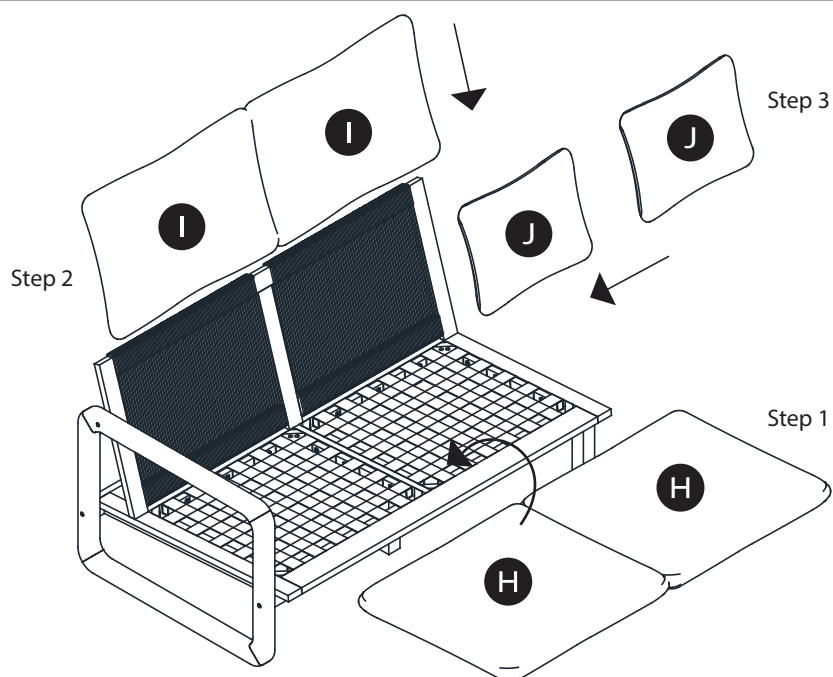

9

Tight cushion (H) ropes directly to the slat support bar underneath the Chair (C).

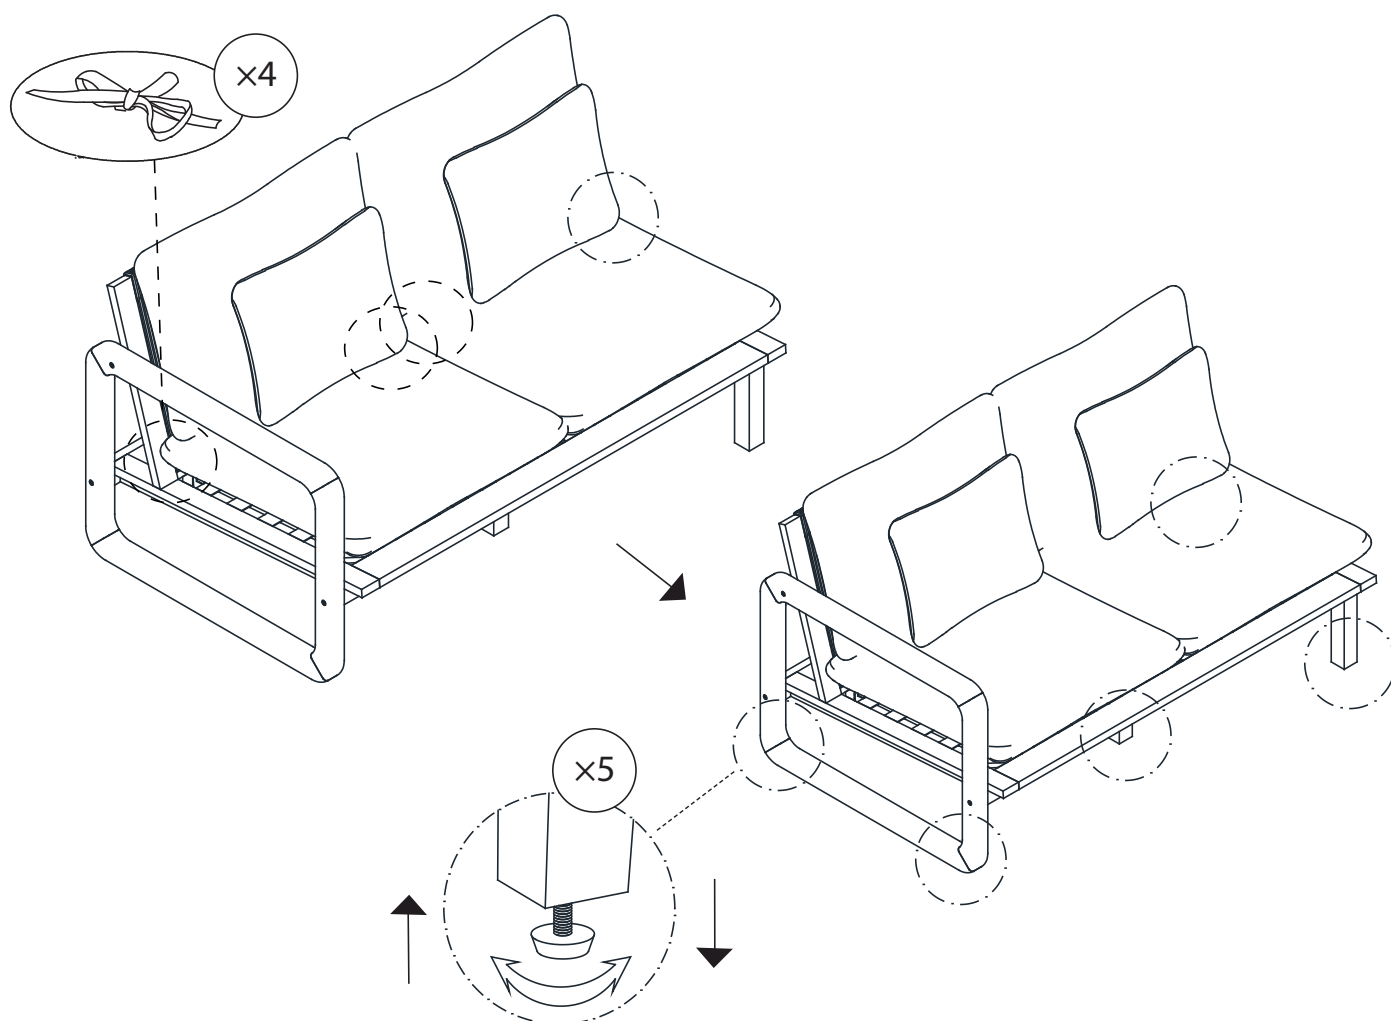


Turn the Sectional upright and adjust the levelers at the bottom of the legs (if needed) to balance the Sectional.

ARTICLE.

VERSION 1.0

Assembly Instructions

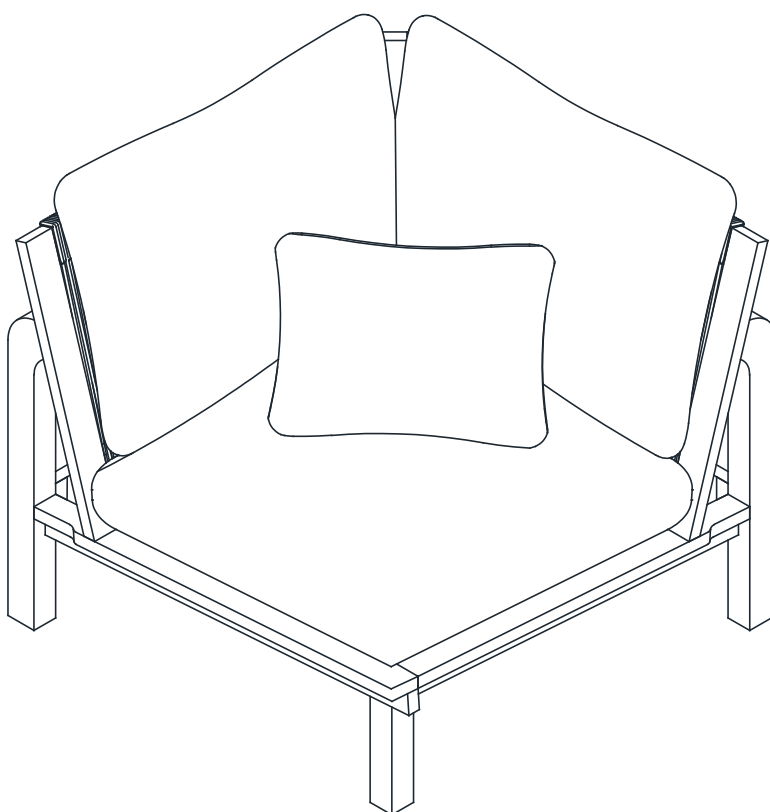

LAHOLM


Corner Module

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com .

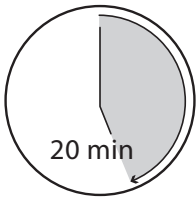

TIME

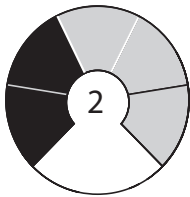

DIFFICULTY

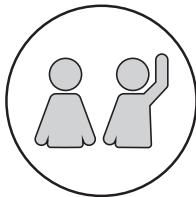


2 PEOPLE

PARTS INVENTORY			
ID	DESCRIPTION		QTY
R	CORNER SECTIONAL		1
H	SEAT CUSHION		1
T	LONG BACK CUSHION		1
U	SHORT BACK CUSHION		1
J	BACK PILLOW		1

HARDWARE INVENTORY		
ID	DESCRIPTION	QTY
S	VELCRO	4

- 1
- Ensure Corner Sectional (R) and Left + Right Arm Sectional connect to each other by using velcro straps (S).

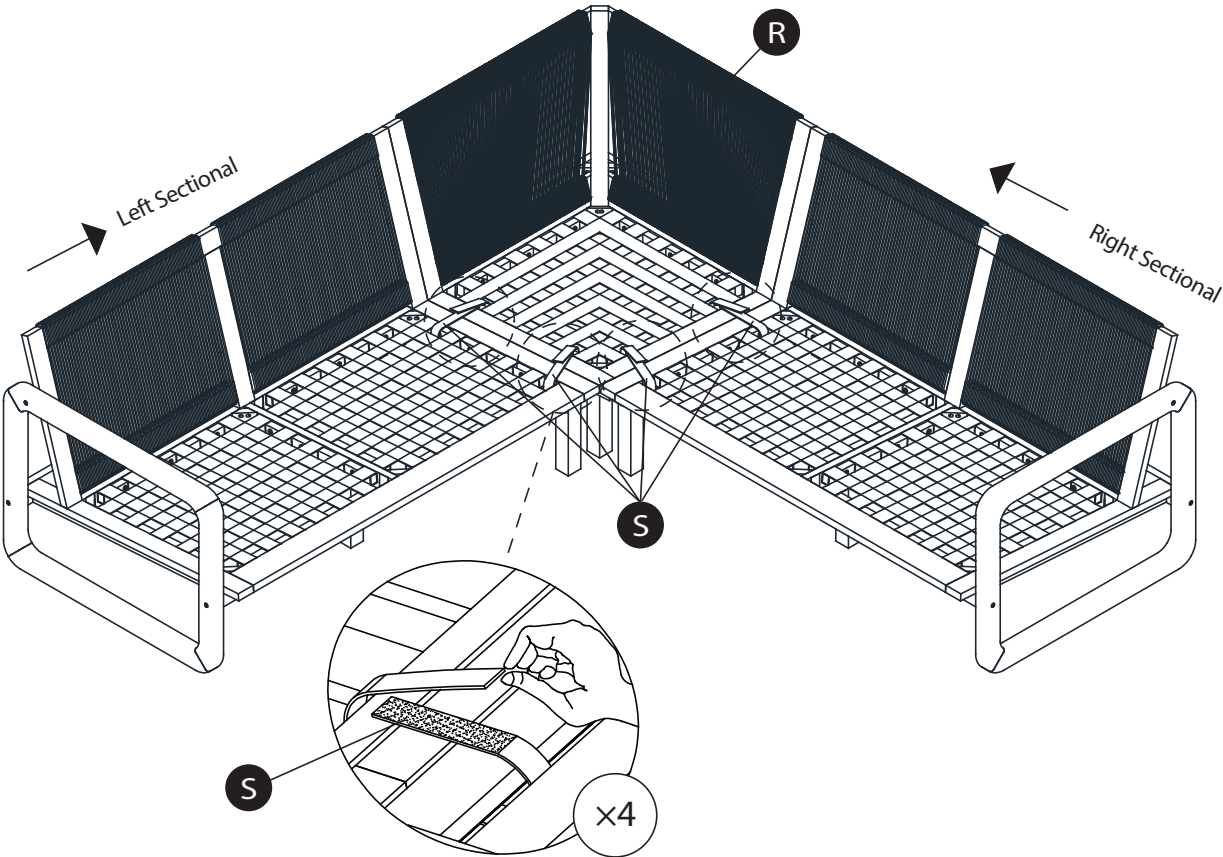

- 2
- Step 2


Step 3

Step 4

Step 1
-
- This diagram illustrates the assembly of the corner sectional sofa using cushions. It shows the 'Left Sectional' and 'Right Sectional' pieces, which are L-shaped, and a 'Corner Sectional' piece labeled 'R'. The sofa has a white frame and a dark mesh backrest. Four cushions are shown: 'T' and 'U' for the backrests (Step 2), 'J' for the seat (Step 4), and 'H' for the corner (Step 1). Arrows indicate the placement of each cushion on the corresponding section of the sofa.

3

Tight cushion (H) ropes directly to the slat support bar underneath the Corner Sectional (R) .

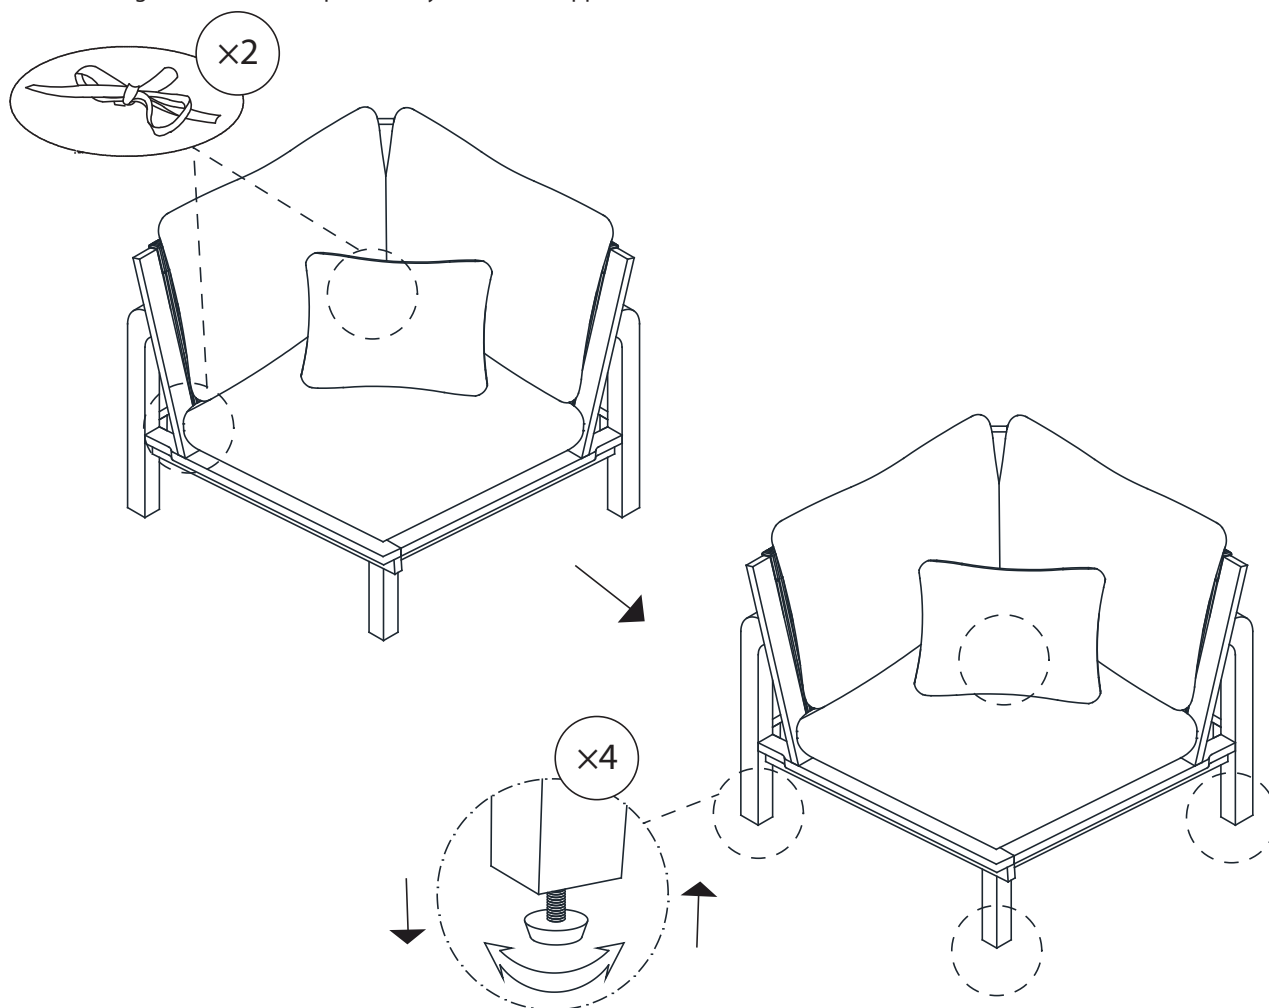

4

Turn the Chair upright and adjust the levelers at the bottom of the legs (if needed) to balance the Chair.

