
ARTICLE.

Assembly Instructions

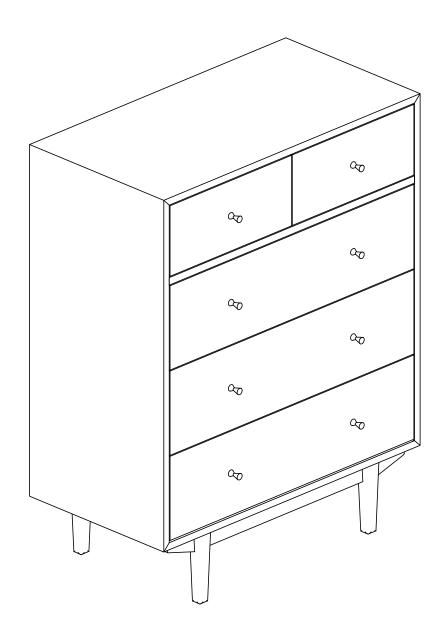

COOPER


5-Drawer Chest

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

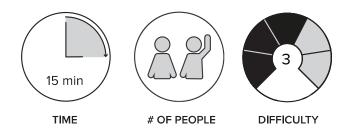

PARTS INVENTORY				
ID	DESCRIPTION	QTY		
A	CABINET BODY	1		
В	LEGS FRAME	2		
0	SUPPORT BAR	2		


HARDWARE LIST					
ID	DESCRIPTION		QTY		
D	ALLEN KEY	30	2		
•	M6 x 40 BOLT		10		
•	M6 WASHER		10		
G	M6 FLAT WASHER	0	10		

such as a cardboard or a rug.

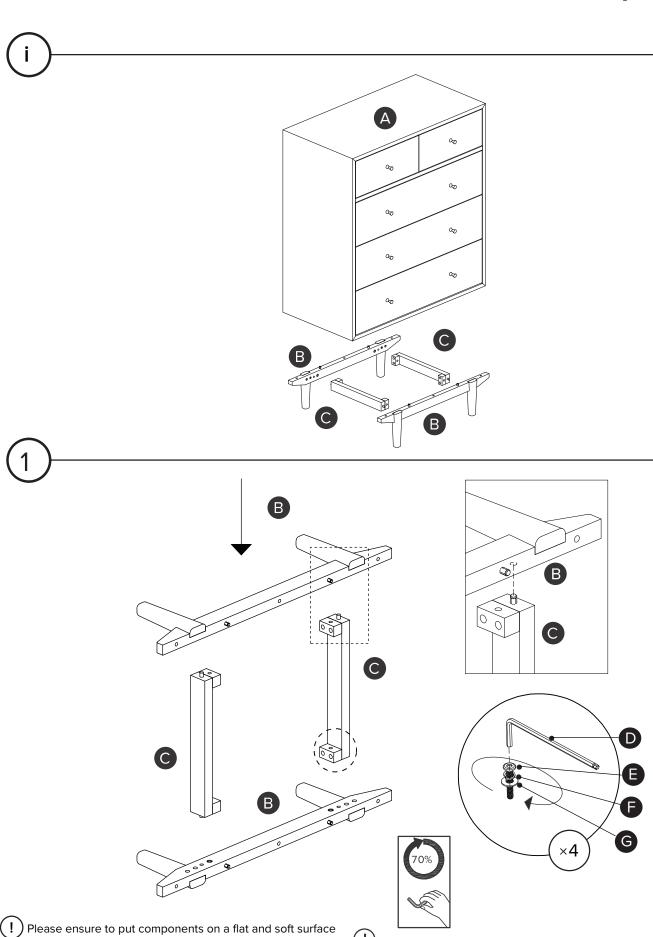


Tighten the bolts 70%

(2

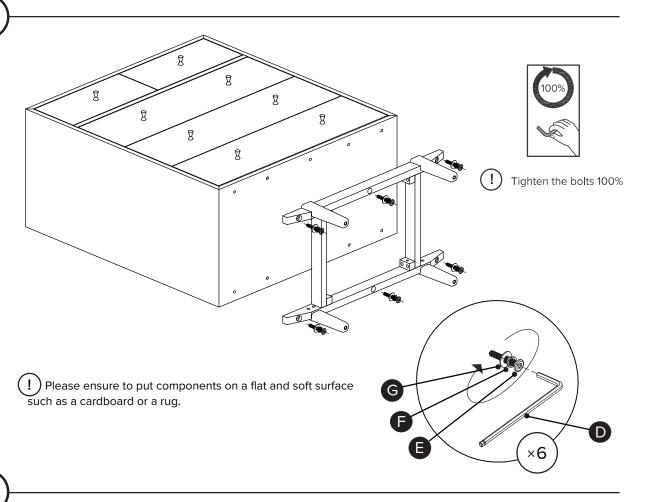

(3

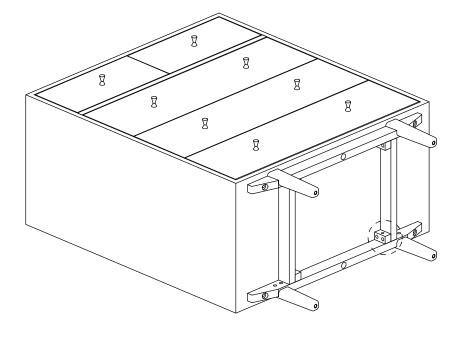



ARTICLE. COOPER 5-Drawer Chest Page 4 of 4






CAUTION!

Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!





Adjust leveler as needed.

FIX A CROOKED DRAWER

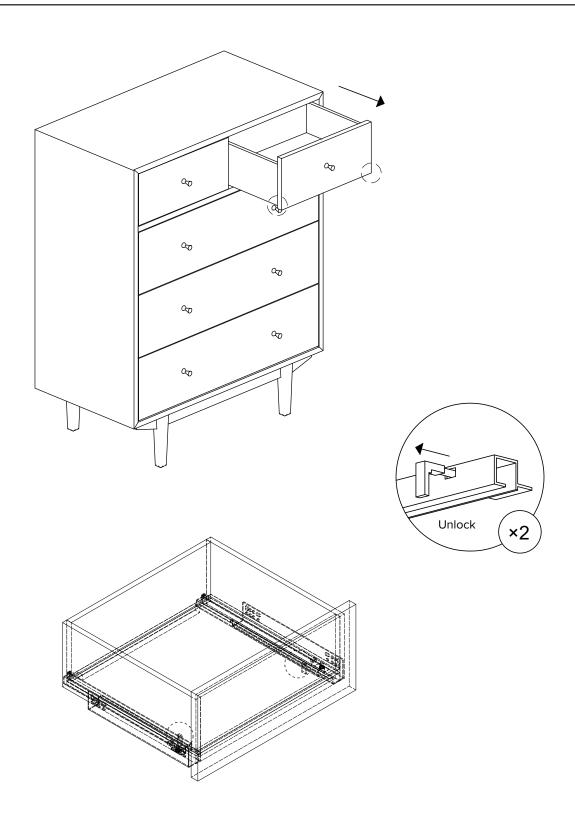

ARTICLE. COOPER 5-Drawer Chest Page 2 of 2

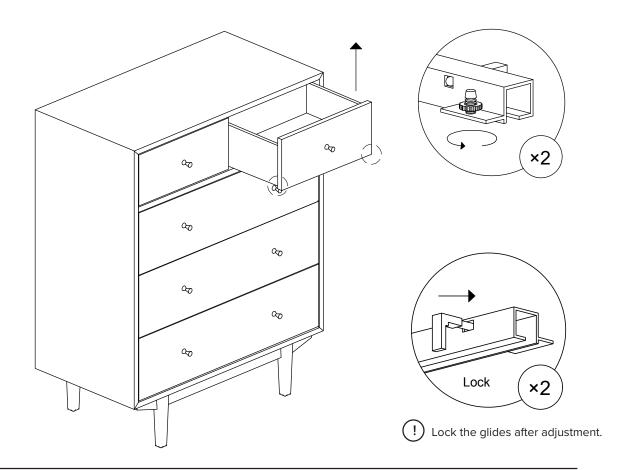

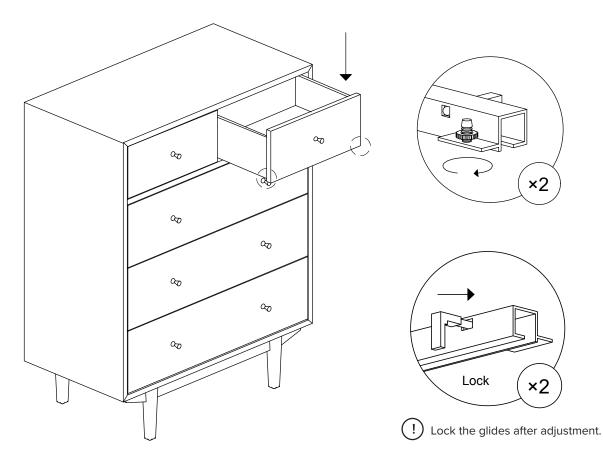






ANTI-TIP RESTRAINT INSTALLATION



WARNING!

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- •Place heaviest items in the lower drawers.

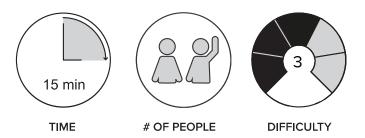





REQUIRED TOOL 8MM / 5/16" DRILL BIT


REQUIRED TOOL

PARTS INVENTORY					
ID	DESCRIPTION		QTY		
•	BRACKET		4		
0	M4 × 20MM SCREW	Brans	4		
0	M8 × 51MM PLUG		4		
K	M6 × 70MM SCREW	annand	4		
•	STRAP		2		


Hardware (J/K) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.





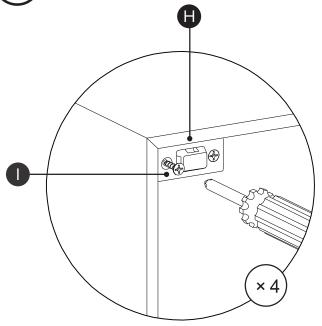


Attach pair of brackets to top corners of the back of the unit.

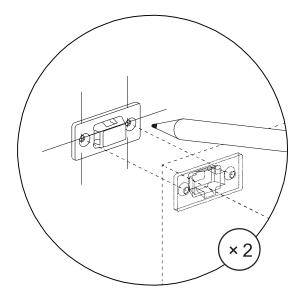

Mark on wall where second pair of brackets should be placed.




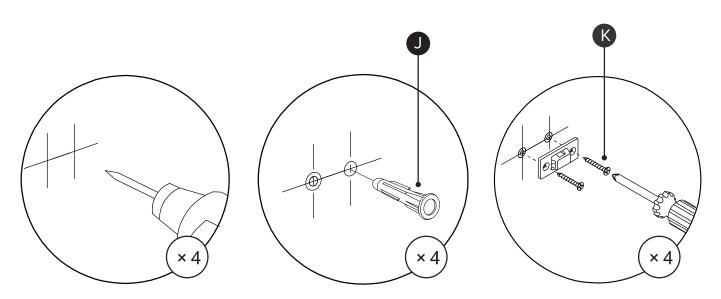


Drill holes in wall using 8mm / 5/16" drill bit.



Align brackets on unit with brackets on wall.

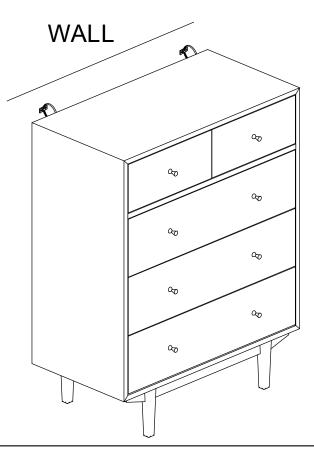

(4B)

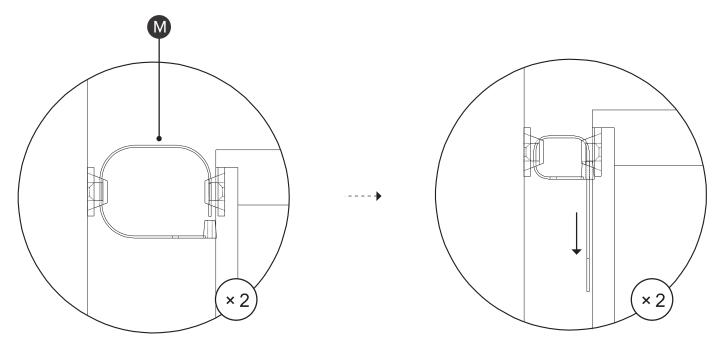

Pull strap down until it snap-locks.