


ARTICLE.

VERSION 1.0

Assembly Instructions

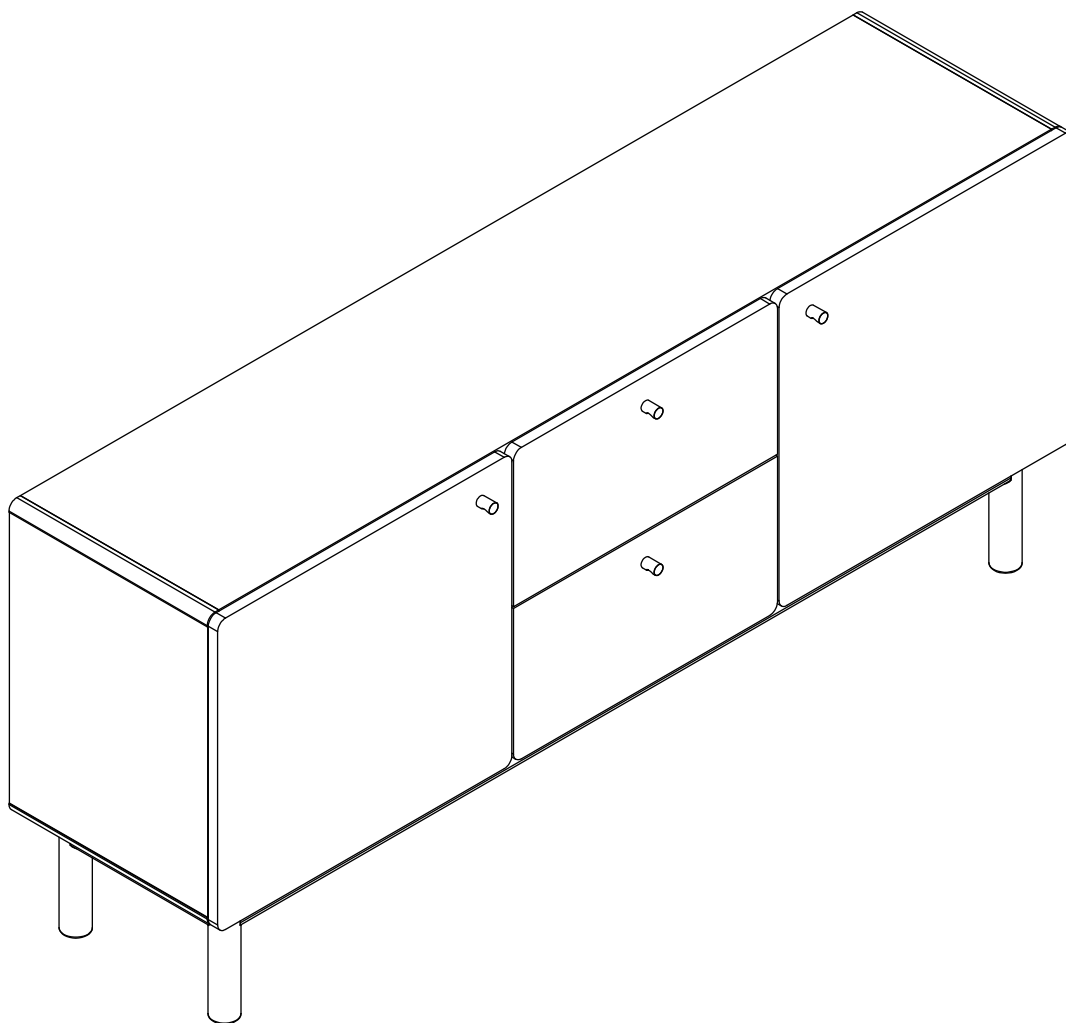

HEIDI

64.5" Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.





TIME



OF PEOPLE

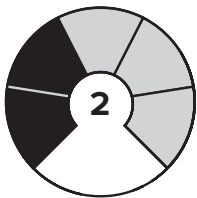


DIFFICULTY



PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	SIDEBOARD		1
B	LEGS		4
C	SHELF		2

PARTS INVENTORY CONT.			
ID	DESCRIPTION		QTY
D	M6 WASHER		8
E	M6 LOCK WASHER		8
F	M6x60MM BOLT		8
G	ALLEN KEY		1

2

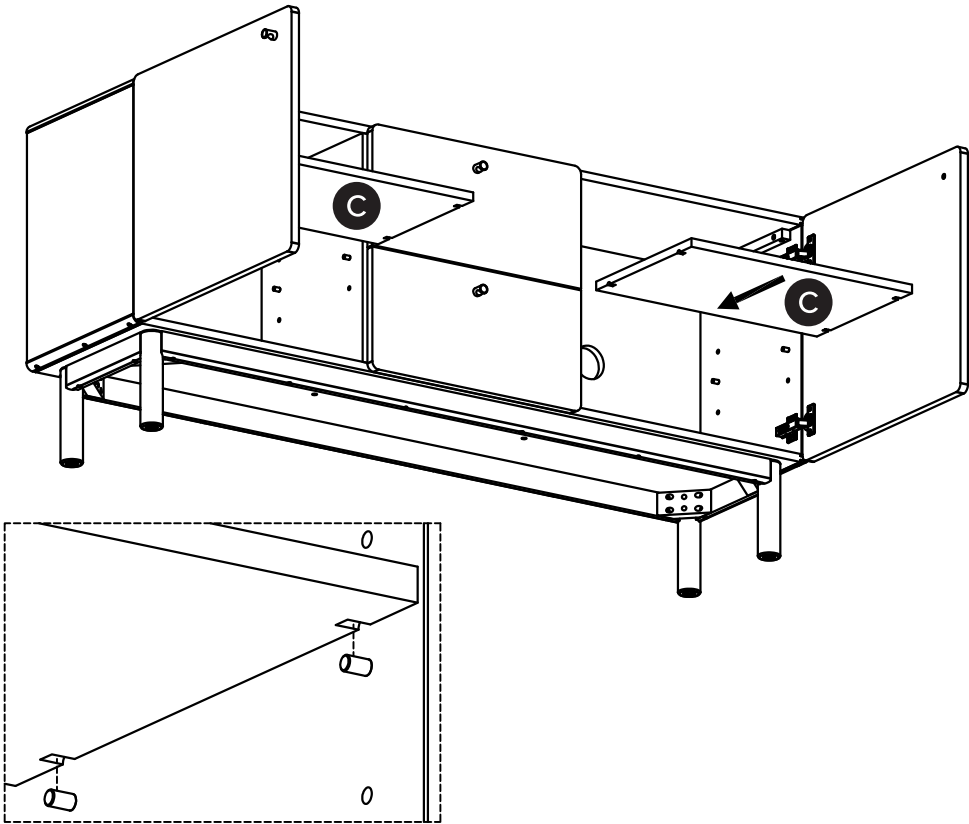

3

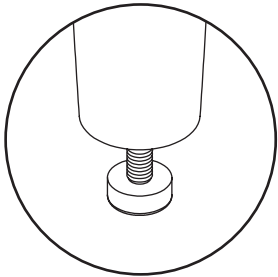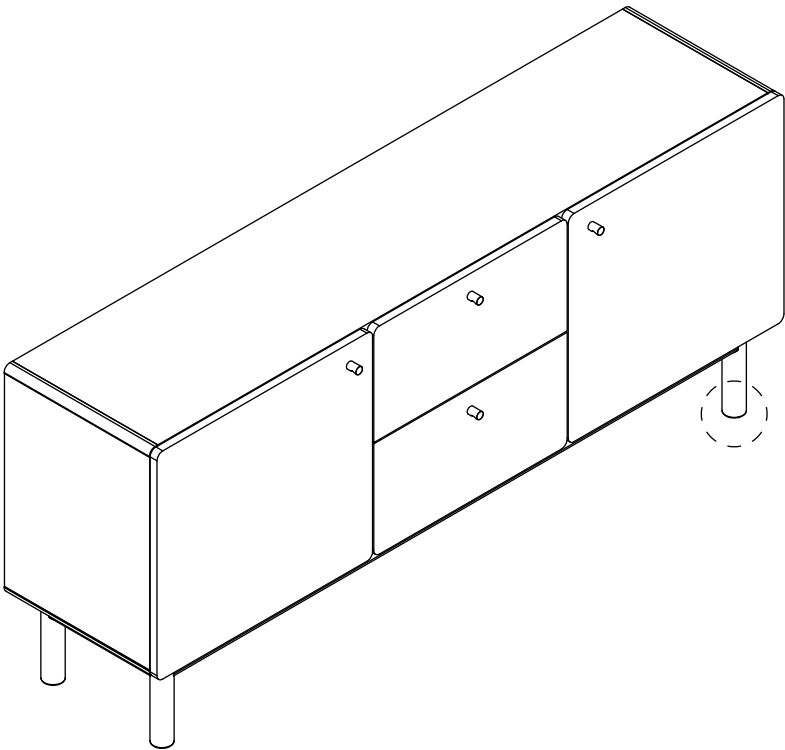

! Adjust levelers as needed.




ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

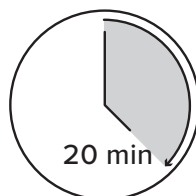



TIME



OF PEOPLE

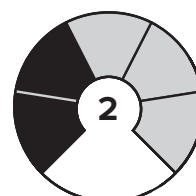

DIFFICULTY

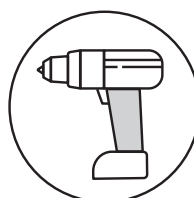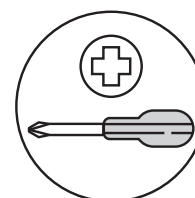
REQUIRED TOOL
8MM / 5/16" DRILL BIT

REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

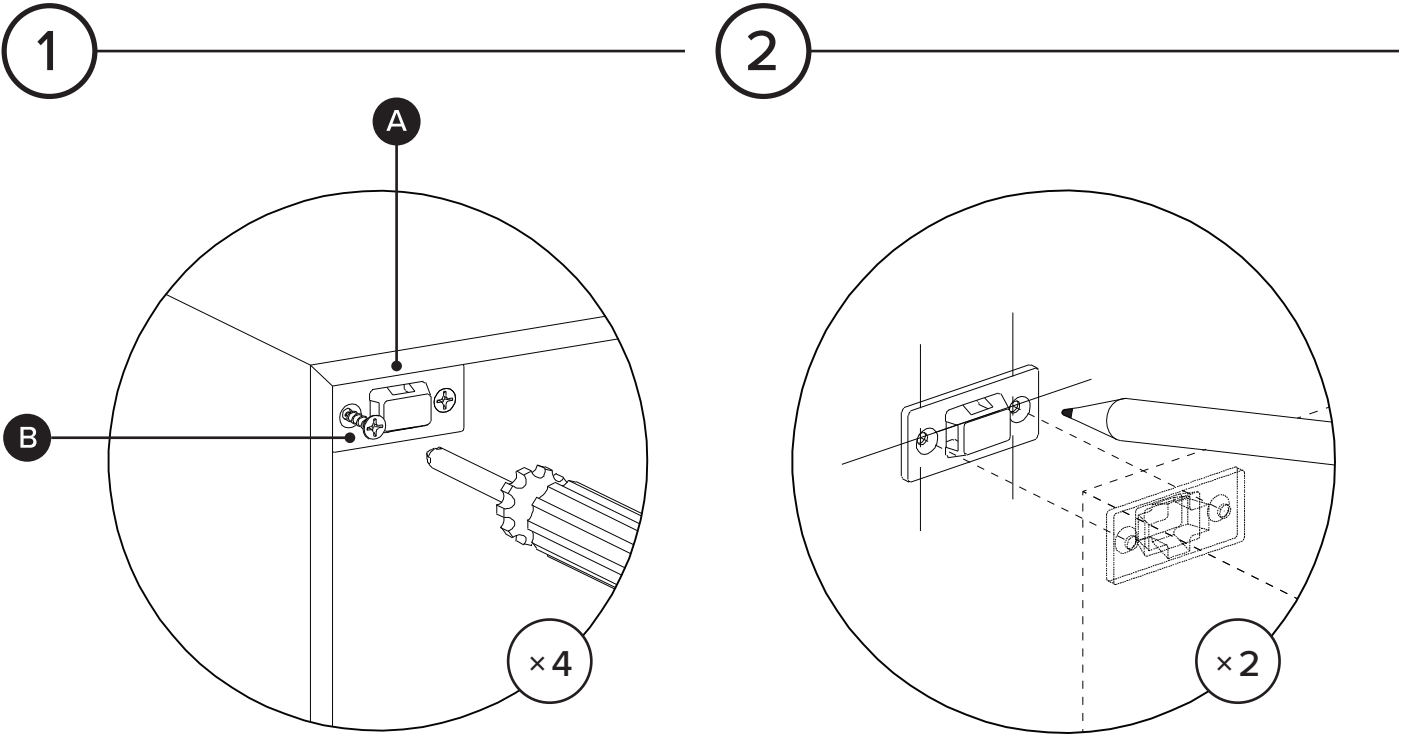

Attach pair of brackets to top corners of the back of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

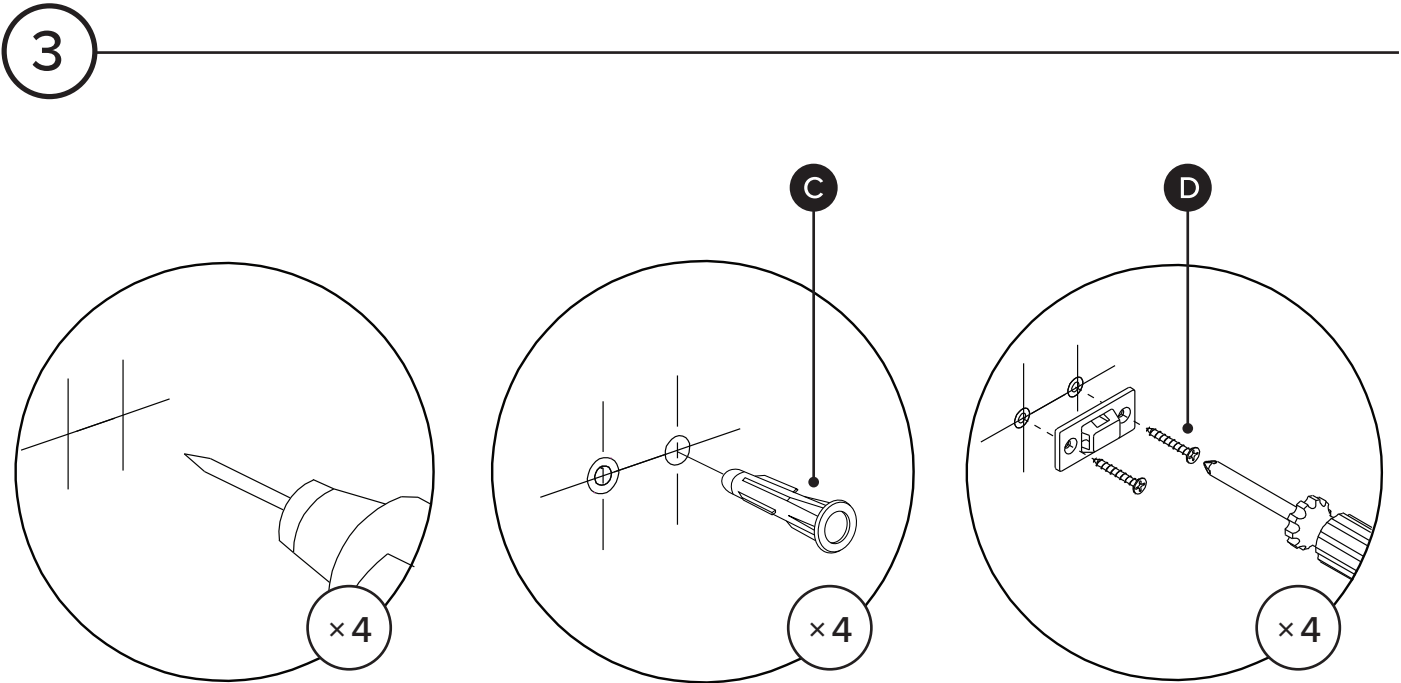


Drill holes in wall using
8mm / 5/16" drill bit.

4A

Align brackets on unit
with brackets on wall.

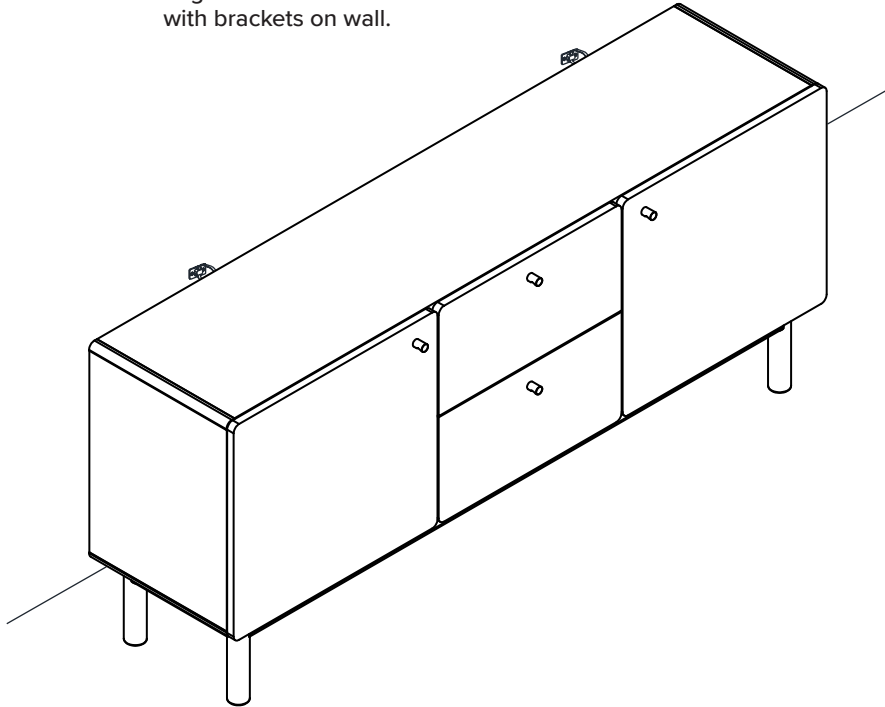

4B

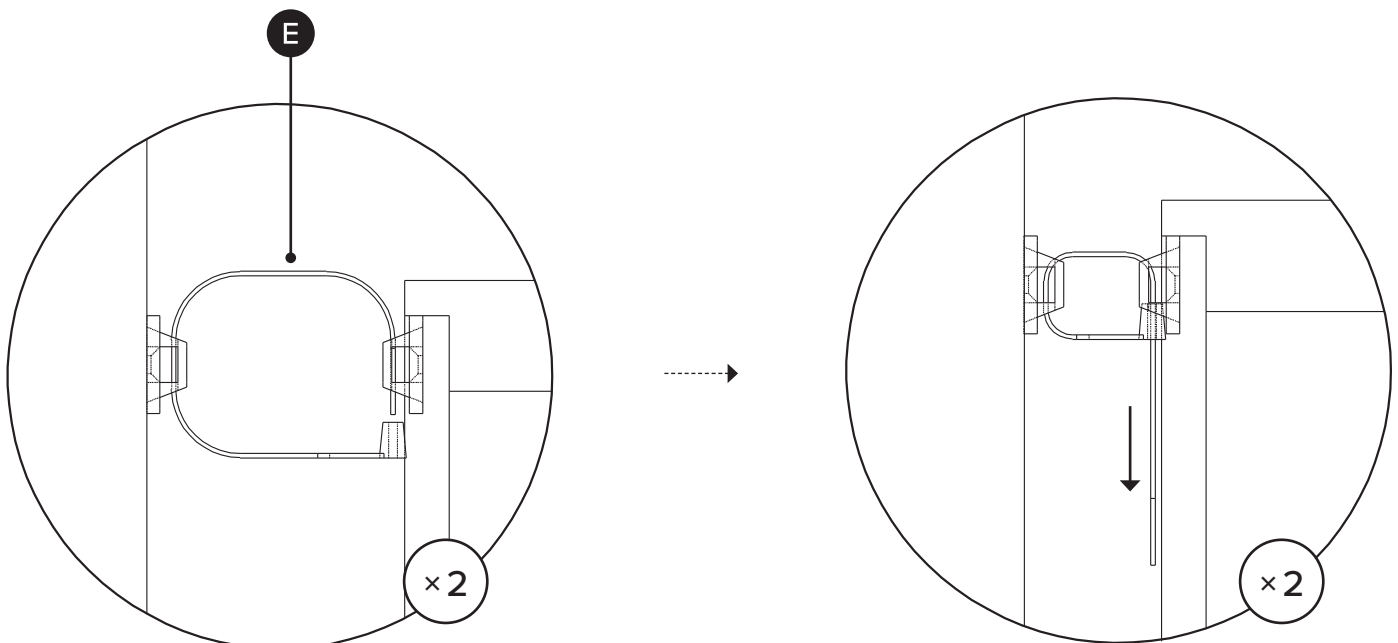

Pull strap down until it snap-locks.