


ARTICLE.

VERSION 1.0

Assembly Instructions

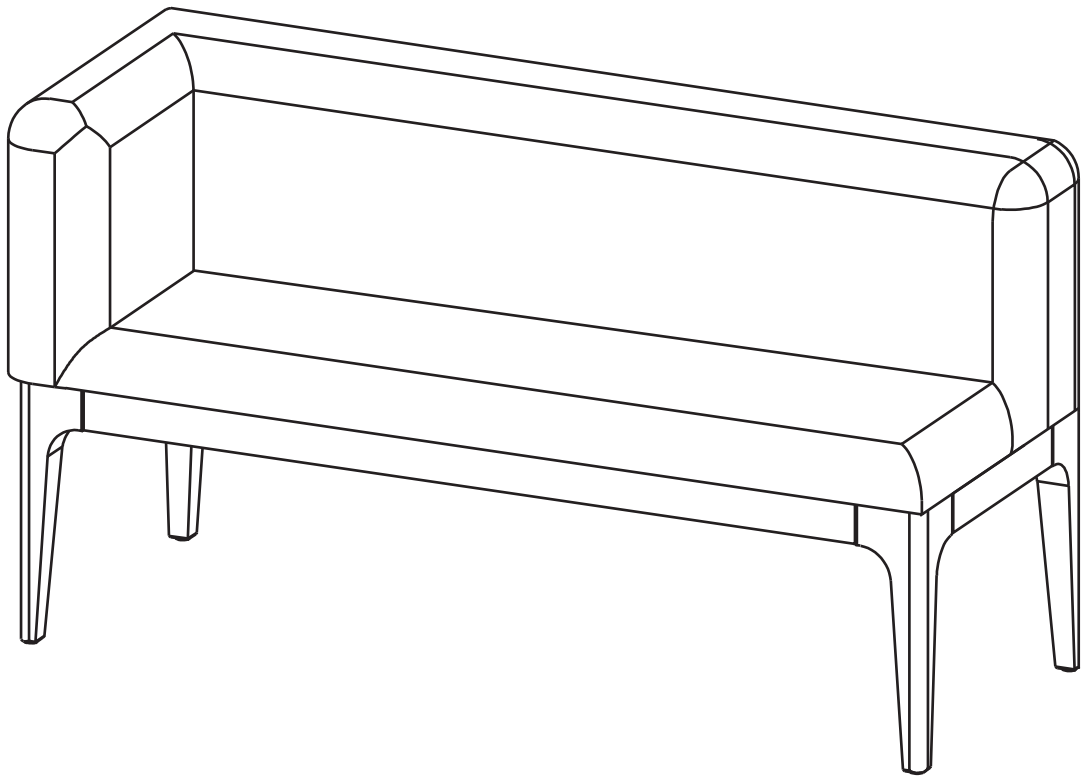

ROSIN


Left Arm Banquette

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.888.746.3455 during business hours, email service@article.com or chat live at article.com.

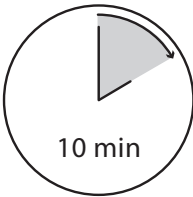

TIME



OF PEOPLE

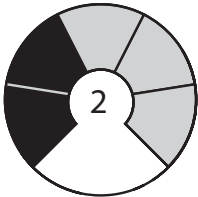


DIFFICULTY


PARTS INVENTORY			
ID	DESCRIPTION		QTY
1	CUSHION SEAT		1
2	LEG		2

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	M8 × 80MM BOLT		8
B	M8.5 LOCK WASHER		8
C	M8.5 WASHER		8
D	ALLEN KEY		1



1

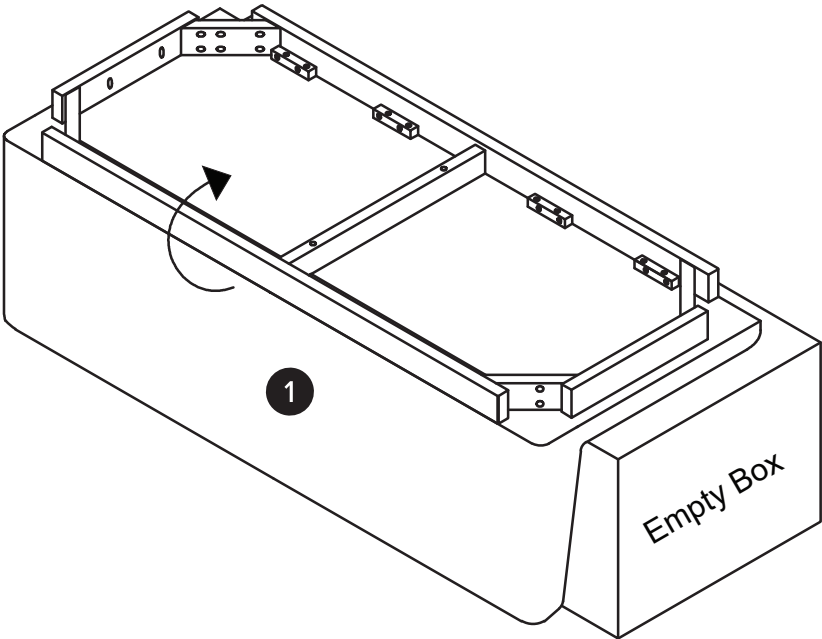



2

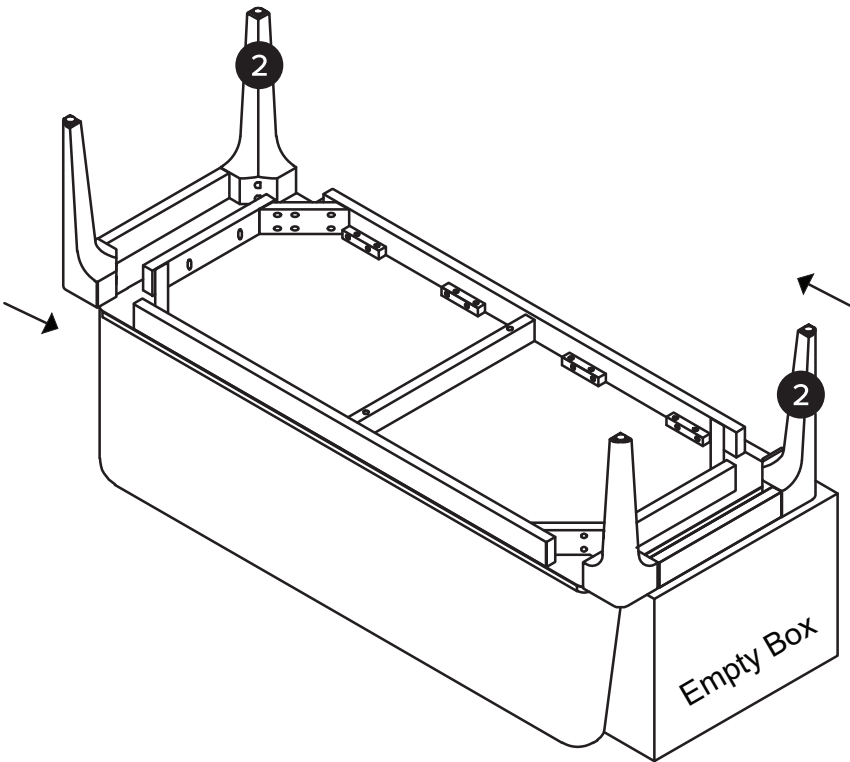


3

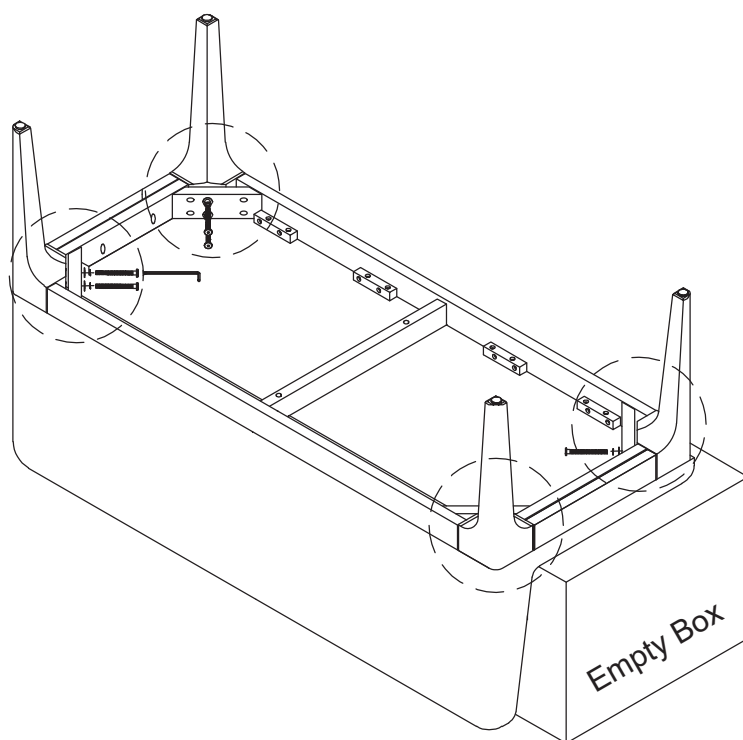

! Wrench the bolt by using the ball head of the allen key.

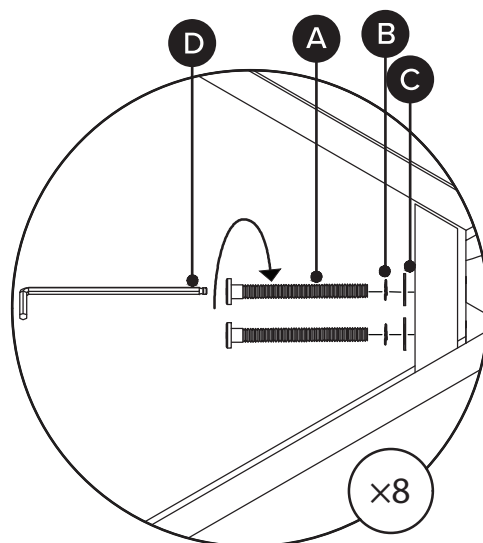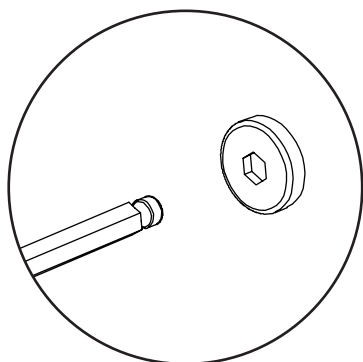

4

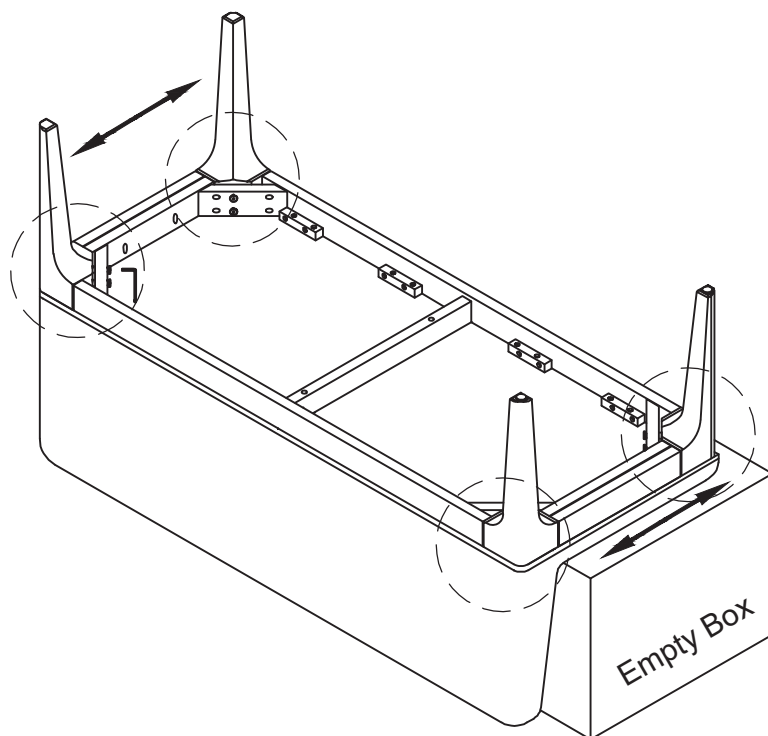

! Wrench the bolt by using the ball head of the allen key.

