


ARTICLE.

VERSION 1.0

Assembly Instructions

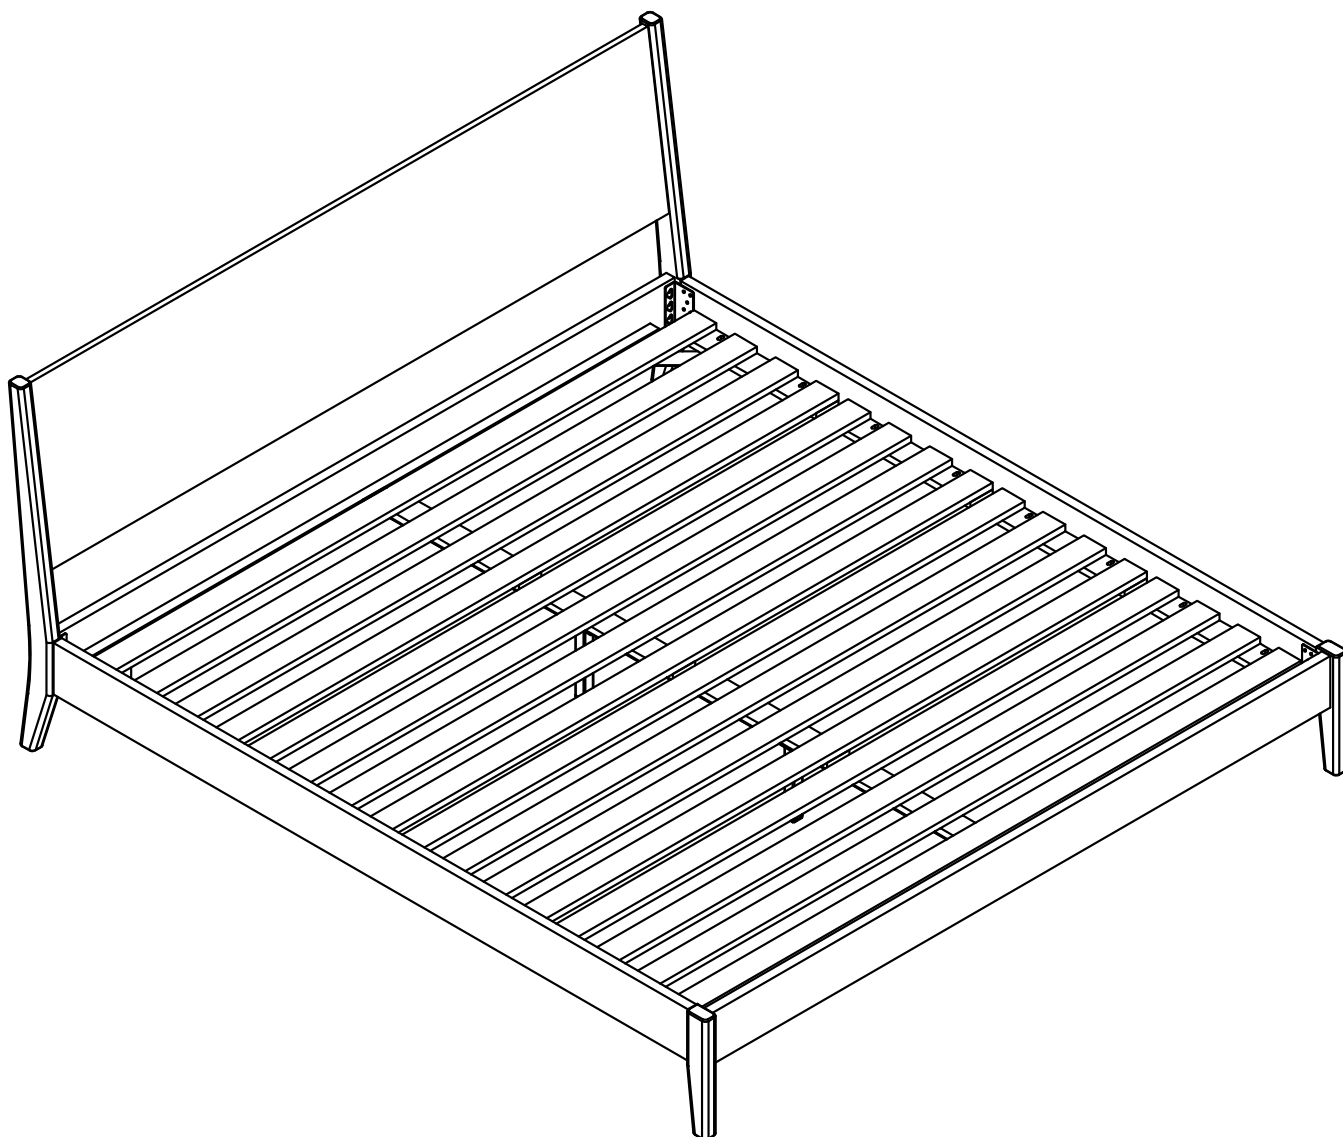

COOPER

Bed

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you’re having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.



TIME




OF PEOPLE





DIFFICULTY






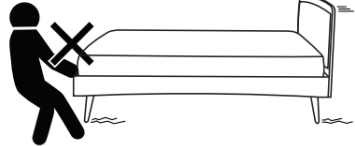




Hardware may loosen over time, check the bolts regularly and tighten if necessary.




DO NOT DRAG BED, ALWAYS LIFT WITH AT LEAST TWO PEOPLE BEFORE MOVING

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	HEADBOARD	1
B	SIDERAILS	2
C	FOOTBOARD	1
D	CORNER FRAME 	4
E	CENTER BEAM	1
F	CENTER LEG 	2
G	SLATS	4


PARTS INVENTORY CONT.		
ID	DESCRIPTION	QTY
H	ALLEN KEY 	2
I	M8 × 20MM BOLT 	12
J	M8 LOCK WASHER 	12
K	M8 WASHER 	12
L	M6 × 20MM BOLT 	24
M	M6 × 35MM BOLT 	16
N	M6 LOCK WASHER 	40
O	M6 WASHER 	40

i

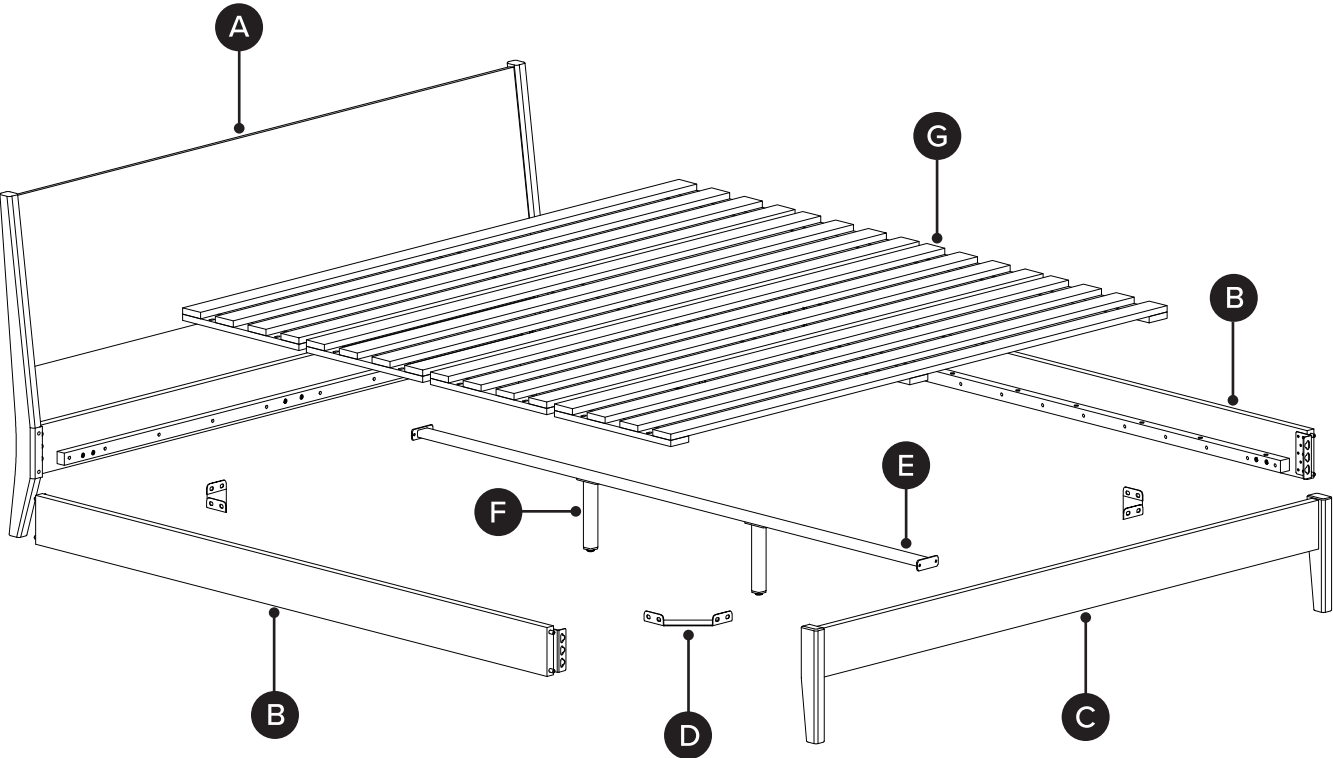


1

! Align dowels of the side frames (B) onto the legs of headboard (A) before attaching bolts.

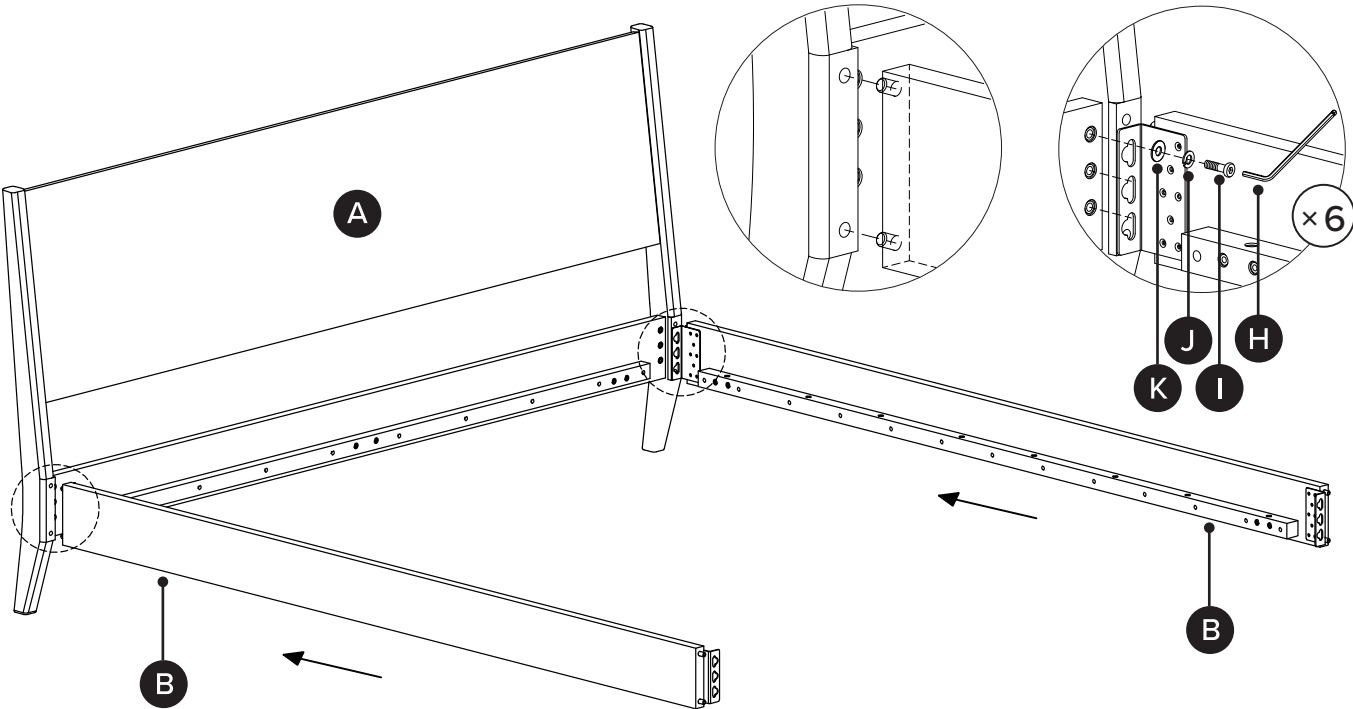


2

! Align the wooden dowels of siderails (B) onto the legs before attaching bolts.

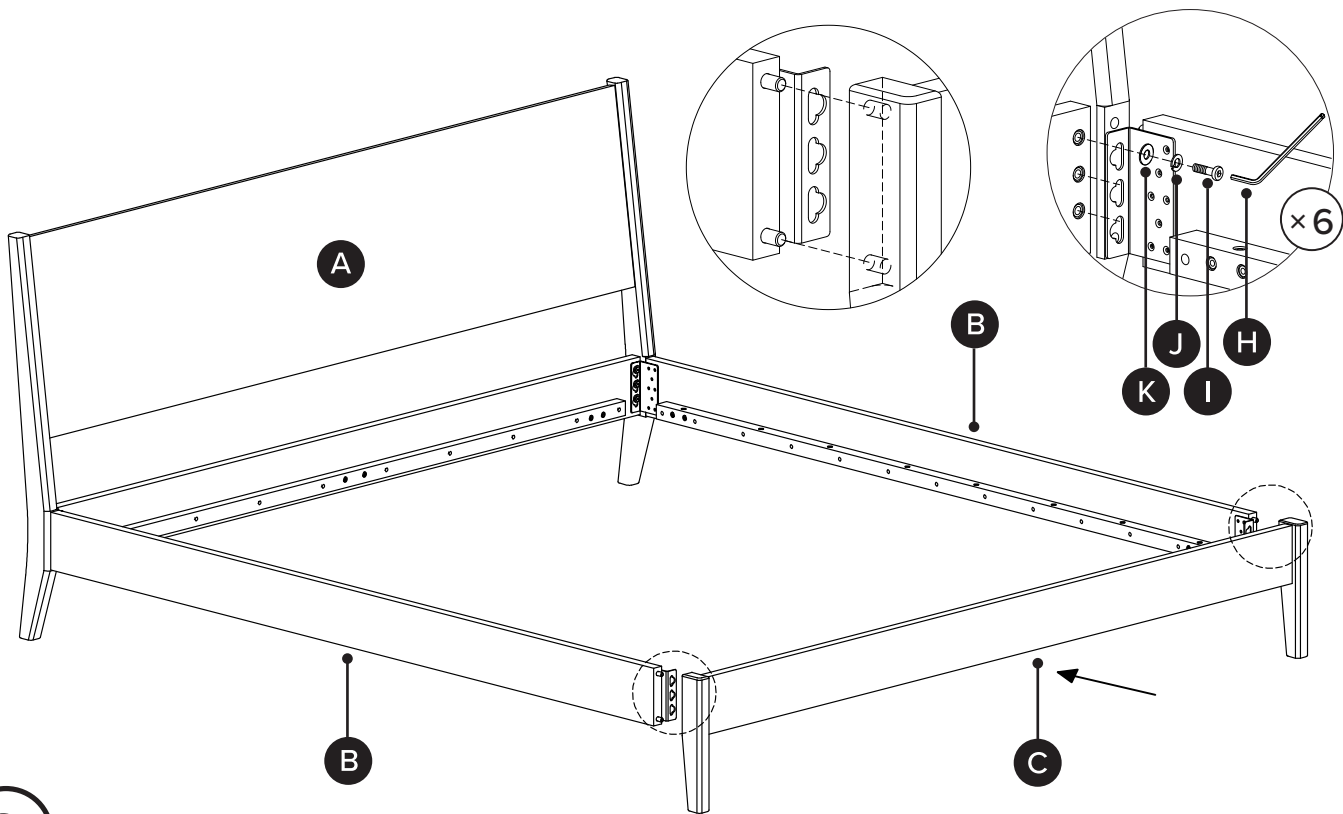


3

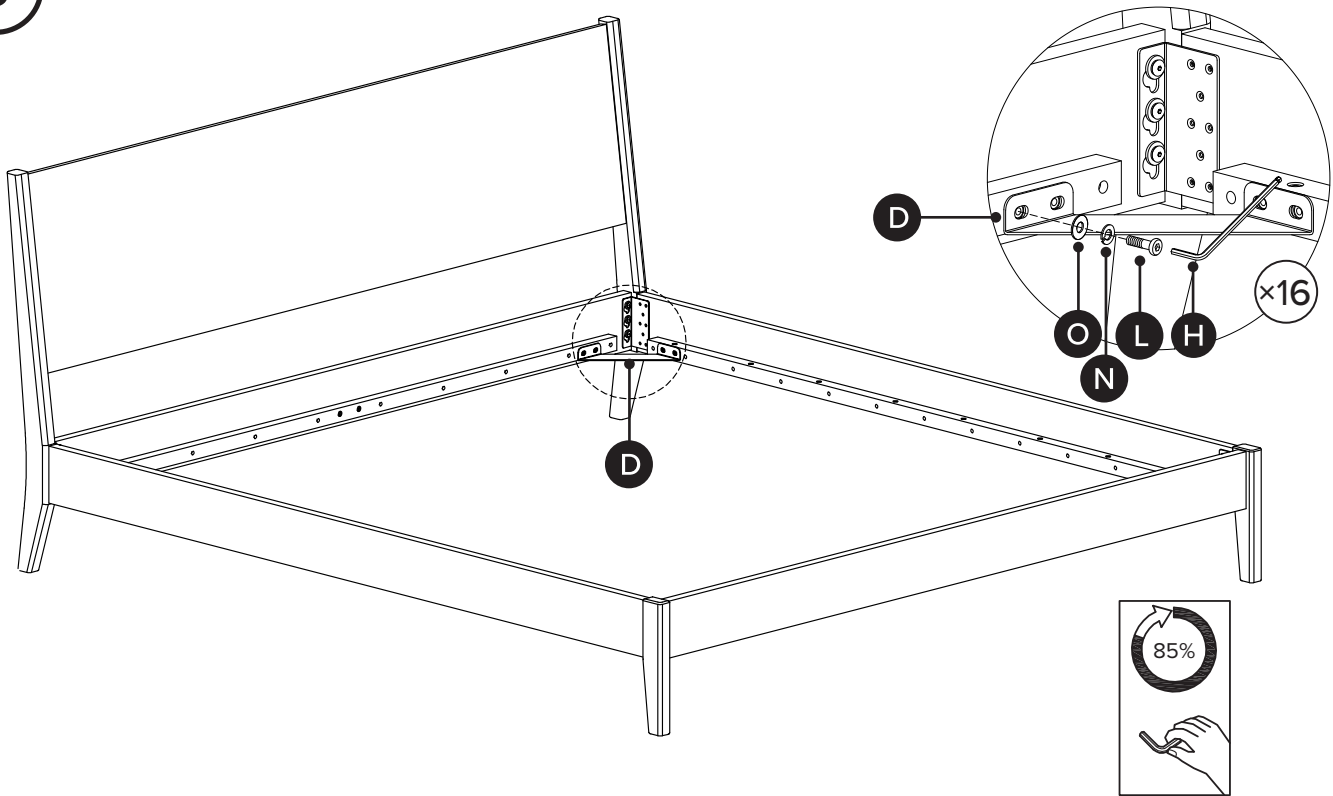


! Do not fully tighten bolts

4

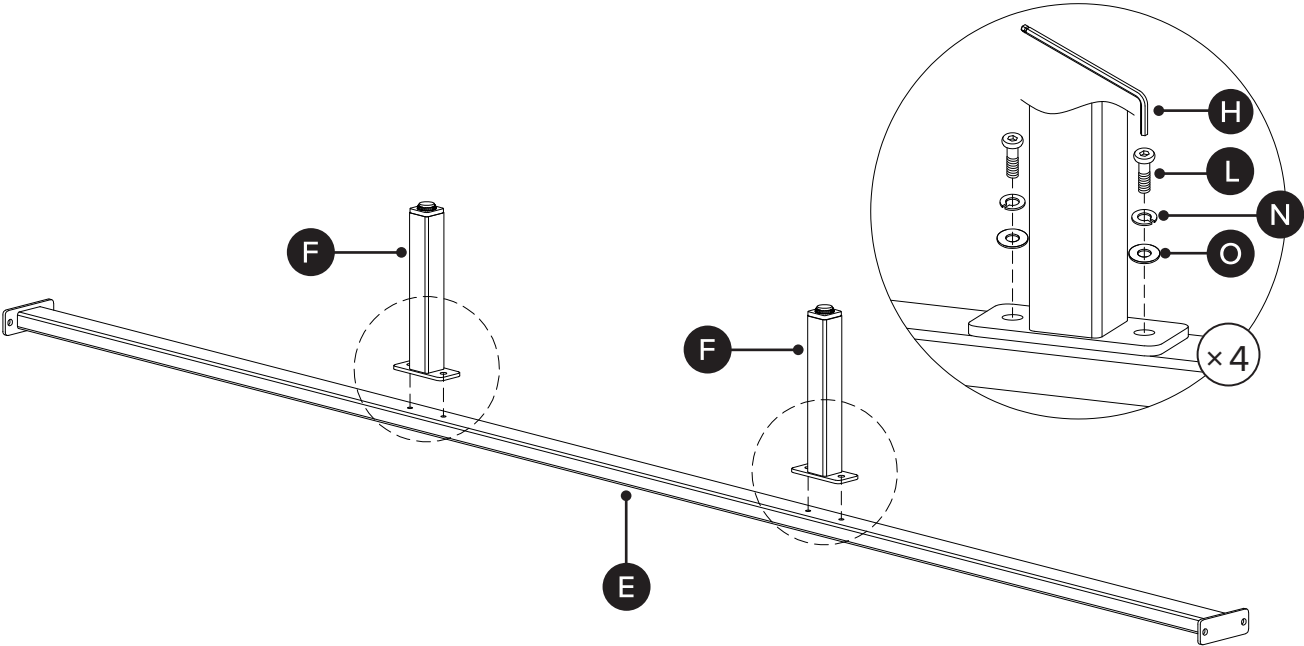


5

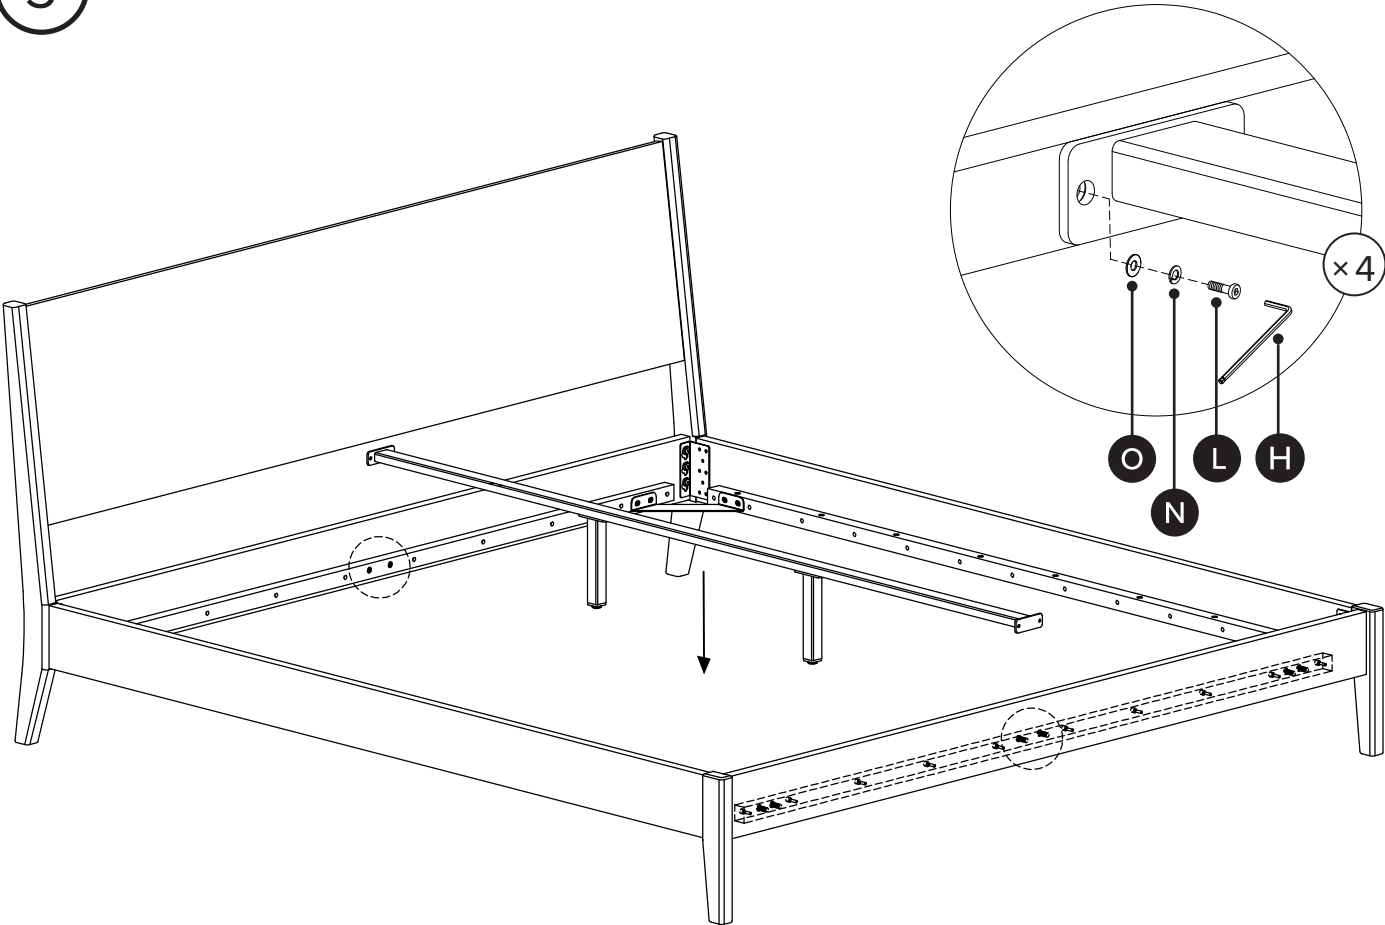

6

! Install 2 slats (G) in the middle first.


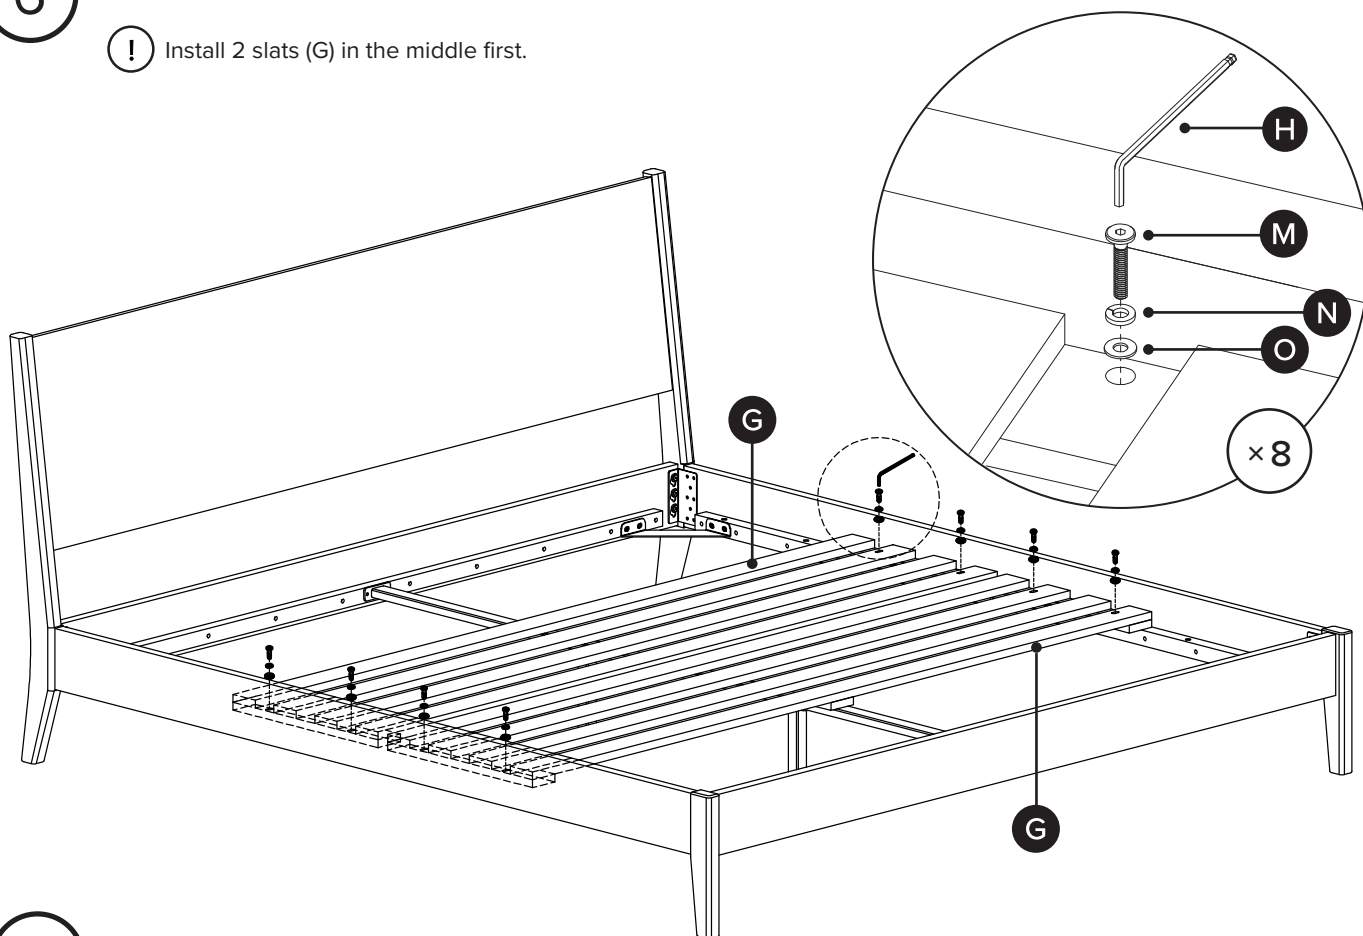


7



! Fully tighten all bolts on corner frames (D)

! Place the bed at it's location, Adjust levelers on middle legs if needed.

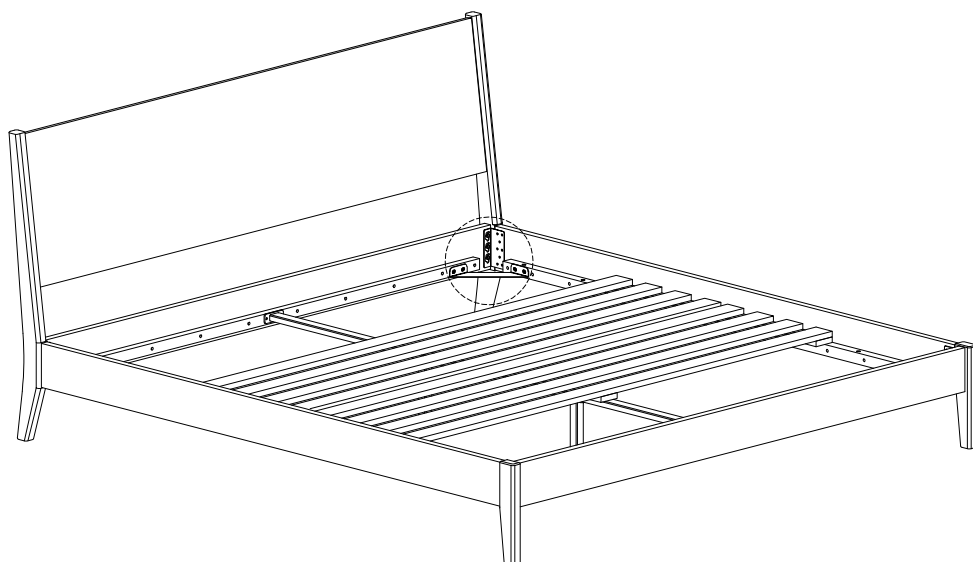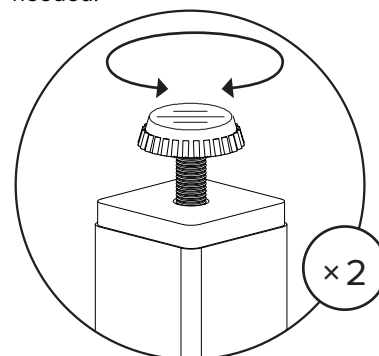

8

