


ARTICLE.

VERSION 1.0

Drawer Adjustment Instructions


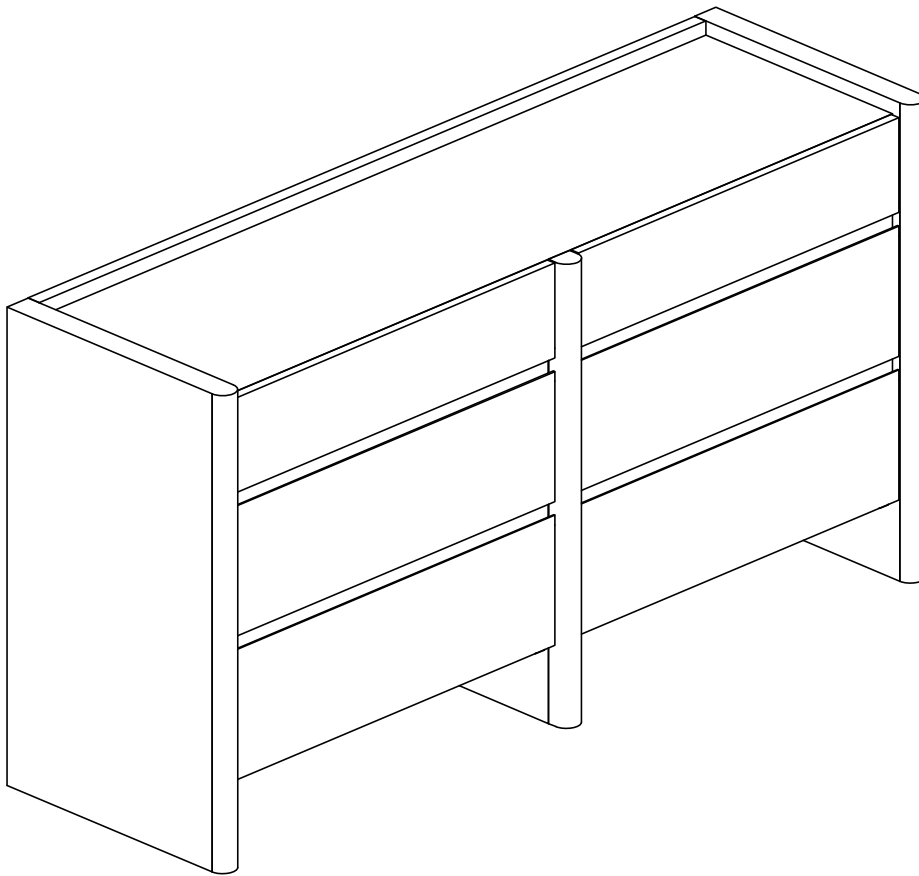


TORME

6-Drawer Dresser



FIX A CROOKED DRAWER

If the drawer needs to be raised:

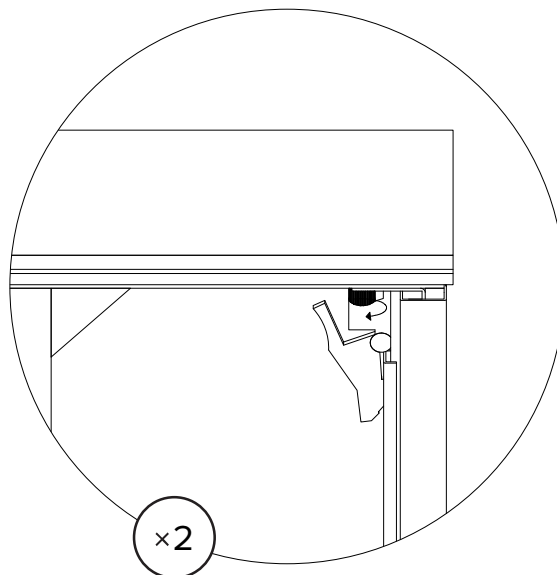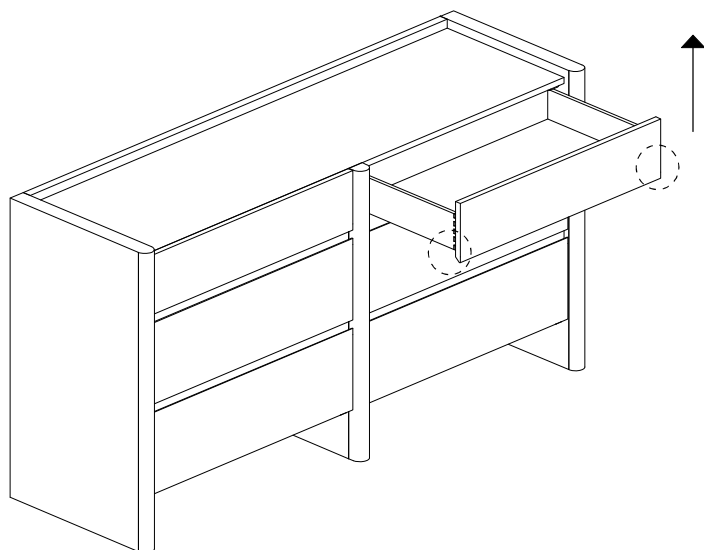

! Turn the orange adjustment wheel on the drawer glides in the direction of the arrow.

If the drawer needs to be lowered:

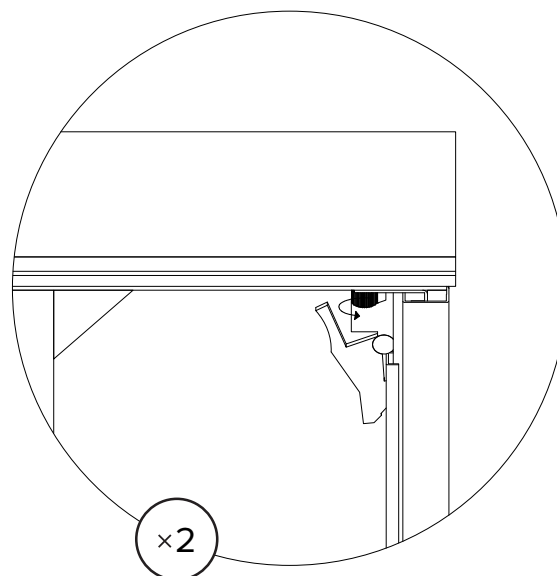
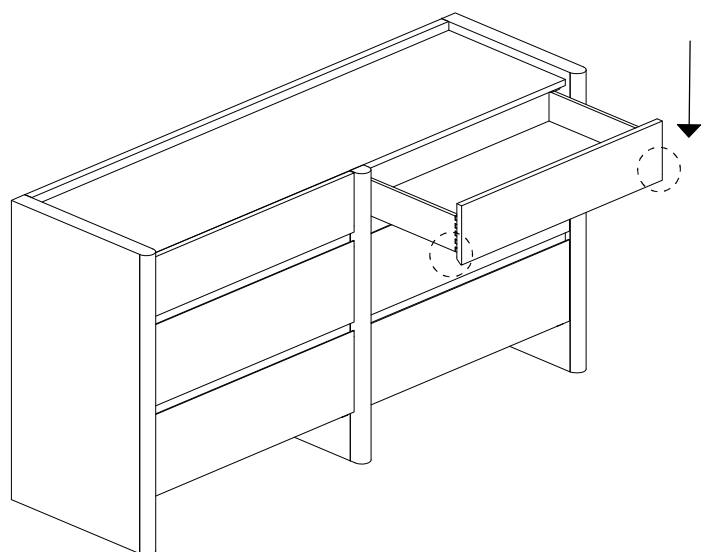


! Turn the orange adjustment wheel on the drawer glides in the direction of the arrow.

LEVELER ADJUSTMENT

**CAUTION!**

Please take care when lifting, this unit is heavy! Do not drag the unit when moving, must be lifted to prevent damaging the legs!

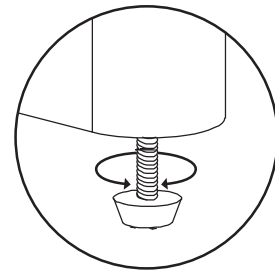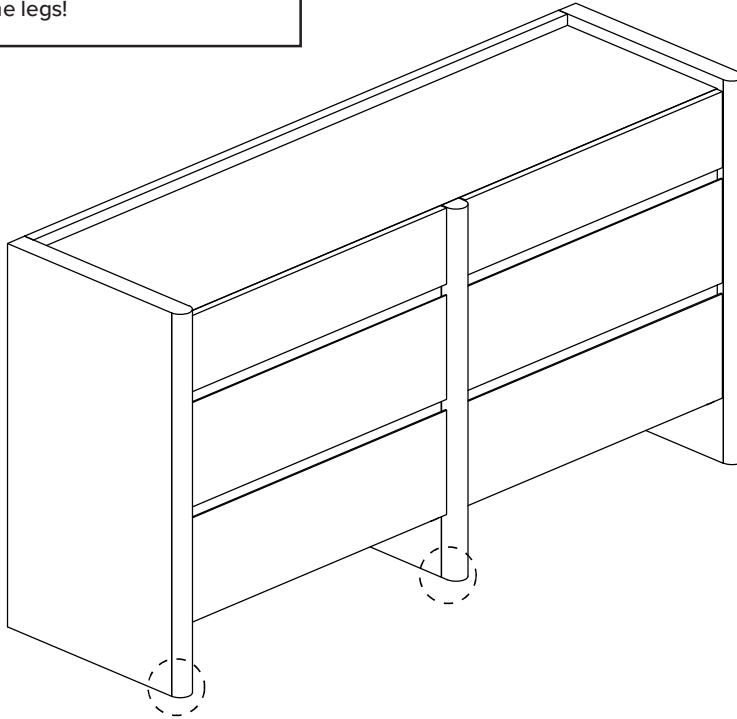

Adjust levelers as needed.




ANTI-TIP RESTRAINT INSTALLATION

WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

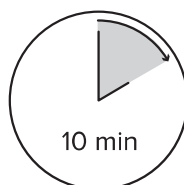


10 min

TIME




OF PEOPLE

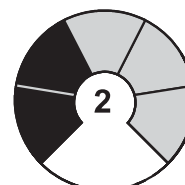


2





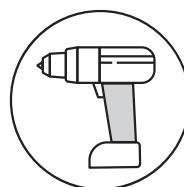
DIFFICULTY

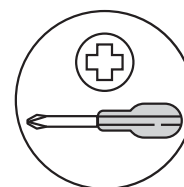

REQUIRED TOOL
8MM / 5/16" DRILL BIT




REQUIRED TOOL

PARTS INVENTORY			
ID	DESCRIPTION		QTY
A	BRACKET		4
B	M4 × 20MM SCREW		4
C	M8 × 51MM PLUG		4
D	M6 × 70MM SCREW		4
E	STRAP		2




Hardware (C/D) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

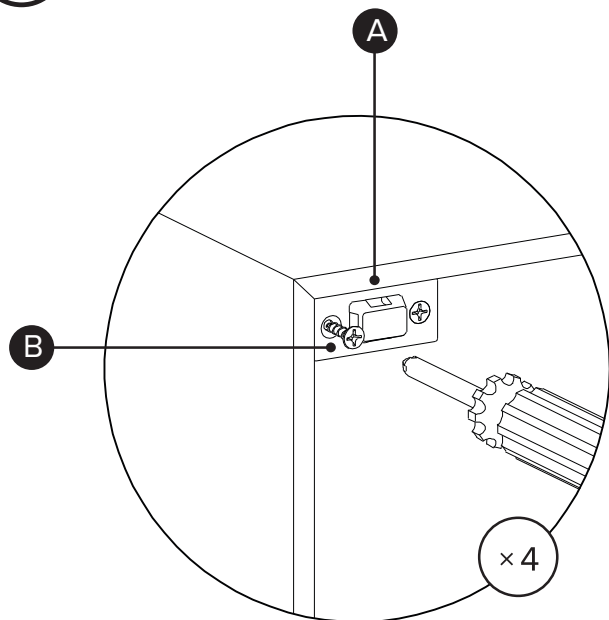


Attach pair of brackets to top corners of the back of the unit.

2


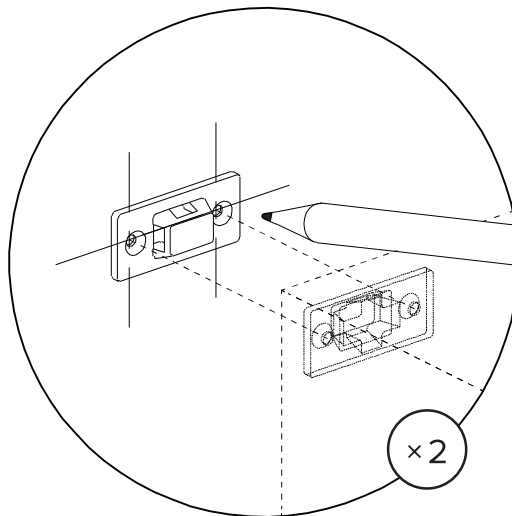


Mark on wall where second pair of brackets should be placed.

3

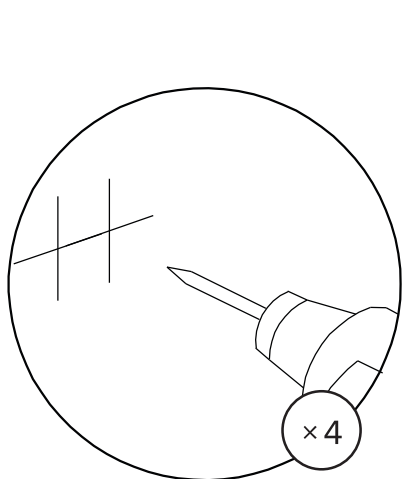


Drill holes in wall using 8mm / 5/16" drill bit.

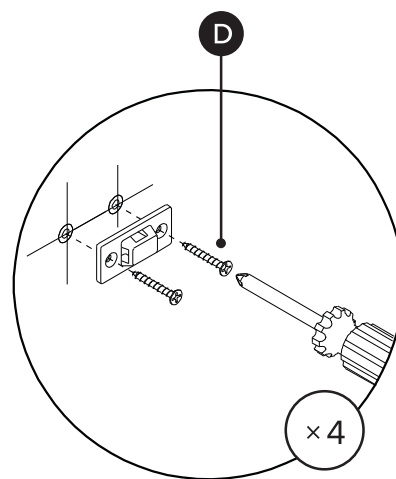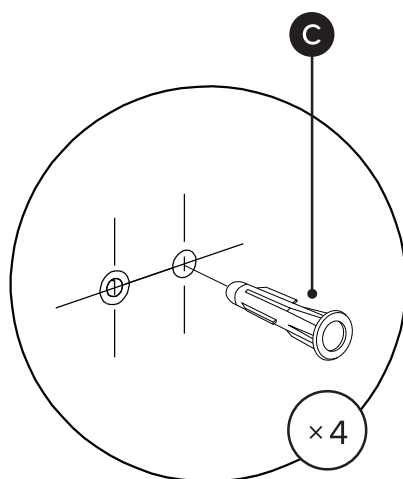


4A

Align brackets on unit
with brackets on wall.

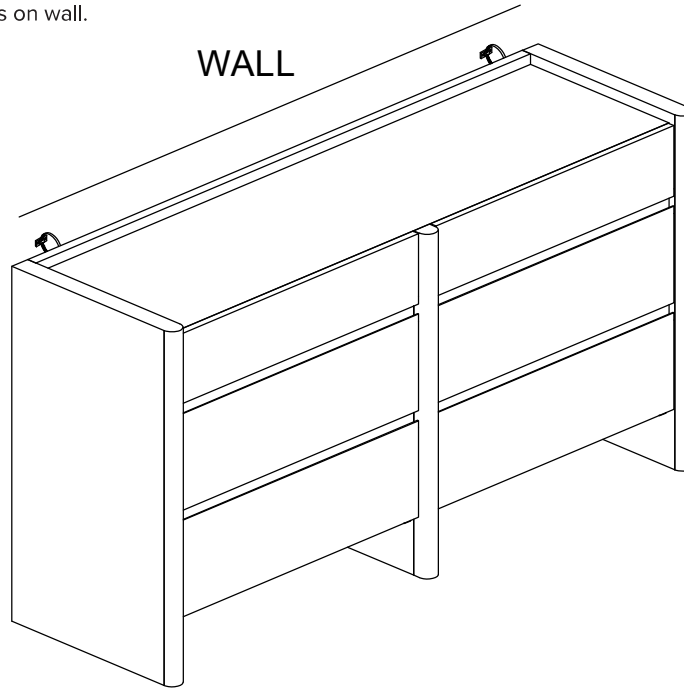

4B

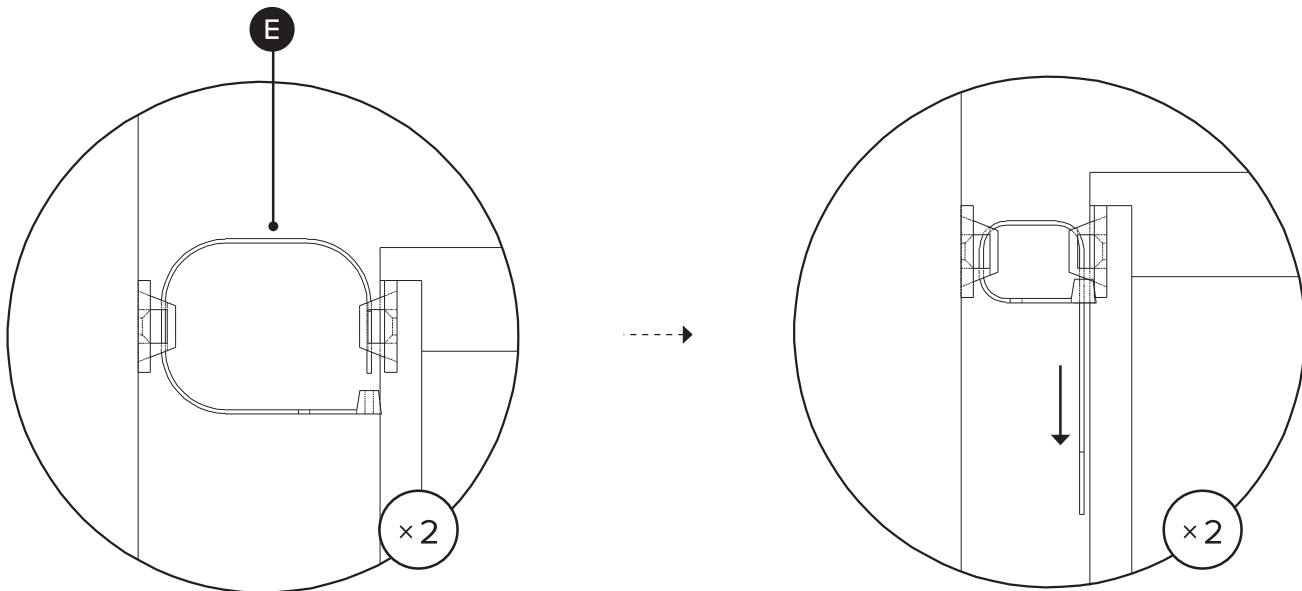

Pull strap down until it snap-locks.