


# ARTICLE.

VERSION 1.0

## Assembly Instructions

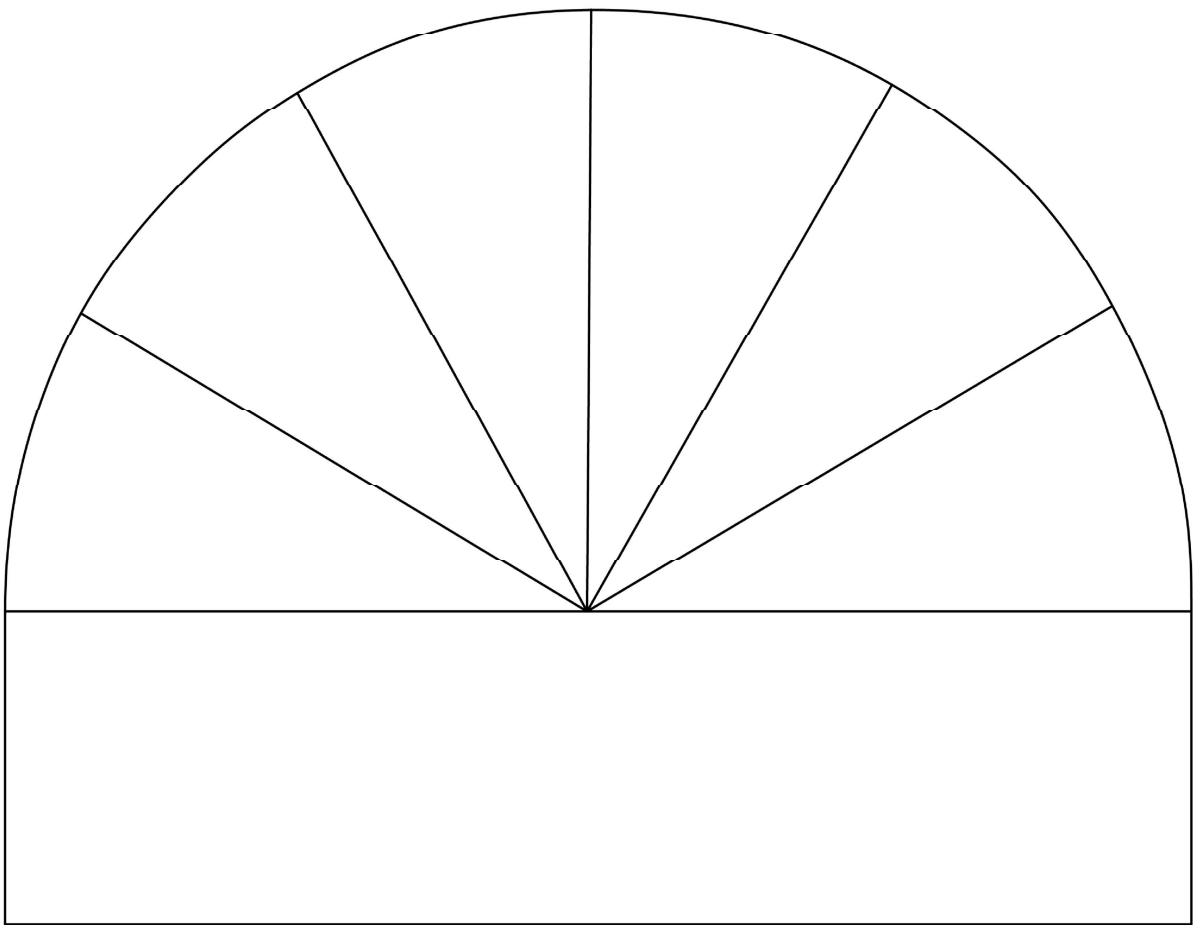

# ALMELO


Twin Headboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1888.746.3455** during business hours, email [service@article.com](mailto:service@article.com) or chat live at [article.com](https://www.article.com).

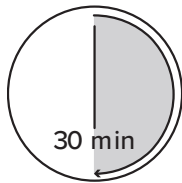



TIME



# OF PEOPLE

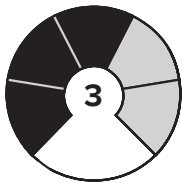

DIFFICULTY

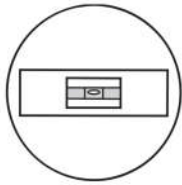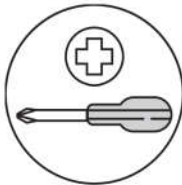


REQUIRED TOOLS

| PARTS INVENTORY |                                                                                                     |     |
|-----------------|-----------------------------------------------------------------------------------------------------|-----|
| ID              | DESCRIPTION                                                                                         | QTY |
| A               | CLEAT                                                                                               | 1   |
| B               | M4 x 60MM SCREW  | 4   |

**!** Screws (B) to attach cleat (A) to wall are designed for wood studs. To attach this headboard to another type of wall, consult with your local hardware store.

2

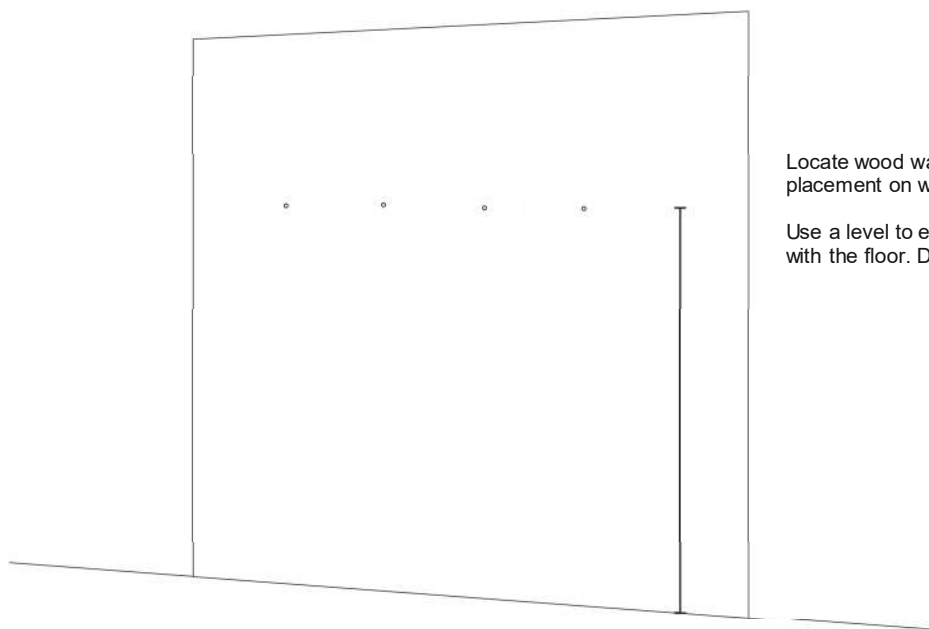

Locate wood wall studs and mark screw placement on wall 9.45" apart where cleats (A)

Use a level to ensure that the cleats are level with the floor. Drill holes into wood wall studs.

! Headboard should be resting on the floor.

3

