


ARTICLE.

VERSION 1

Assembly Instructions

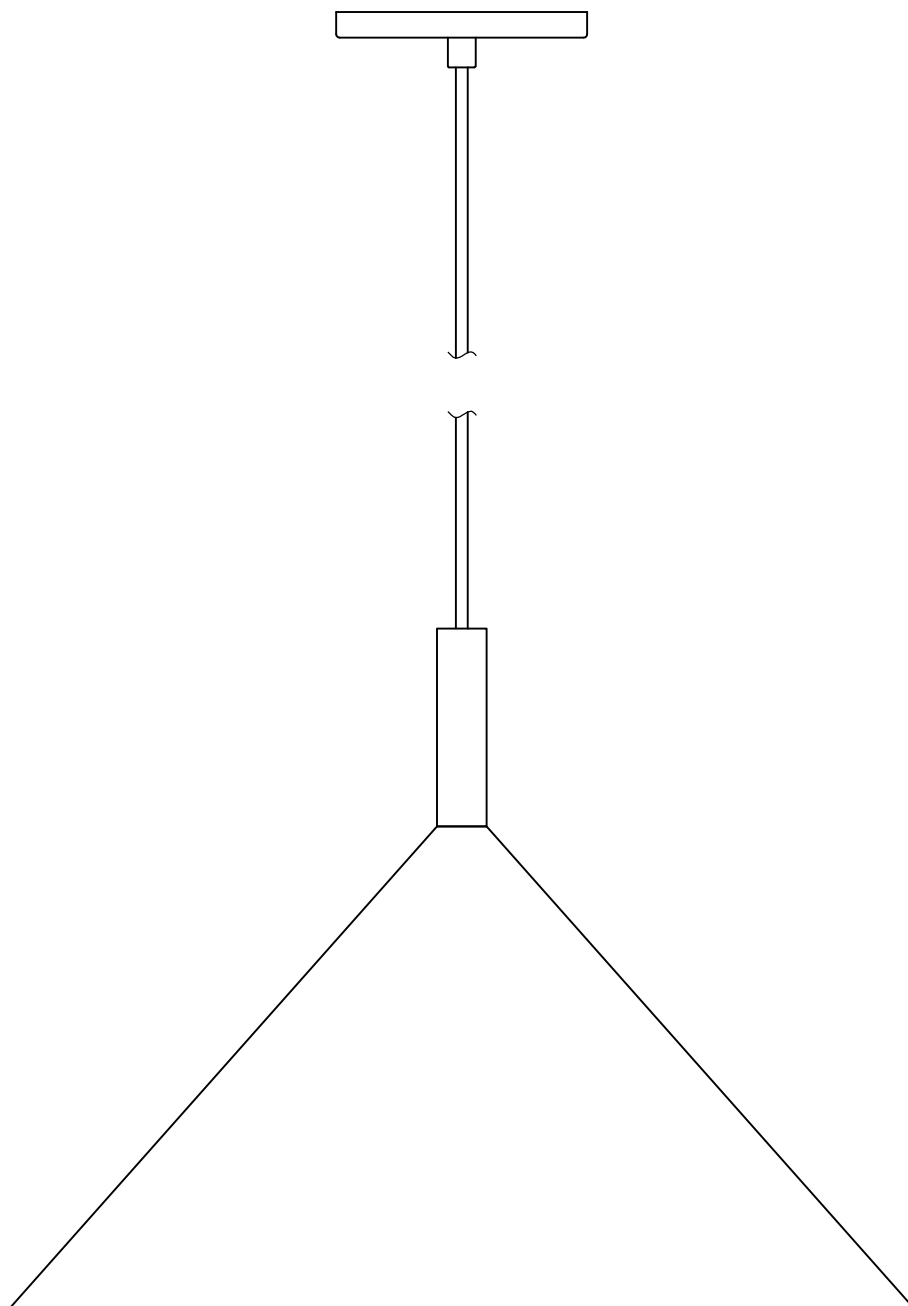

AINO


Pendant Lamp

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you’re having diculty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.




Consultation with a professional electrician is recommended for the installation of this pendant lamp.

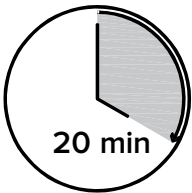


TIME

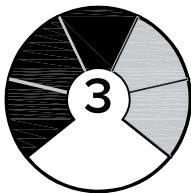

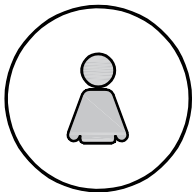






DIFFICULTY

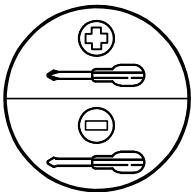

OF PEOPLE

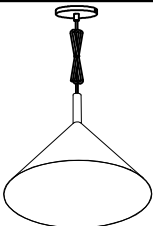


REQUIRED TOOL

PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	LAMP BODY 	1
B	MOUNTING BRACKET IRON ROUND (PRE-INSTALLED) 	1
C	SHORT GREEN SCREW 8/32x8mm (PRE-INSTALLED) 	1
D	WIRE NUT 	3
E	MOUNTING SCREWS 8/32x25mm 	2
F	SIDE SCREWS 8/32x20mm (PRE-INSTALLED) 	2
G	BULB E26 	1


1

CAUTION
Turn off power at main circuit pannel
before starting installation.

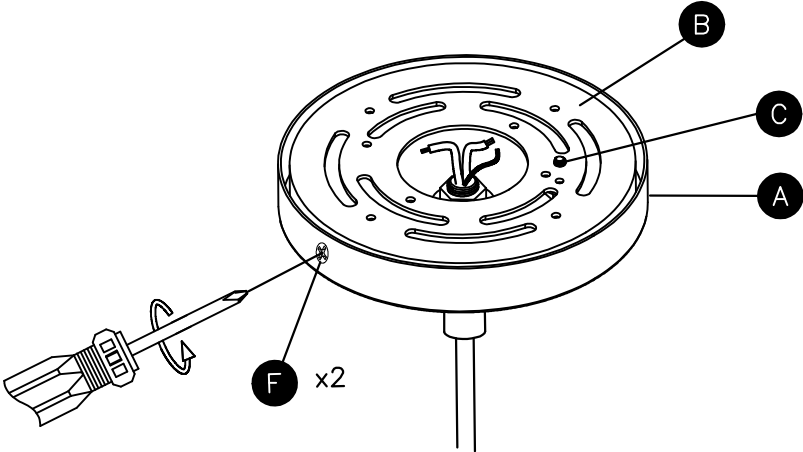


! Remove 2 Screws(F) on
canopy(A)

2

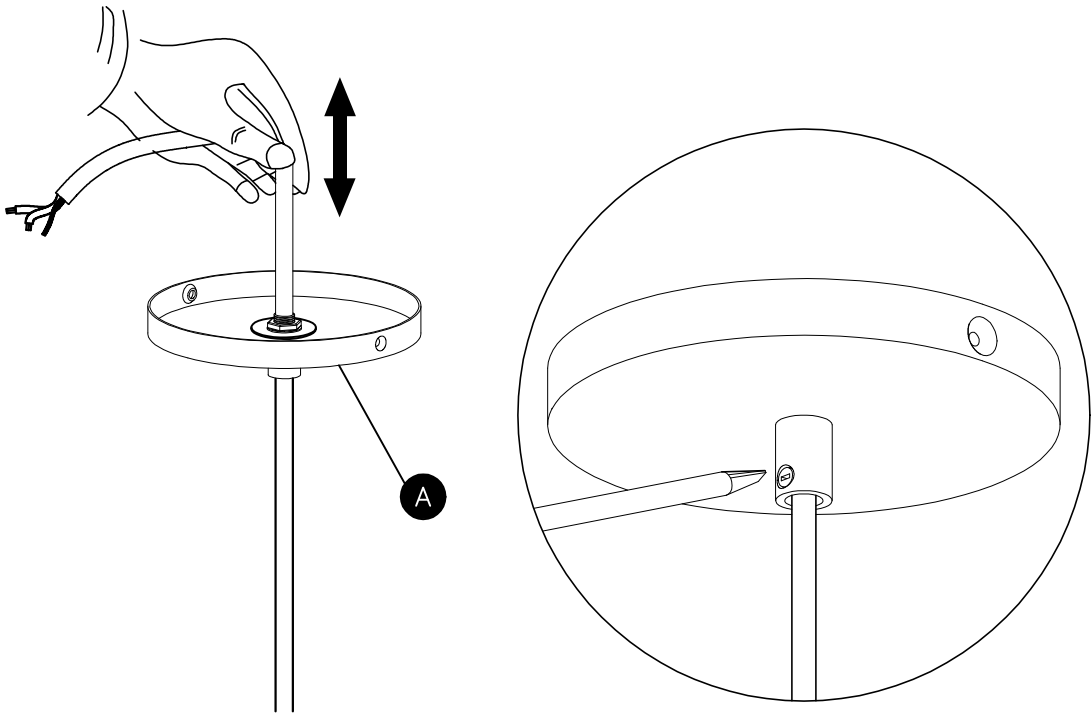

! Change length cord by pull
cover fabric cord.


3

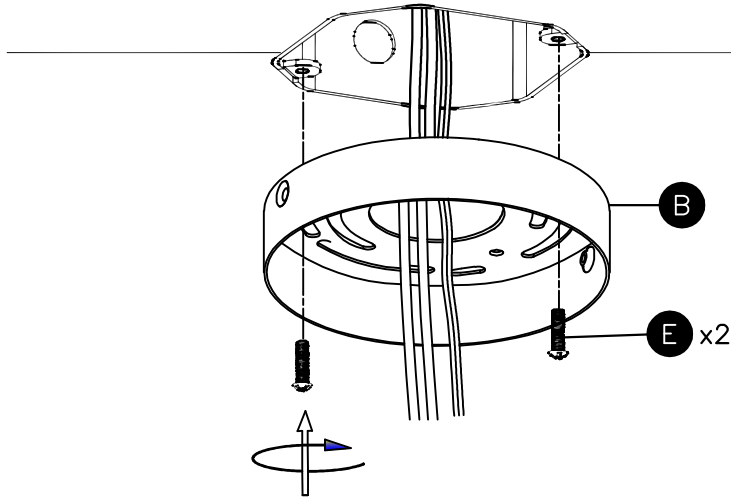

- ⓘ Thread wires through mounting bracket iron round (B) before attaching to junction box.

4

- ⓘ Match up wires by color and attach with wire nuts (D).
 BLACK: Hot Fixture
 WHITE: Neutral Fixture
 GREEN OR BARE COPPER: Ground Wire

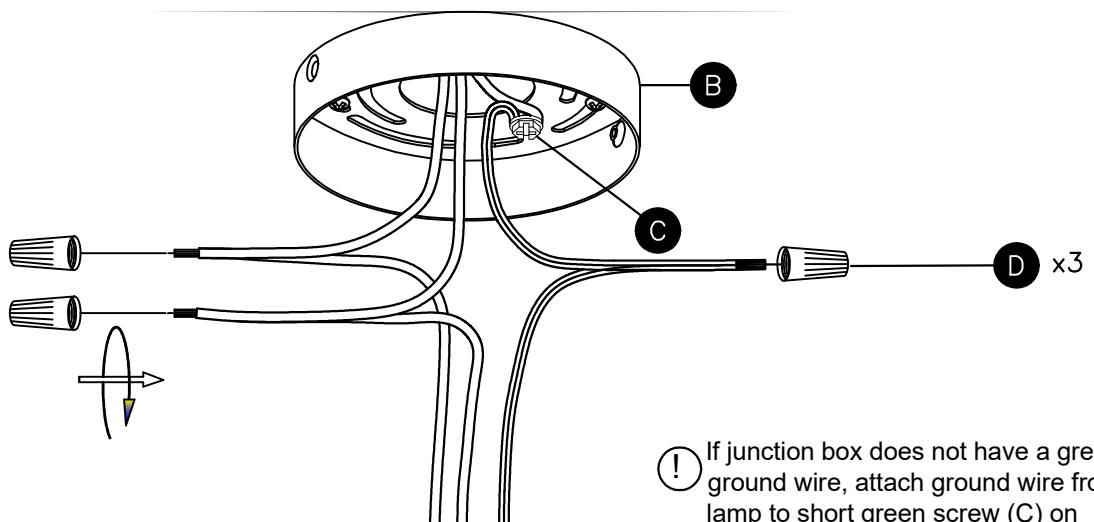

- ⓘ If junction box does not have a green ground wire, attach ground wire from lamp to short green screw (C) on mounting bracket.

5

