
ARTICLE.

Assembly Instructions

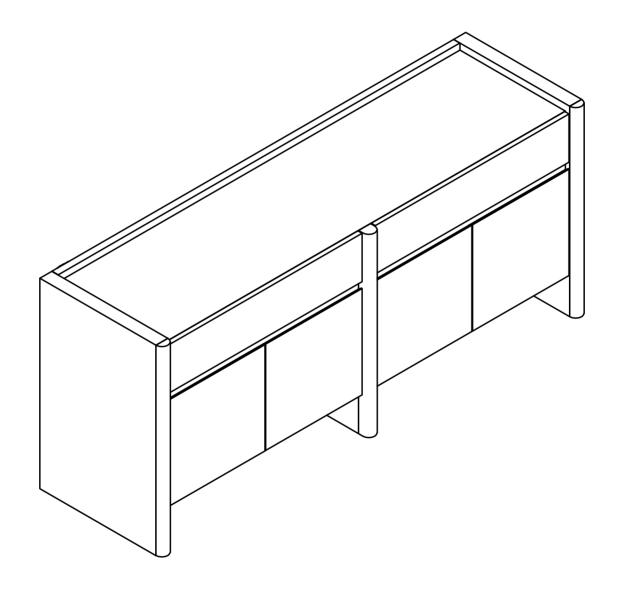

TORME


70" Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.


When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

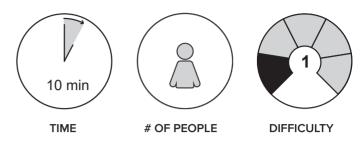



PARTS INVENTORY			
ID	DESCRIPTION	QTY	
A	CABINET	1	
В	SHELF	2	



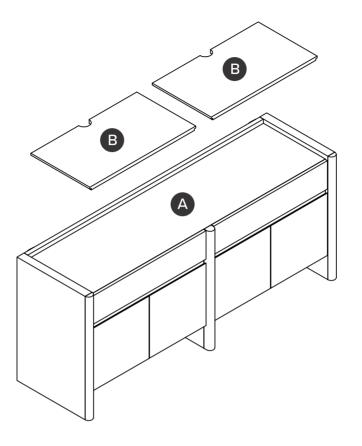

 \bigcap

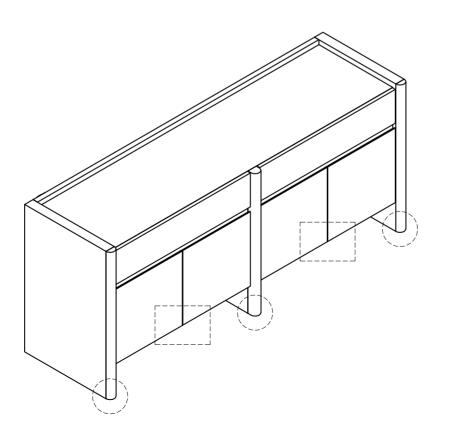

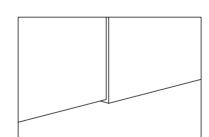




(!)

Adjust levelers as needed.


(2)

! Assembly the shelf.

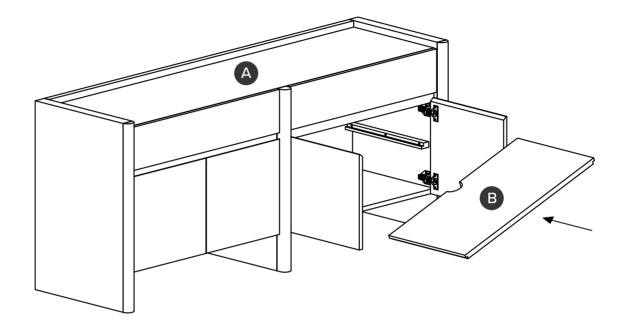

(3)

! Assembly the shelf.

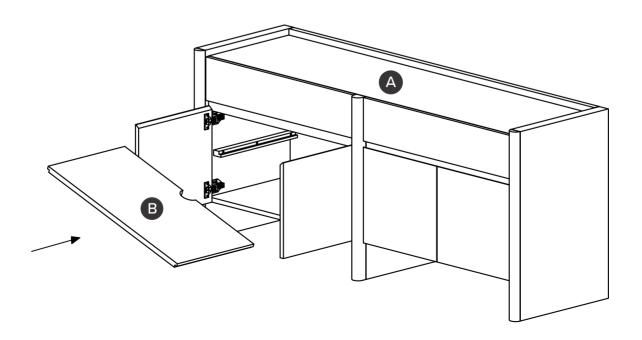

DOOR ADJUSTMENT INSTRUCTIONS


(!

During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.




 \bigcirc

! If the door needs adjustment side to side:

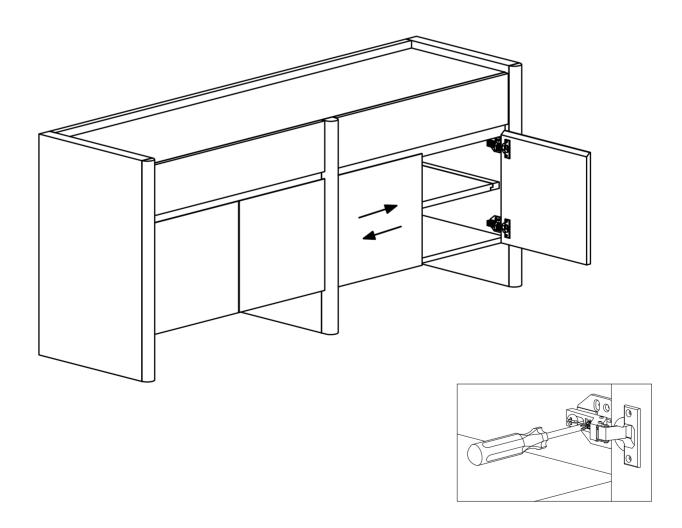


(2)


 $\left(\begin{array}{c} oldsymbol{!} \end{array}
ight)$ If the door needs adjustment forward or backward:

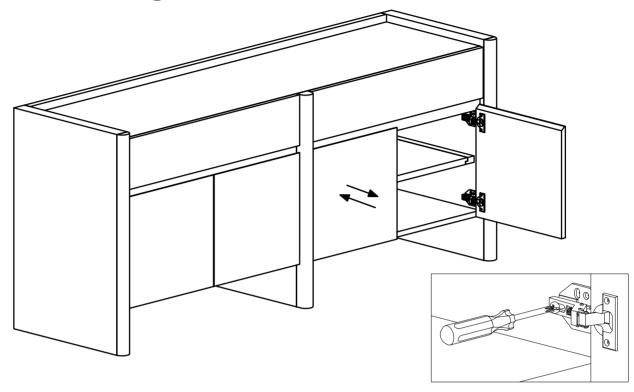


If the door is crooked, adjust hinge(s) up or down:

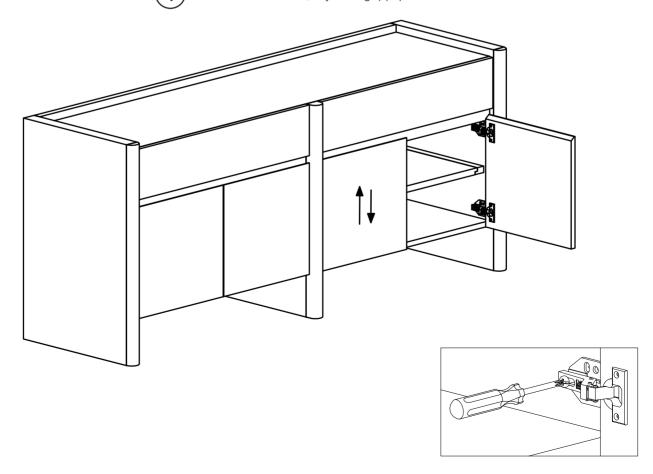

FIX A CROOKED DRAWER

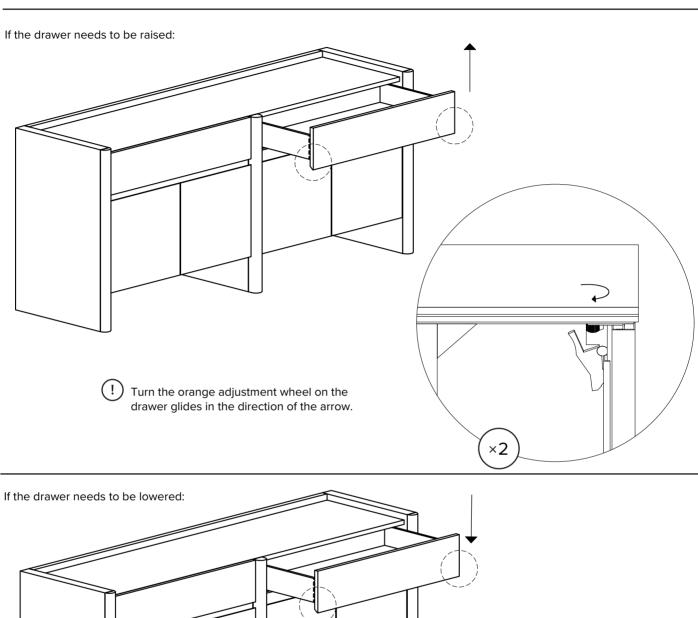

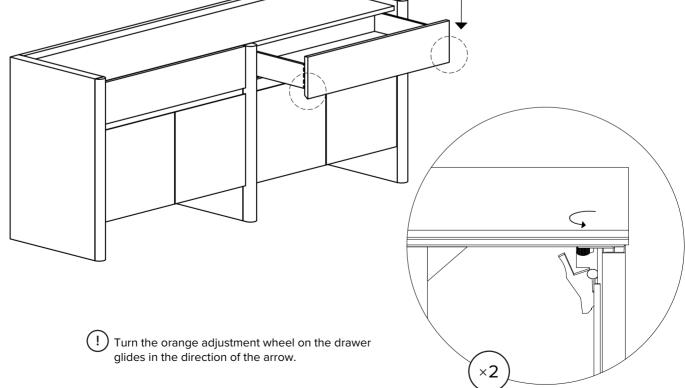



1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION




WARNING!

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.








REQUIRED TOOL 8MM / 5/16" DRILL BIT

REQUIRED TOOL


PARTS INVENTORY			
ID	DESCRIPTION		QTY
G	BRACKET		4
O	M4 × 20MM SCREW	duning.	4
(3	M8 × 51MM PLUG		4
(3)	M6 × 70MM SCREW		4
G	STRAP		2

Hardware (E/F) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.



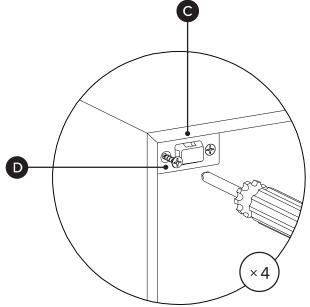


Attach pair of brackets to top corners of the back of the unit.

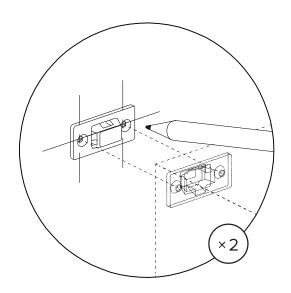


Mark on wall where second pair of brackets should be placed.

(3)

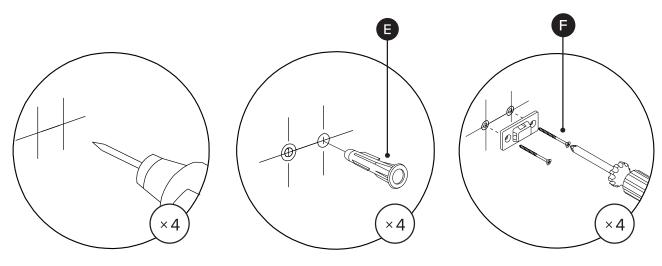


Drill holes in wall using 8mm / 5/16" drill bit.

Align brackets on unit with brackets on wall.

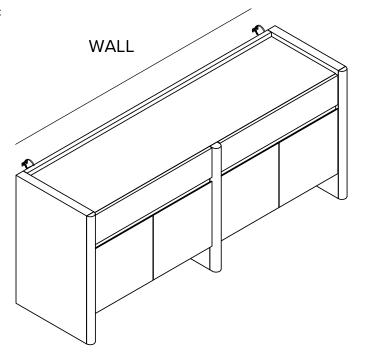

(4B)

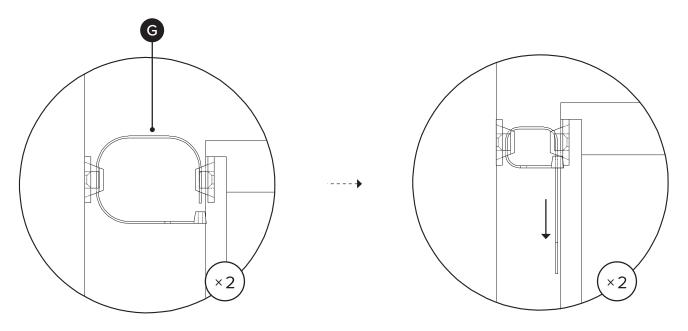

Pull strap down until it snap-locks.