
ARTICLE.

Assembly Instructions

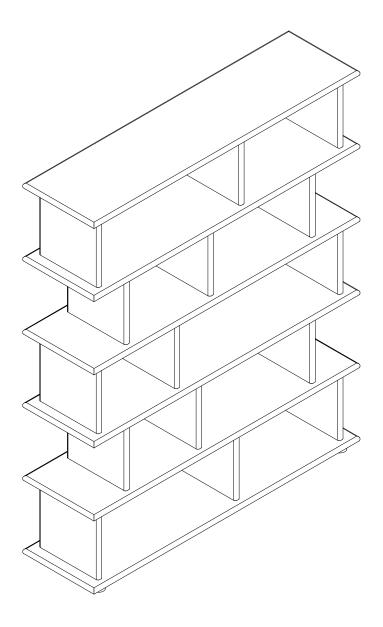

LAFORA


Tall Bookcase


ARTICLE. LAFORA Tall Bookcase Page 2 of 8

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference . Refer to parts inventory for guidance , and ensure you have all pieces before starting.

If you're having difficulty, our friendly Customer Care team is always here to help. Call us at **1.888.746.3455** during business hours, email **service@article.com** or chat live at **article.com**.

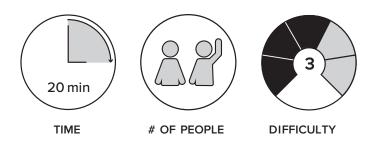


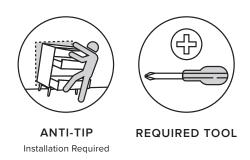


PARTS INVENTORY				
ID	DESCRIPTION		QTY	
1	TOP FRAME		1	
2	CENTER FRAME		1	
3	BOTTOM FRAME		1	
4	I-SHAPED DIVIDER		4	
5	L-SHAPED DIVIDER		2	

HARDWARE LIST				
ID	DESCRIPTION	QTY		
A	M6 x 16MM FLAT HEAD BOLTS	12		
В	M6 x 35MM PAN HEAD BOLTS	12		
G	M6 LOCK WASHERS	12		
D	M6×16MM WASHERS	12		
•	ALLEN KEY	2		


(1

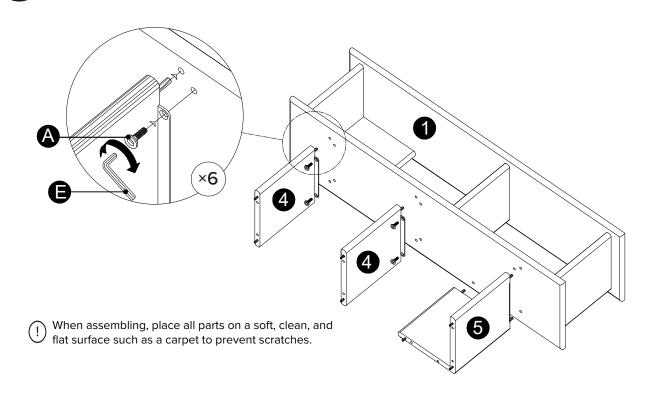




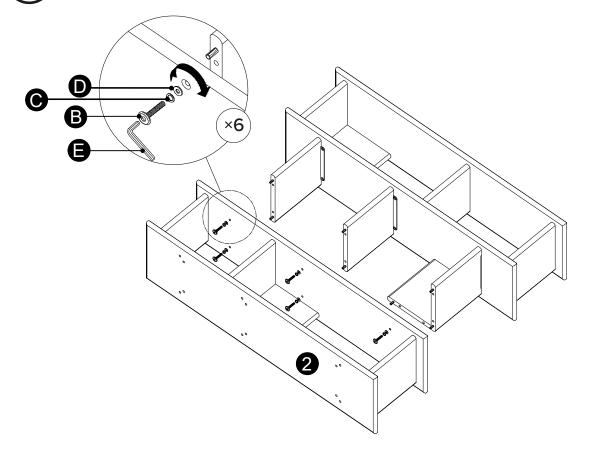


(3

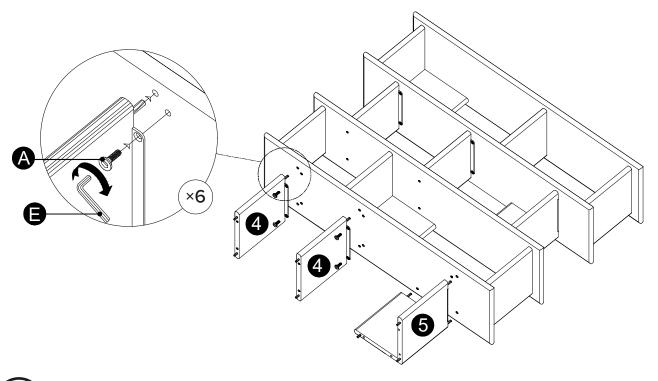



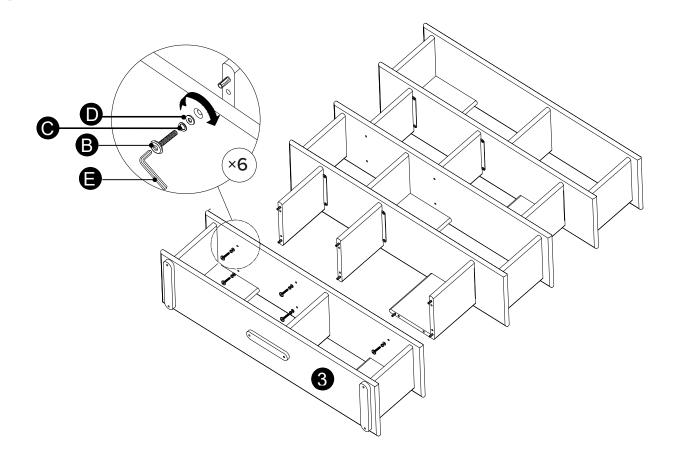



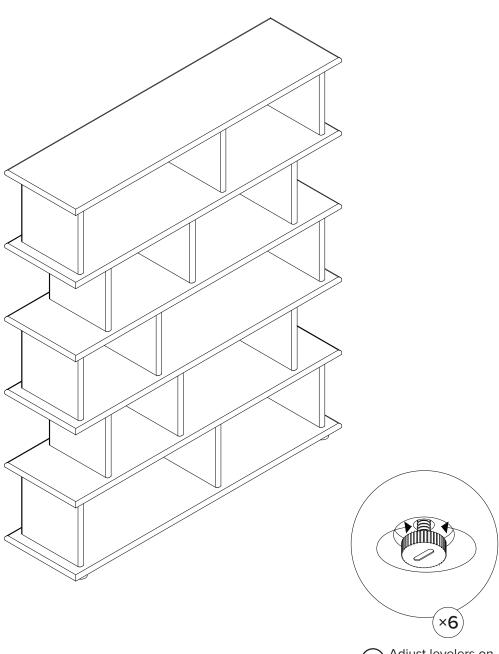

! Adjust levelers on legs as needed.

1010 Raymur Ave. Vancouver, BC V6A 3T2



ANTI-TIP RESTRAINT INSTALLATION



WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.








REQUIRED TOOL 8MM / 5/16" DRILL BIT


REQUIRED TOOL

PARTS INVENTORY					
ID	DESCRIPTION		QTY		
(3)	BRACKET		4		
G	M4 × 20MM SCREW	& Amm	4		
•	M8 × 51MM PLUG		4		
0	M6 × 70MM SCREW	dinning.	4		
0	STRAP		2		

Hardware (H/I) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

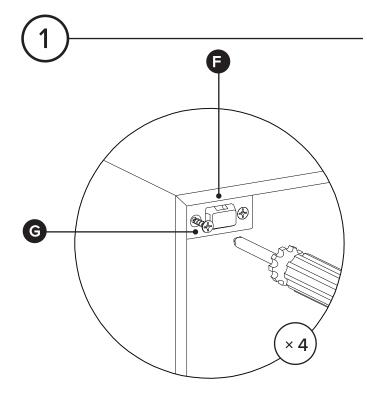


Attach pair of brackets to top corners of the back of the unit.

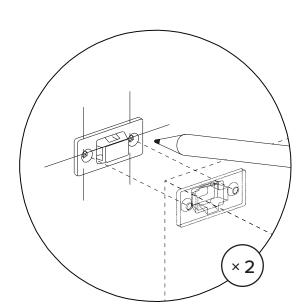


Mark on wall where second pair of brackets should be placed.




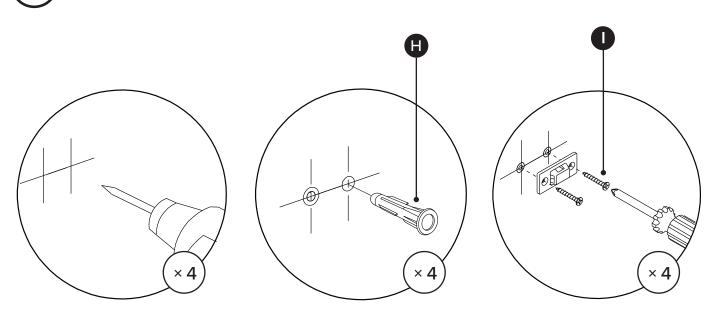


Drill holes in wall using 8mm / 5/16" drill bit.



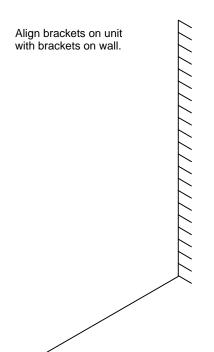

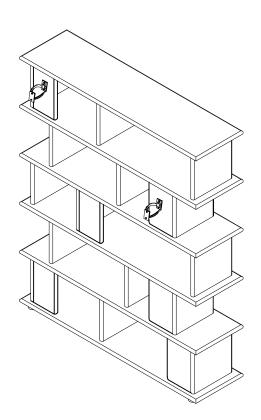

(4B)

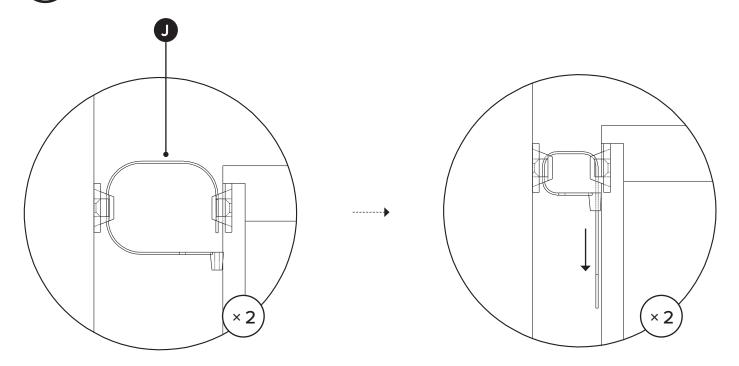

Pull strap down until it snap-locks.