


ARTICLE.

VERSION 1.0

Assembly Instructions

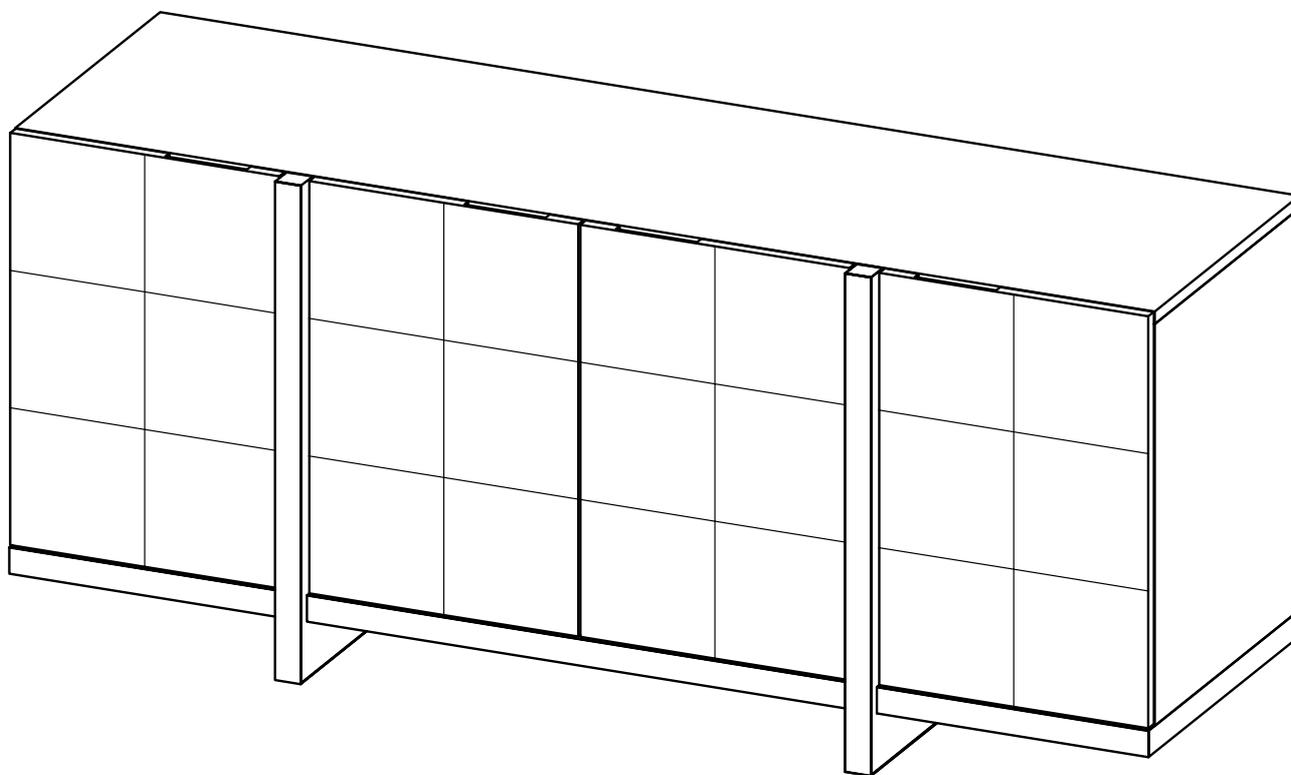

AYRA


66" Sideboard

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

If youre having difficulty, our friendly Customer Care team is always here to help. Call us at during business hours, email [e.m](#) or chat live at [e.m](#).

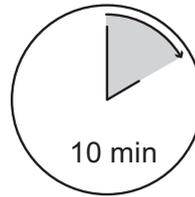




TIME




OF PEOPLE



DIFFICULTY

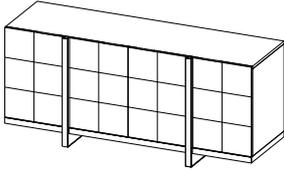
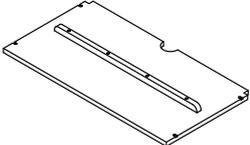
PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	CABINET 	1
B	SHELF 1 	2
C	SHELF 2 	1

2

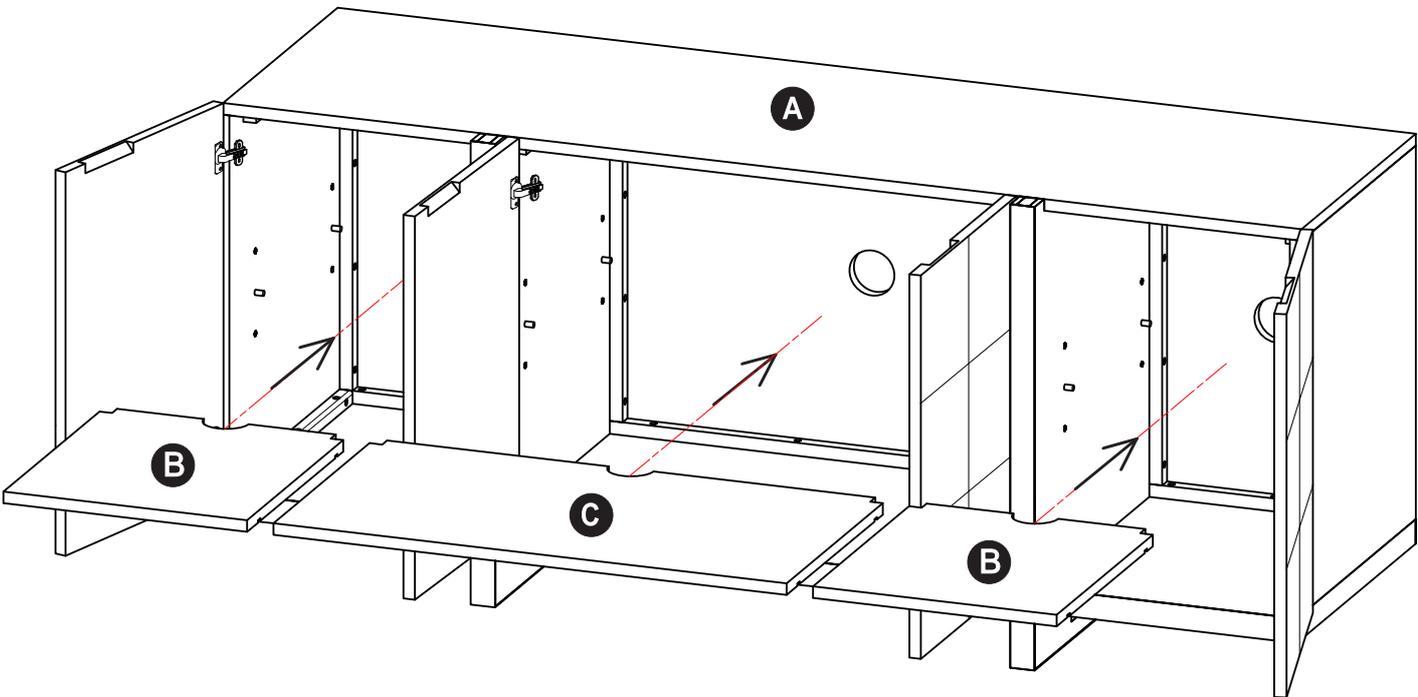

After unpacking the shelves, place them inside the case



3

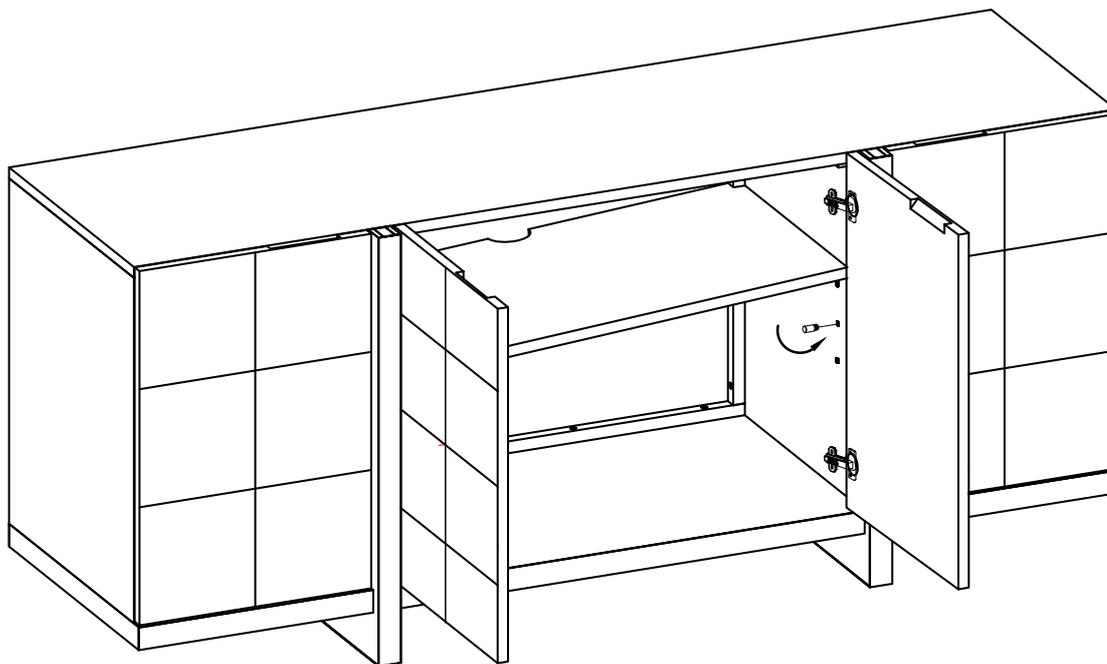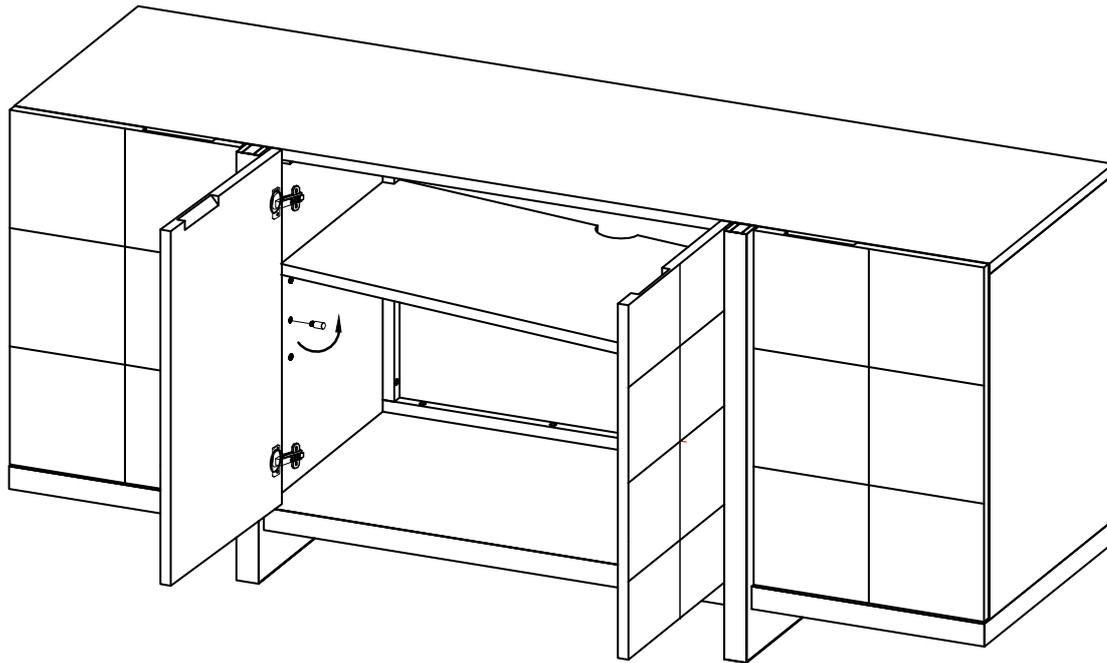

To reposition the shelf:

1. Lift one end of the shelf.
2. Untwist the pins.
3. Insert the pins into the upper or lower positions as needed.
4. Do the same to the other end.

4

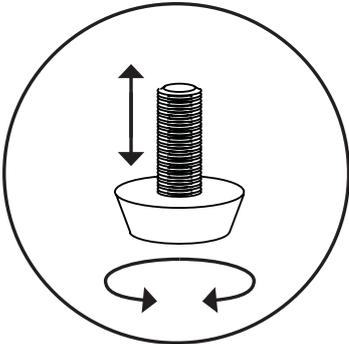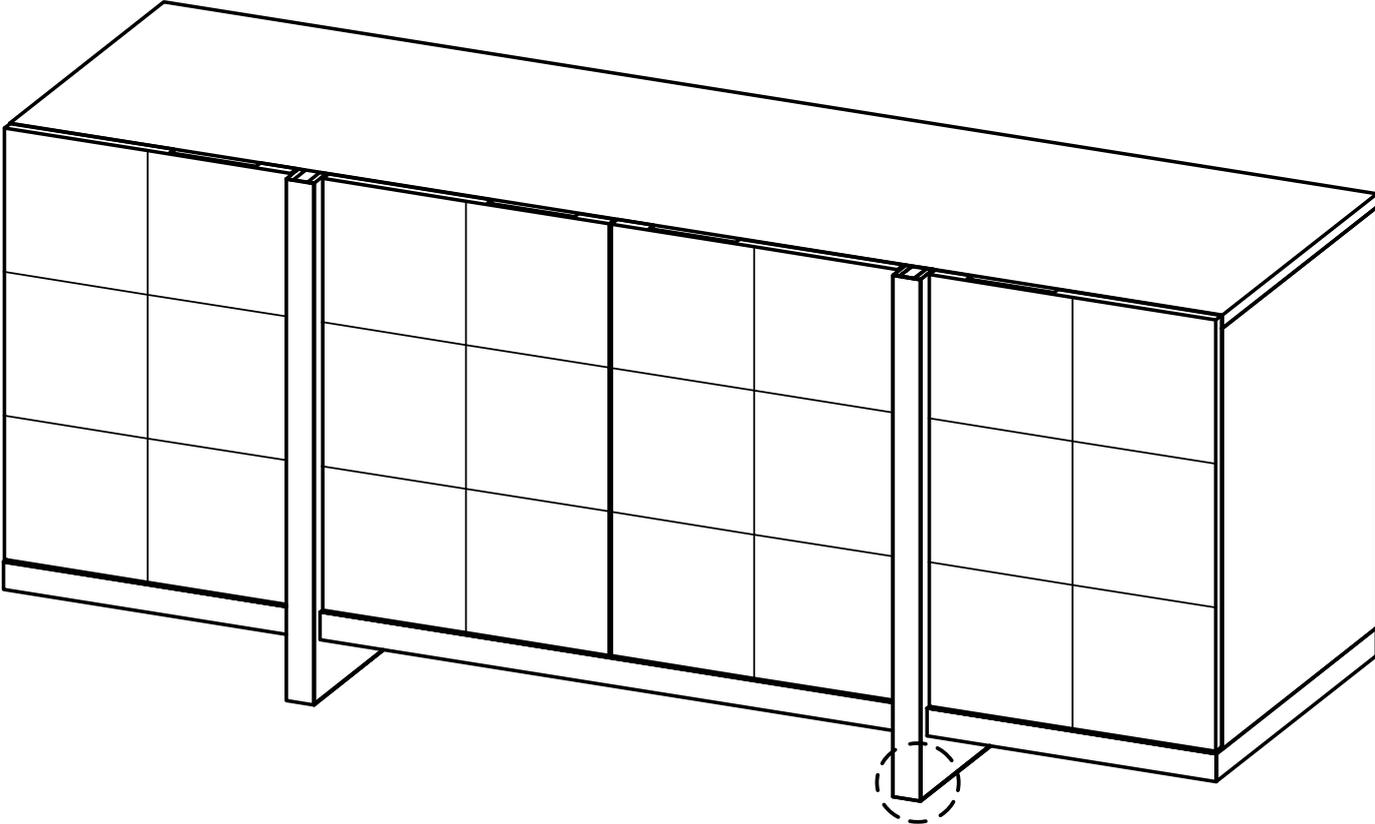

! Adjust the levelers to stabilizes the furniture if it is unbalanced.

ARTICLE.

1010 Raymur Ave.
Vancouver, BC V6A 3T2




ANTI-TIP RESTRAINT INSTALLATION

WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.


Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

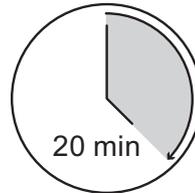


TIME

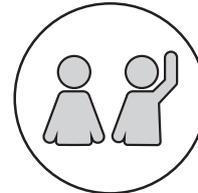


OF PEOPLE

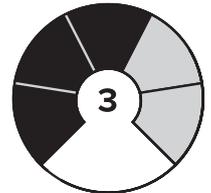

DIFFICULTY

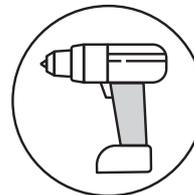

REQUIRED TOOL
8MM / 5/16" DRILL BIT

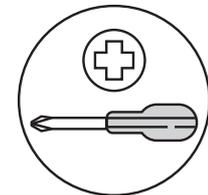


REQUIRED TOOL

31		
ID	DESCRIPTION	QTY
A	BRACKET 	4
B	M8 × 51MM PLUG 	4
C	M6 × 70MM SCREW 	4
D	M4 × 20MM SCREW 	4
E	STRAP 	2




Hardware (B/C) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

1

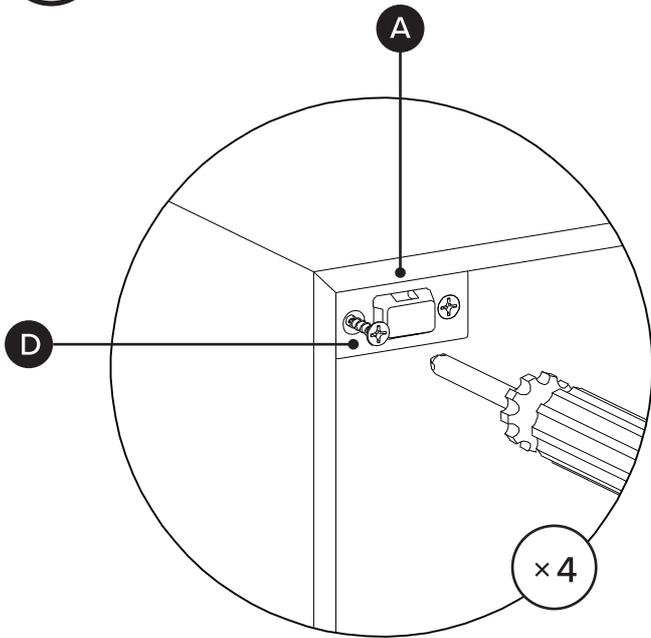




Attach pair of brackets to top corners of the back of the unit.

2

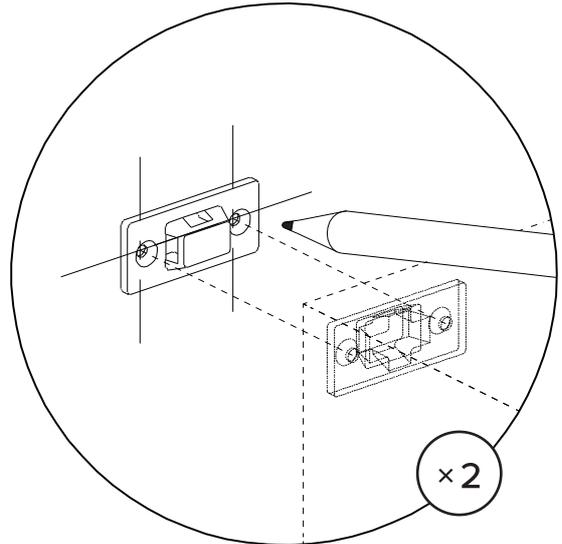

Mark on wall where second pair of brackets should be placed.


3

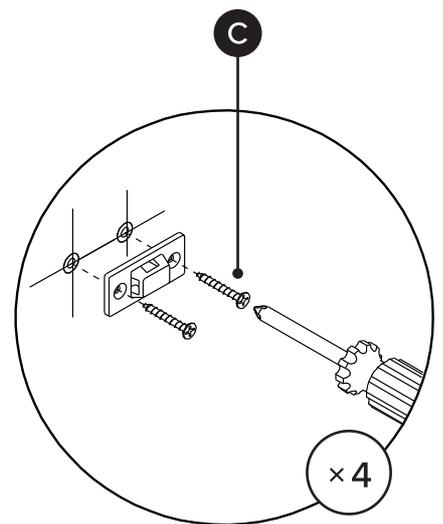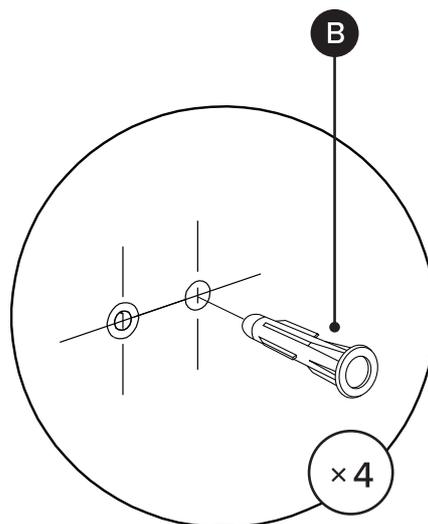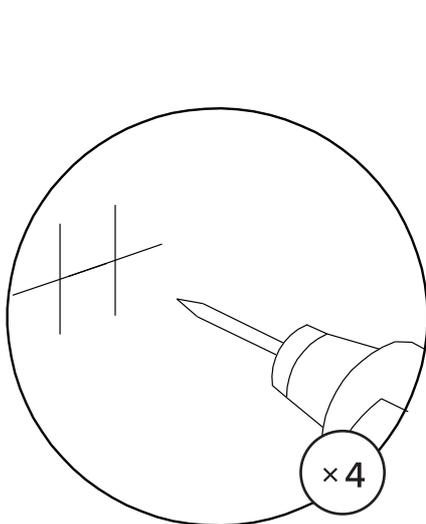


Drill holes in wall using 8mm / 5/16" drill bit.

4A

Align brackets on unit
with brackets on wall.

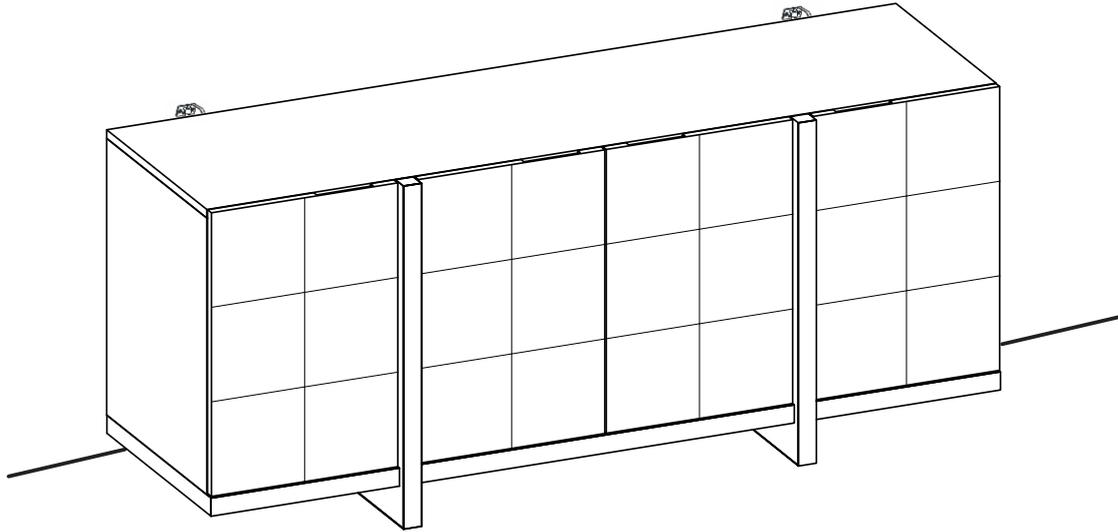


4B

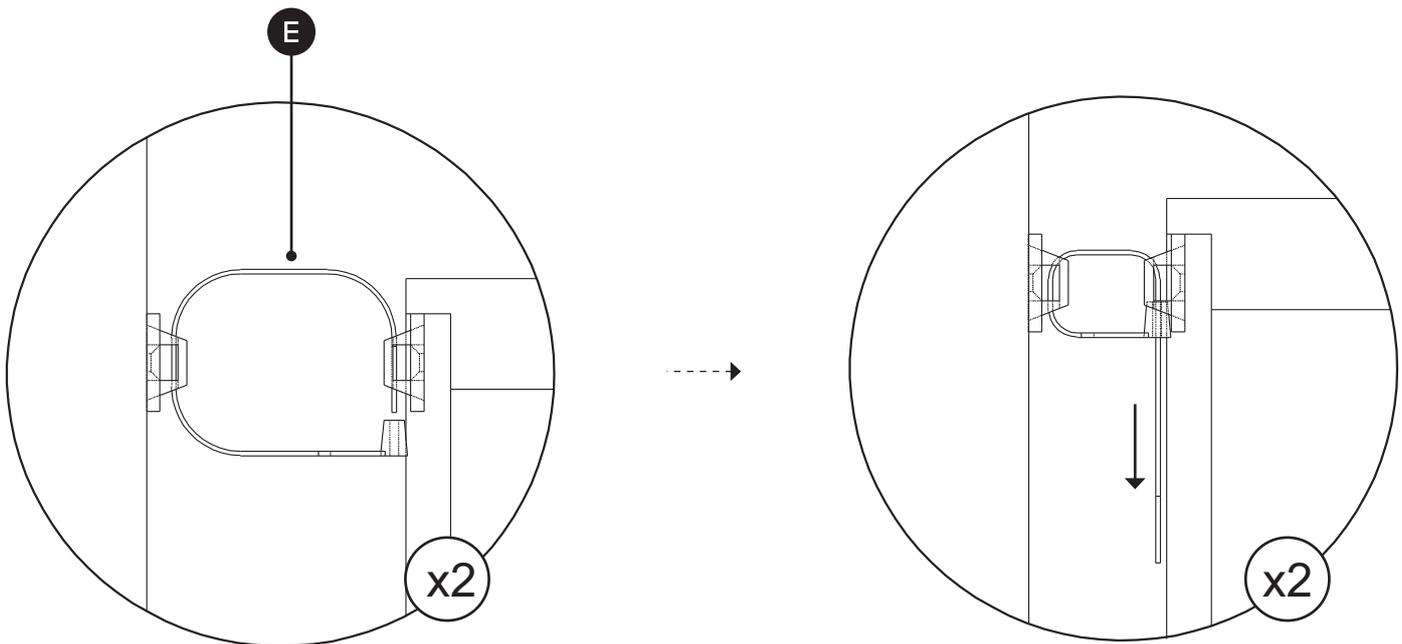

Pull strap down until it snap-locks

DOOR ADJUSTMENT INSTRUCTIONS



! During shipping, the doors of your cabinet may have shifted slightly. This can easily be corrected by tightening a few screws. Always start by adjusting the top hinge on the affected door.

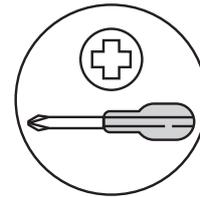

REQUIRED TOOL



1A

If the door is crooked, adjust hinge(s) up or down:

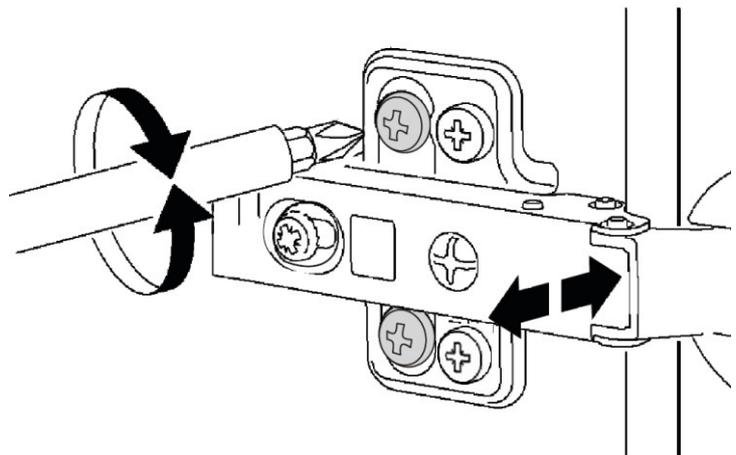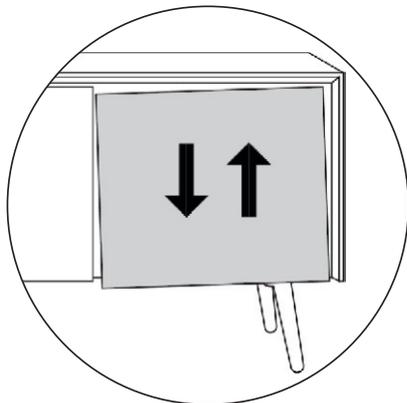

1B

If the door needs adjustment side to side:

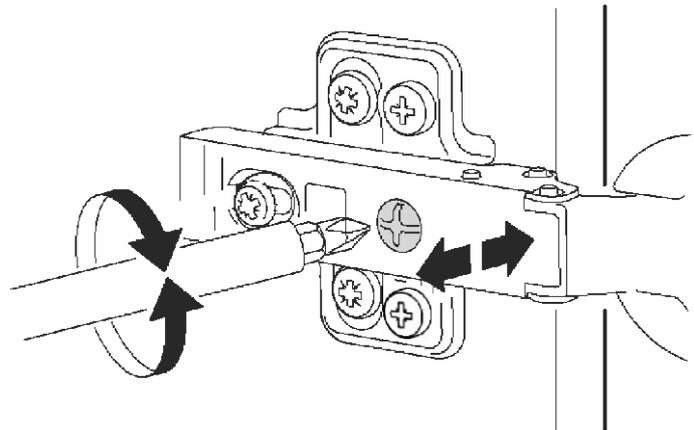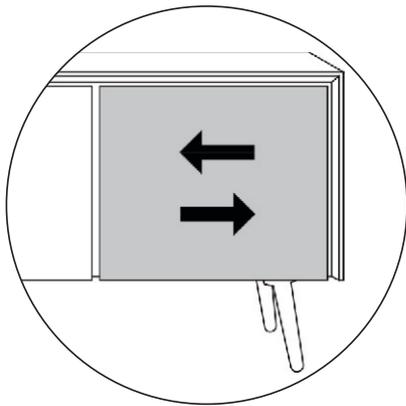

1C

If the door needs adjustment forward or backward:

